







22155G Yamaha MT-10 SP Belly Pan Fitting Instructions

Kit Includes:

- 1X Panels (pair + centre part)
- 4X Brackets
- 2X Metal Netting 200mm X 80mm
- 2X M6 Plastic Washers
- 2X M6 Nyloc Nuts
- 3X M6 X 20mm Bolts
- 2X M6 X 15mm Bolts
- 1X M6 X 30mm Bolt
- 1X M6 X 15mm Plastic Spacer
- 2X M6 Lugnut
- 4X Grommets
- 150mm 3M Tape

- Metal Netting (optional) can be fitted using silicone as shown in **Fig 1**.
- Fit the brackets to the bike as shown in **Fig 2 & 3**.
Don't tighten fully so that adjustments can be made during later steps.
- Fit the grommets to the Belly Pan. You will need to remove the steel collars temporarily in order to do this. Make sure the flange on the steel collar is facing outwards.
- Assemble the 3 pieces of the Belly Pan using the 3M Tape (pre-attached) and with the M6 X 15mm Bolts, M6 Plastic Washers & M6 Nyloc Nuts.
- The Belly Pan is mounted to brackets 1, 2 & 4 using the M6 X 20mm Bolts. To mount bracket 3, use the M6 X 30mm Bolt & the M6 X 15mm Black Spacer.
- Tighten up all mounting points and check clearance of the Belly Pan around the bike.

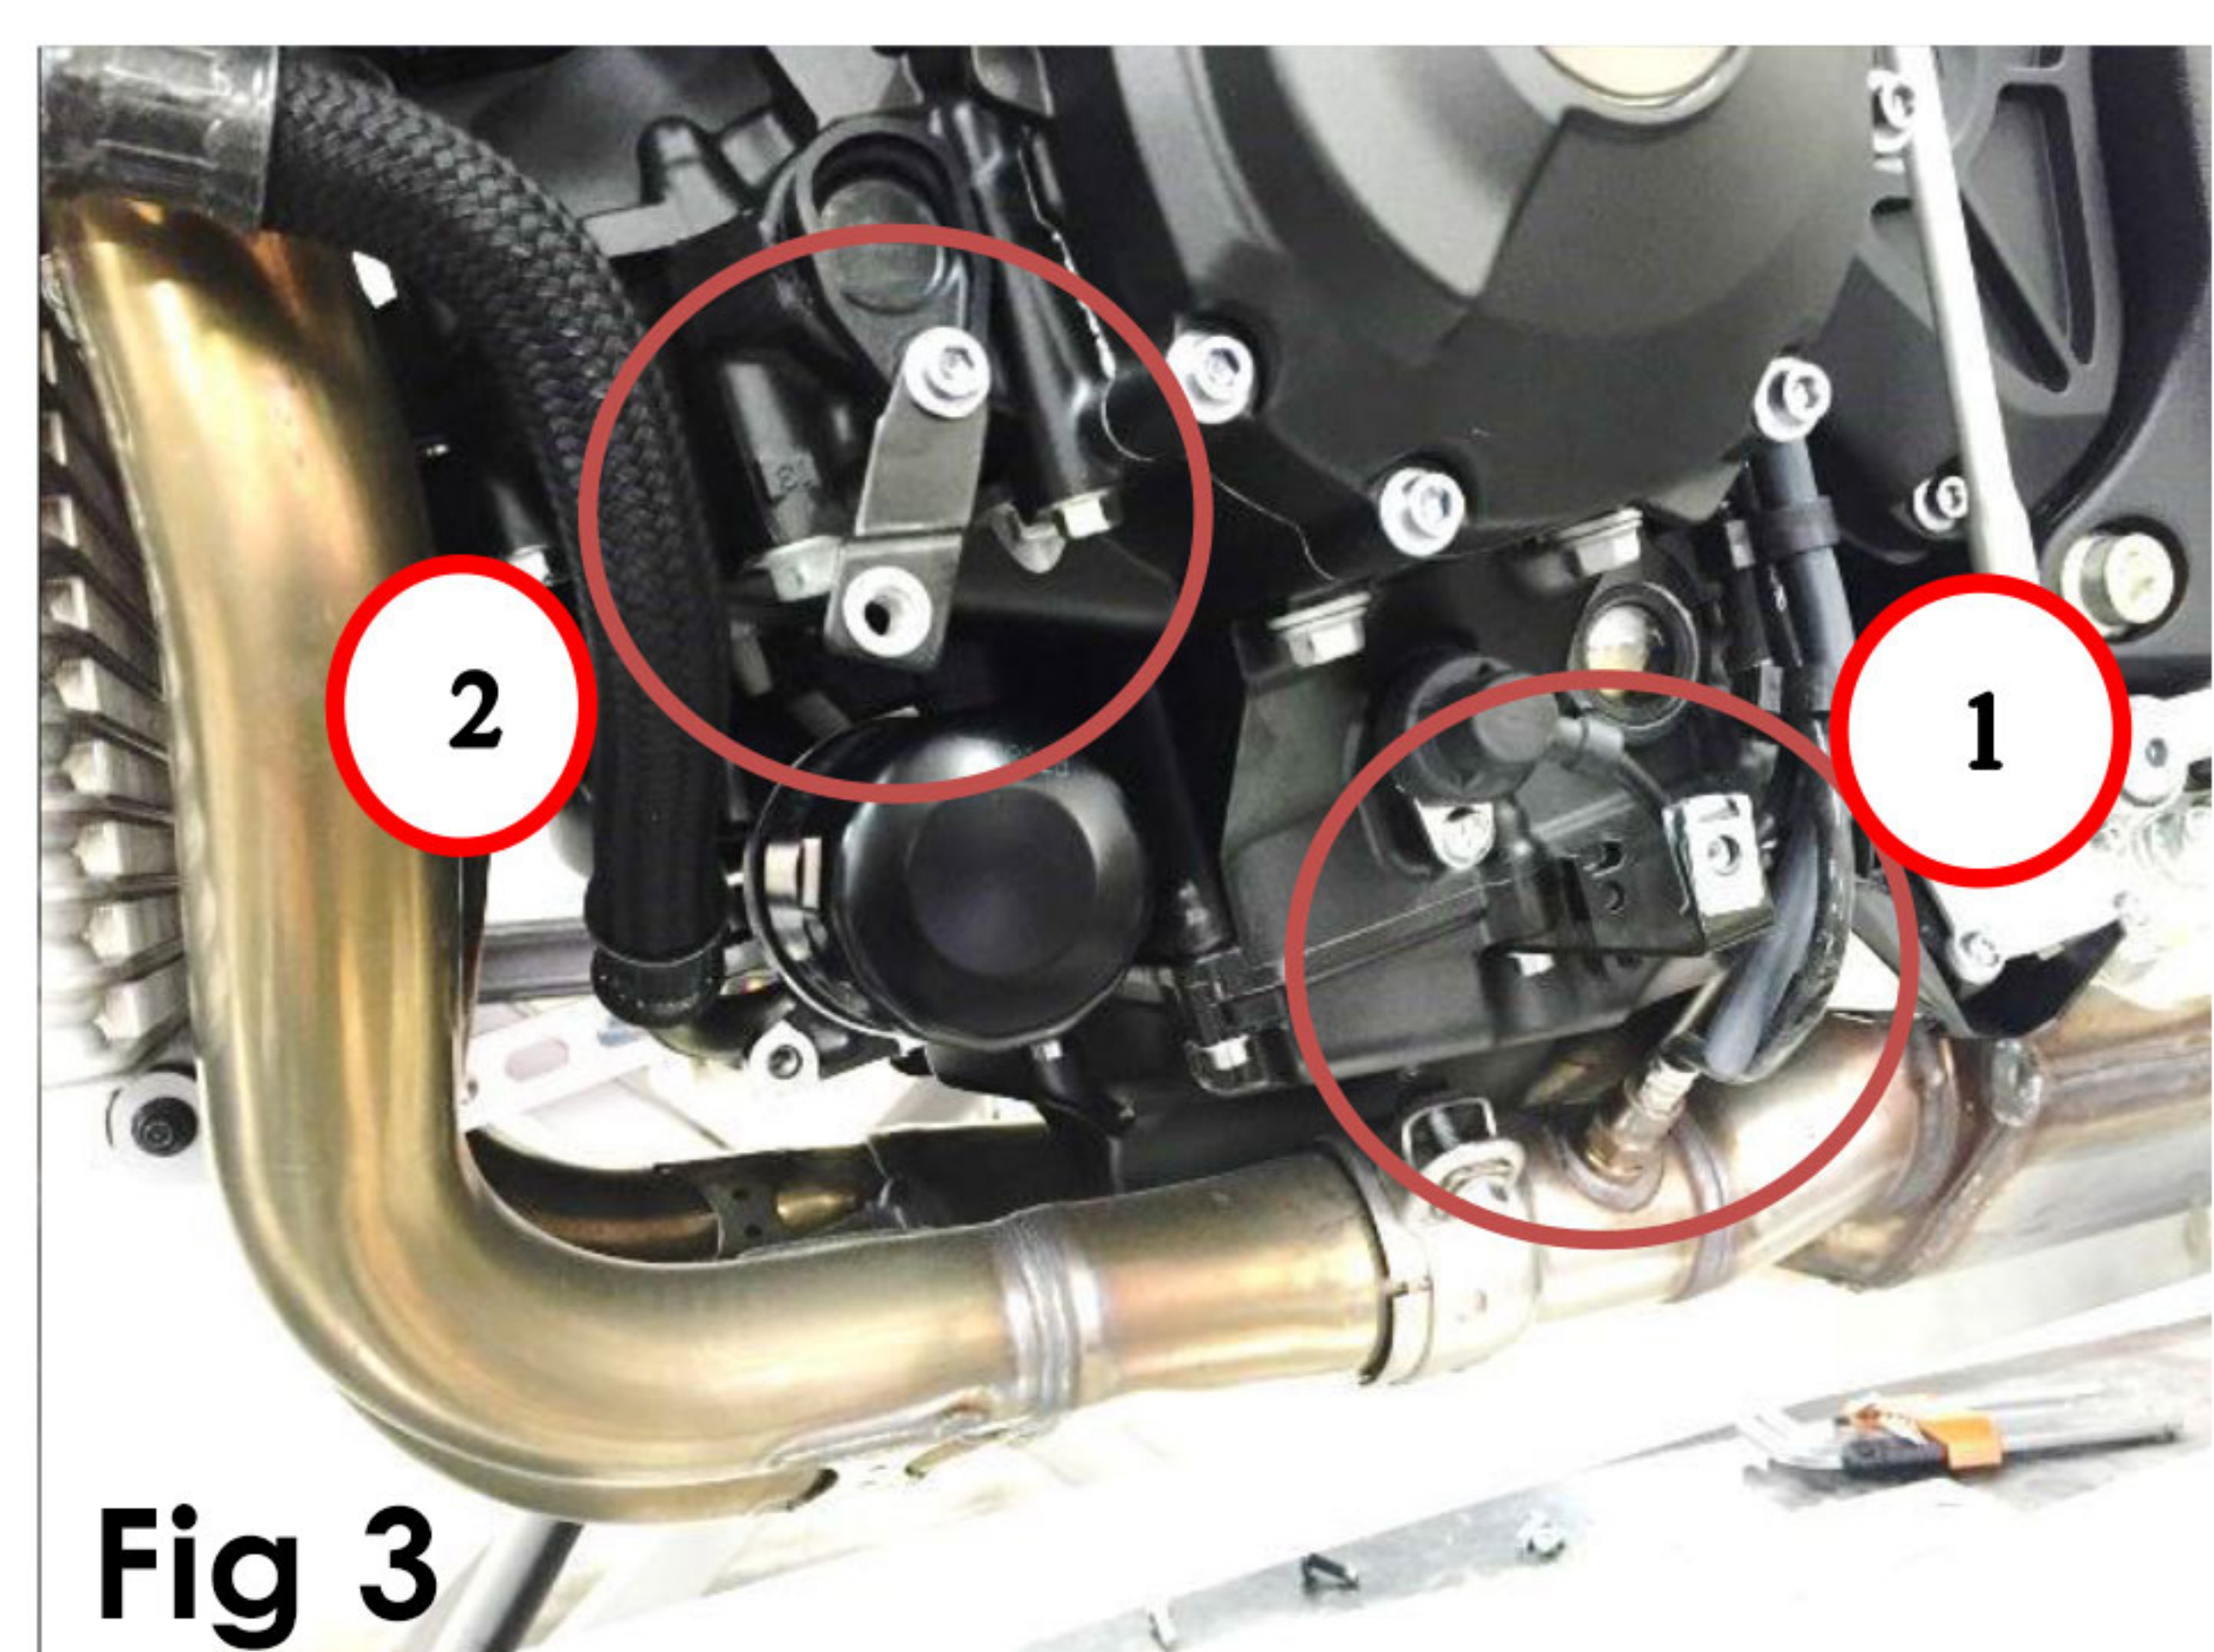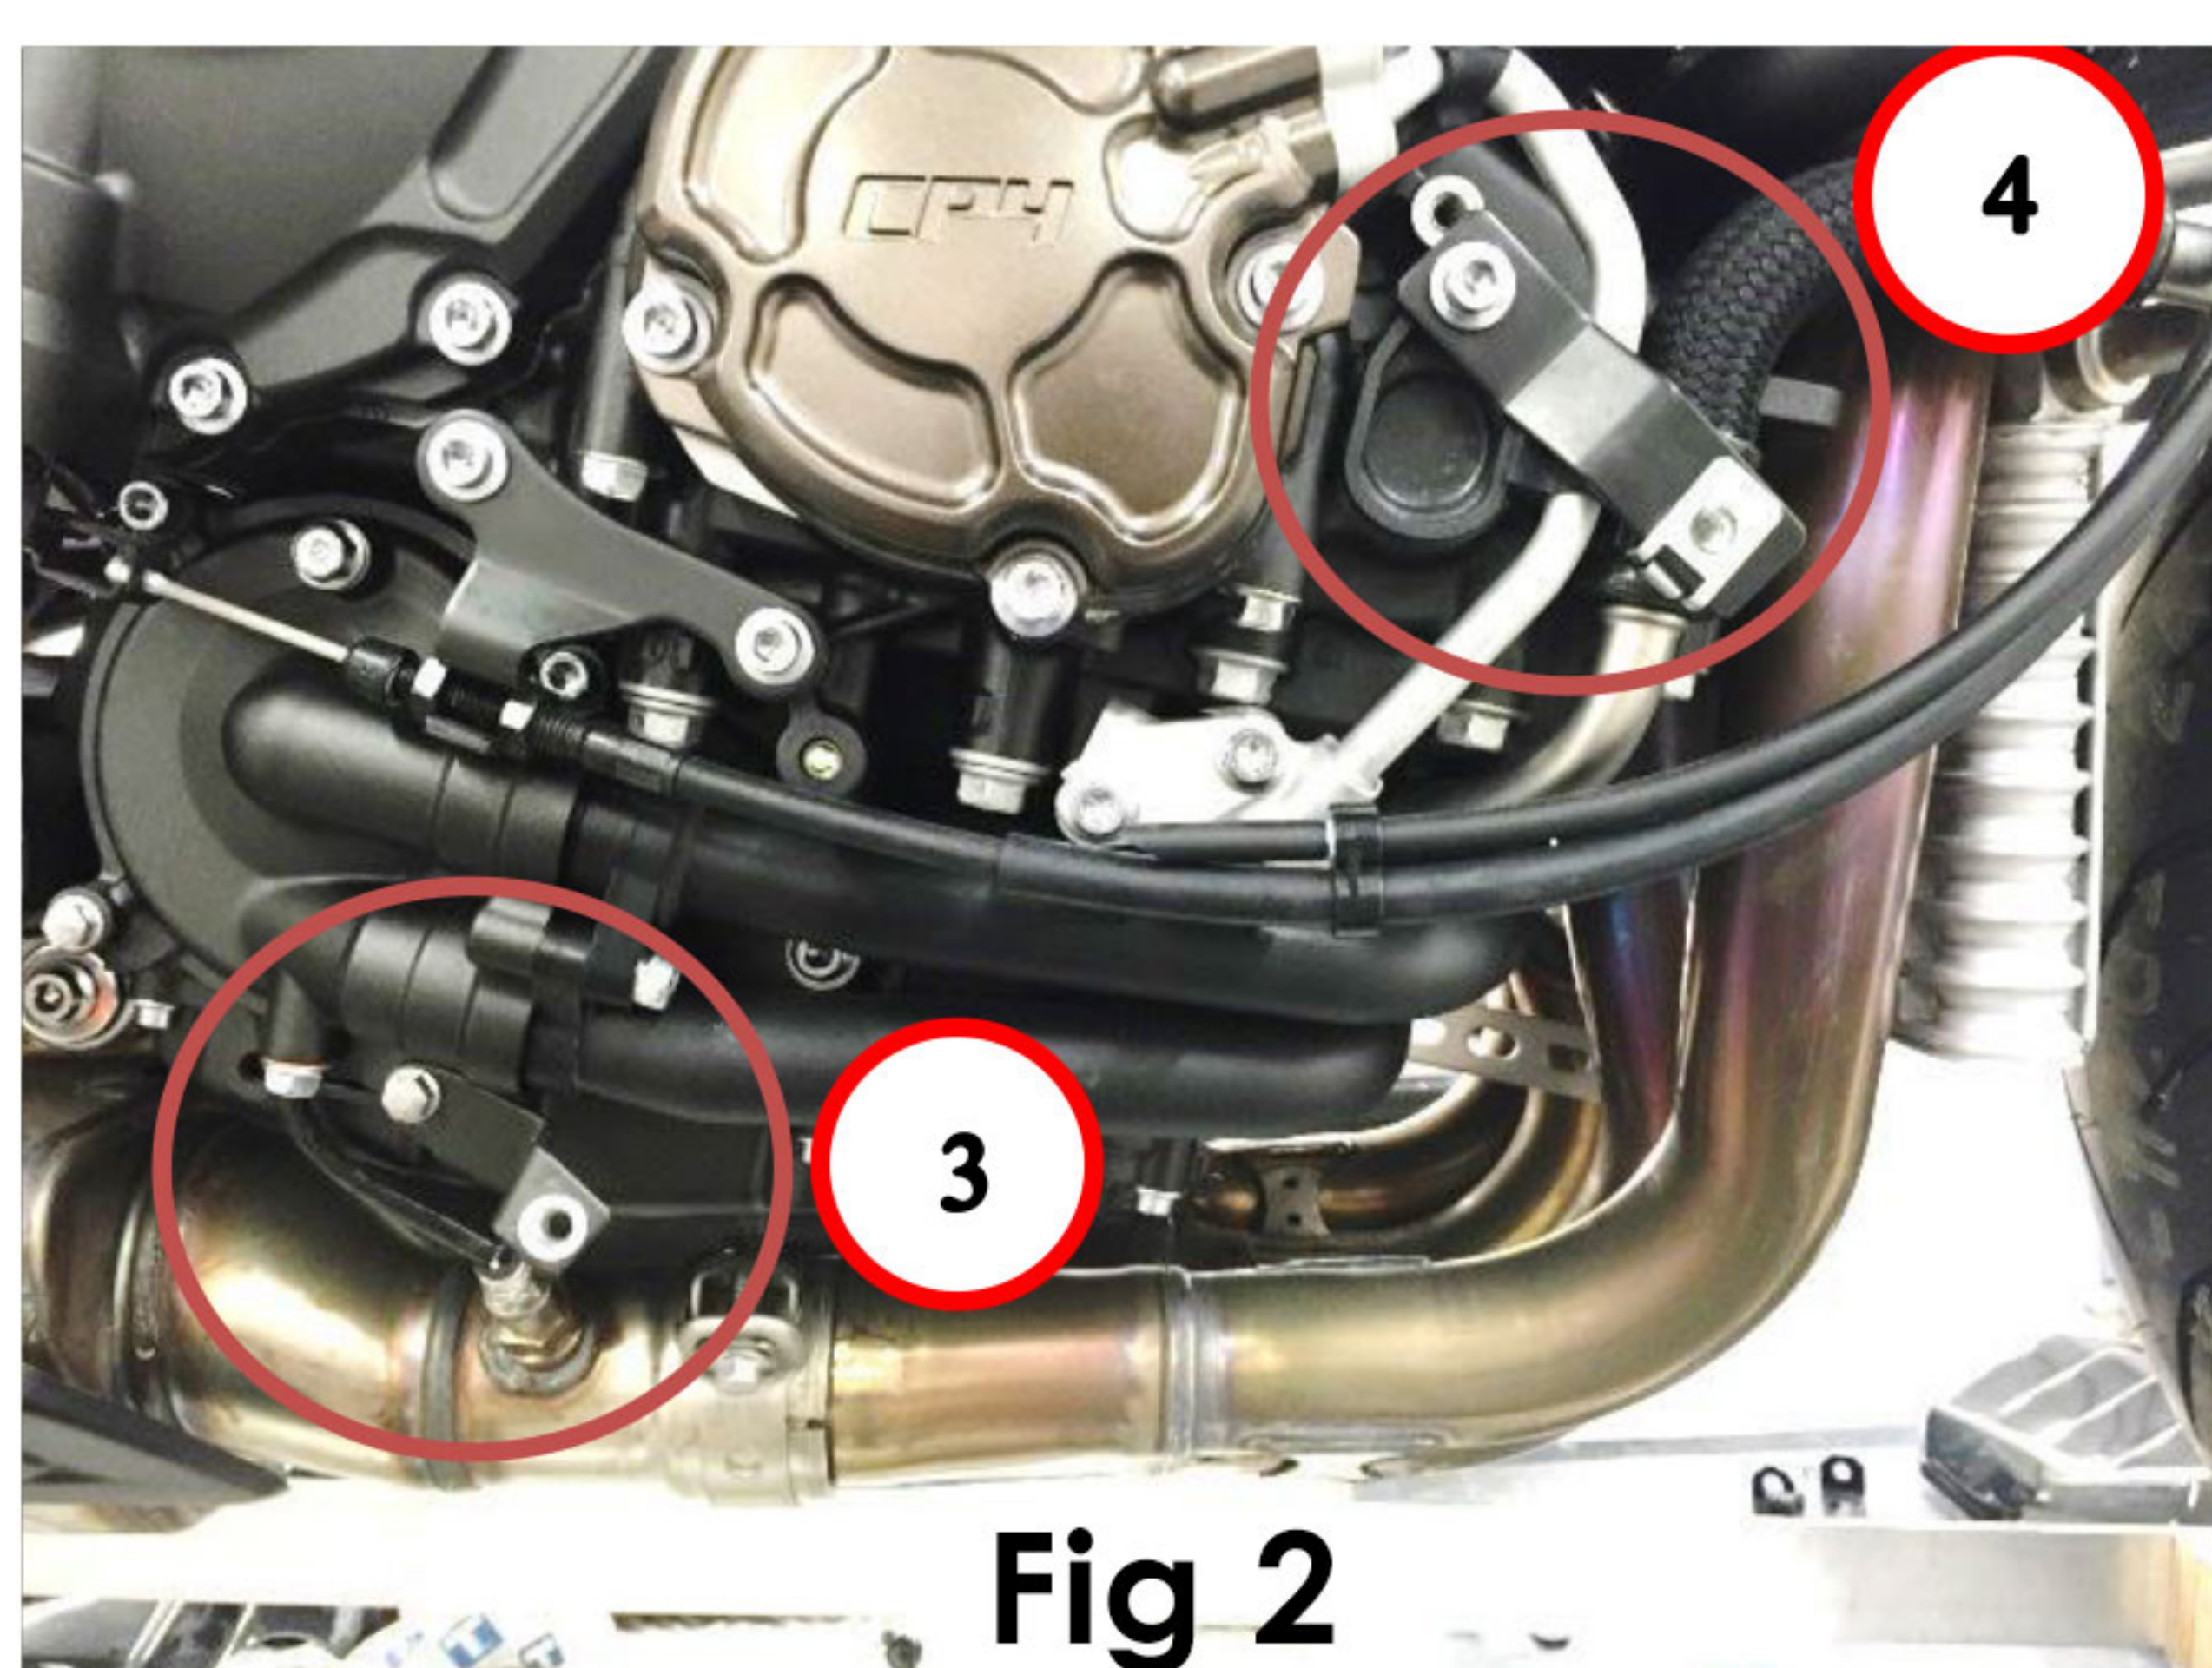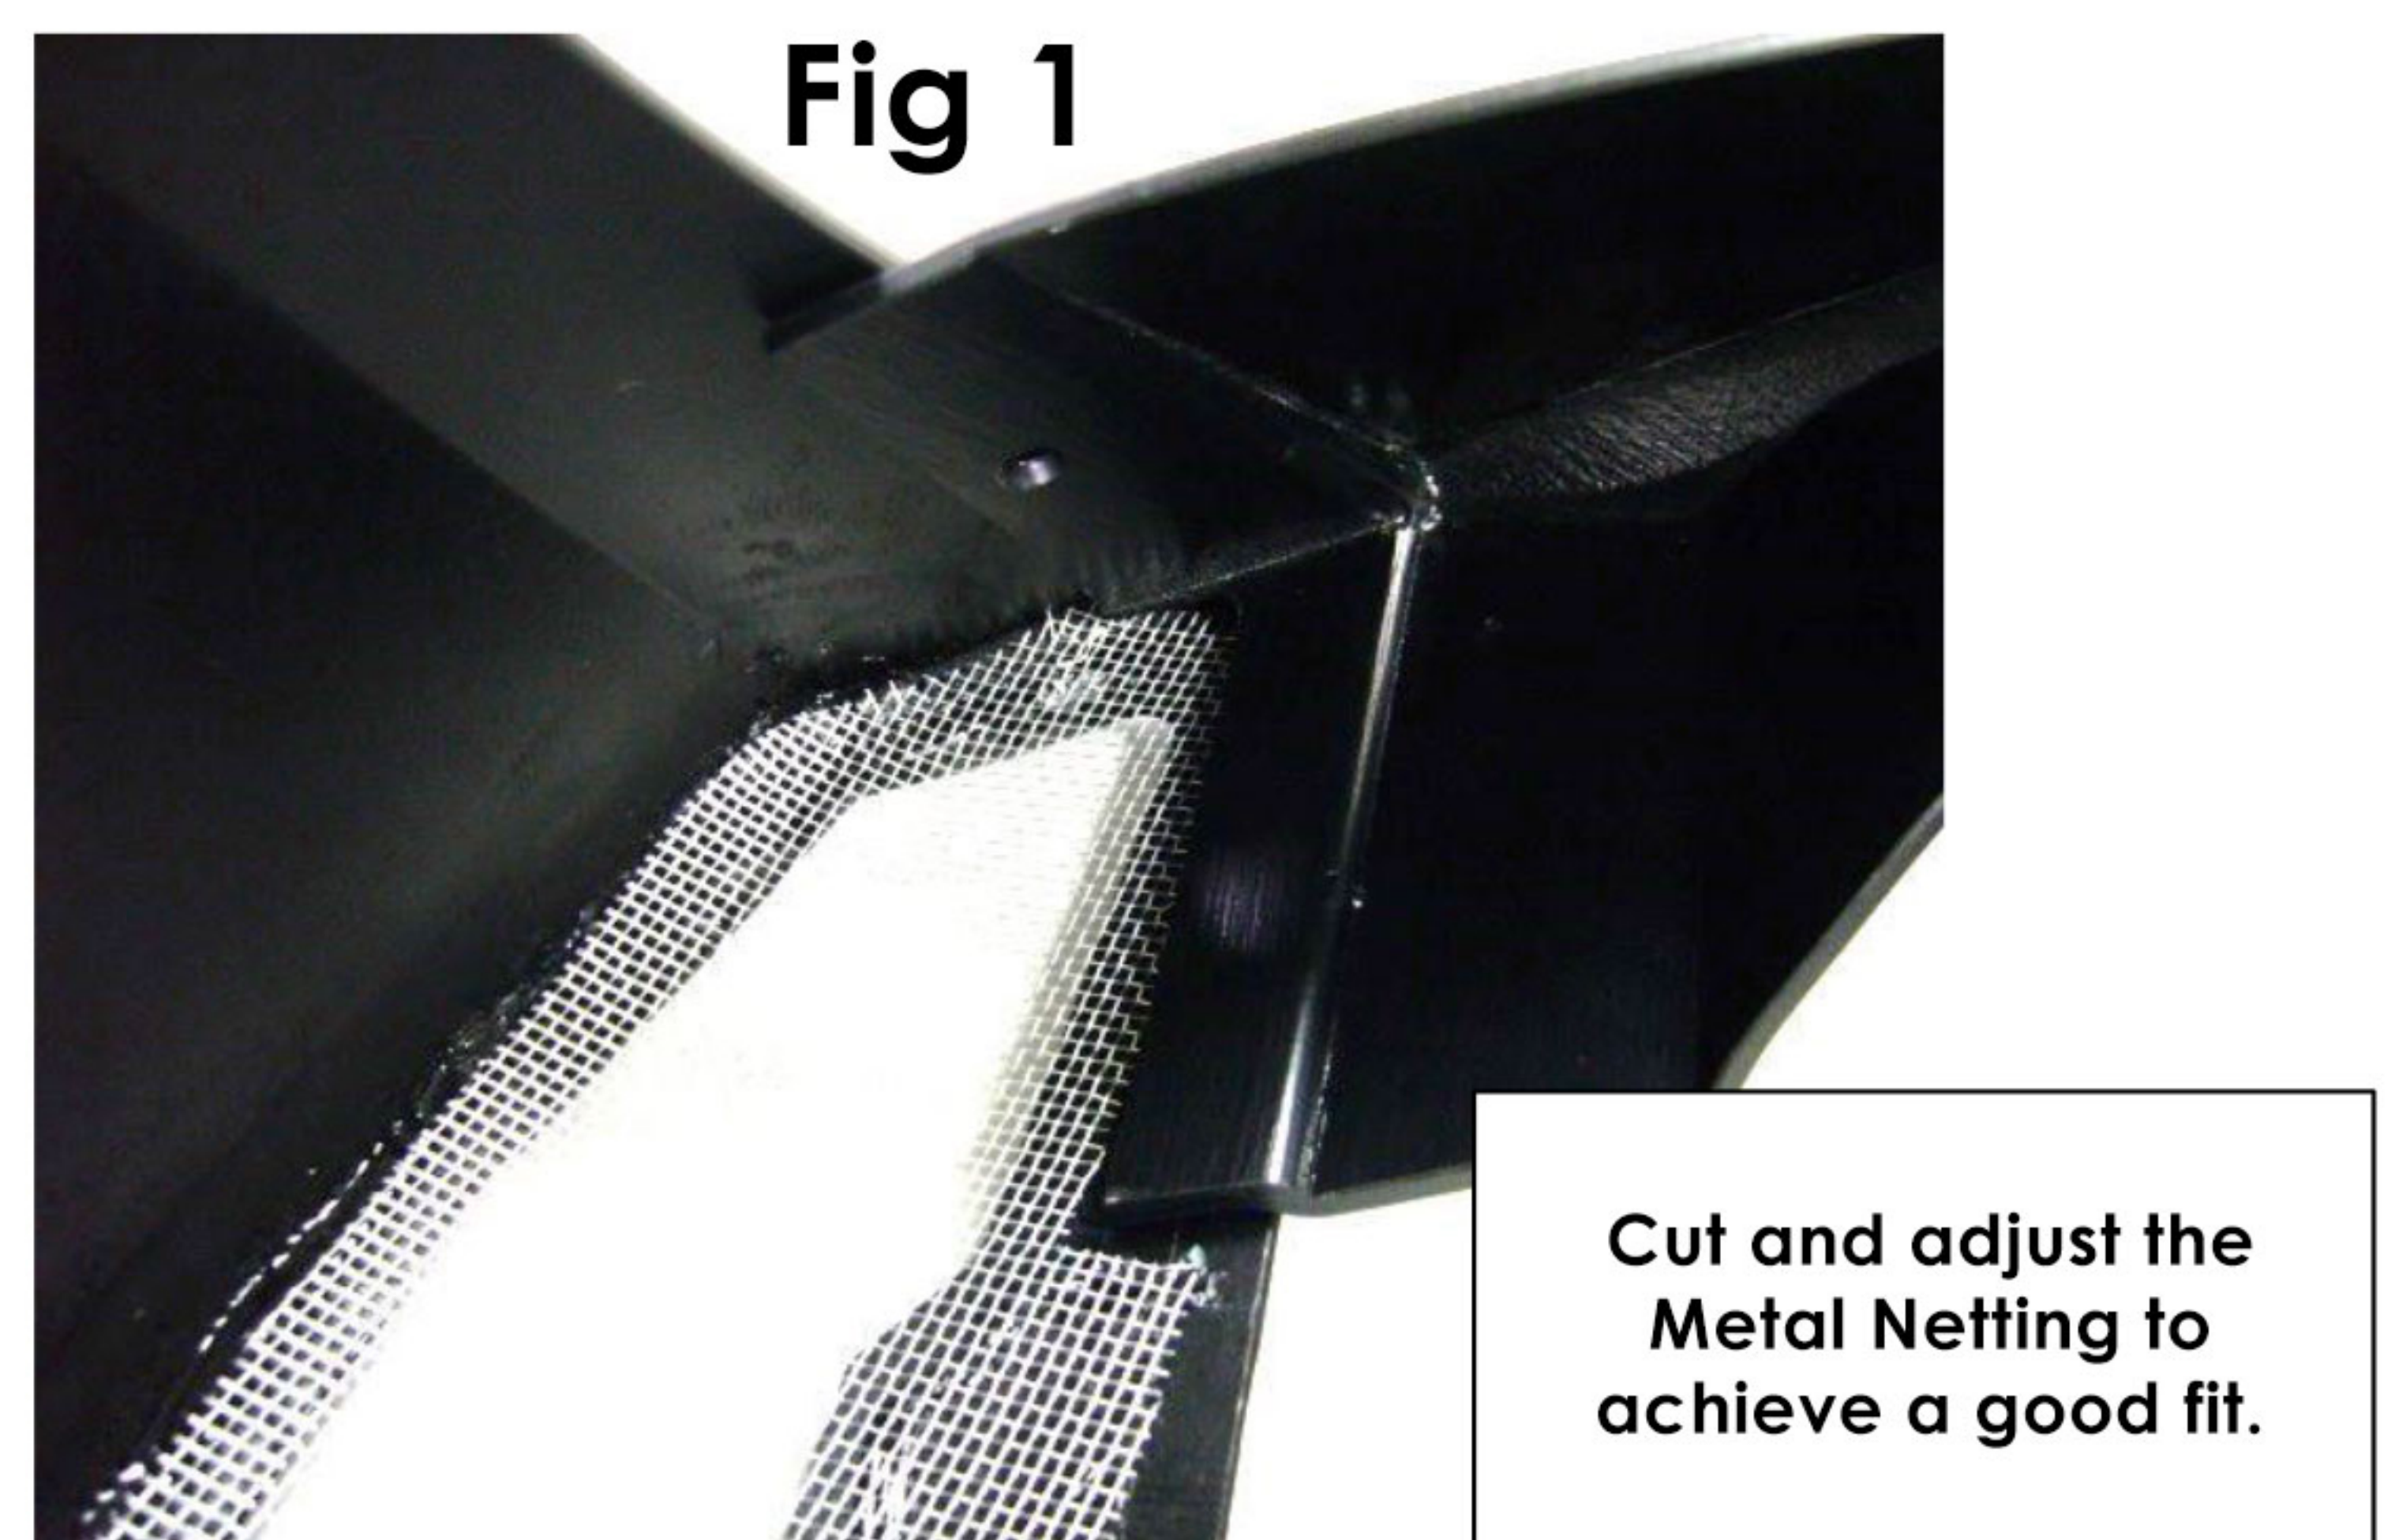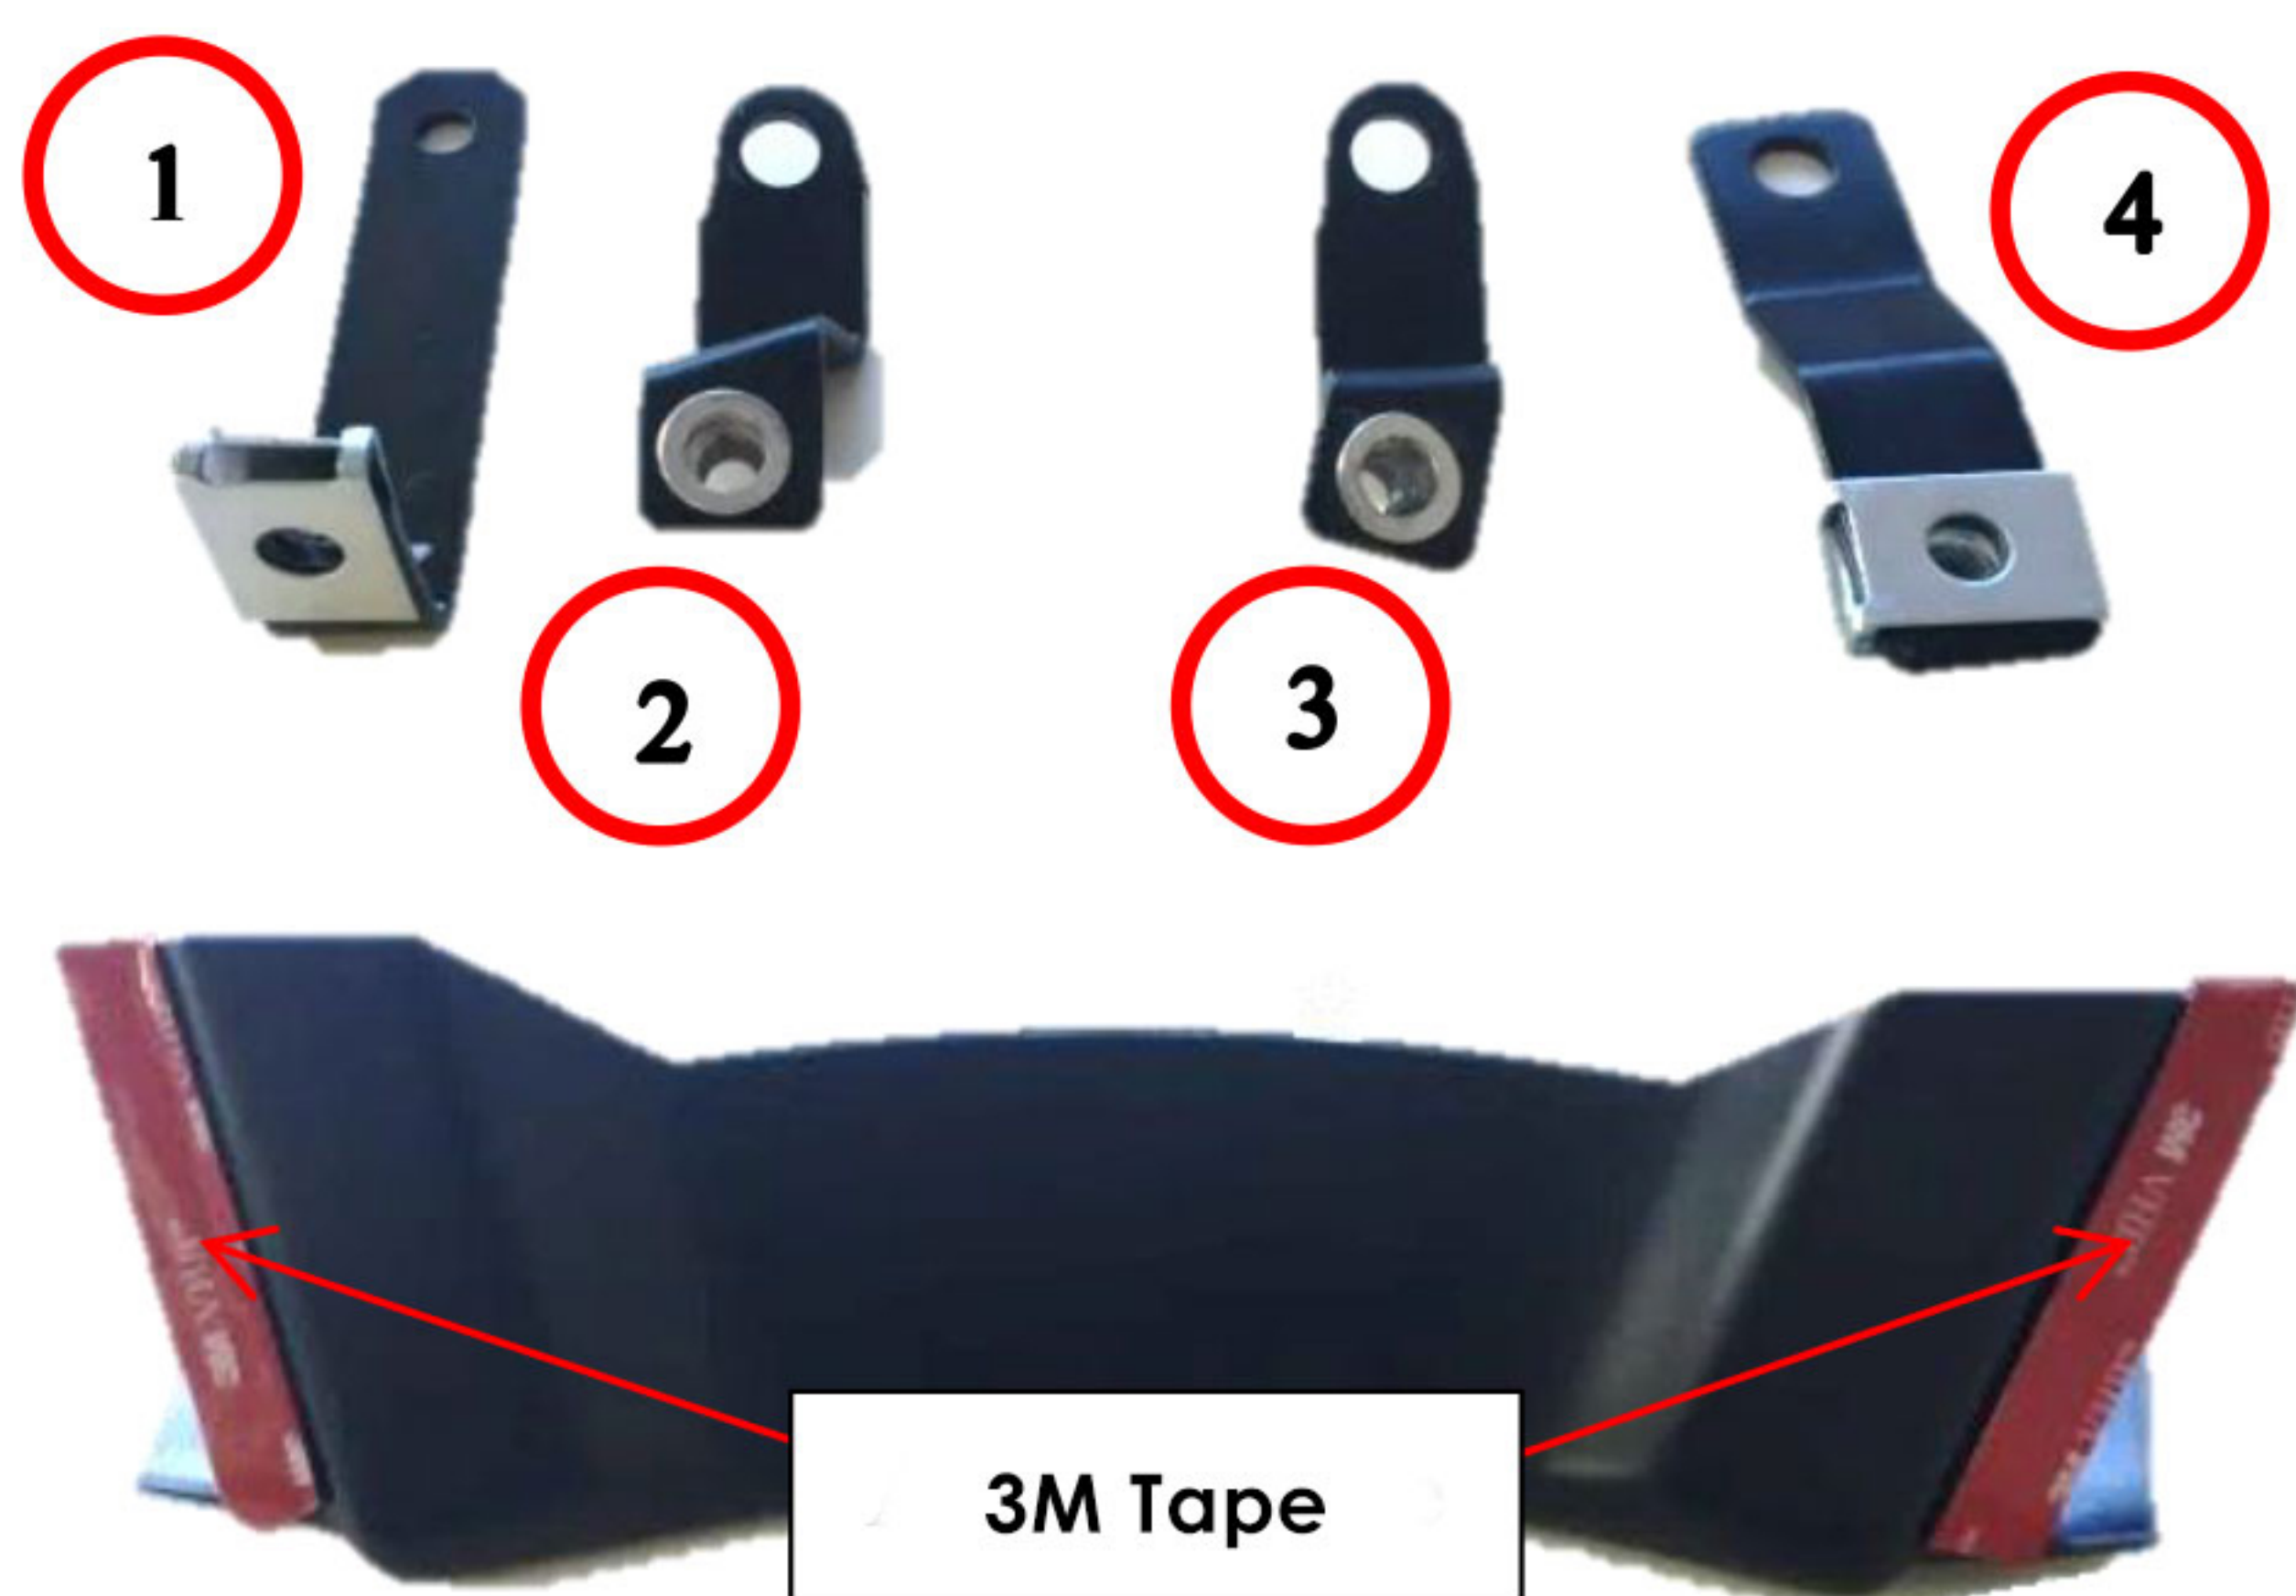

Got questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!