

## 22195 Yamaha MT-10/SP Side Panels Fitting Instructions

### Kit Includes:

2X	C22195	Mouldings (L+R)
2X	CFK22195	Brackets (L+R)
4X	CBOLM60001	M6 X 16mm Black Bolt
2X	CBOLM60026	M6 X 25mm Black Bolt
1X	CBOLM60012	M6 X 30mm SS Bolt
6X	CWASM60003	M6 Washer
2X	CPNUTM60001	M6 Aluminium Rivet Nut (pre-fitted by Pyramid)
3X	CSPAM80002	Spacer

### Note:

The two small panels on both sides of the chassis will need to be removed for fitment of the Pyramid side panels.




- Attach the small brackets supplied using **Fig 1 + 2** as a guide - fit loosely to begin with.
- Once the brackets are loosely fitted, attach the side panels as shown in **Fig 3 + 4**.

**Please note:** the two remaining 'CSPAM80002' spacers are fitted underneath the panels at the lower most mounting holes.

- Once the brackets are aligned with the panels correctly, fully tighten them into position.
- Fully tighten all other mounting points and check fixings periodically.

Left-hand side of the bike

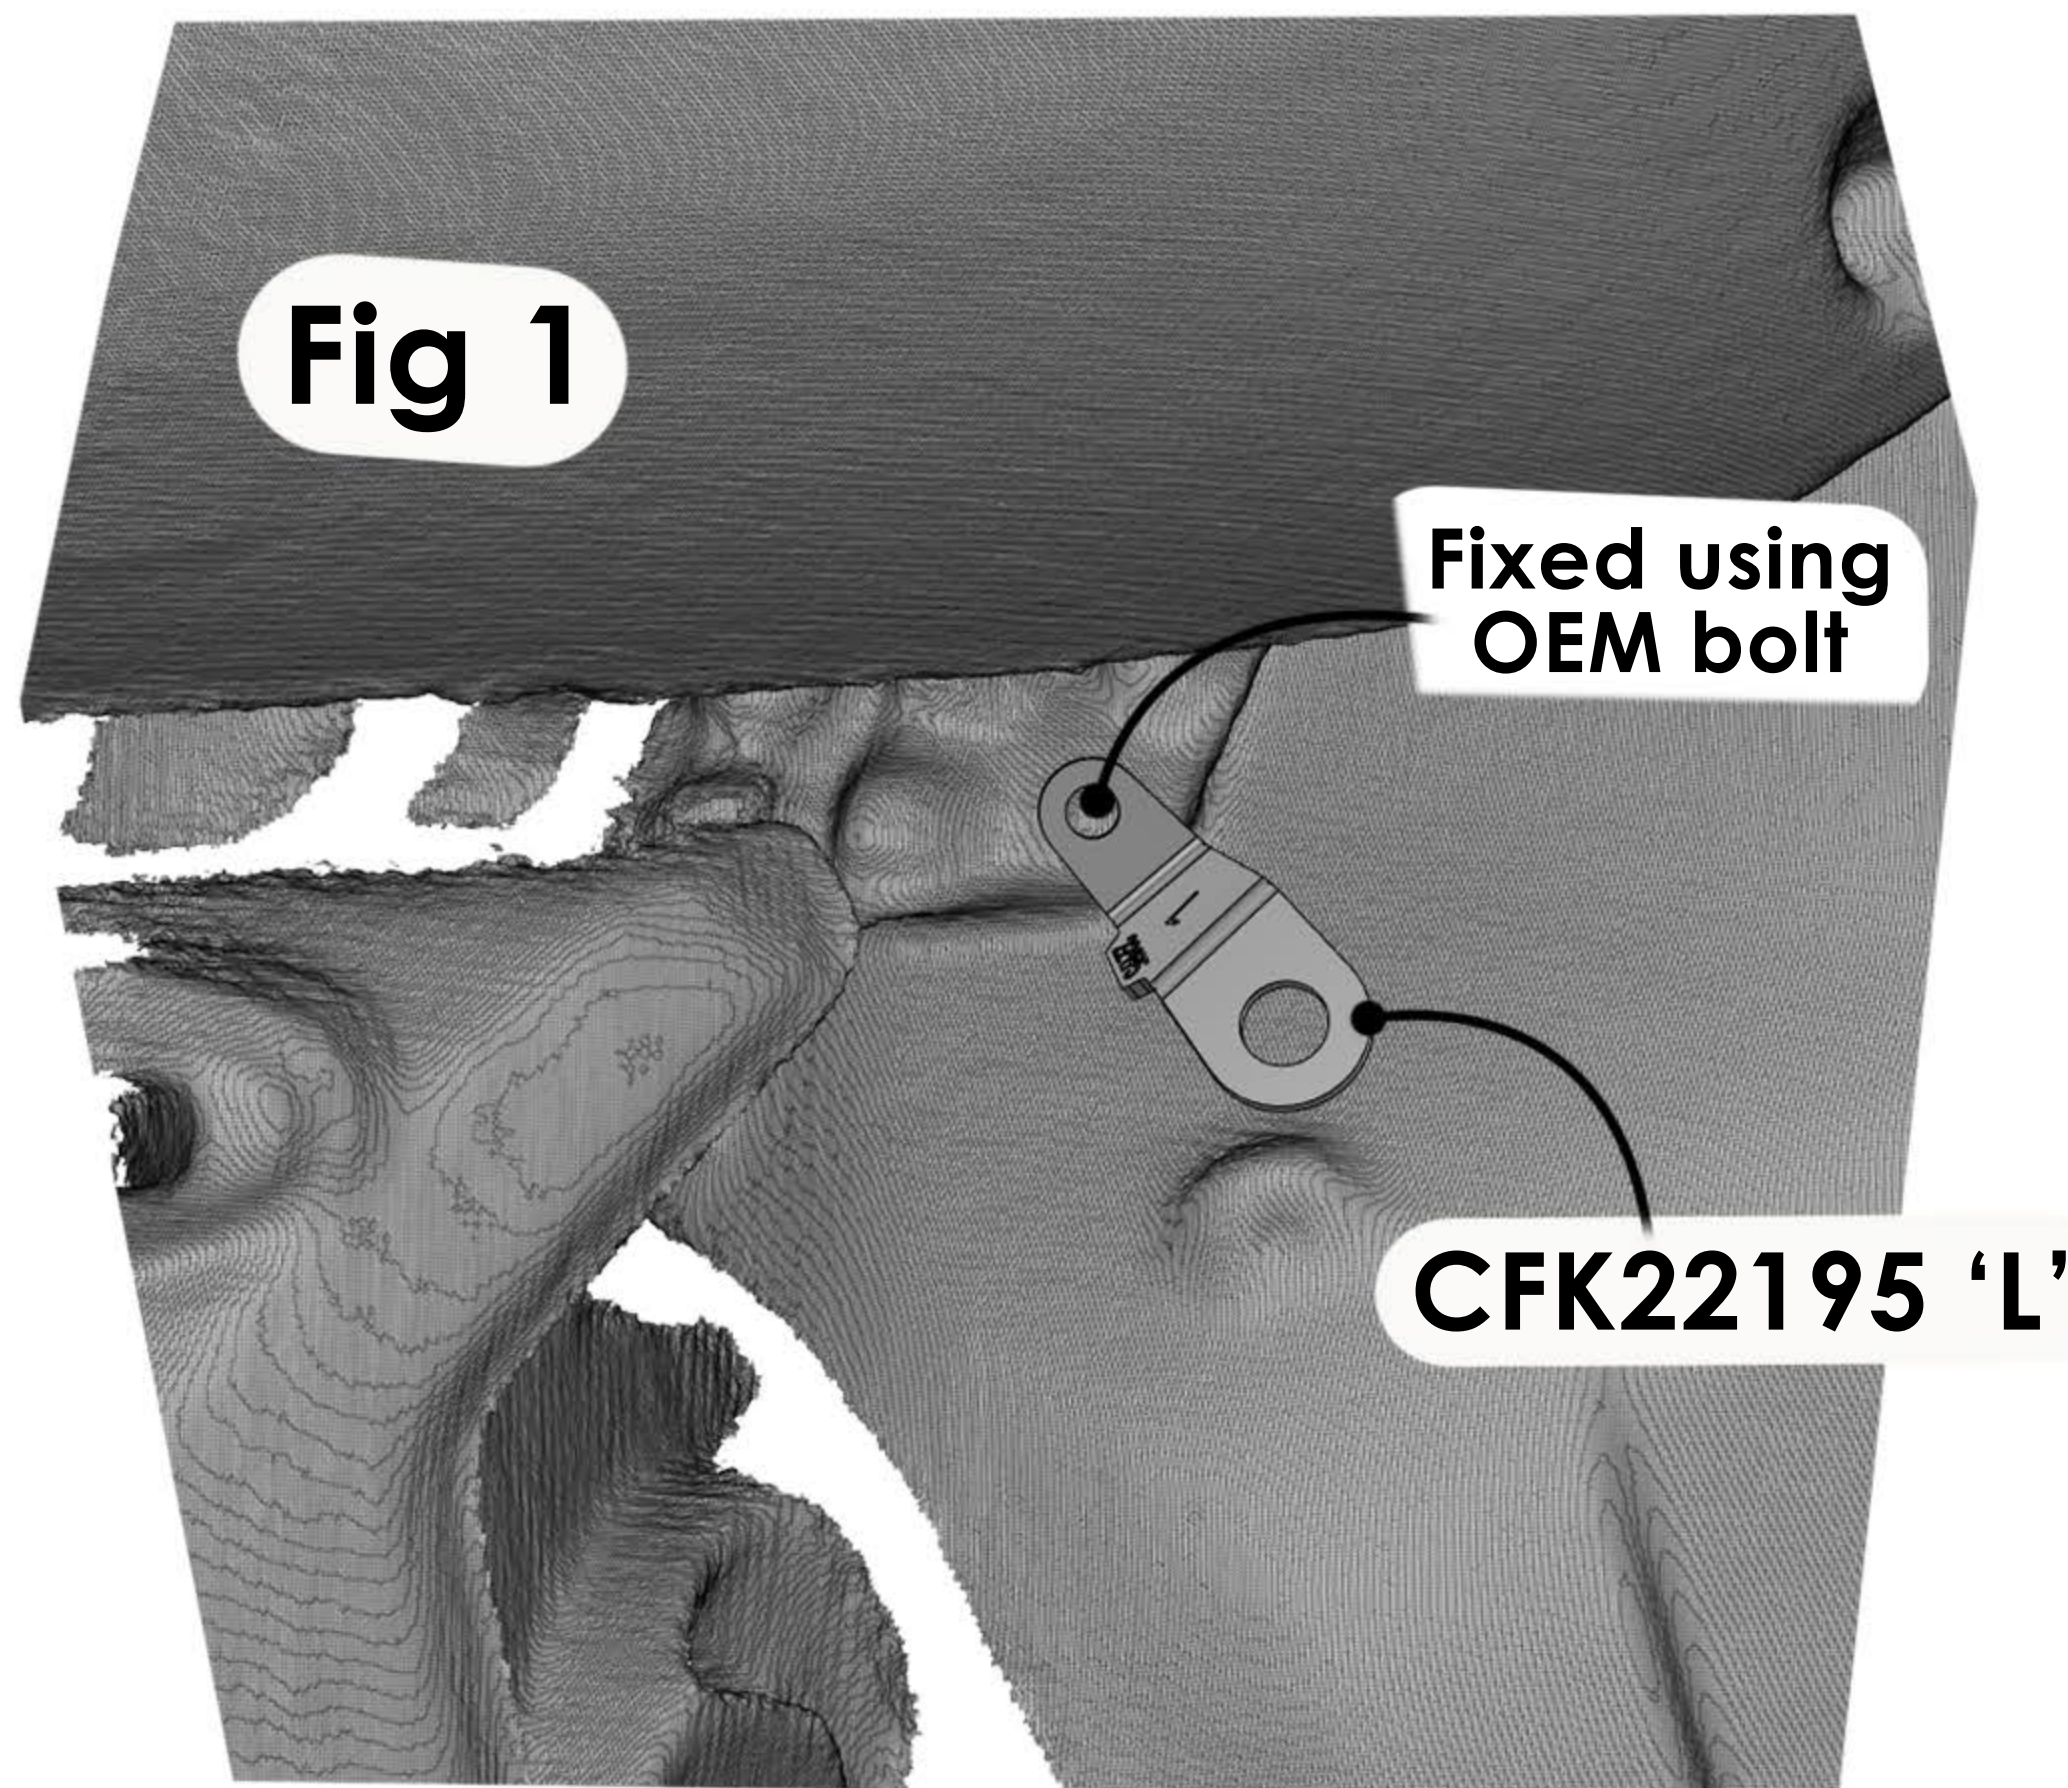

Right-hand side of the bike

