
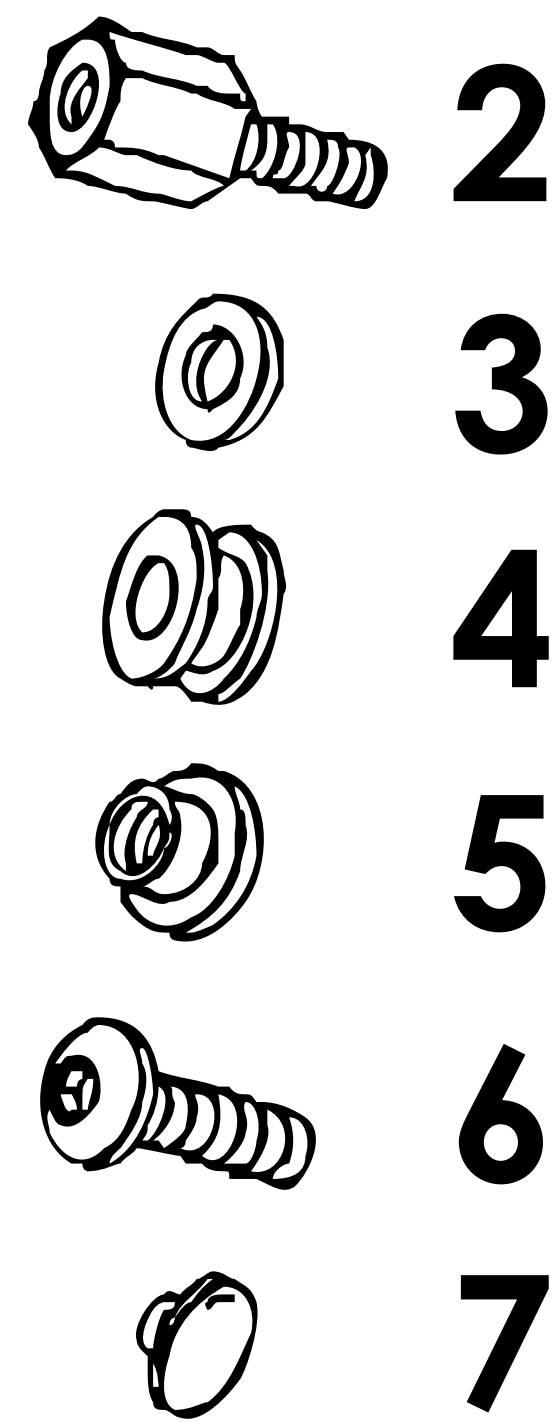



PYRAMID

24002 BMW F900XR Fly Screen Fitting Instructions

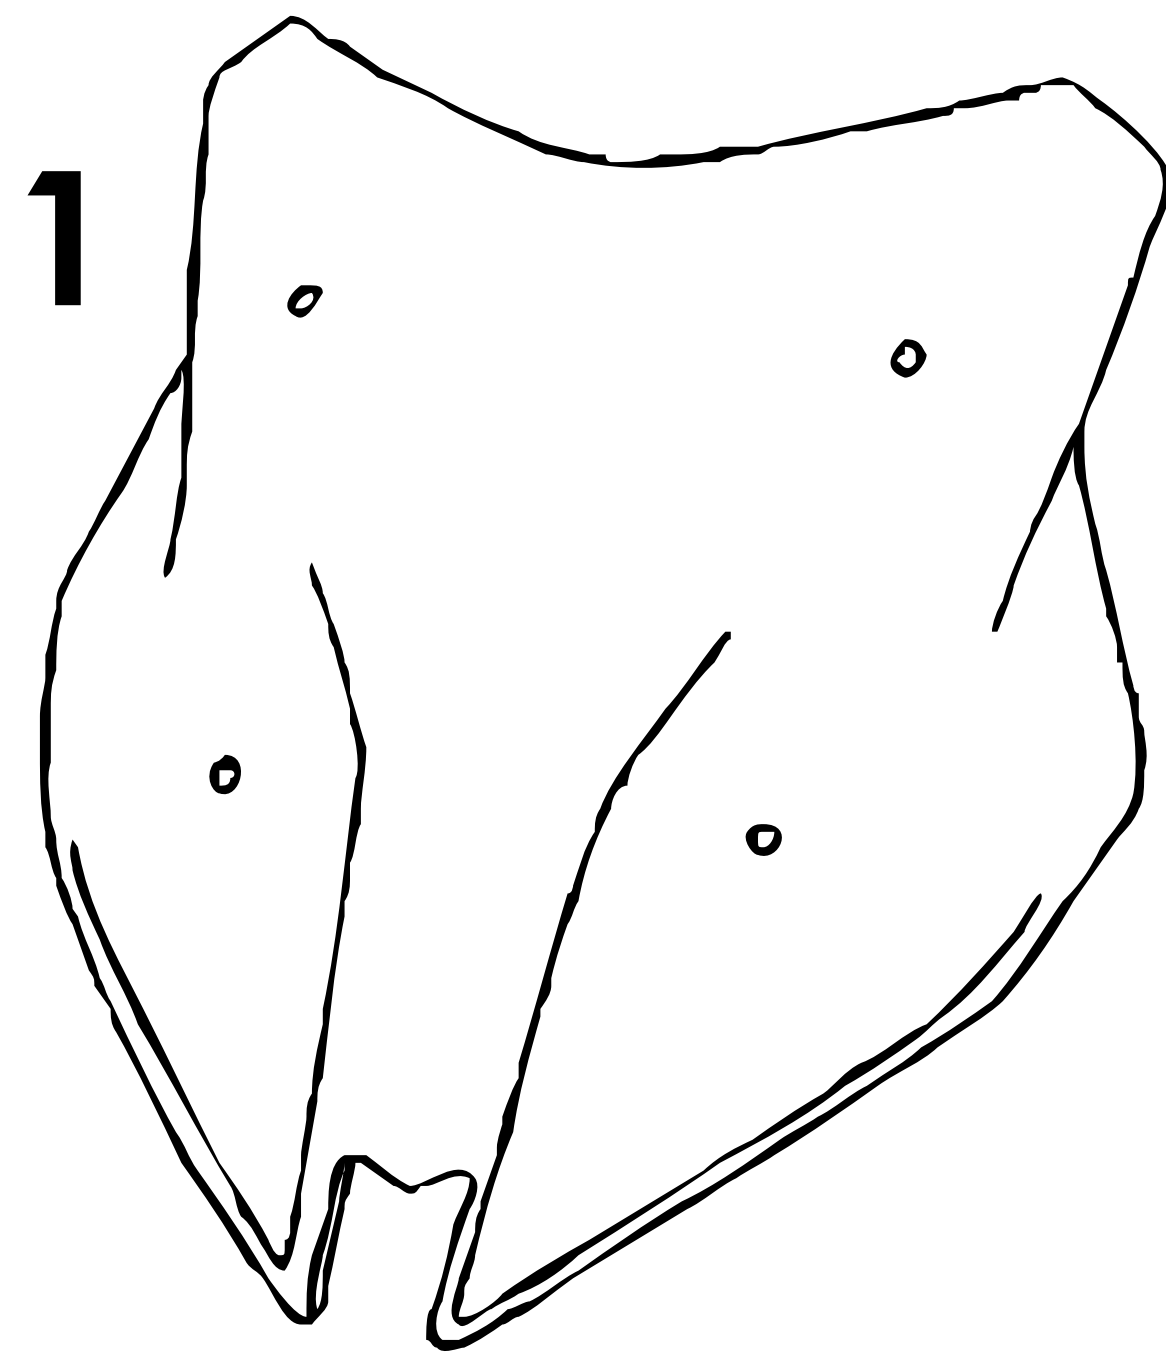


Please use the detailed fitting diagrams below.


1 DISASSEMBLY

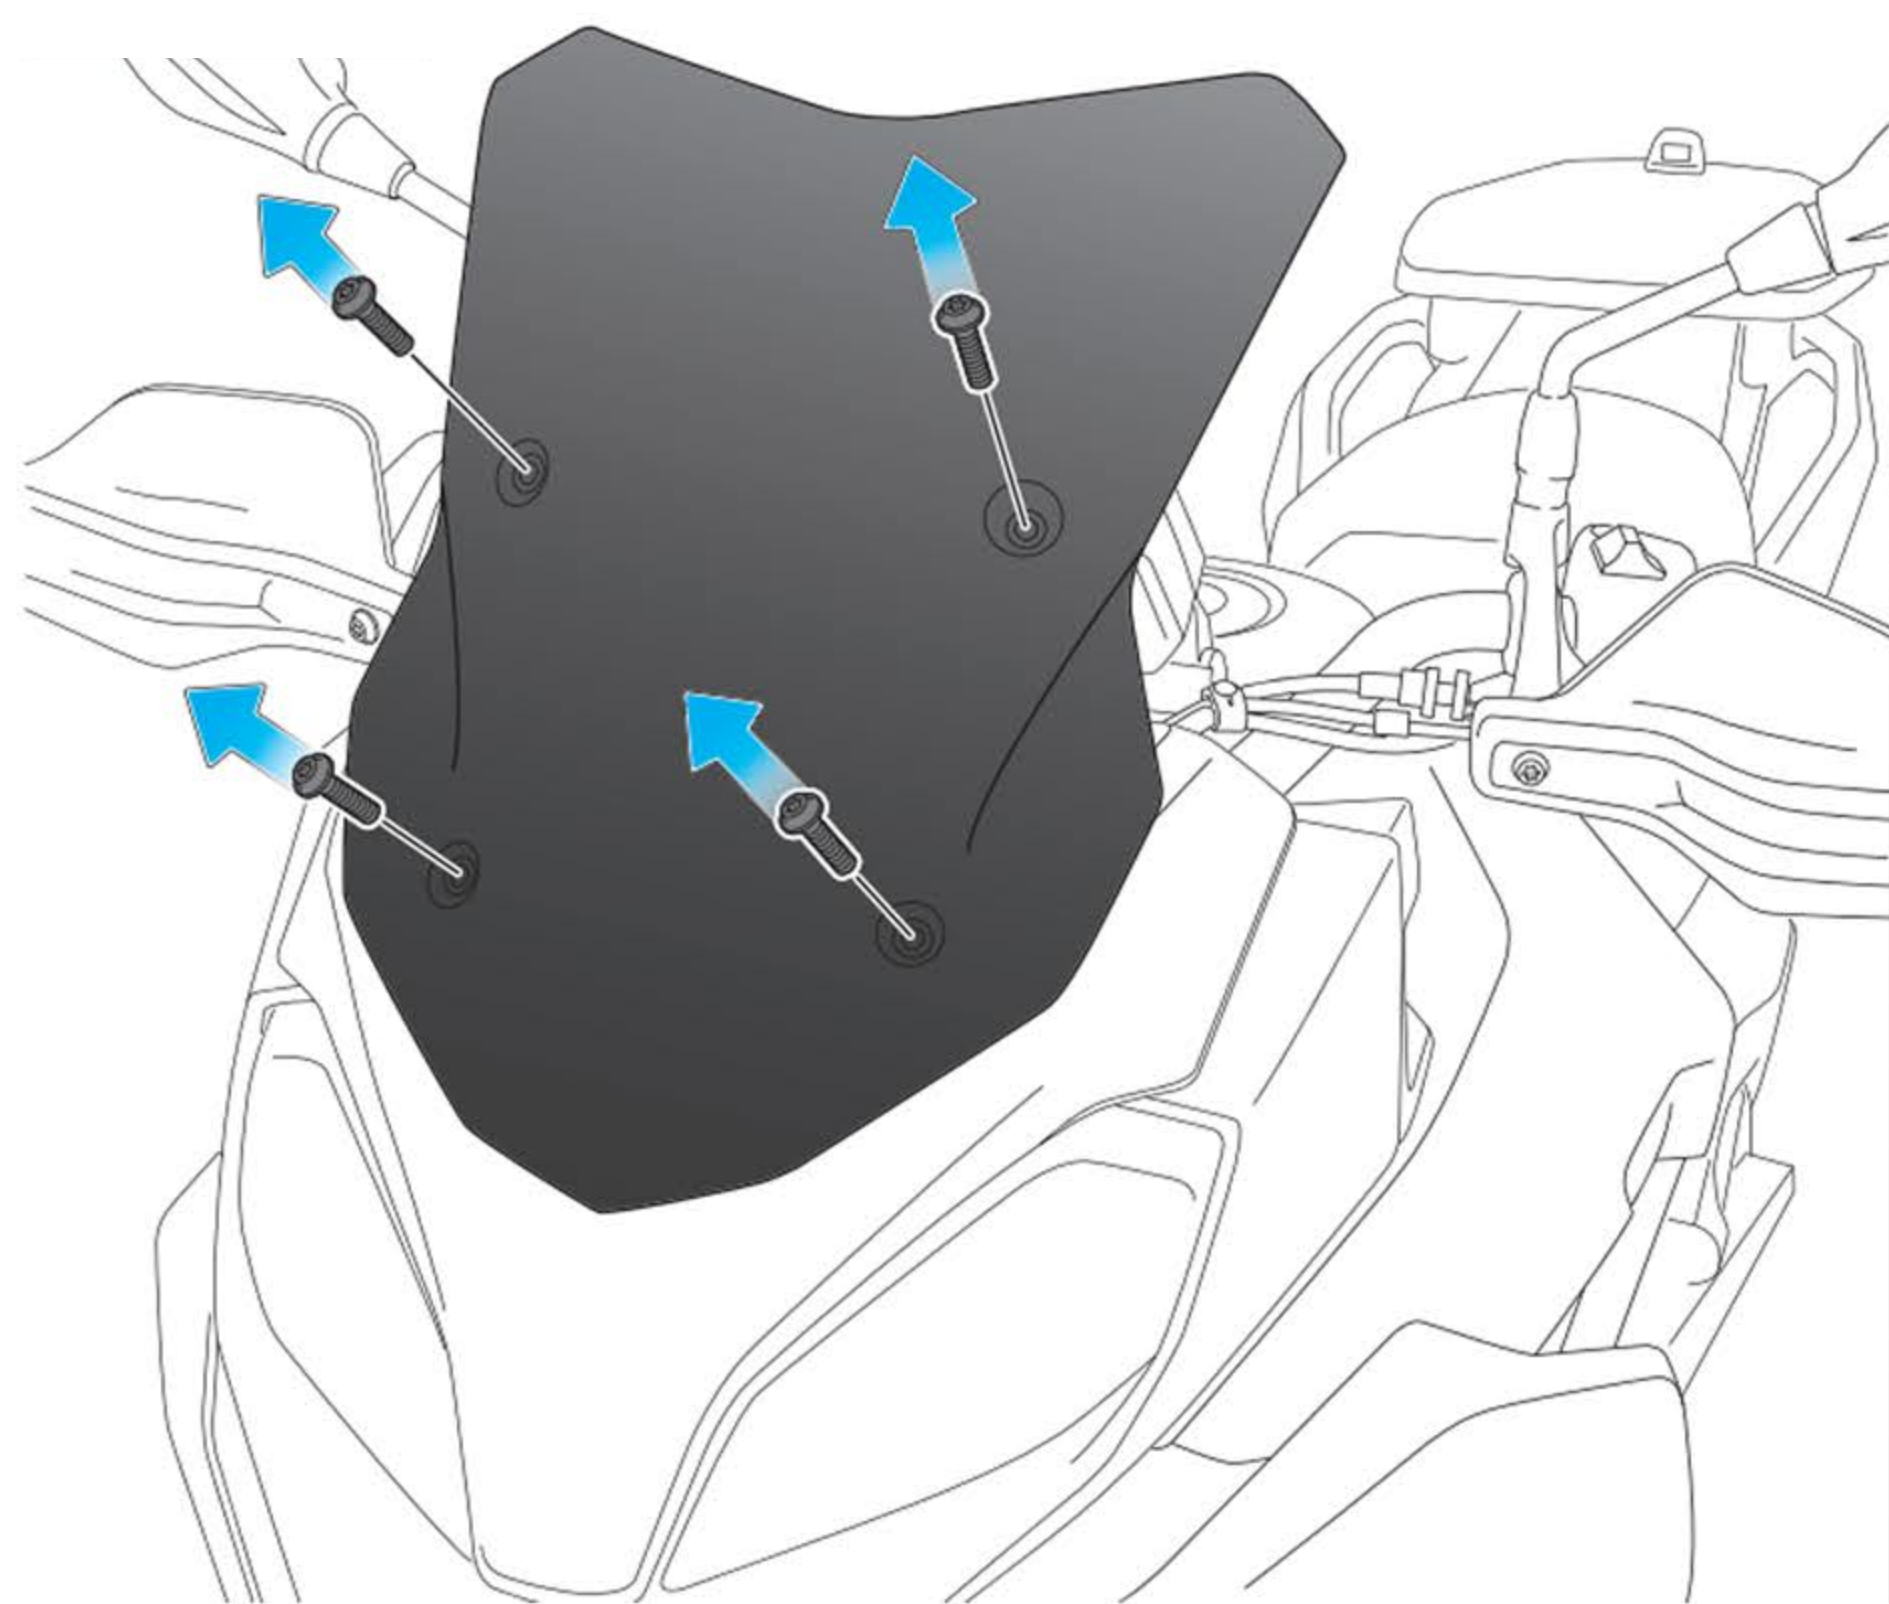


2 ASSEMBLY

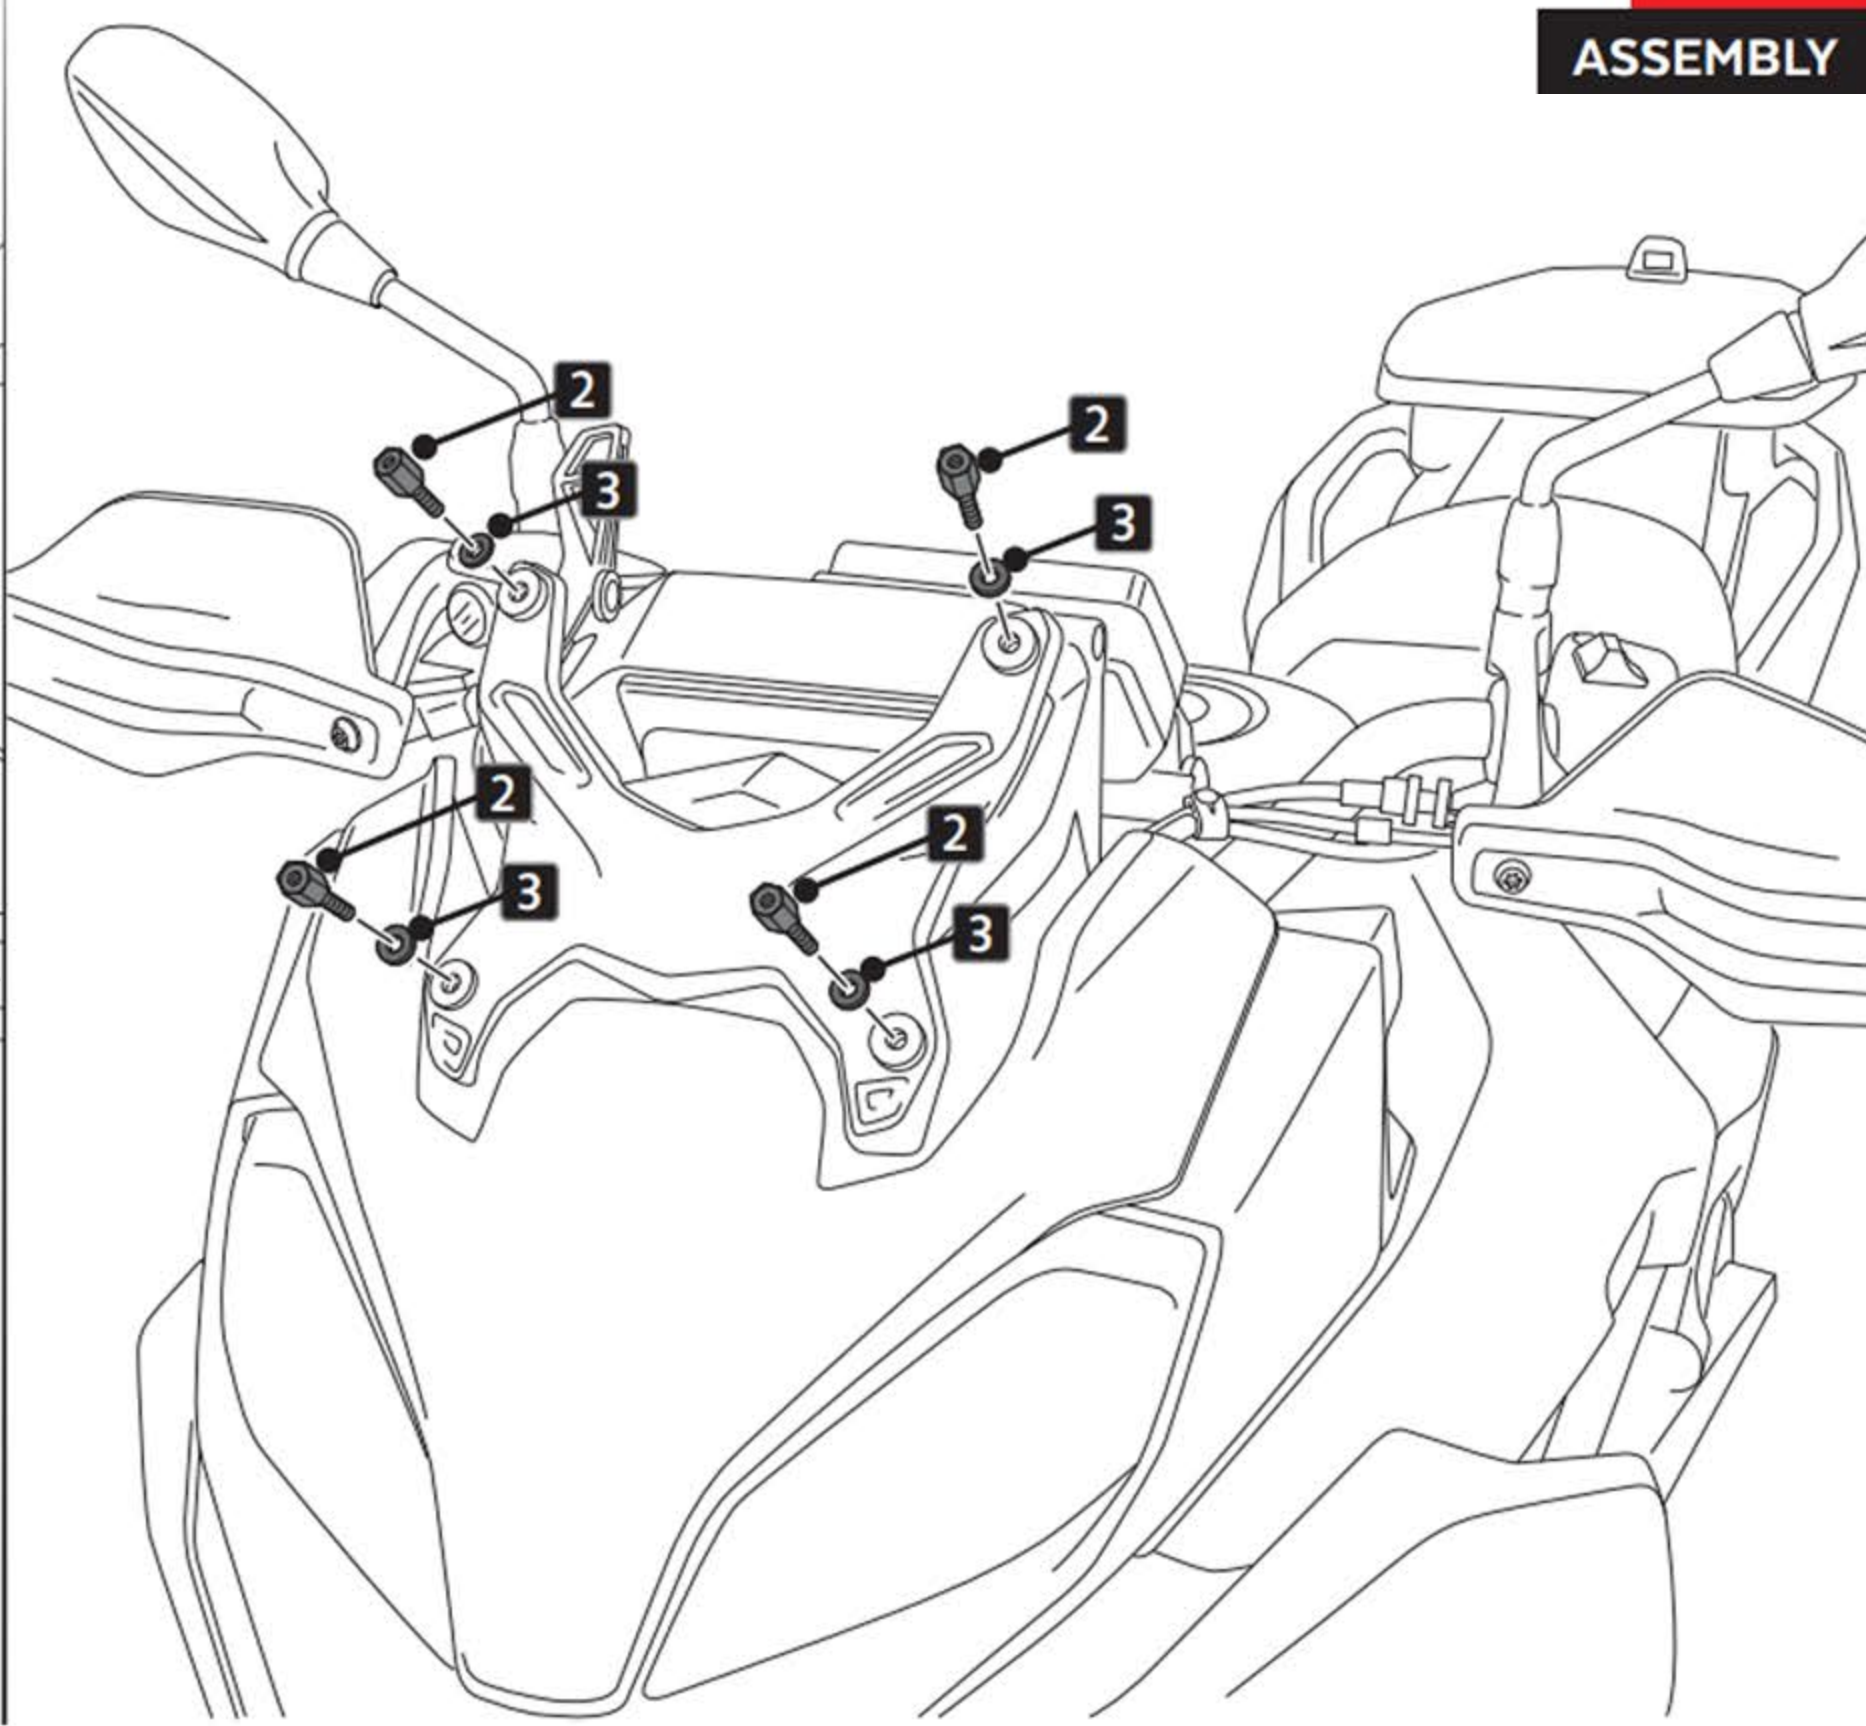

3 ASSEMBLY

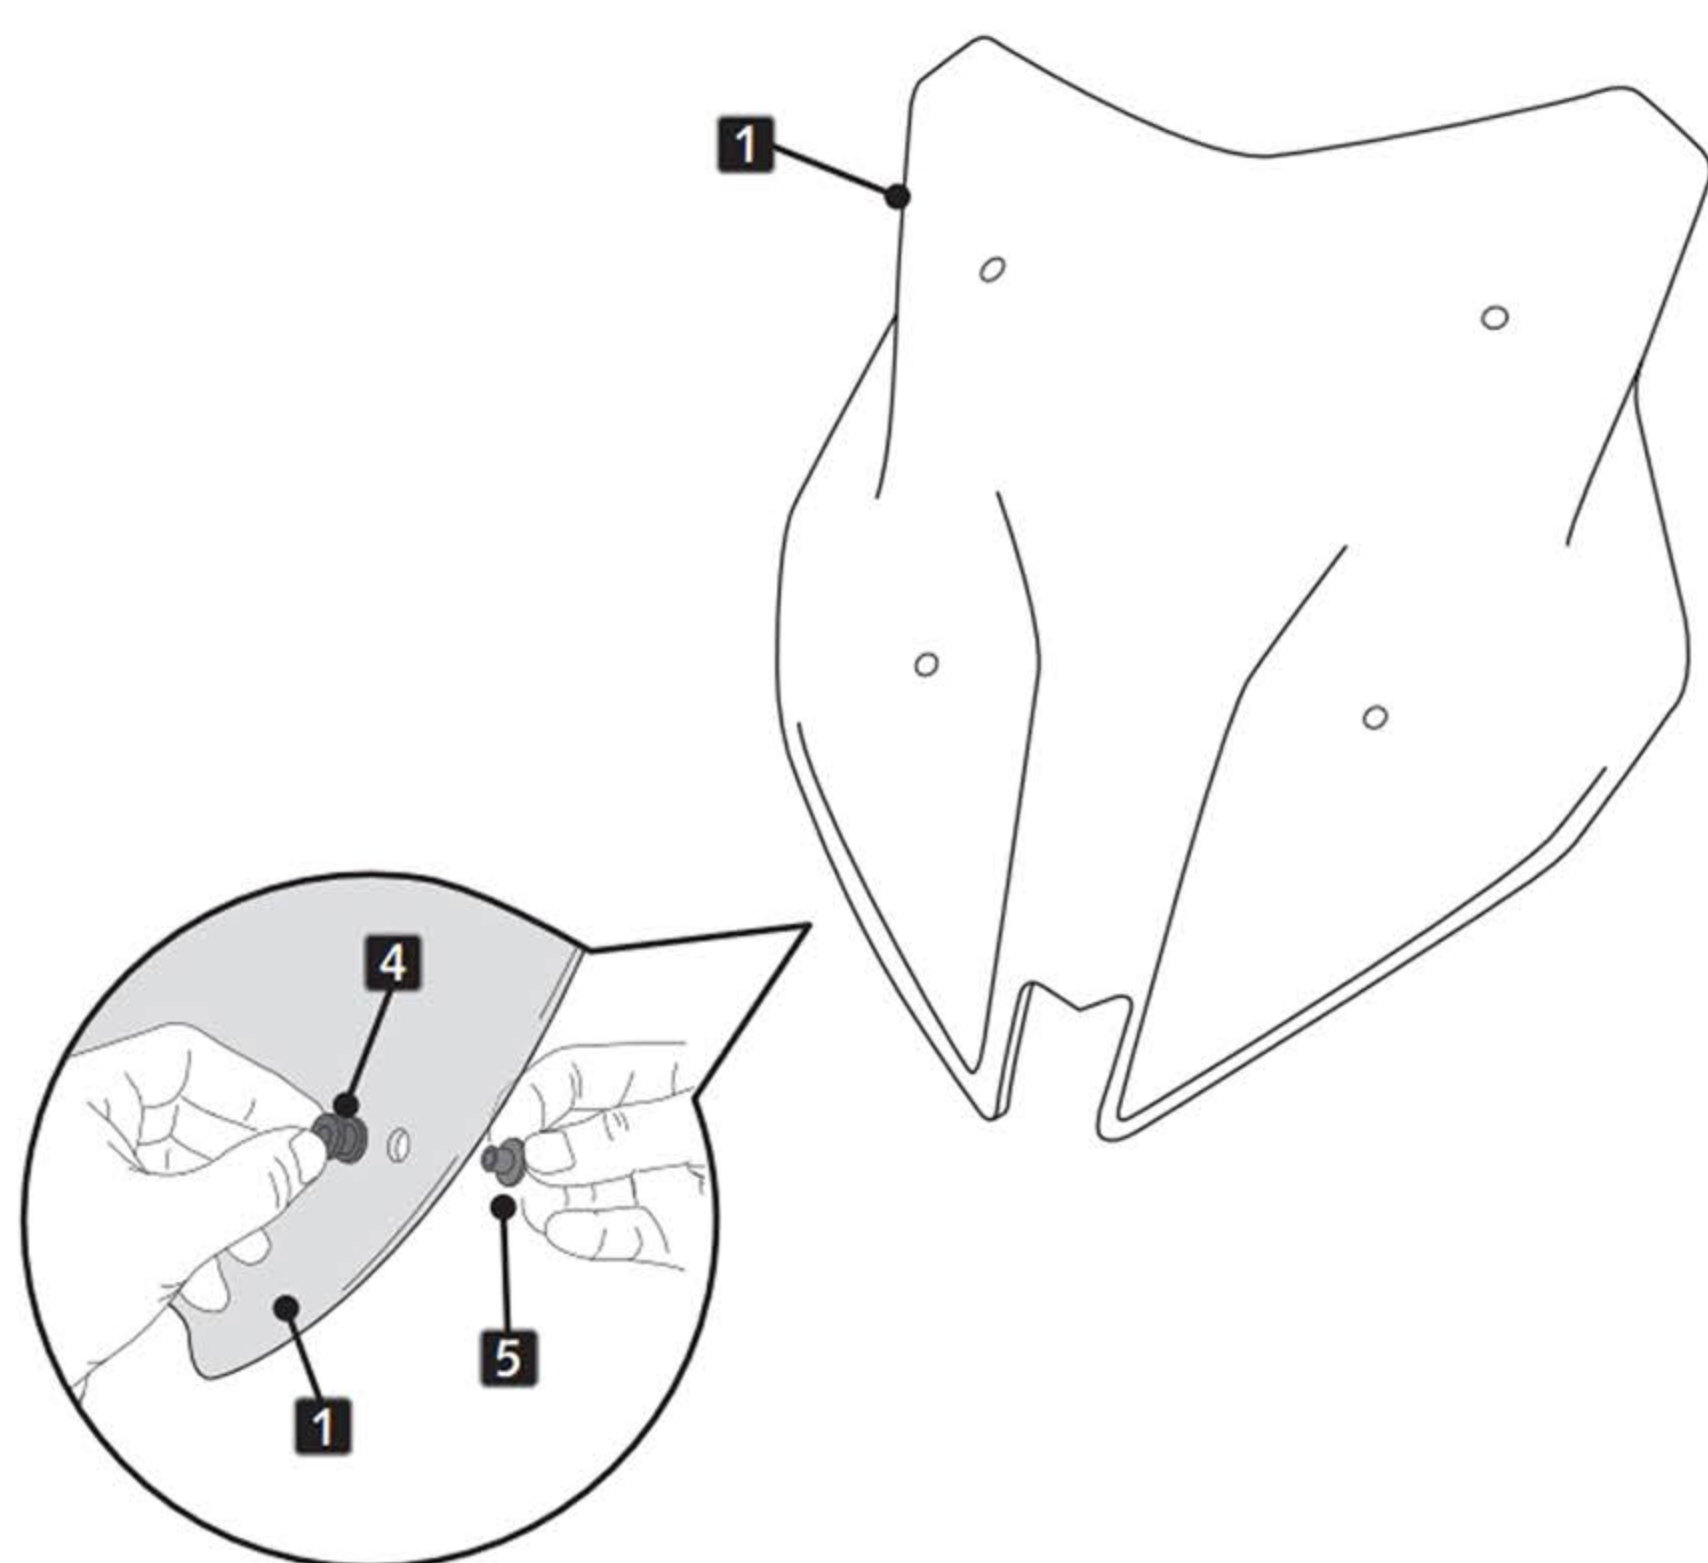

4 ASSEMBLY

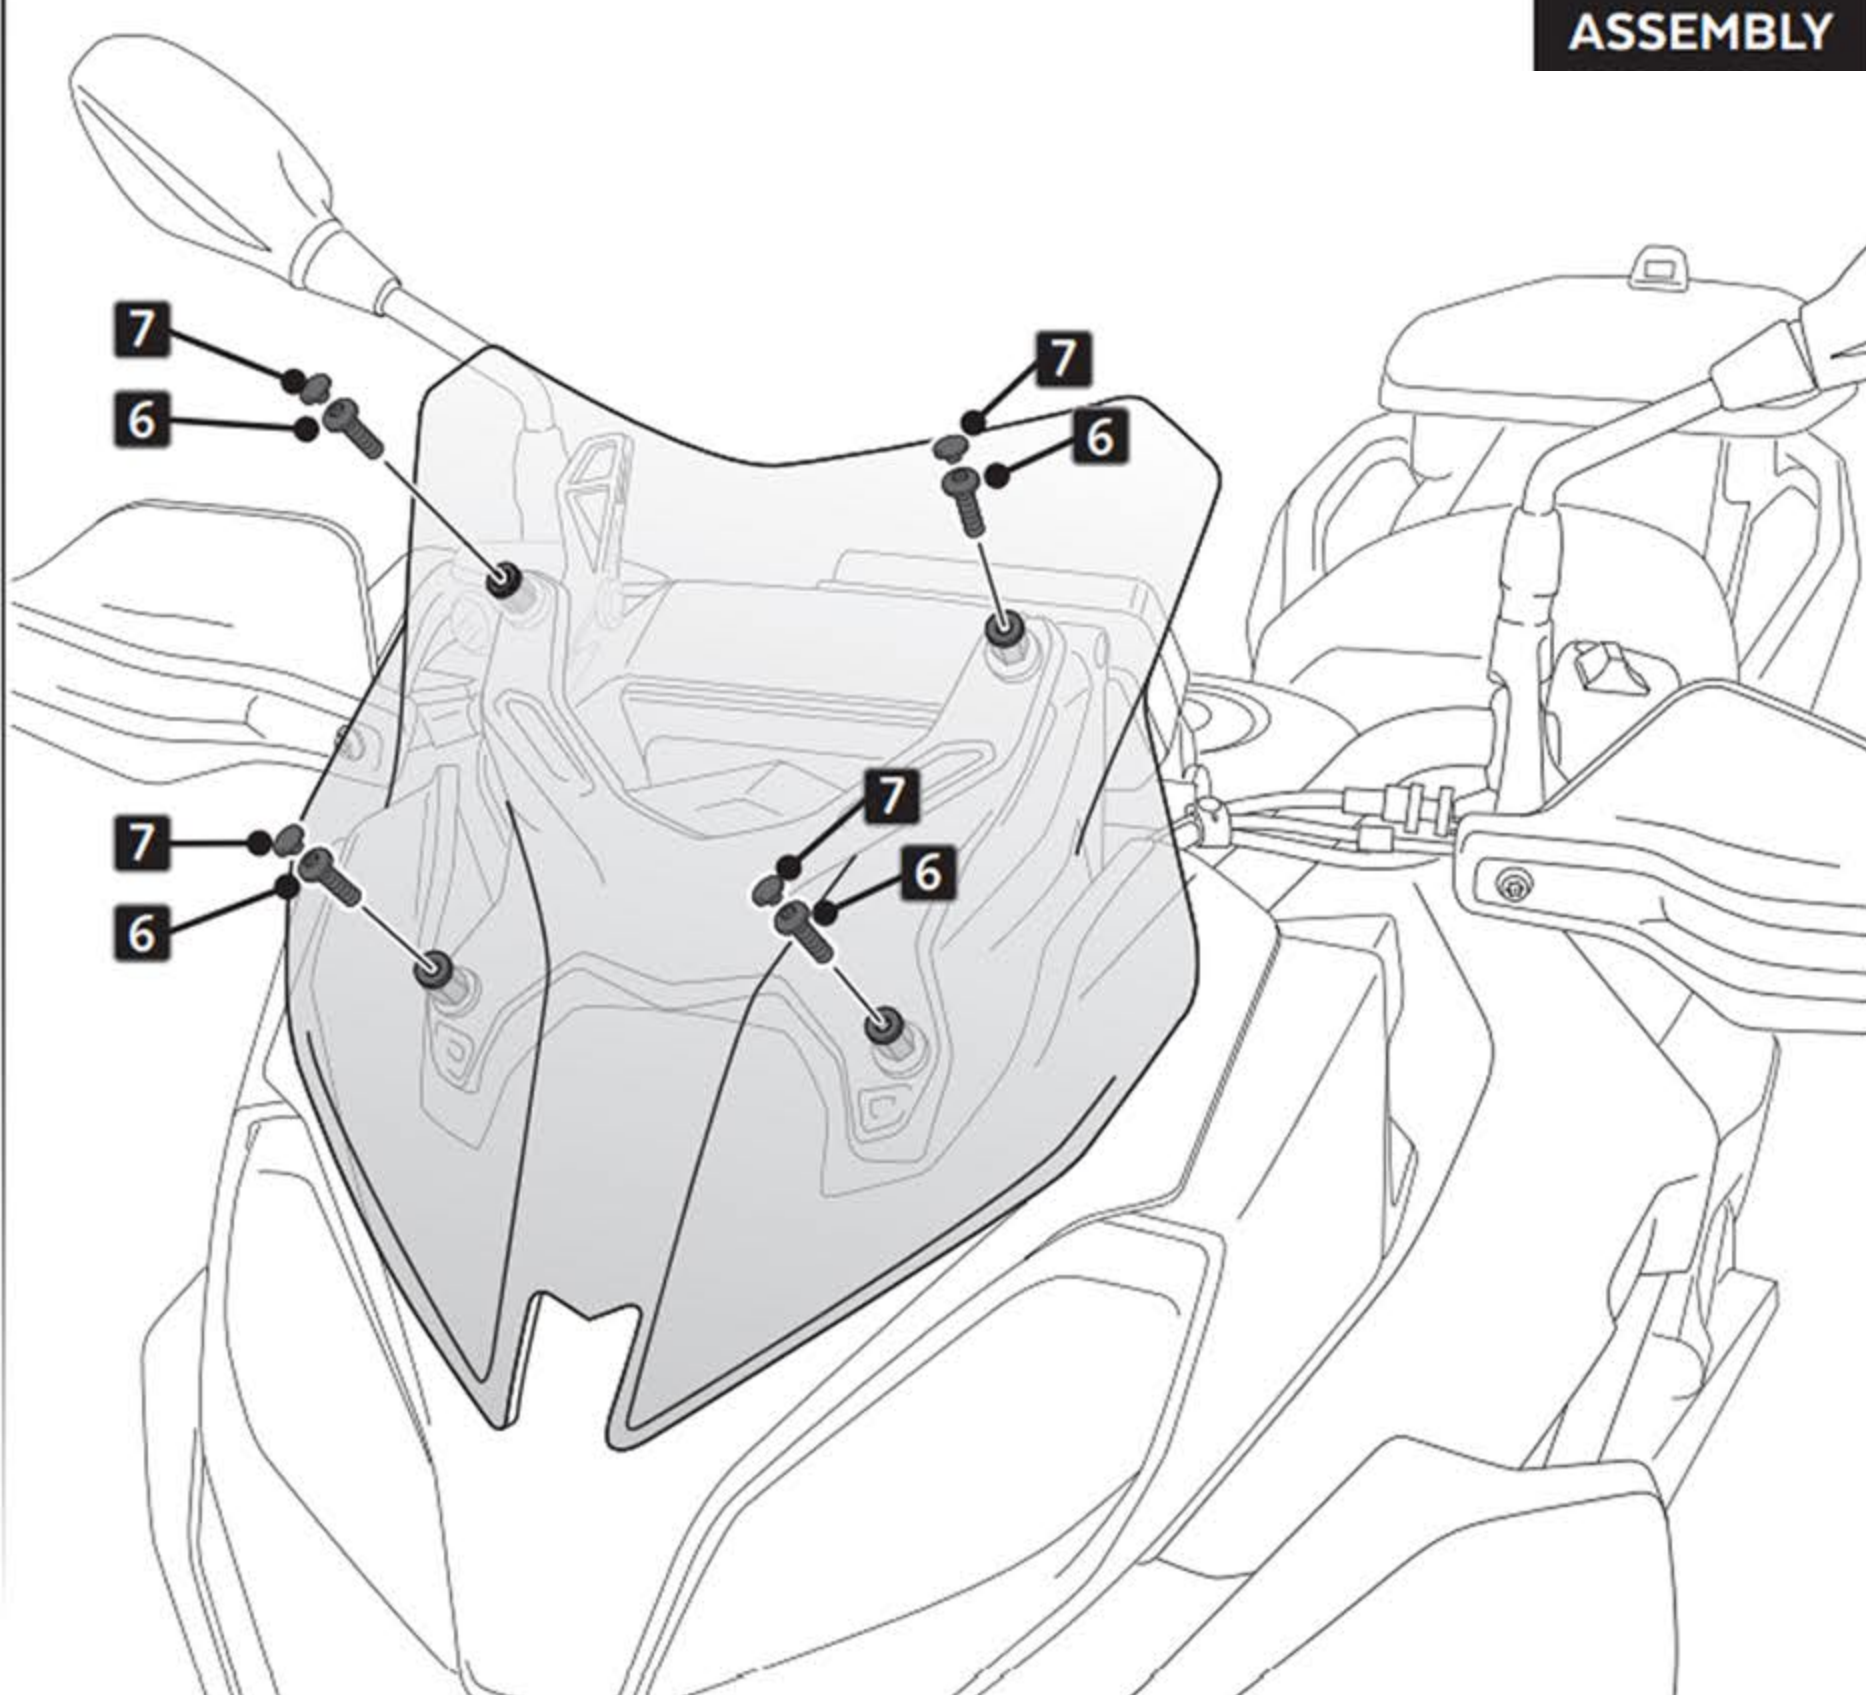

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!