

24091 BMW F900R Fly Screen Fitting Instructions

Kit Includes:

1X	C22160	Fly Screen
1X	CFK24091	Bracket
3X	CBOLM50008	M5 X 16mm Stainless Bolt
3X	CNUTM50001	M5 Rubber Anchor Nut
3X	CWASM50001	M5 Washer
2X	C08021	Smoked Trim (30mm length)


- Attach the Pyramid fly screen to the bracket using the M5 fixings supplied. Fit the smoked trim as shown below.
- Remove the OEM plastic cowling and fit the Pyramid fly screen as shown below (use original bolts).

Check fixings periodically.


Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!

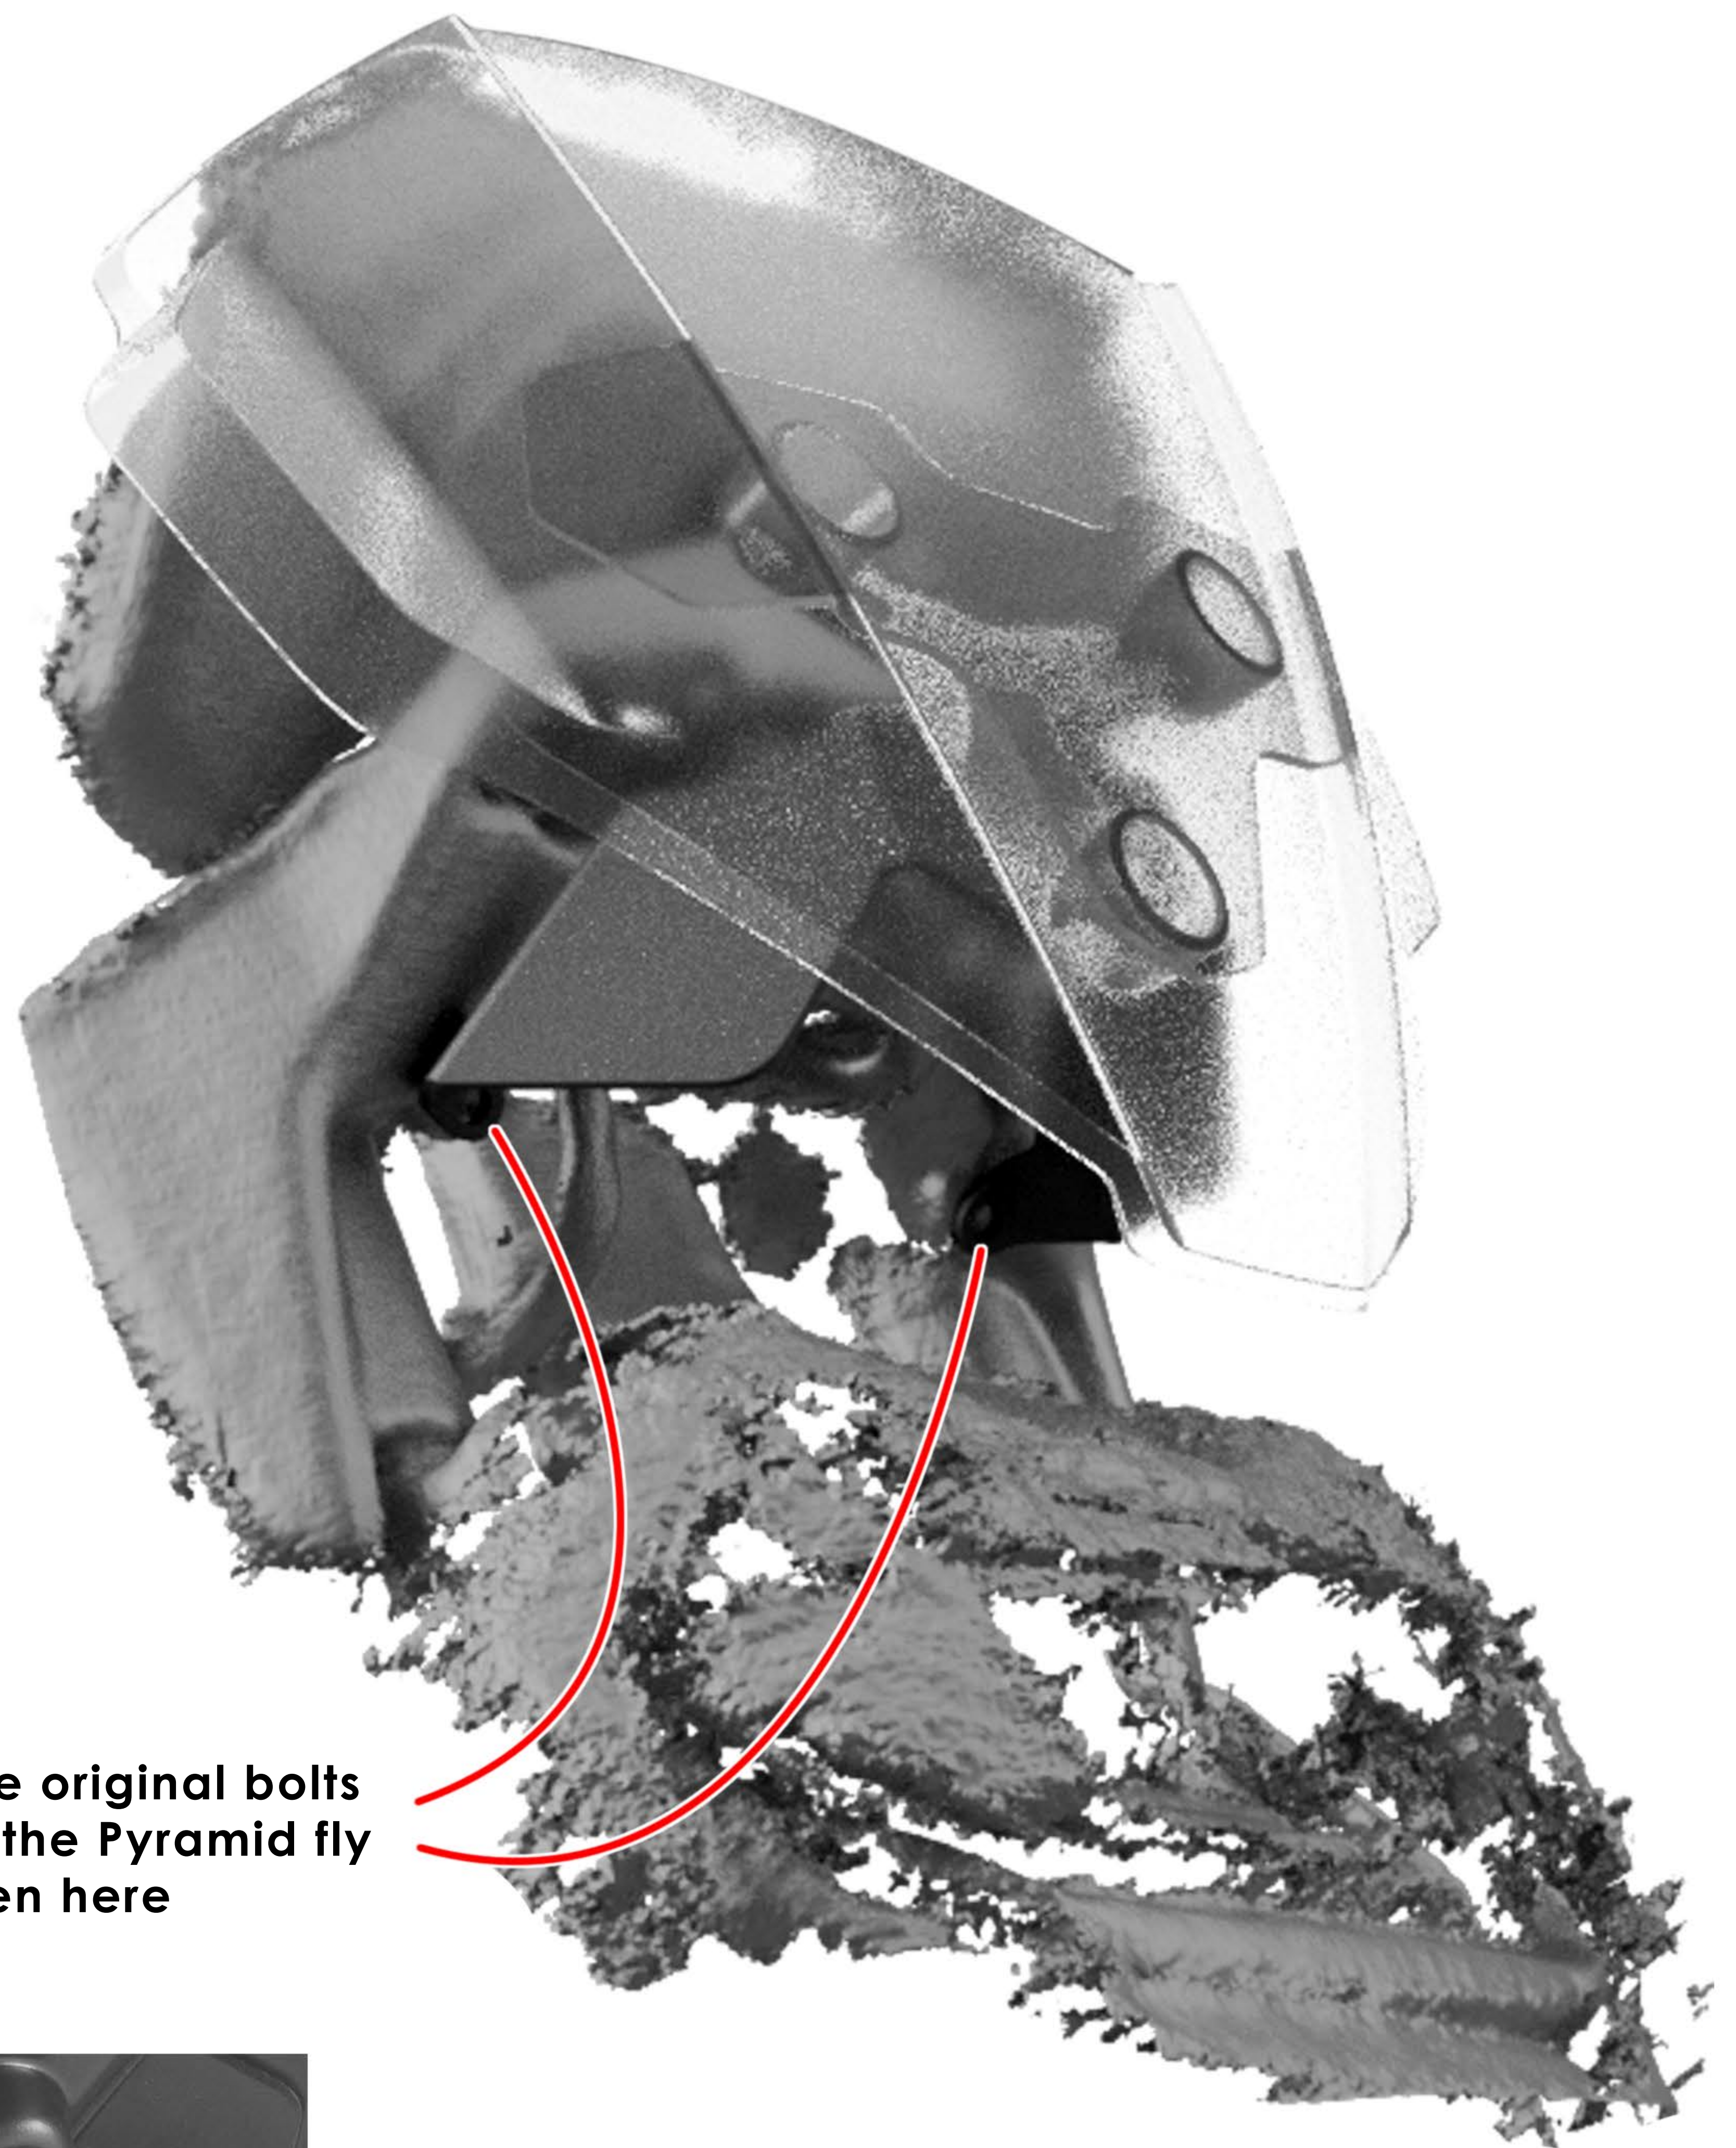

Reuse original bolts
to fit the Pyramid fly
screen here

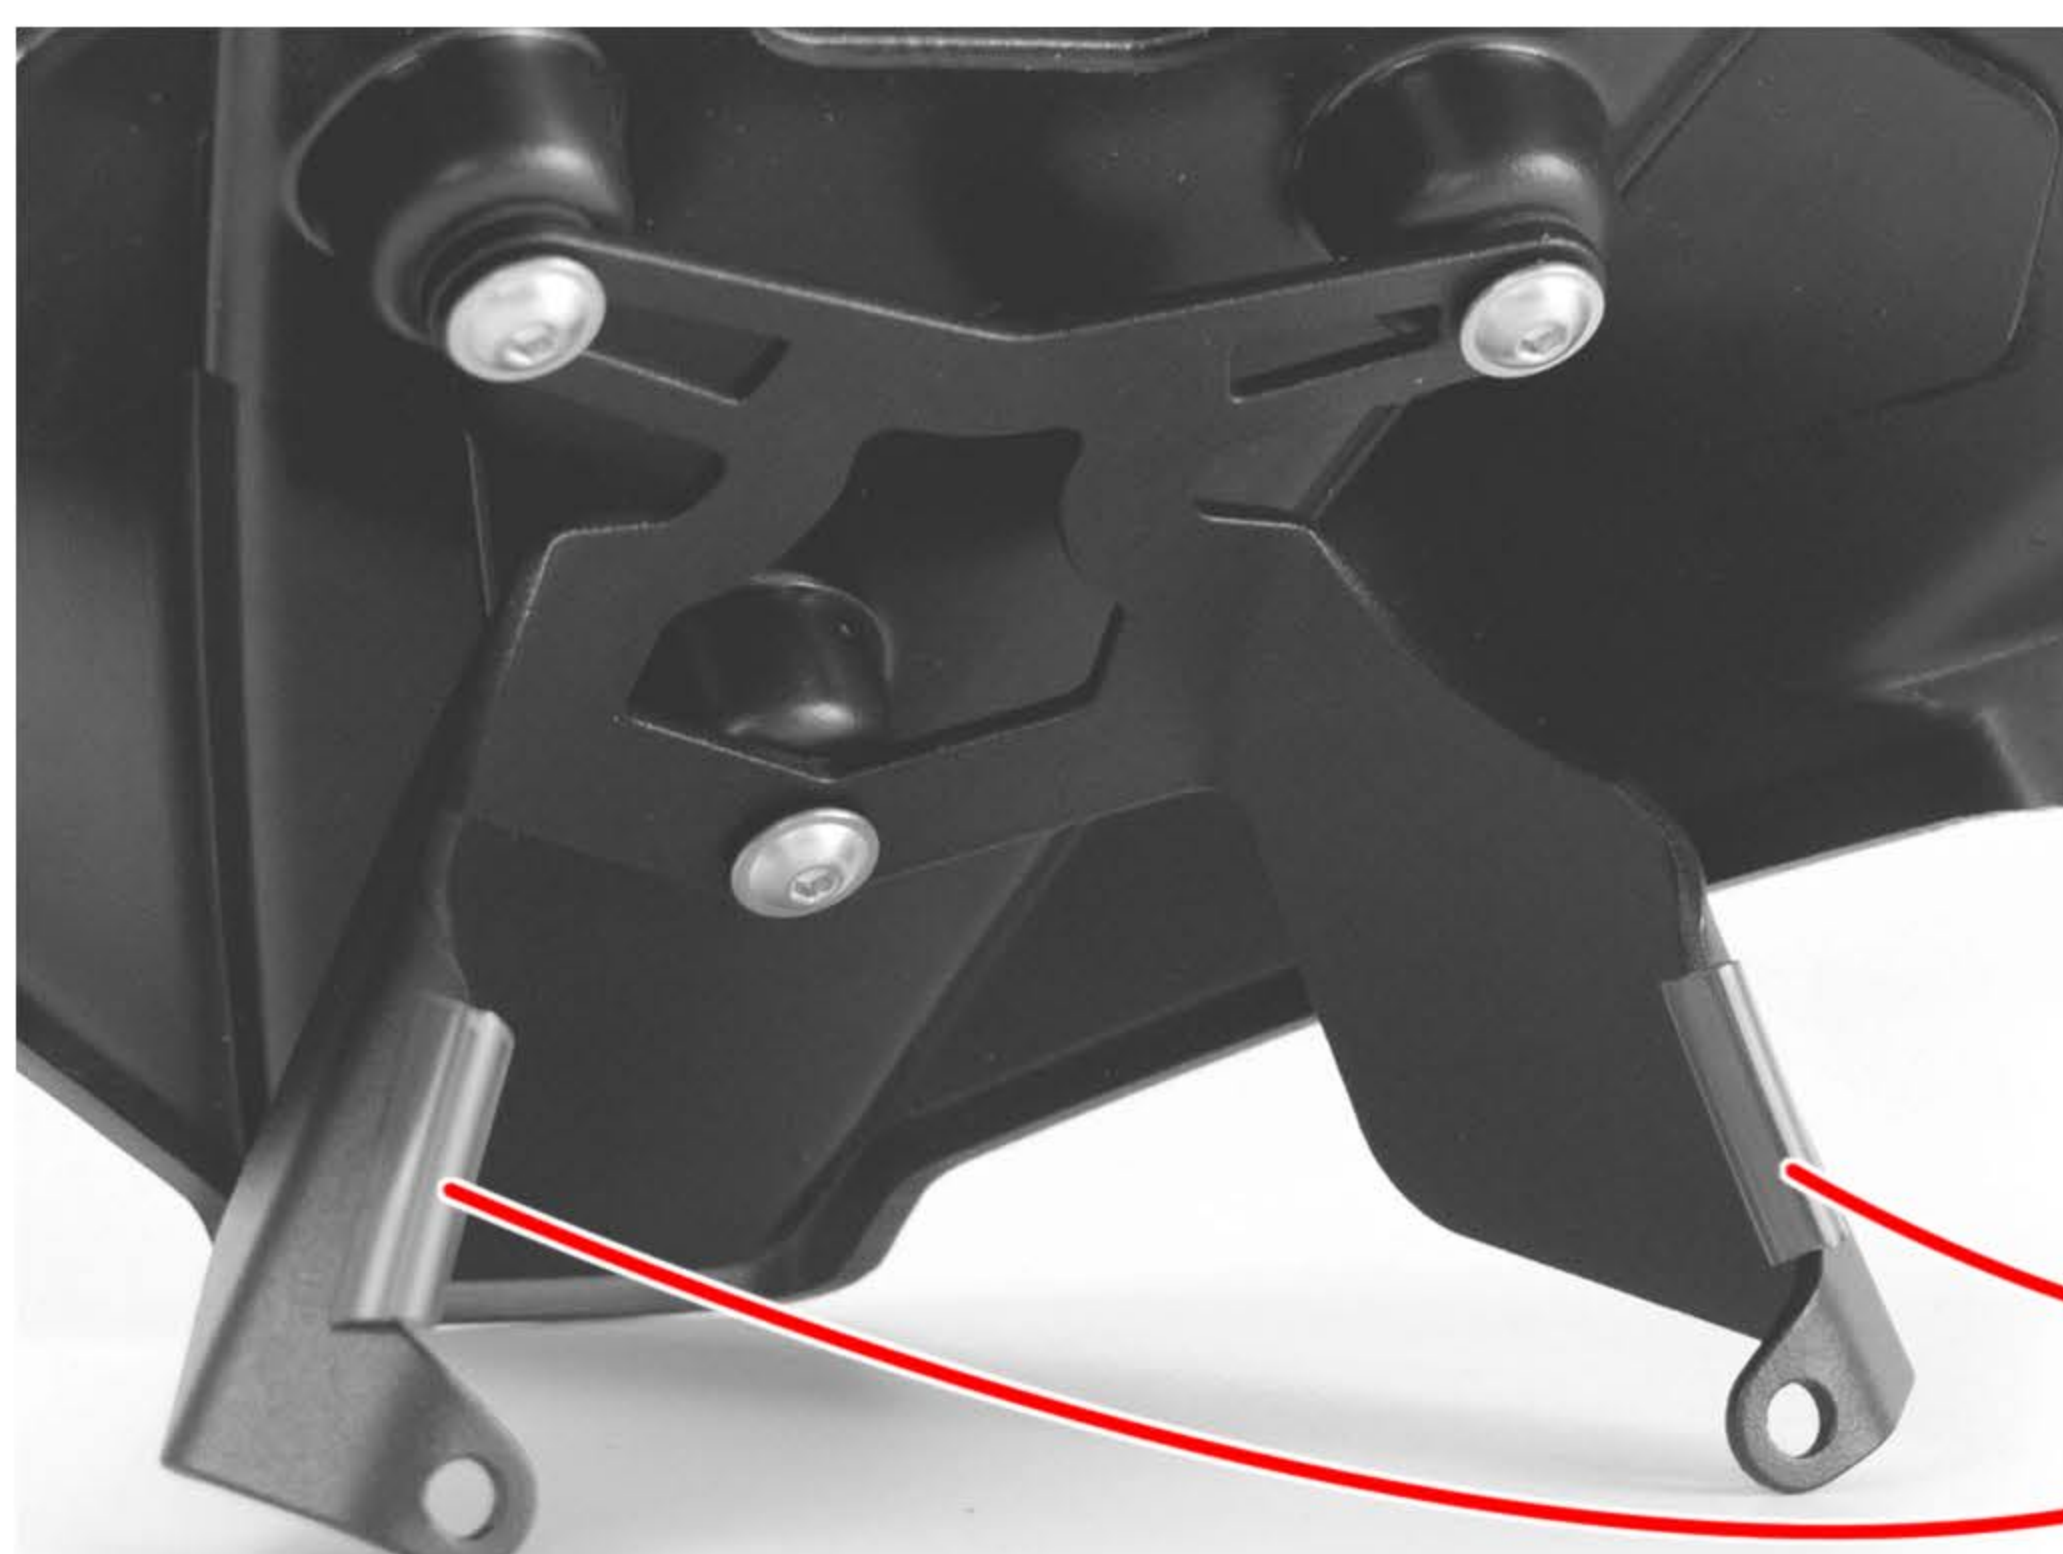

smoked trim fitted