


## 24905 BMW F900R Seat Cowl Fitting Instructions

### Kit Includes:

1X	C24905	Seat Cowl
2X	CBOLM40003	M4 X 16mm Bolt
2X	CNUTM40001	M4 Rubber Anchor Nut

- The Pyramid seat cowl is simple to fit - first you must remove the seat from the motorcycle.
- Then temporarily remove the rubber stops from the underside of the seat (see Fig 1).
- Place the rubber anchor nuts into the slotted blocks on the underside of the seat.
- Slide the seat cowl over the seat from the rear. You will need to stretch the cowl around the widest part of the seat - this is best done slowly, moving each side incrementally along the side of the seat to avoid marking the seat covering.
- Once the seat cowl is in place use the bolts supplied on the forward tabs to attach the seat cowl to the seat. There is no need to overtighten - it is sufficient to only tighten enough for the rubber anchor nuts to compress.
- Refit the rubber stops and refit the seat to the motorcycle. Press down at the most rear point of the seat cowl to allow the seat to click back into place.

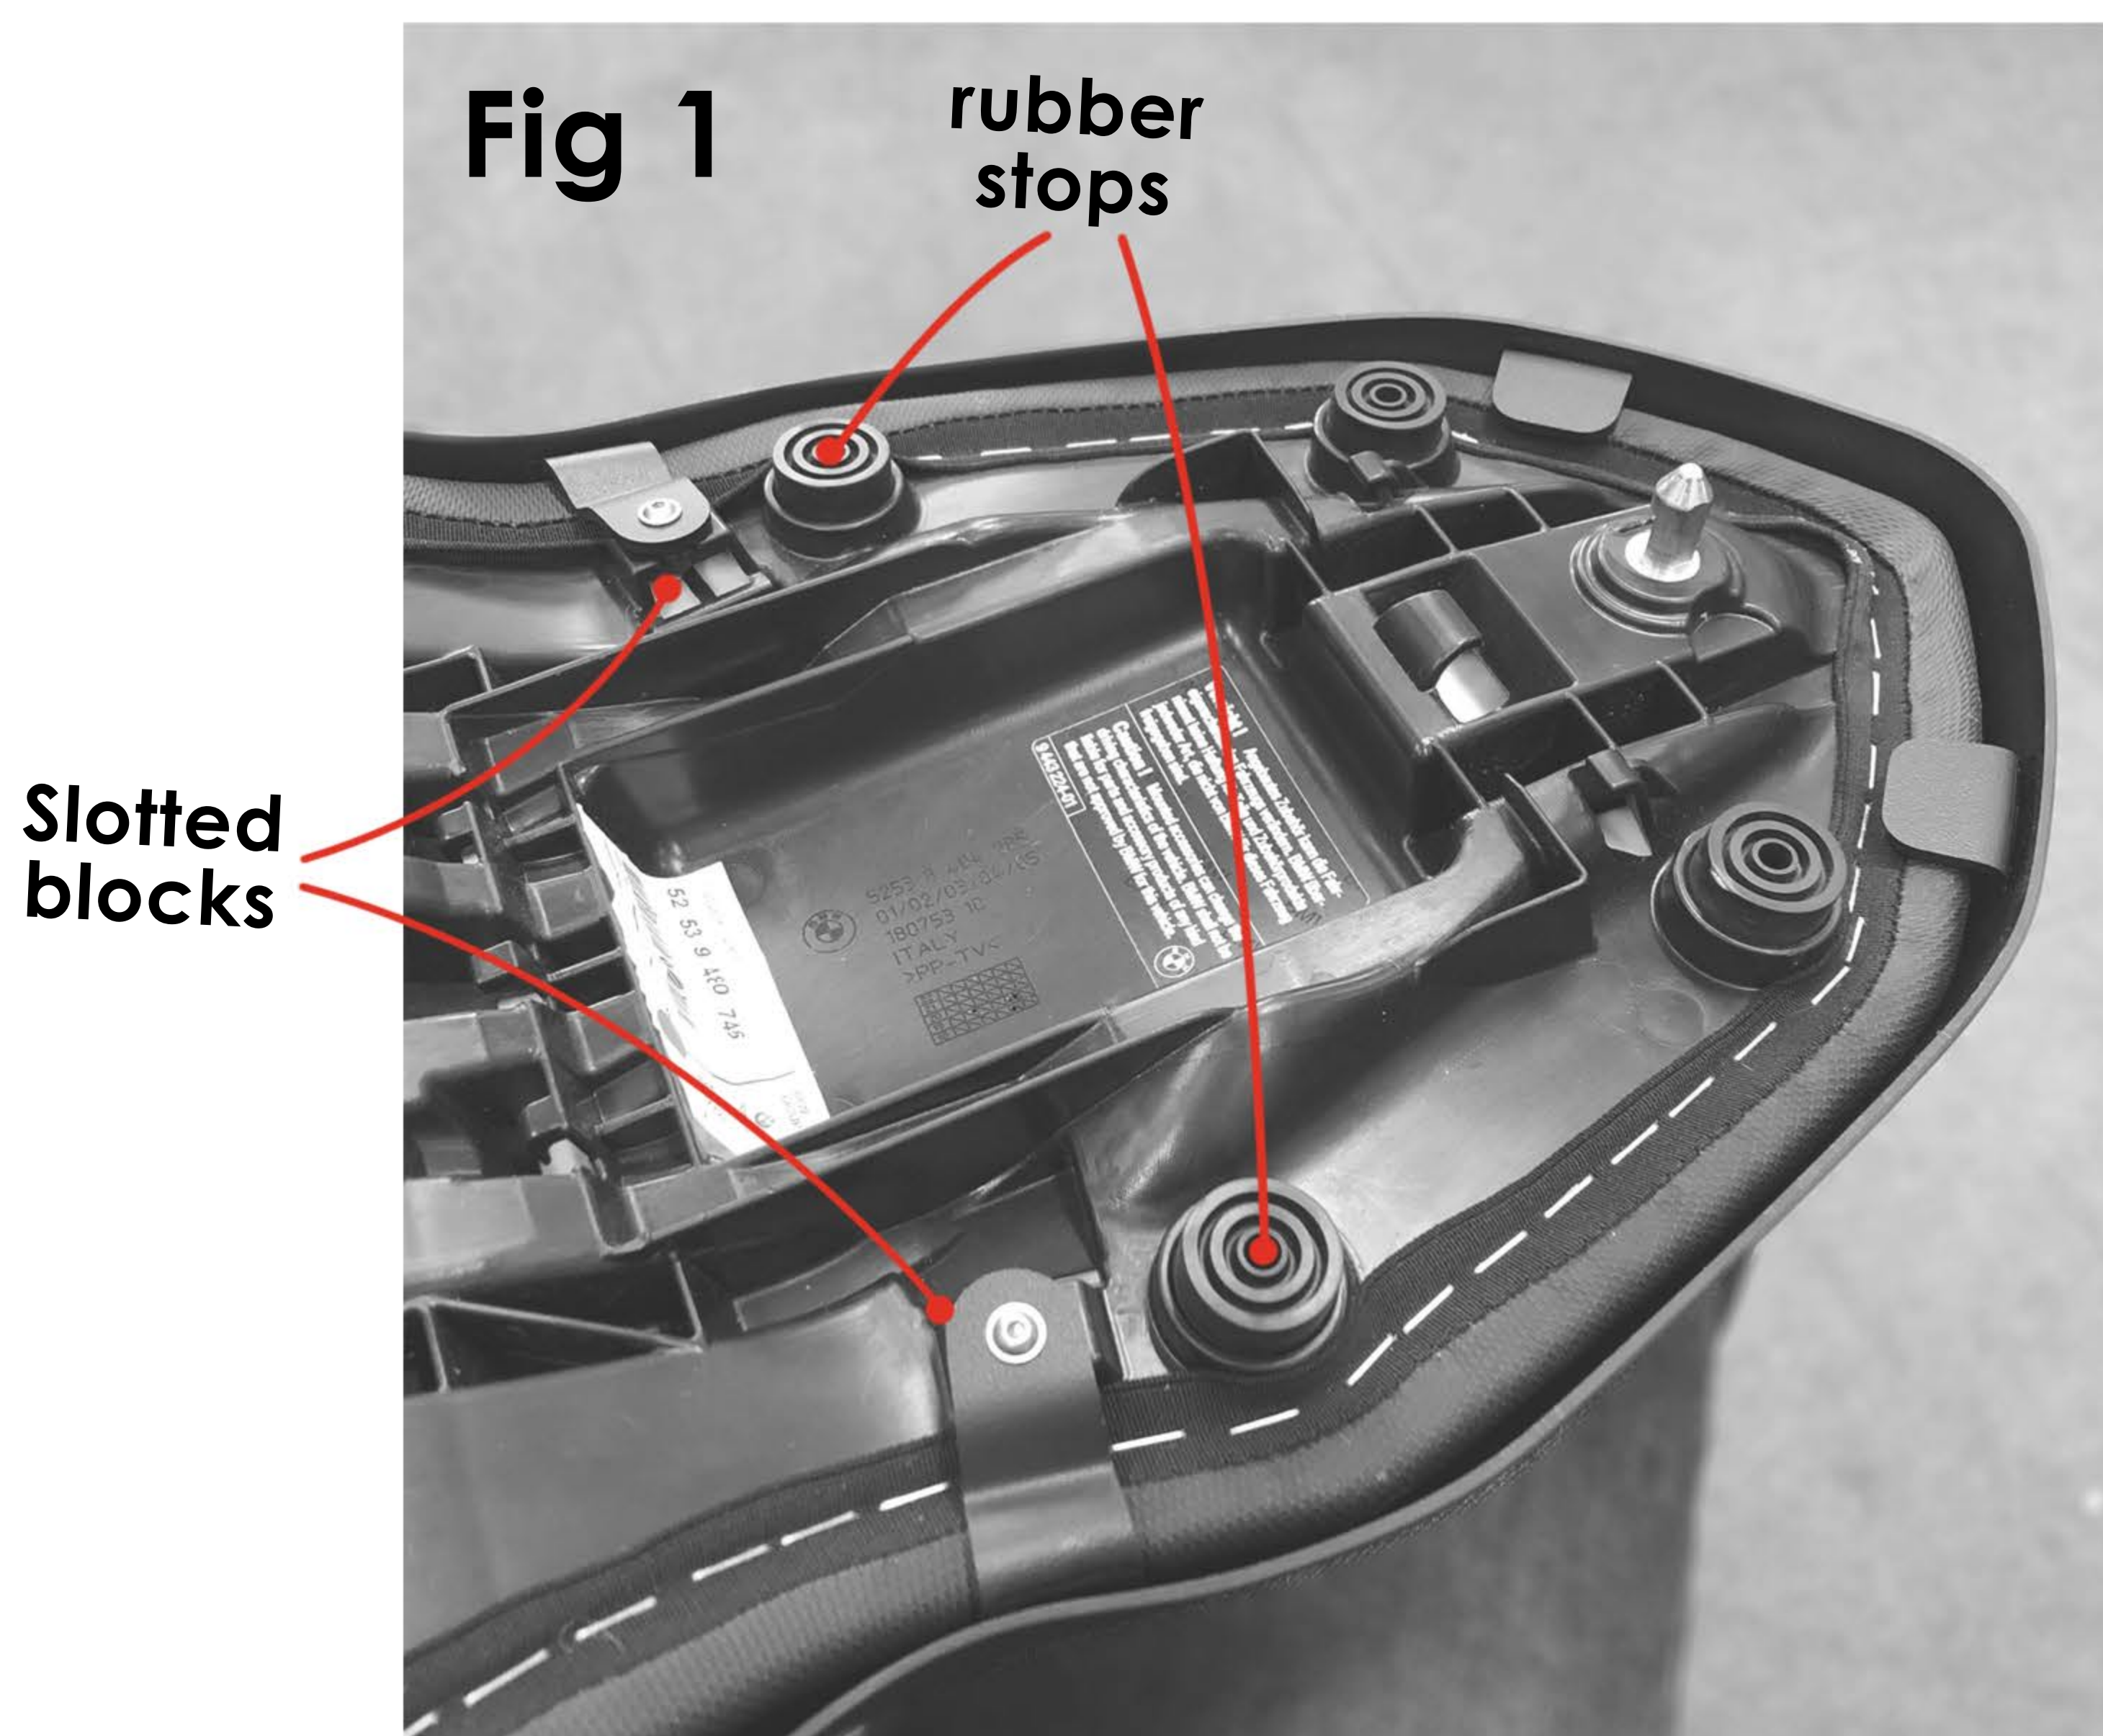

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and  
feel free to leave us a review!