

24945 BMW F900R/XR Belly Pan Fitting Instructions

Kit Includes:



2X	C24945	Moulding	
2X	CFK24945	Brackets (left and right-hand side)	
3X	CBOLM60008	M6 X 16mm Bolt	
3X	CWASM60003	M6 Washer	
3X	CPNUT0001	M6 Aluminium Pop Nut	(Pre-fitted by Pyramid)
1X	CRUB0006	Rubber Trim	(Pre-fitted by Pyramid)
2X	CBOLM80005	M8 X 20 Hex Head Bolt	

Remove the OEM exhaust guard from the right-hand side of the bike.

Attach the brackets as shown in the images below.

Attach the belly pan to the brackets using the M6 bolts + washers supplied.

Check fixings periodically.

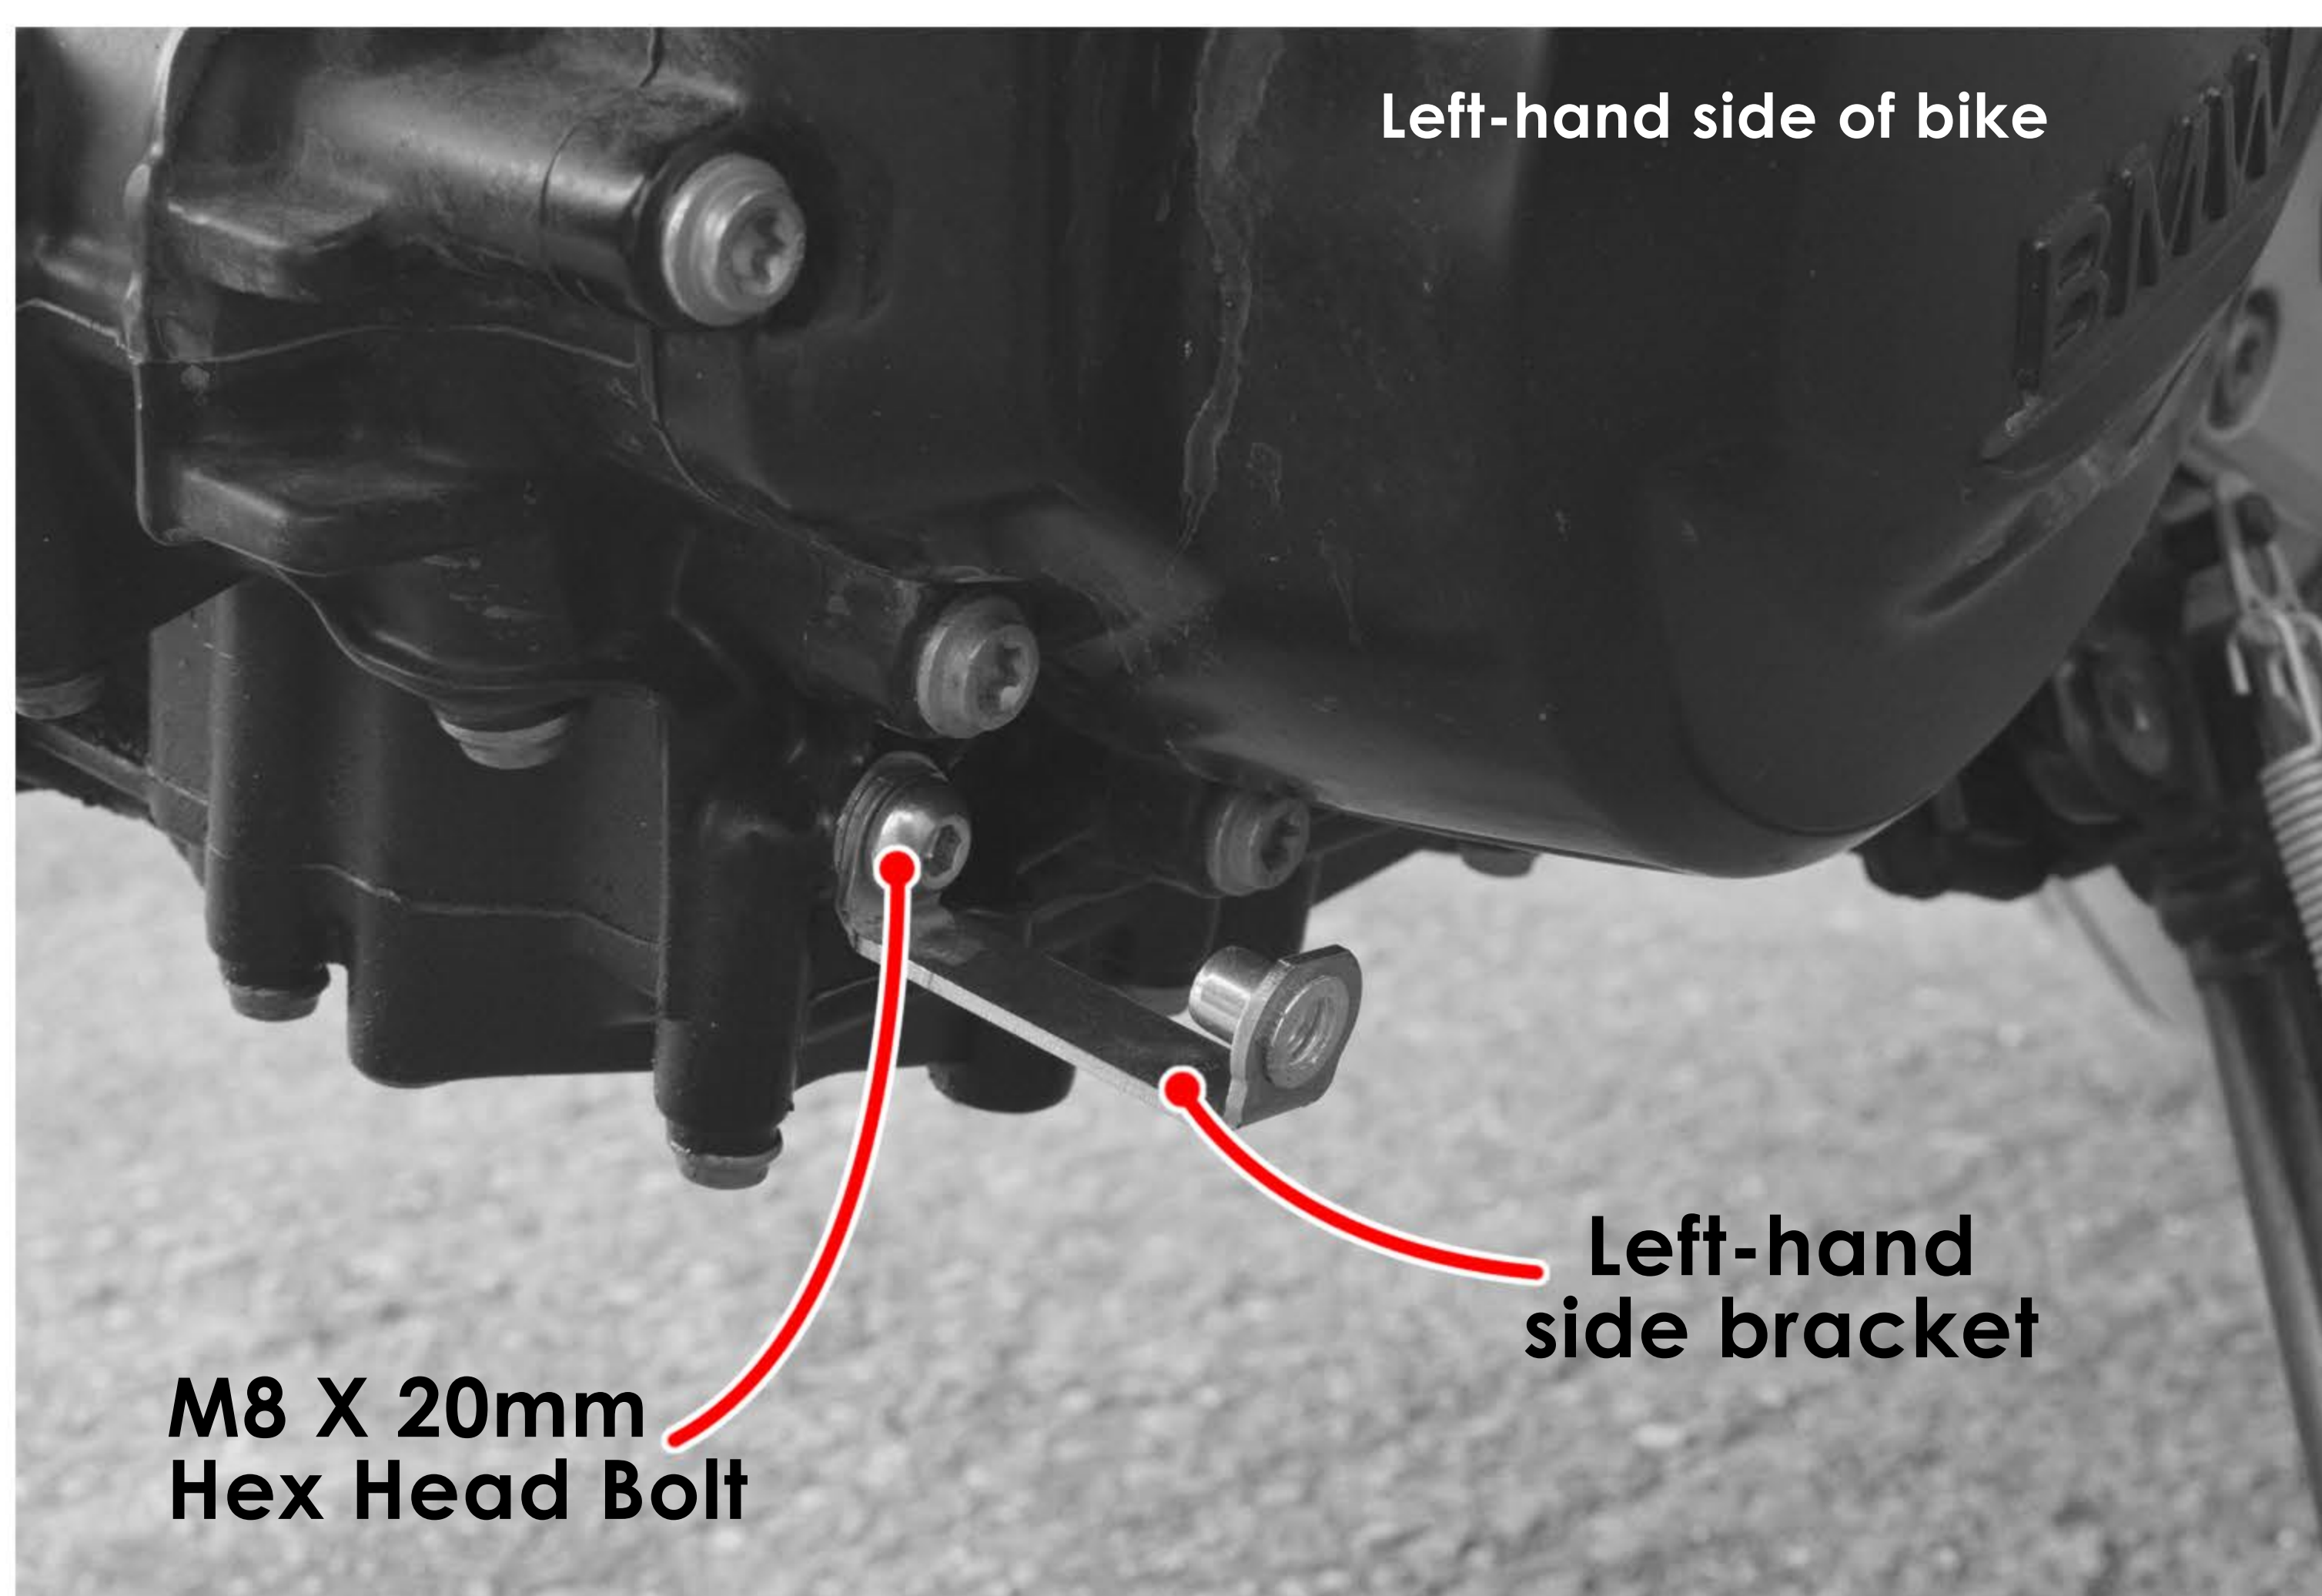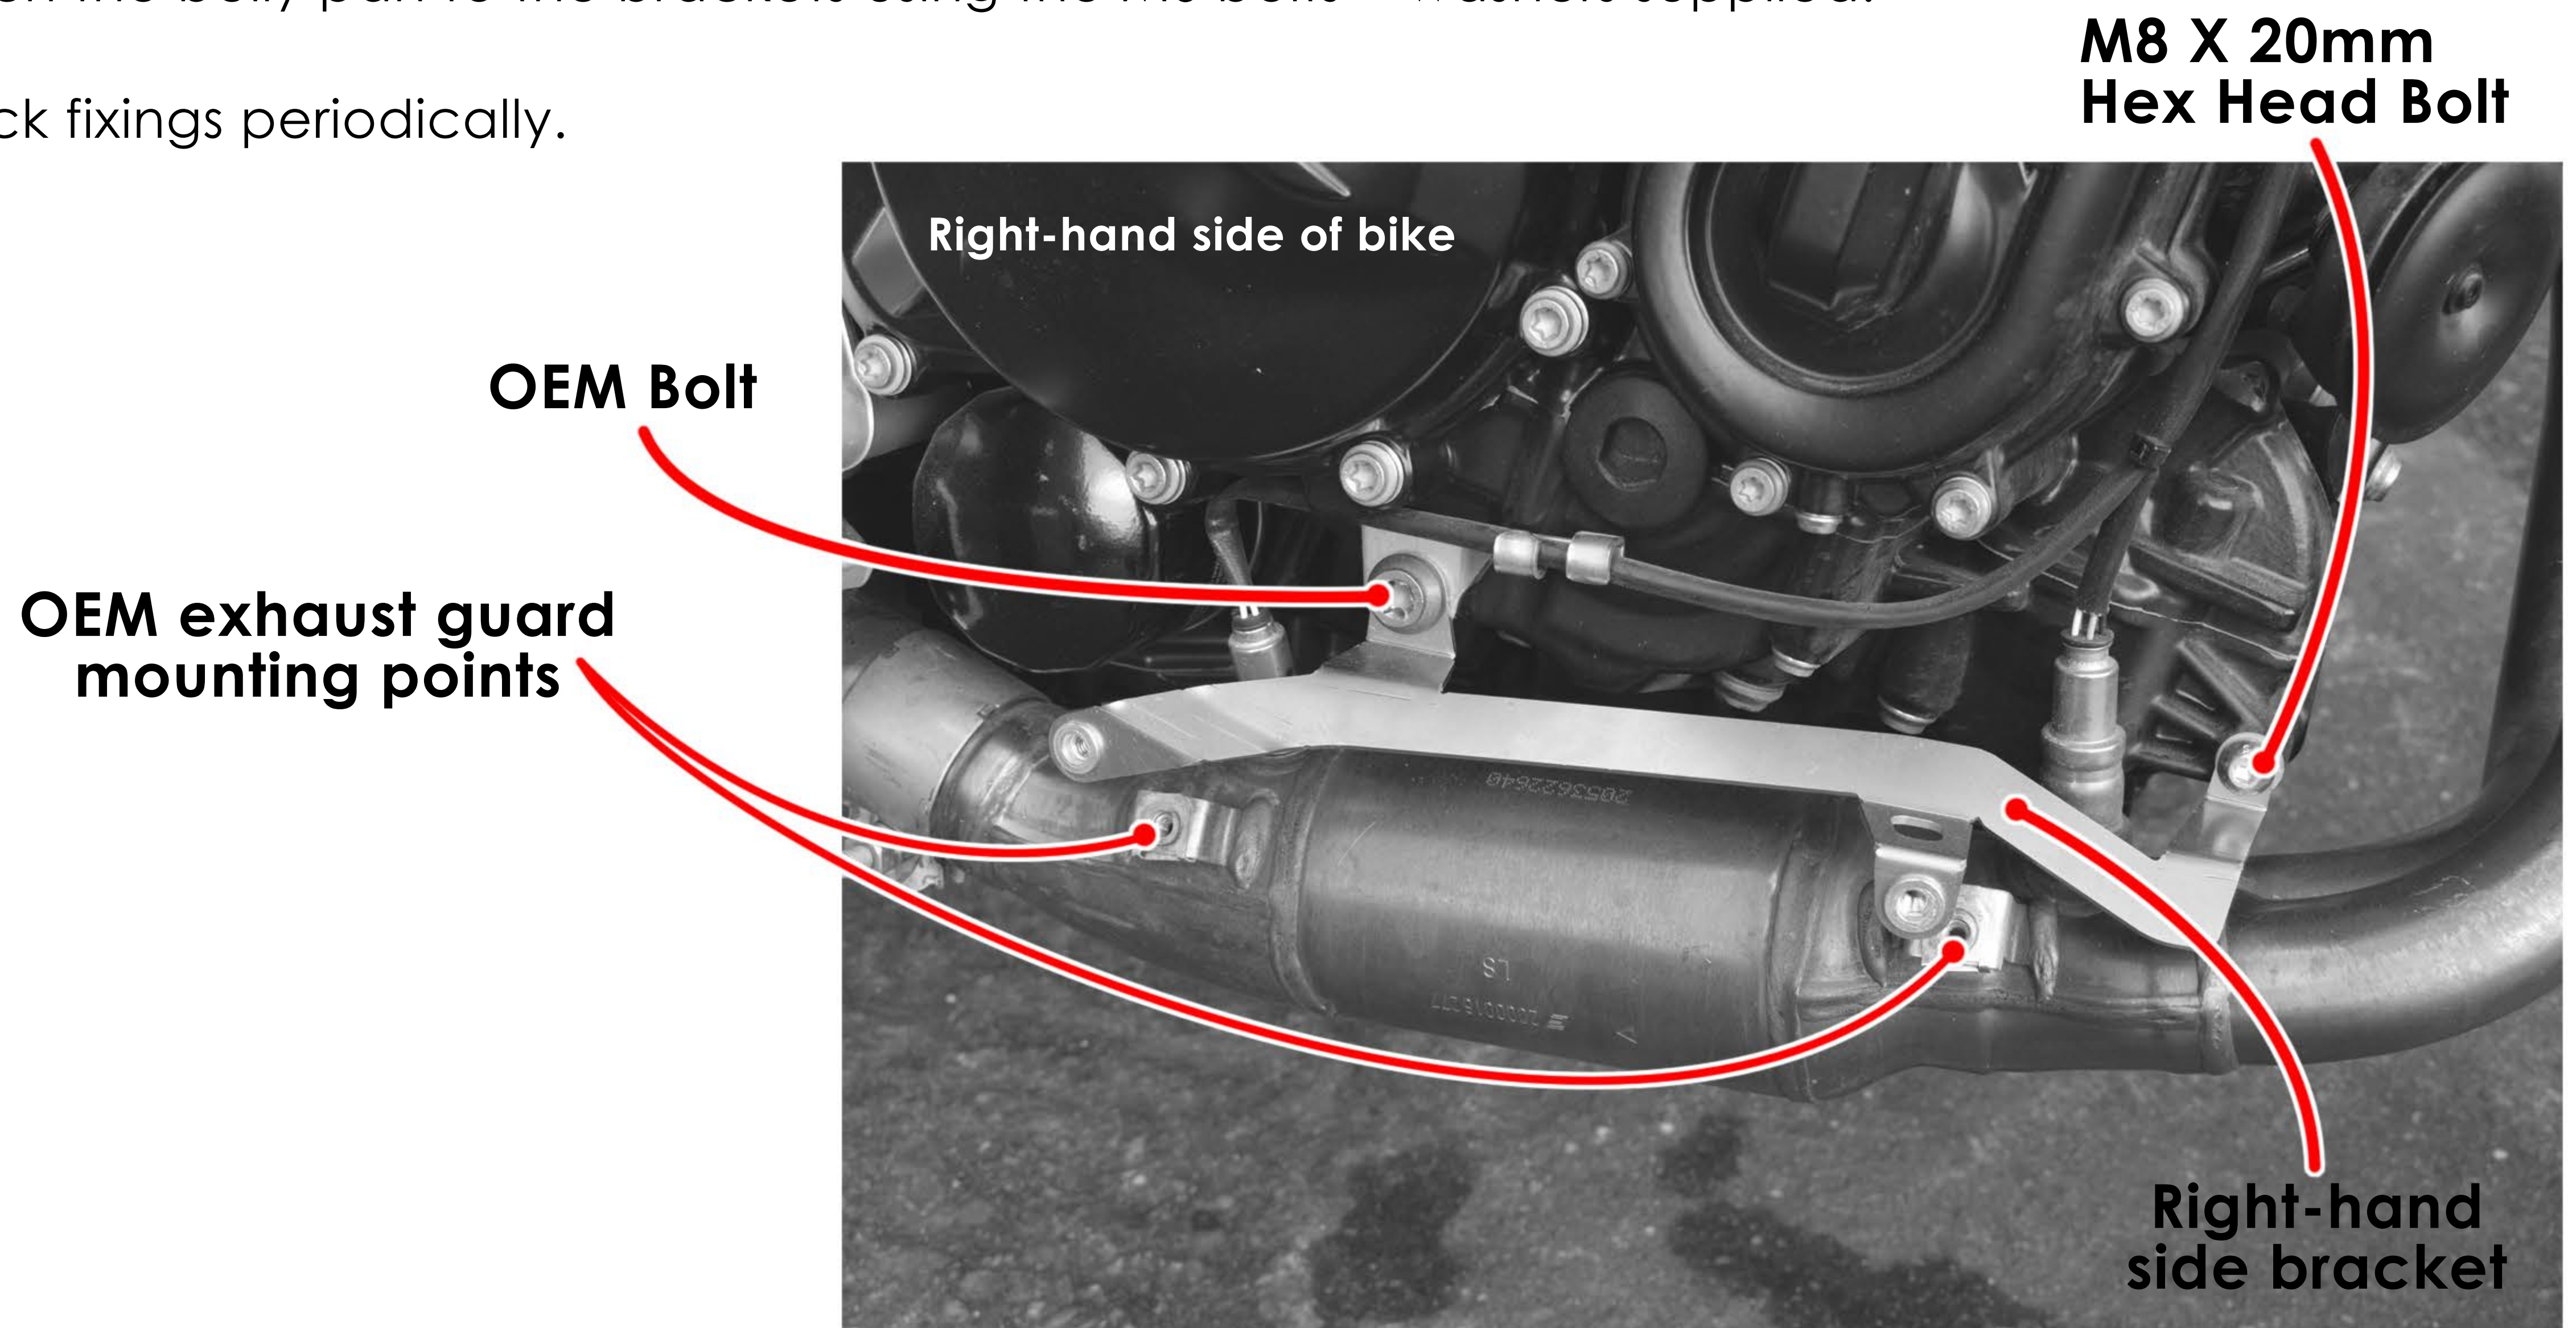

let's Ride

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

