

# PYRAMID


## 297950 Royal Enfield Interceptor 650 Fly Screen Fitting Instructions

Please note: some extra parts are included that may not be needed for fitment.

ID.	DESCRIPTION	QTY.
1	Fairing	1
2	Screen	1
3	M6 X 20mm Bolt	2
4	Screen Kit (3X Well Nuts, M5 X 16mm Bolts, Washers & Bolt Caps)	3
5	Metal Brackets (pair)	2
6	M6 X 8mm Bolts	4
7	M6 X 12mm Bolts & Nuts	2
8	M6 Plastic Washers	4
9	M8 Nuts	2
10	M8 X 35mm Bolts	2
11	M8 Steel Washers	2
12	M8 X 15mm X 9mm Spacers	2
13	M6 X 12mm X 8mm Spacers	2
14	Rubber Trim	1

1x Bonneville Decal

Follow the diagrams below for assistance when fitting.

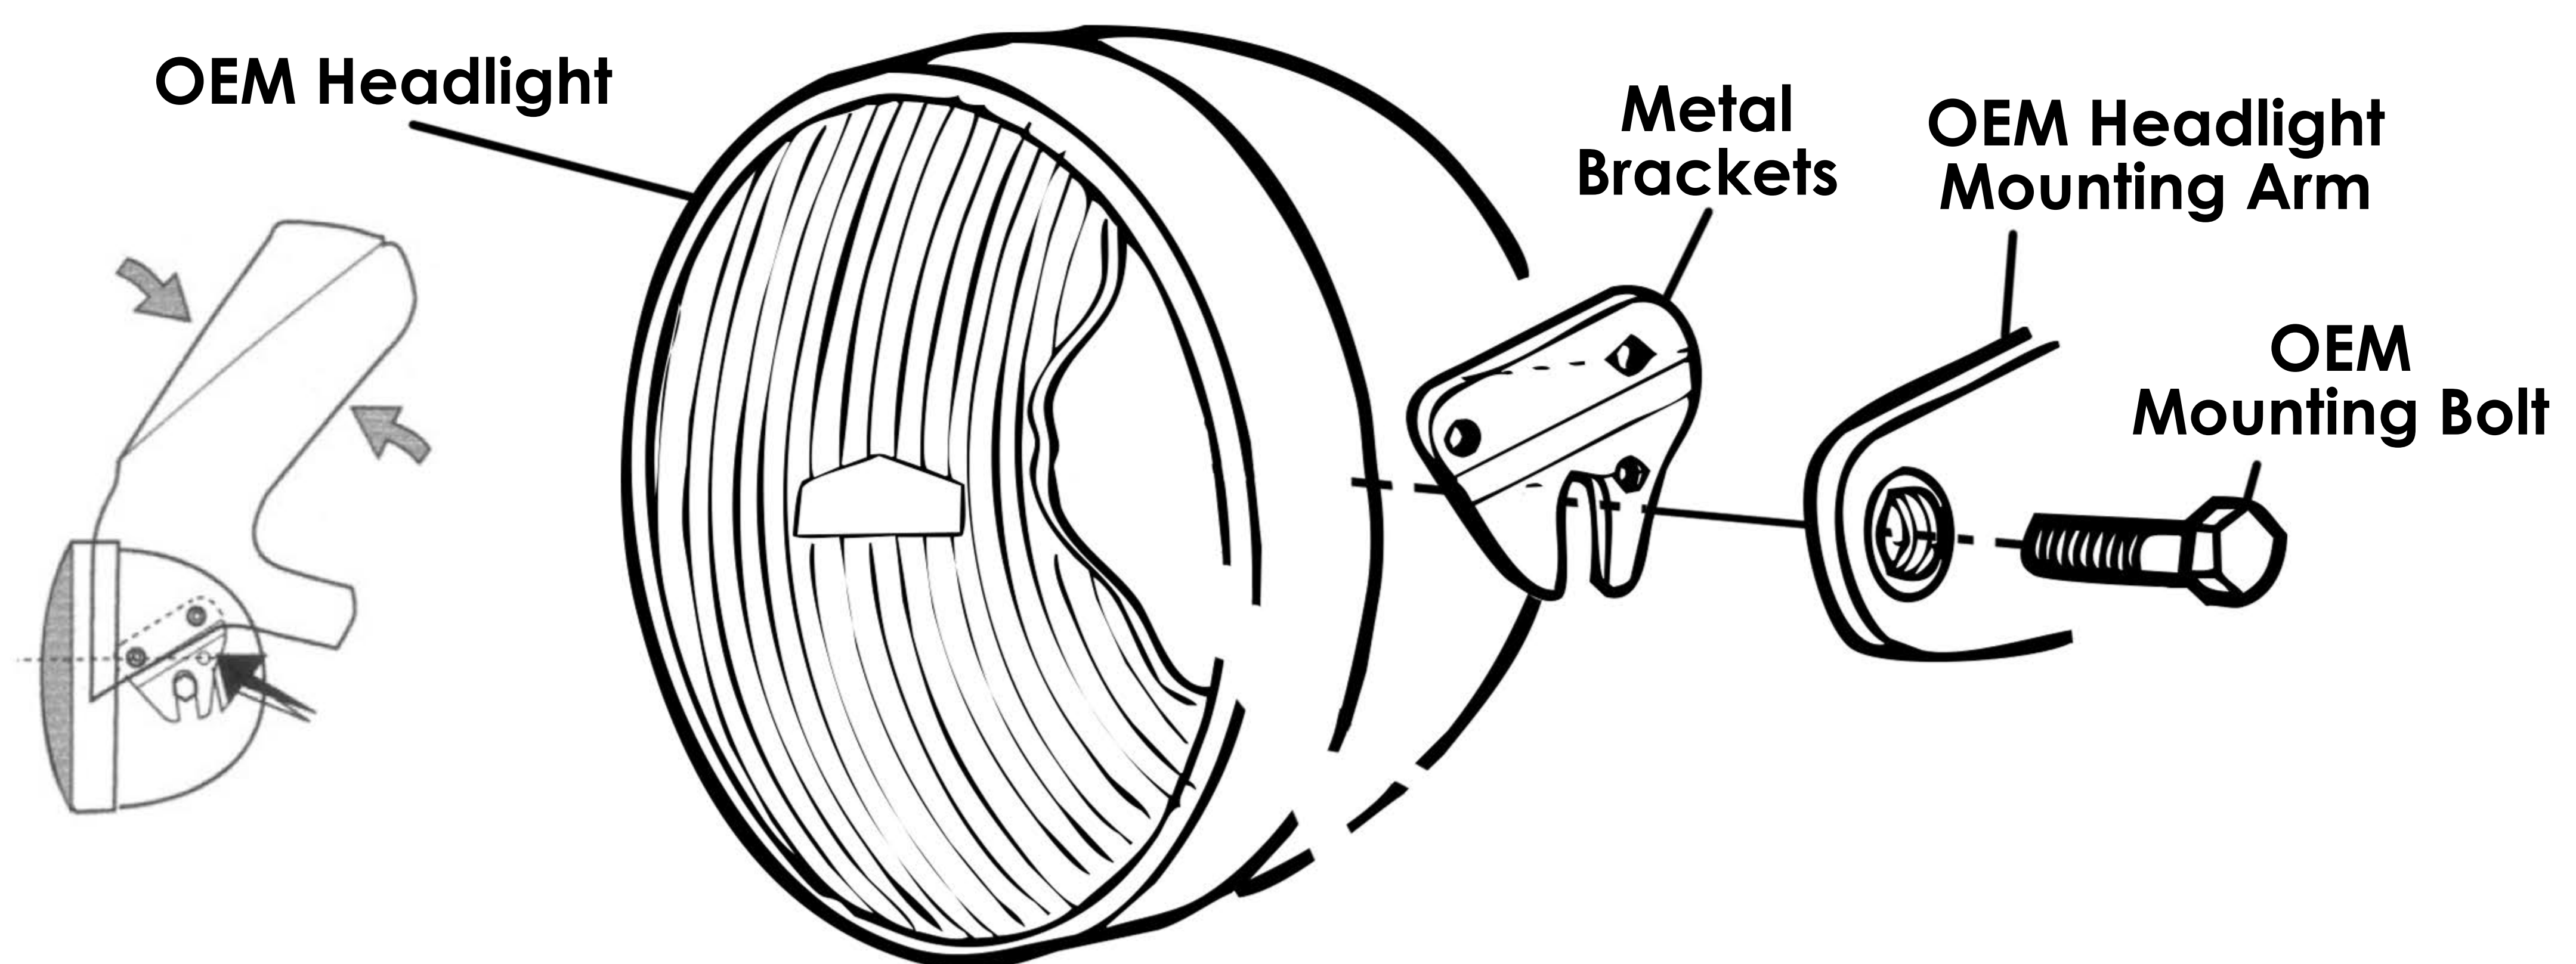

### Fitting notes:

Loosen the OEM side mounting bolts (left & right) on the headlight to create a gap.

Fit the Fly Screen to the Metal Brackets **(ID.5)** using the M6 x 8mm Bolts **(ID.6)** & M6 Plastic Washers **(ID.8)**.

The Fly Screen is then fitted in the gap on each side of the headlight (created by loosening the OEM side mounting bolts).

The slots in the Metal Brackets **(ID.5)** supplied allow for adjustment up and down.

Check all fixings periodically.

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and feel free to leave us a review!