

26660 Triumph Trident 660 Fly Screen Instructions

Kit Includes:

1X	C26660	Fairing
2X	CFK26660	Brackets (Left and Right)
1X	SMOT***	Screen Kit (1X Light Smoke Screen, 3X Well Nuts, M5 X 16mm Bolts, Washers + Bolt Caps)
2X	CBOLM80012	M8 X 40mm Bolt
2X	CSPAM80001	M8 Spacer
4X	CNUTM50001	M5 Well Nut
4X	CBOLM50009	M5 X 20mm Bolt
4X	CWASM50001	M5 Washer
4X	CCAP0003	M5 Bolt Caps
1X	CBRA08660B	Trident Logo Decal White
1X	CBRA08660C	Trident Logo Decal Black

- Attach the fairing to the screen (Fig 1).
- Attach the brackets (left and right) to the fairing (Fig 1).
- Remove the OEM yoke pinch bolts and fit the screen assembly using the M8 X 40mm Bolts + M8 Spacers supplied (Fig 2 shows how the brackets attach to the bike).
- Check all fixings periodically.

Fig 1


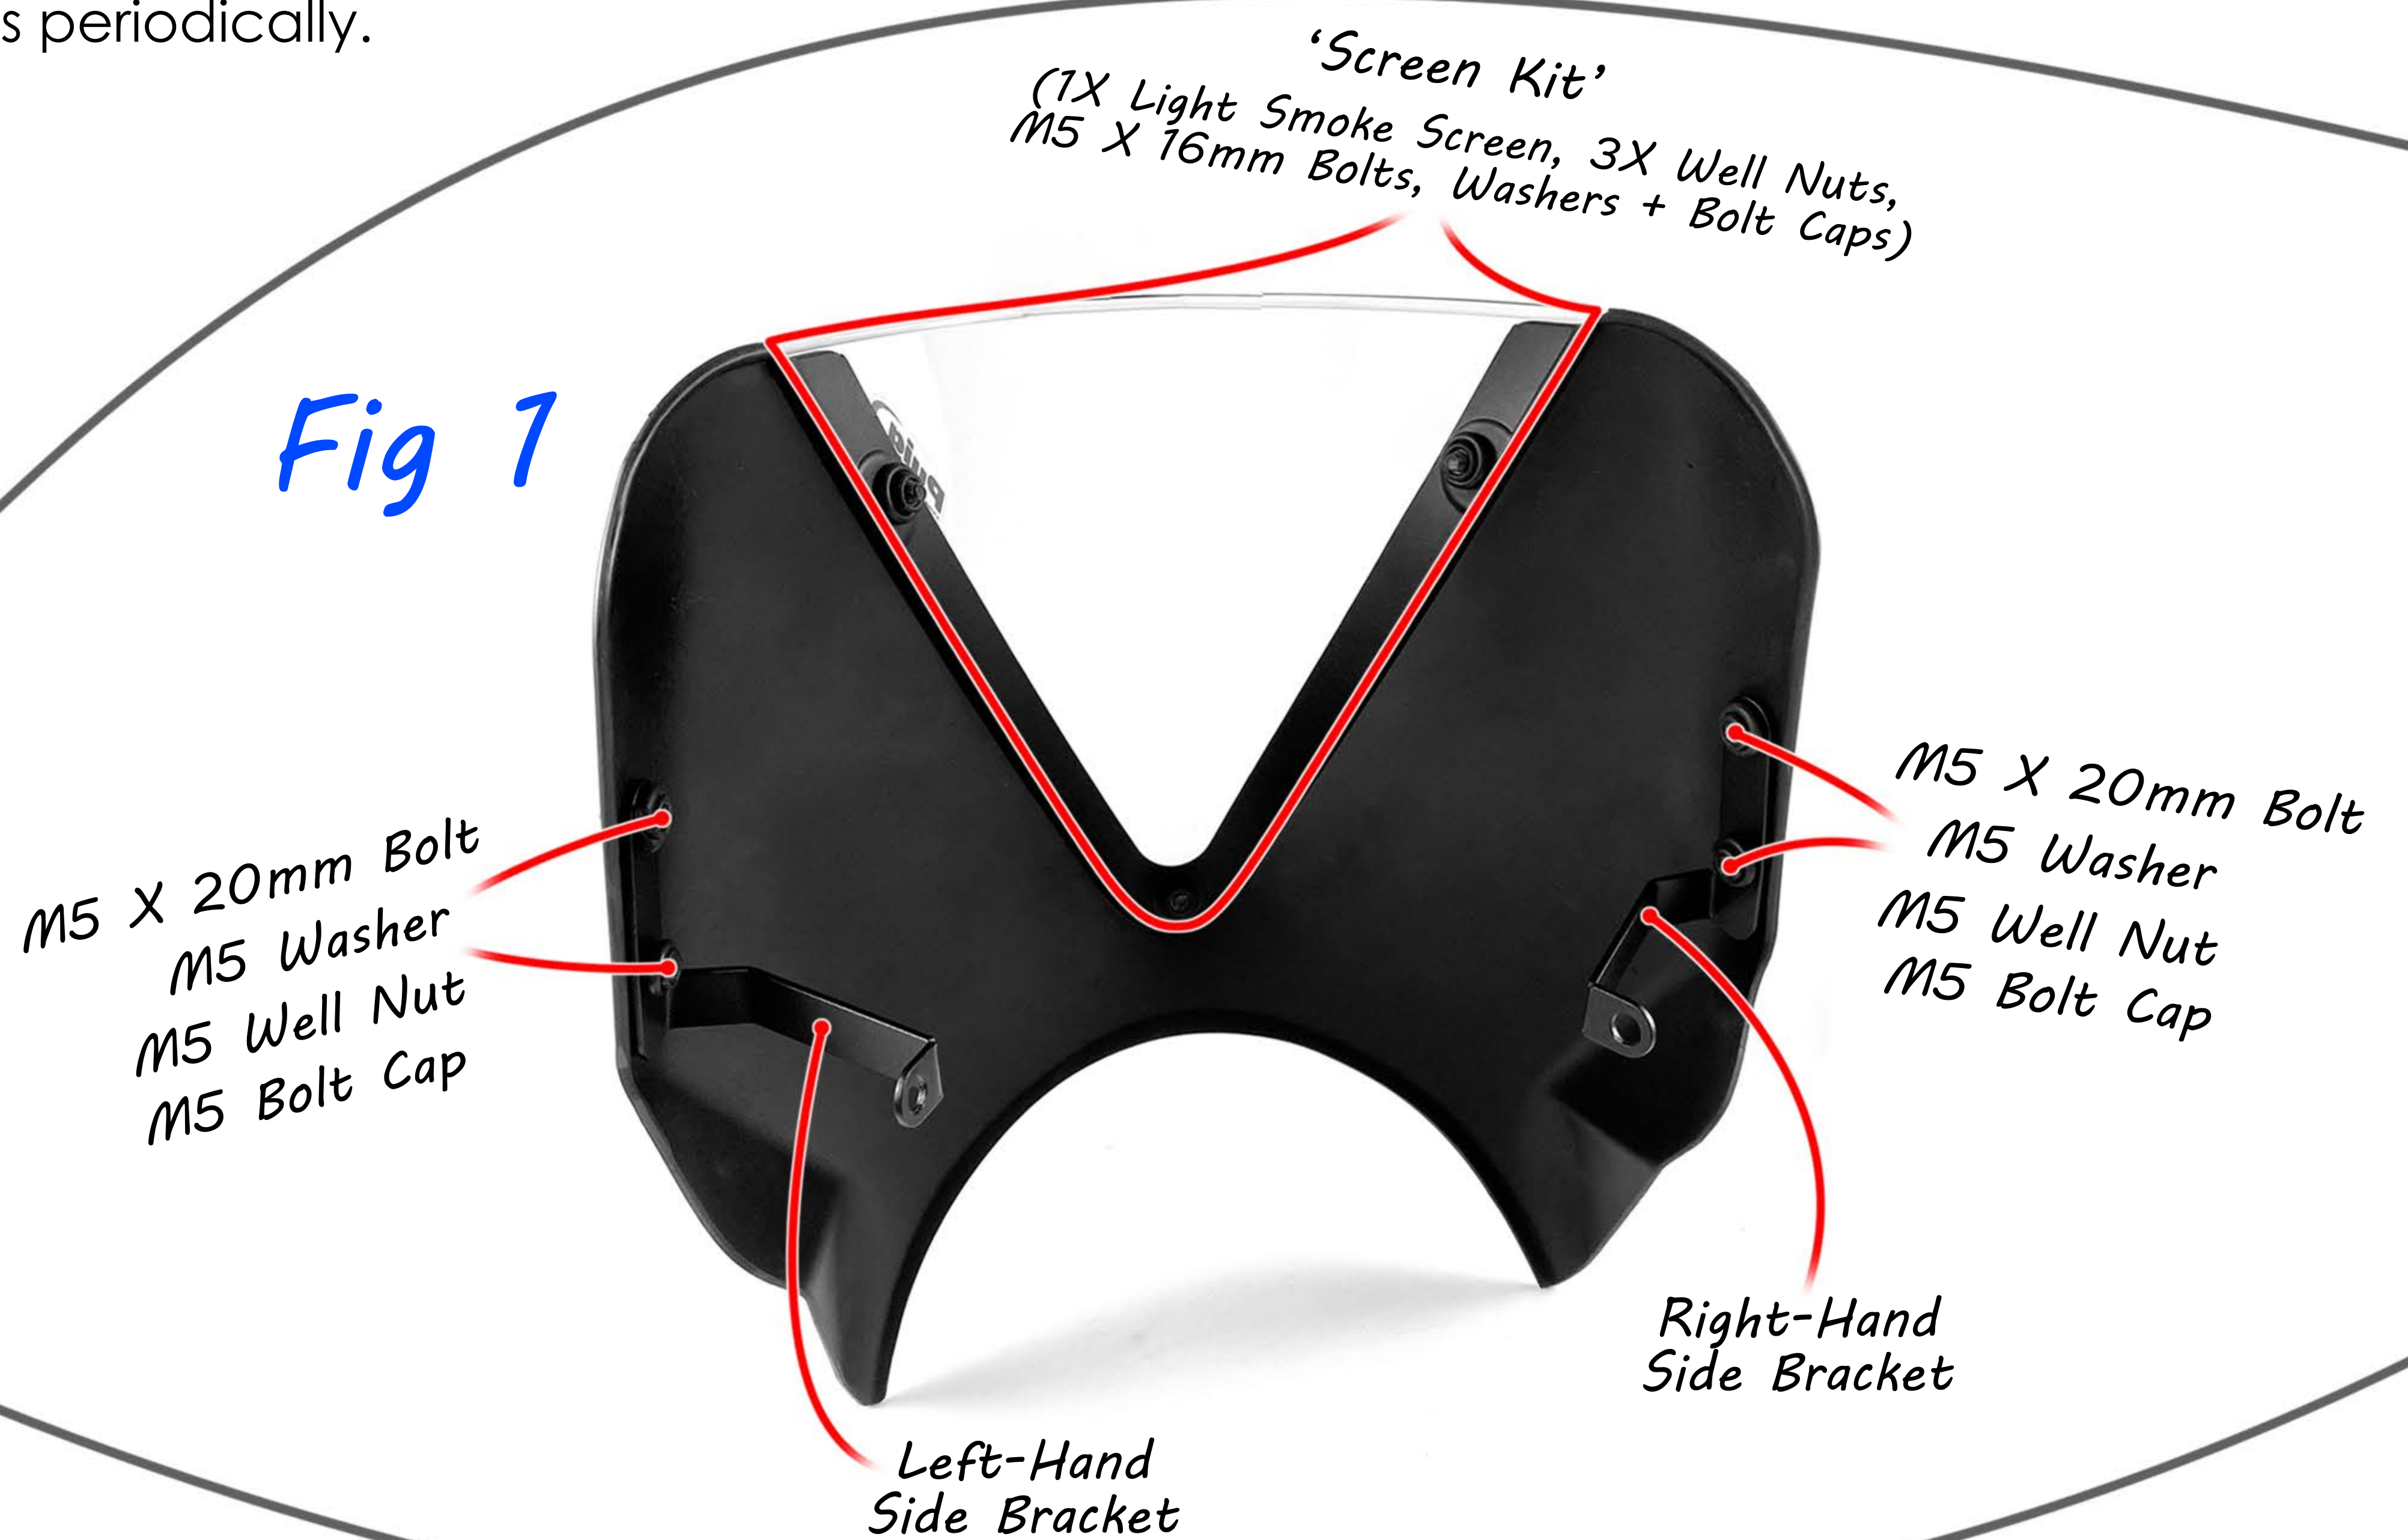


Fig 2



Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

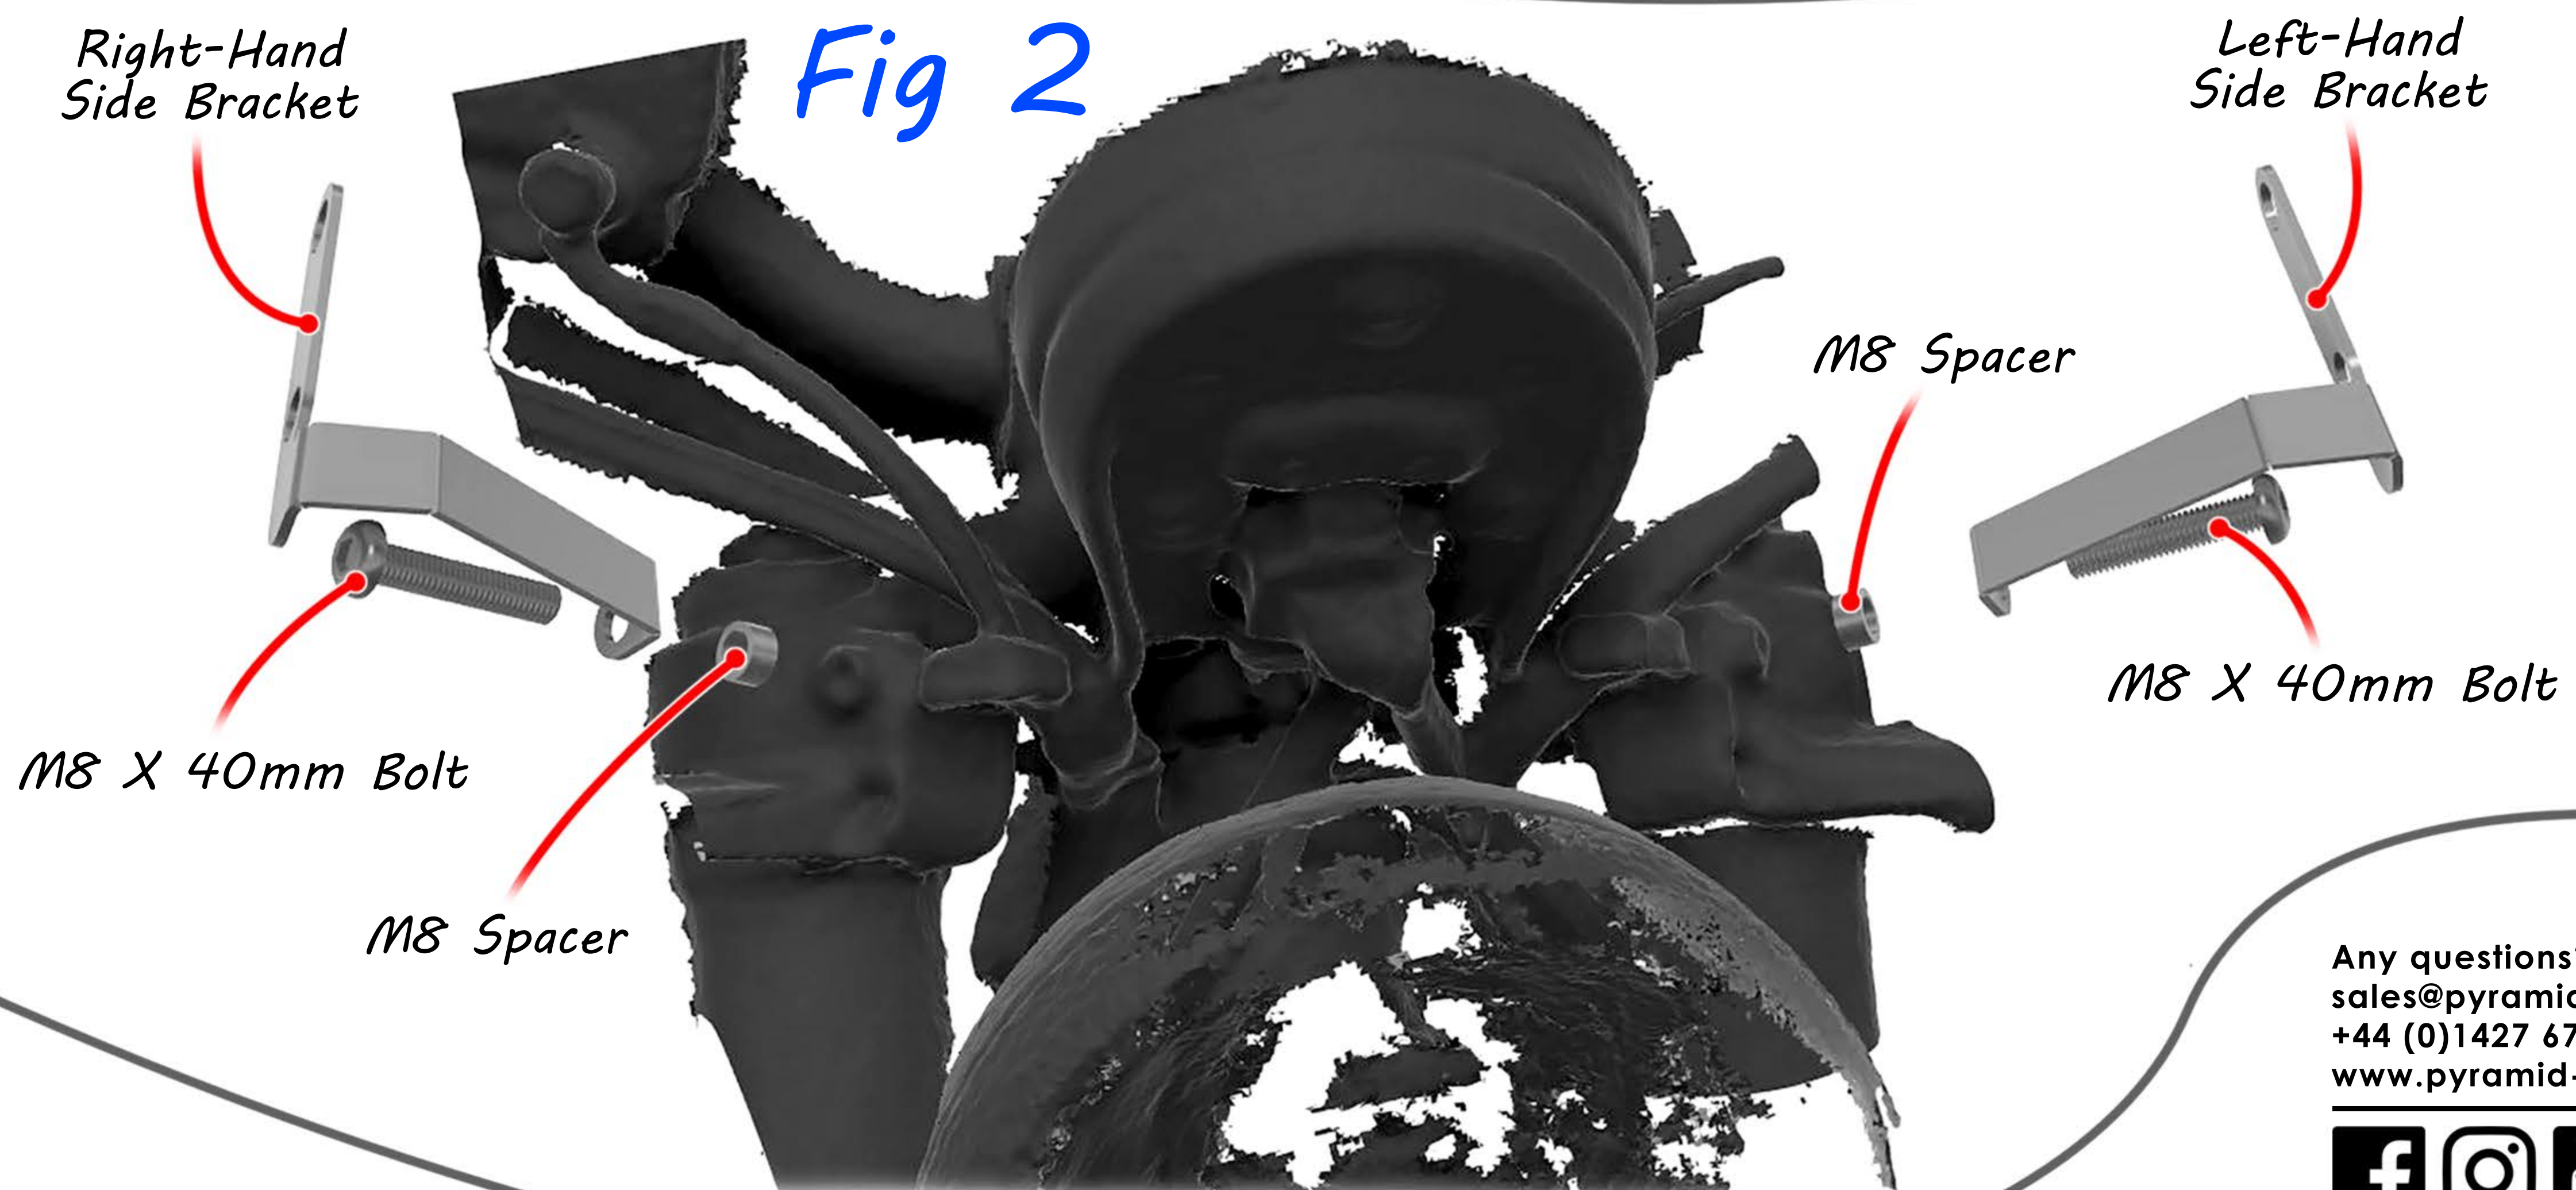

Follow us on social media and feel free to leave us a review!