
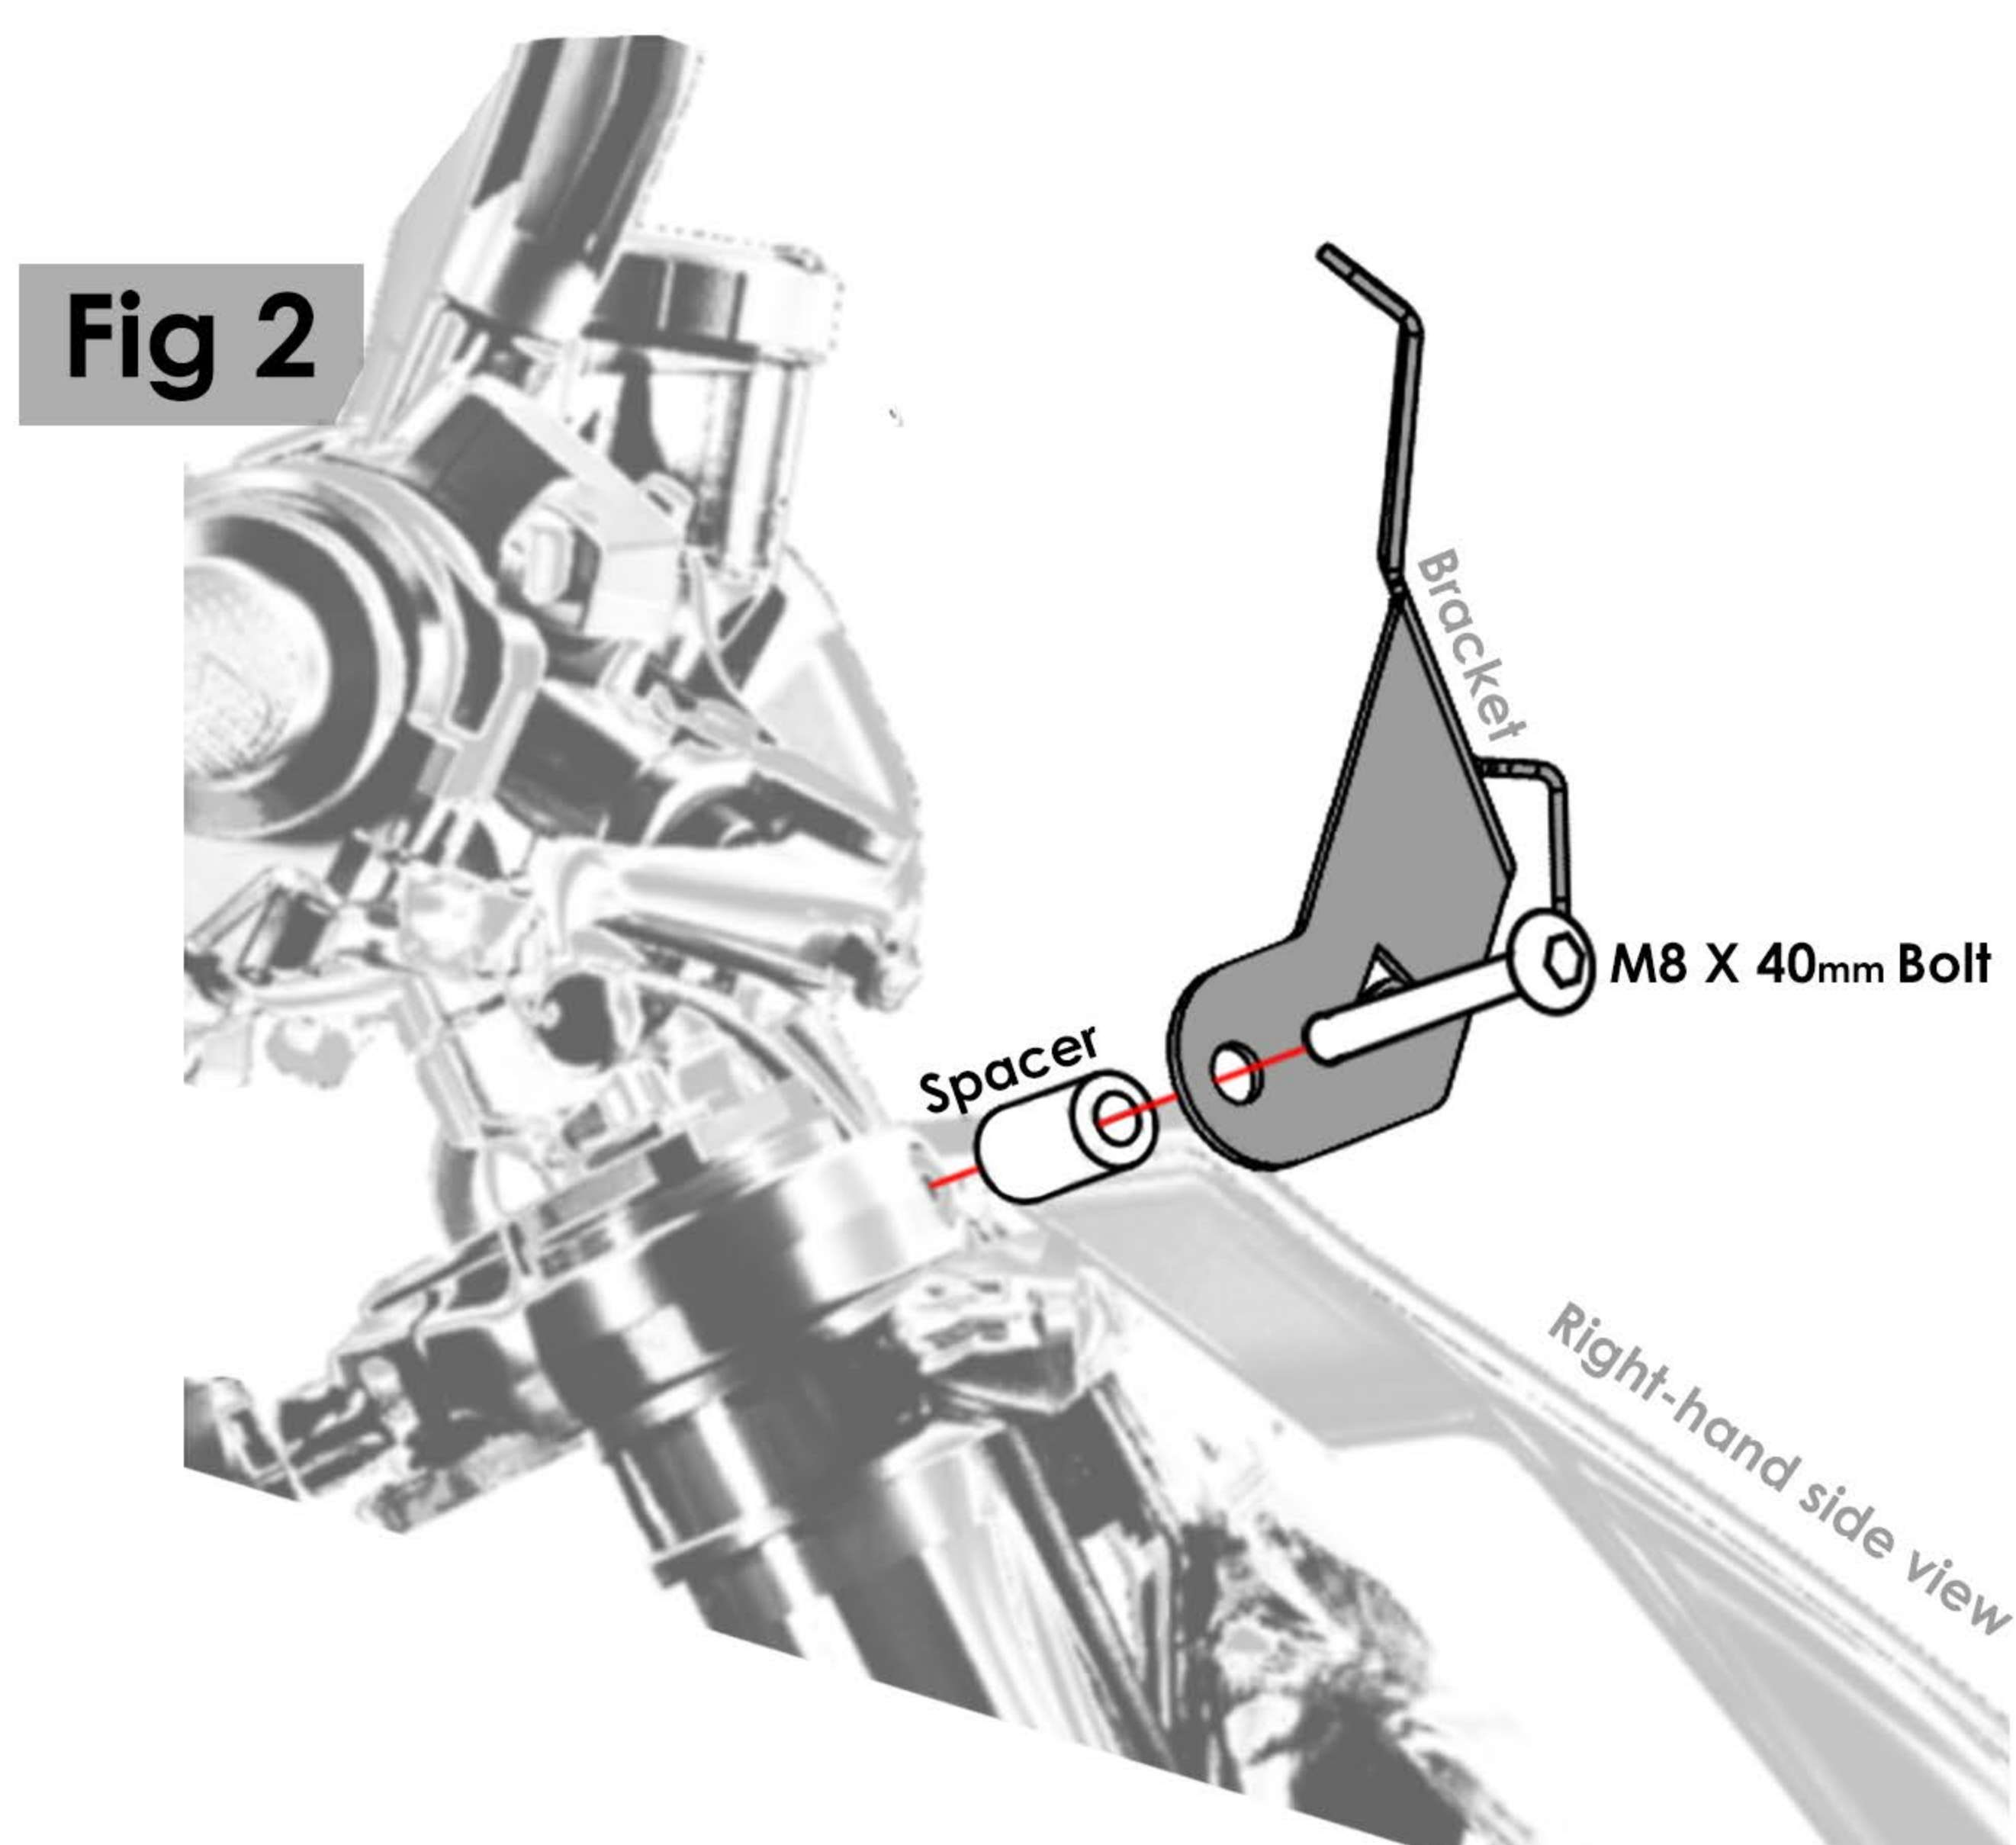


29700 KTM 1290 Superduke R Fly Screen Fitting Instructions

Kit Includes:

1X	C29700	Moulding
1X	CFK29700	Bracket
2X	CBOLM80012	M8 X 40mm Bolts
2X	CSPAM80004	Spacers
3X	CBOLM40003	M4 X 16mm Bolts
3X	CNUTM40001	M4 Anchor Nuts

- Attach the bracket to the moulding as shown in **Fig 1**.
- Remove the OEM fork bolts and fit the fly screen assembly as shown in **Fig 2**.

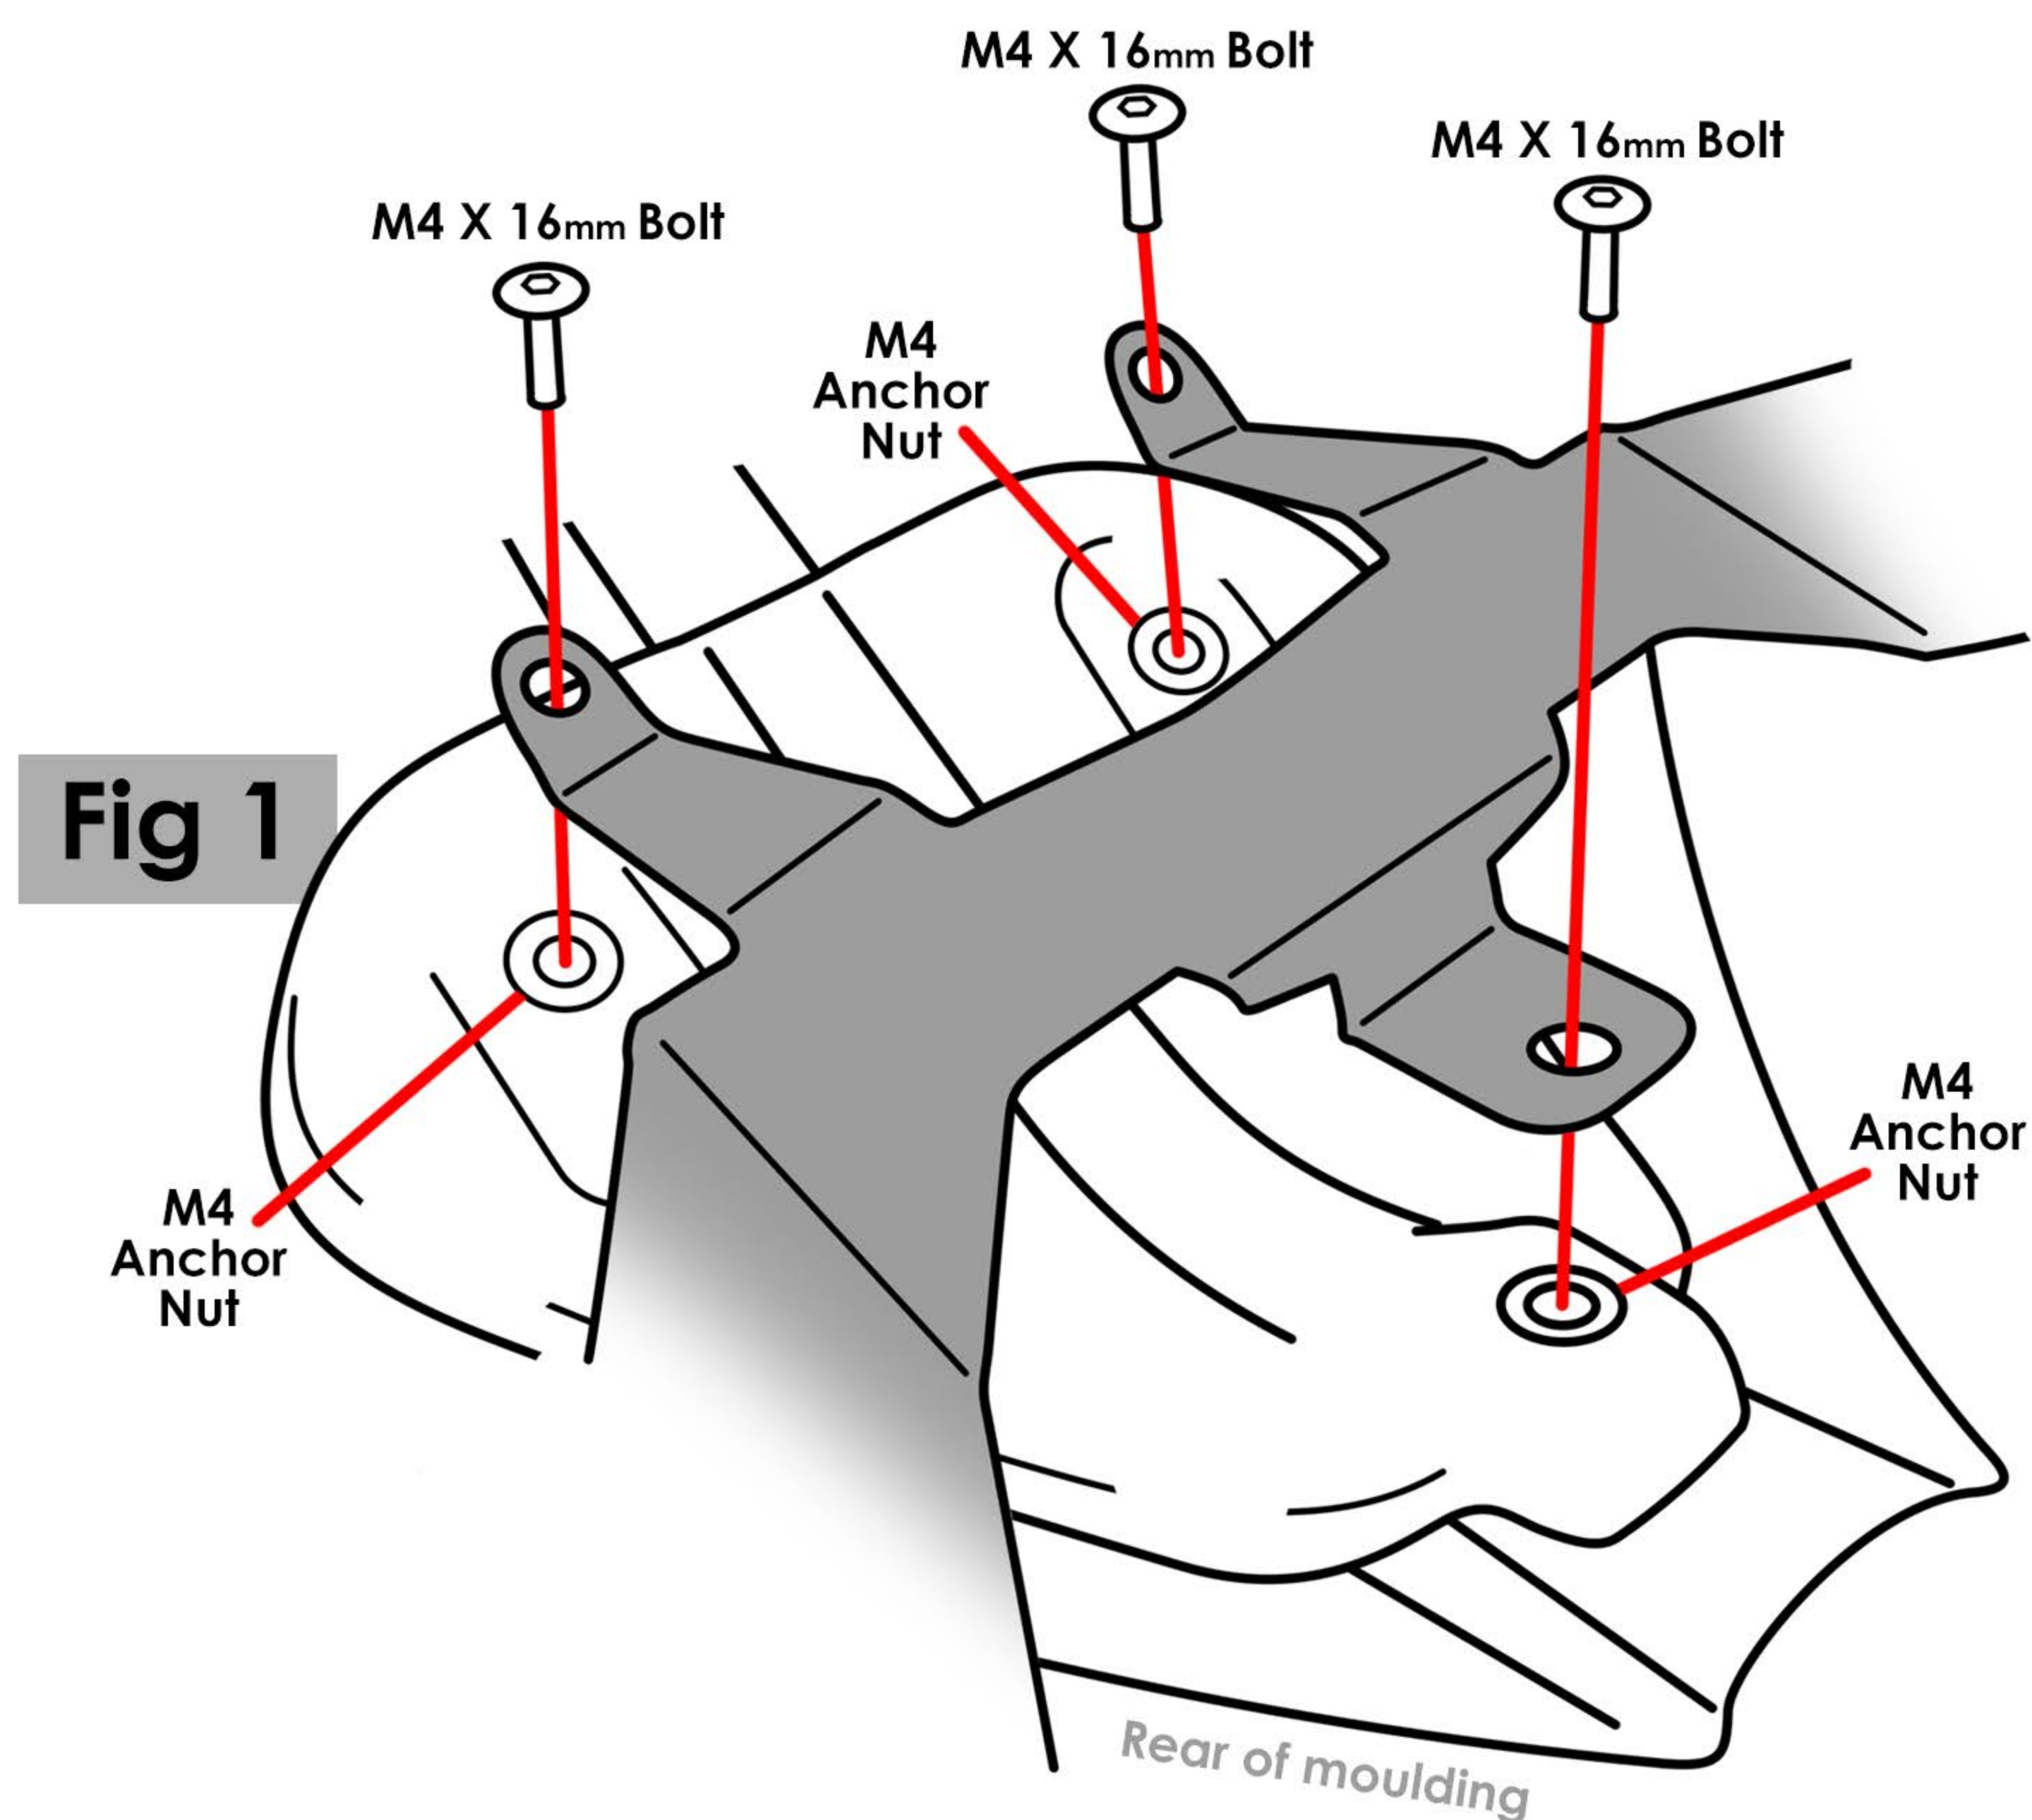

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
 feel free to leave us a review!