

## 30016 Pyramid Universal Handguards

### Kit Includes:

1.	X2	C30202	L + R Side Handguard Extensions
2.	X1	CFOA0001	Foam Strip 200mm
3.	X2	CRIV0003	Push Rivet


**Please note:** These Pyramid handguard extensions are designed to fit to the Pyramid handguards

### Fitting notes:

The foam strip provided can be used to protect the handguards from the handguard extensions. Cut the foam strip into four pieces and attach them where necessary (see **diagram**).

Use a 4mm drill bit to open a hole in the handguard extensions and the handguards. The hole is supposed to be drilled into the rectangular shaped feature on the side of the handguard extensions (see **diagram**).

Once the hole is drilled, attach the handguard extensions to the handguards using the two push rivets supplied.

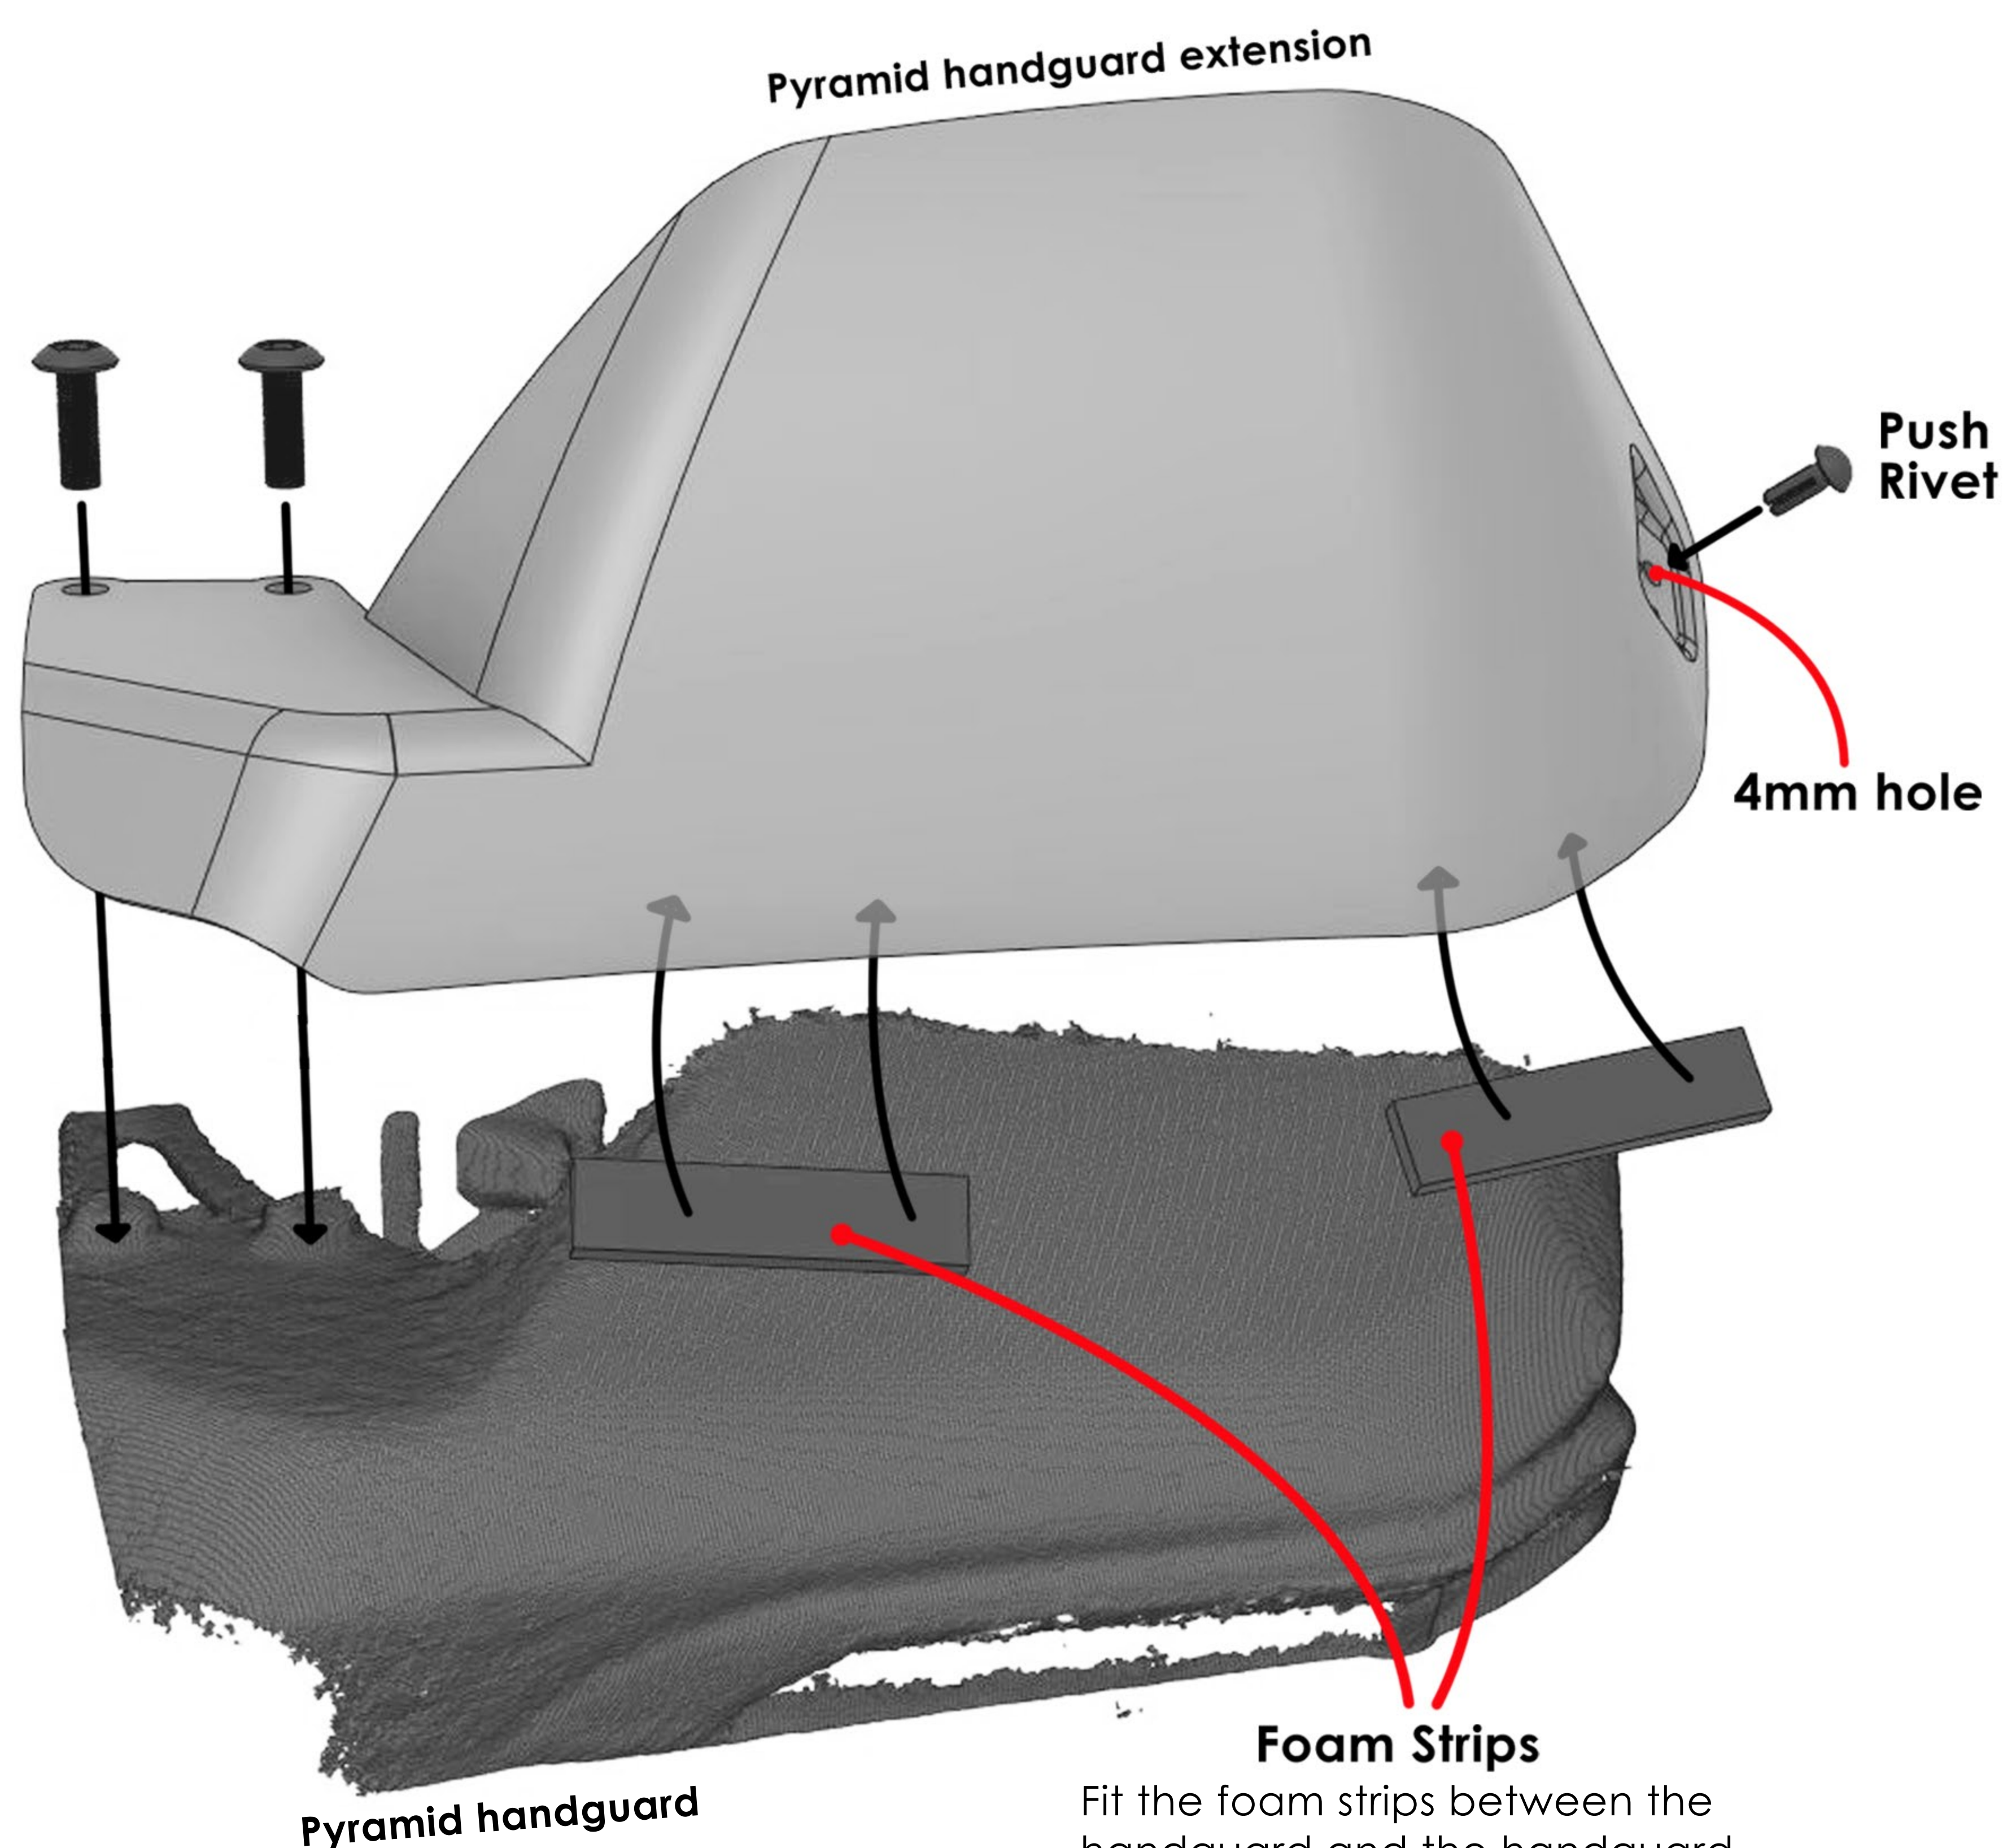

Fit the foam strips between the handguard and the handguard extension.

Any questions?  
[sales@pyramidmoto.co.uk](mailto:sales@pyramidmoto.co.uk)  
+44 (0)1427 677990  
[www.pyramidmoto.co.uk](http://www.pyramidmoto.co.uk)



Follow us on social media and feel free to leave us a review!