

# PYRAMID

## 30200 Yamaha Tracer 900 & Tracer 900 GT Handguard Extensions Fitting Instructions

### Kit Includes:


1X	C30200	Mouldings (pair)
4X	CBOLM50007	M5 X 16mm Black Button Head Bolts
4X		M5 Black Plastic Washer

- Remove the OEM handguard covers from the bike.
- Using the fittings supplied, fit the Pyramid Handguards to the rear side of the OEM handguard. These fittings supplied will go through and bring all three components together.
- The order in which these parts go together is pictured below. Repeat on other side.
- Remember to check all fixings periodically.

Got questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and  
feel free to leave us a review!

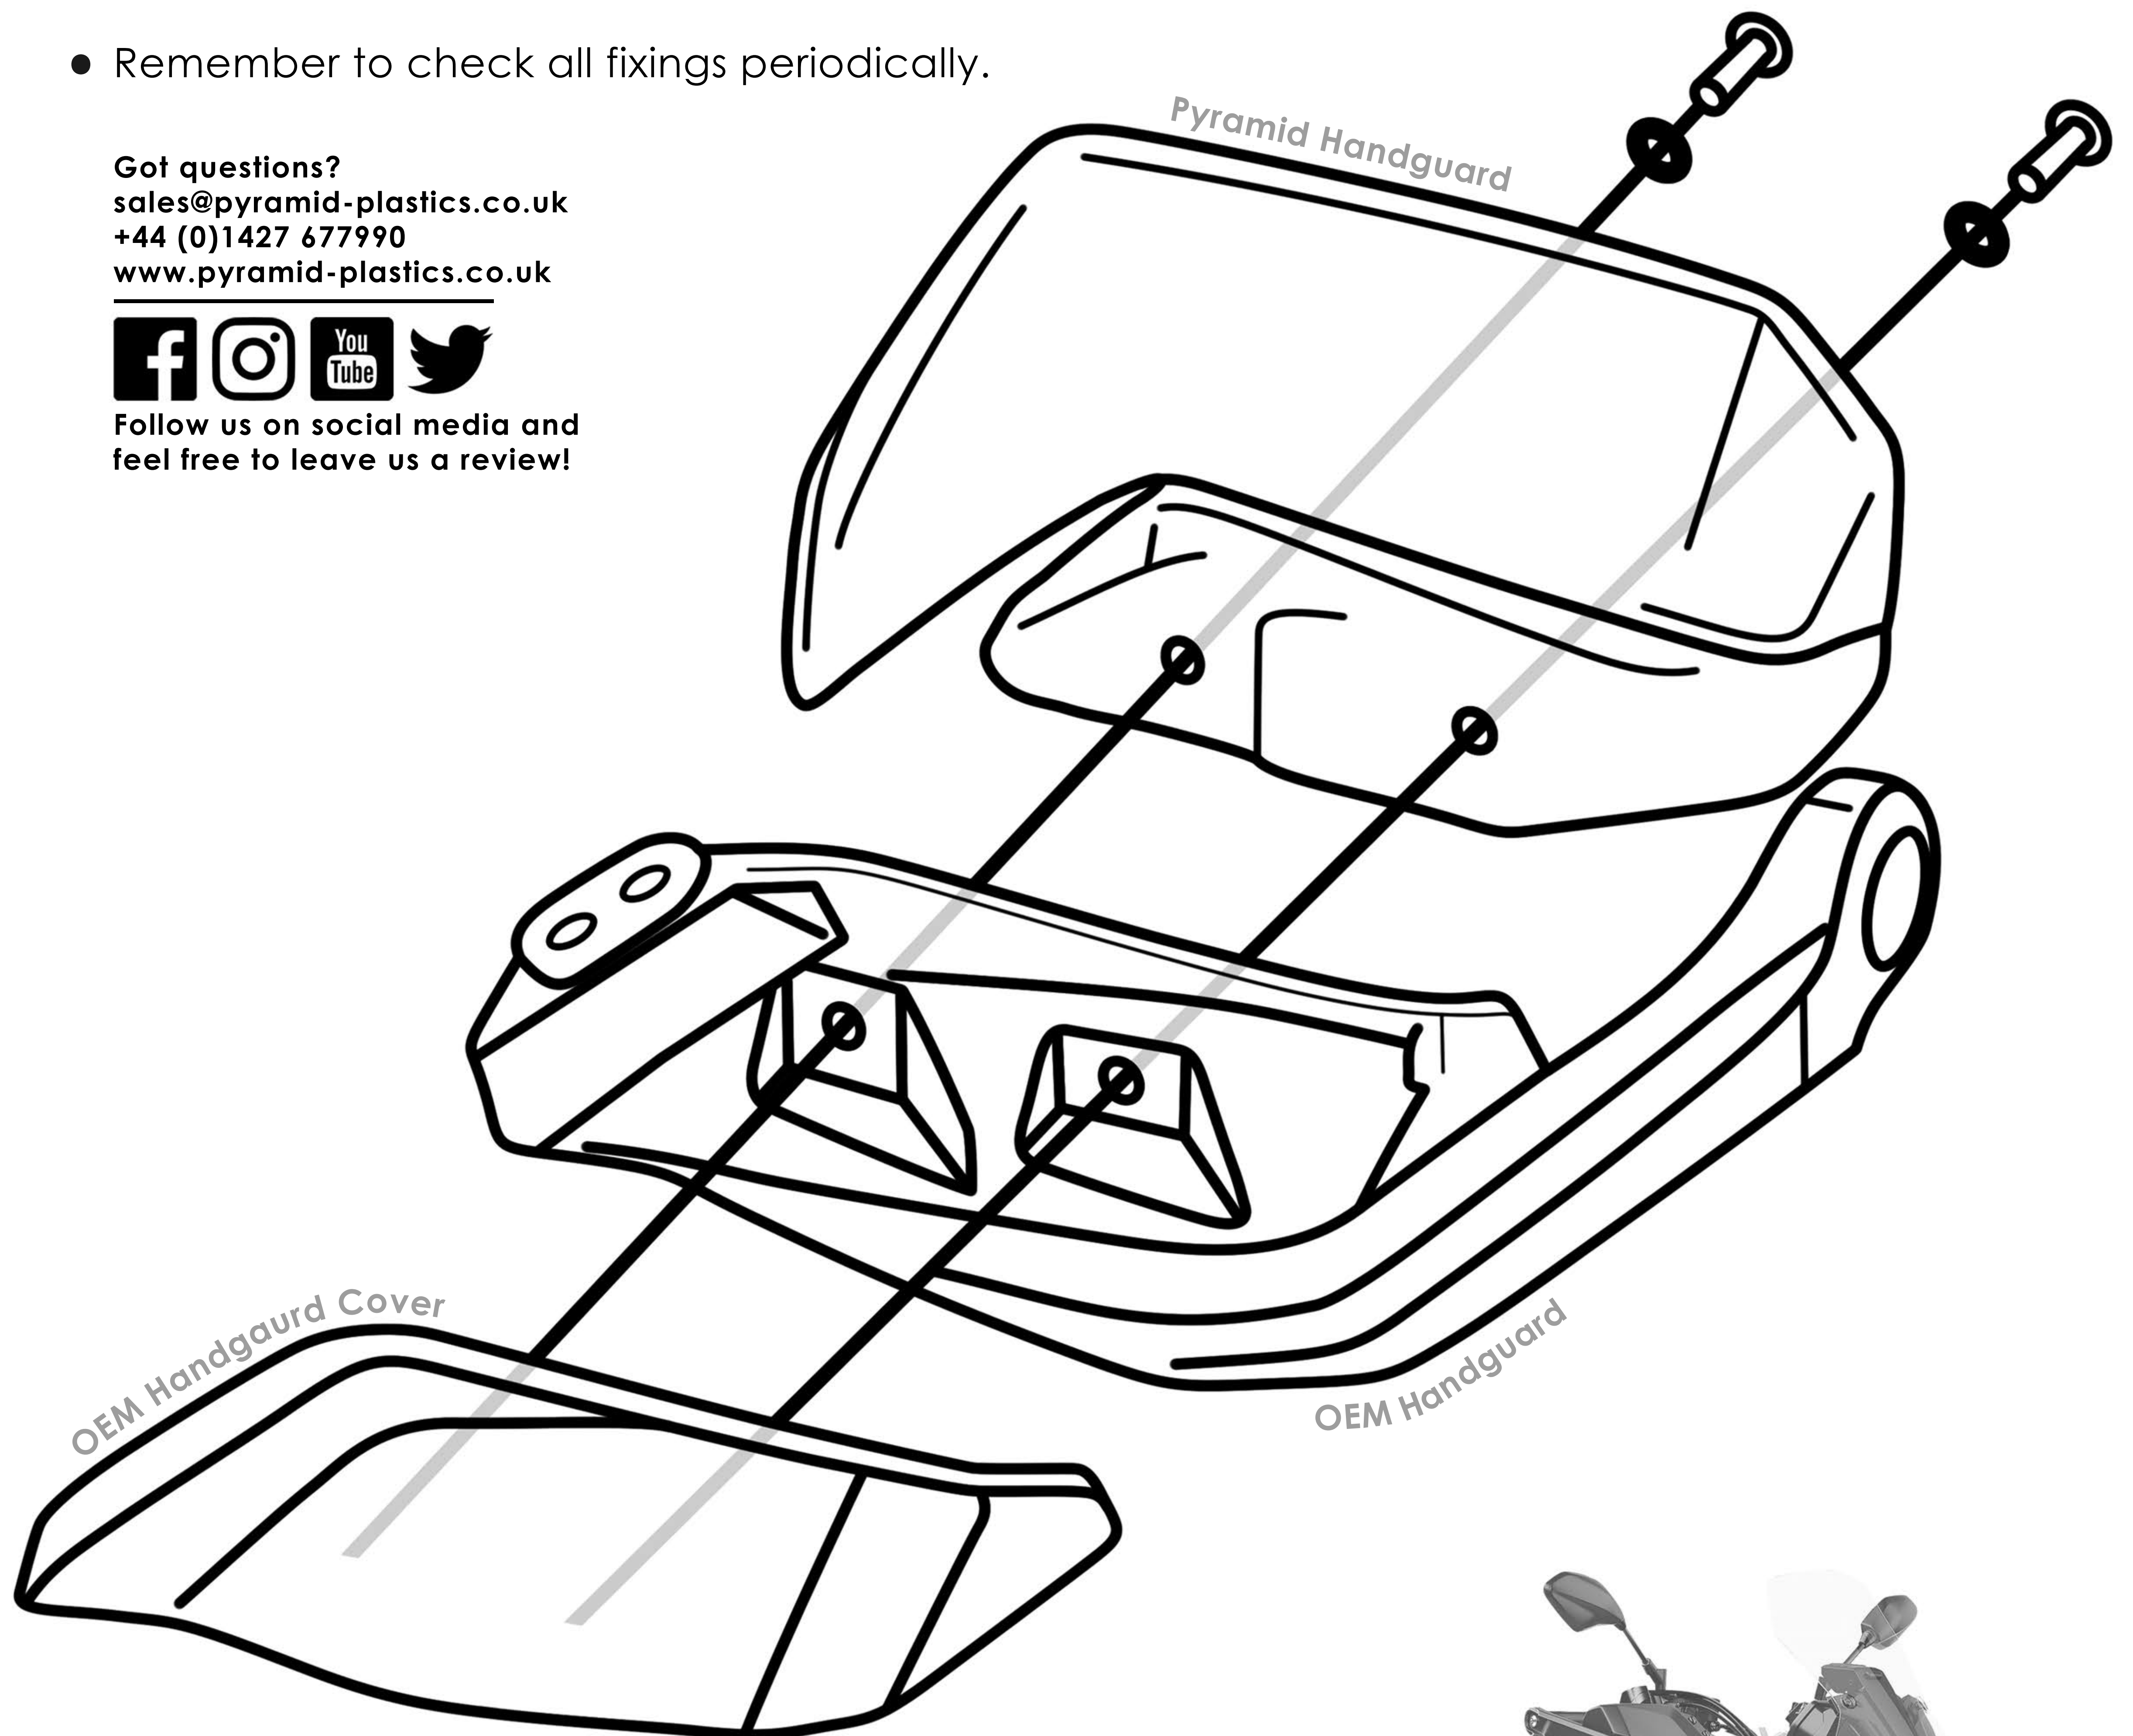

# TRACER

