


30202 Yamaha Tracer 9 Handguard Extensions Fitting Instructions

Kit Includes:

| | | |
|----|----------|-----------------------------|
| 2X | C30202 | Handguard Extensions (pair) |
| 2X | CRIV0003 | Push Rivet |
| 1X | CFOA0001 | Foam Strip 200mm |

Our Pyramid handguard extensions are simple to fit.

- Remove the four bolts and collars from the OEM handguards (two on each side).
- Using the same four bolts and collars, loosely attach the handguard extensions on top of the OEM handguards (see **diagram**).
- The foam strip provided can be used to protect the OEM handguards from the handguard extensions. Cut the foam strip into four pieces and attach them where necessary (see **diagram**).
- Once the foam is fitted and the handguard extensions are aligned as required, use a 4mm drill bit to open a hole in the handguard extensions and the OEM handguards. The hole is supposed to be drilled into the rectangular shaped feature on the side of the handguard extensions (see **diagram**).
- Once the hole is drilled, attach the handguard extensions to the OEM handguards using the two push rivets supplied.
- Check fixings periodically.

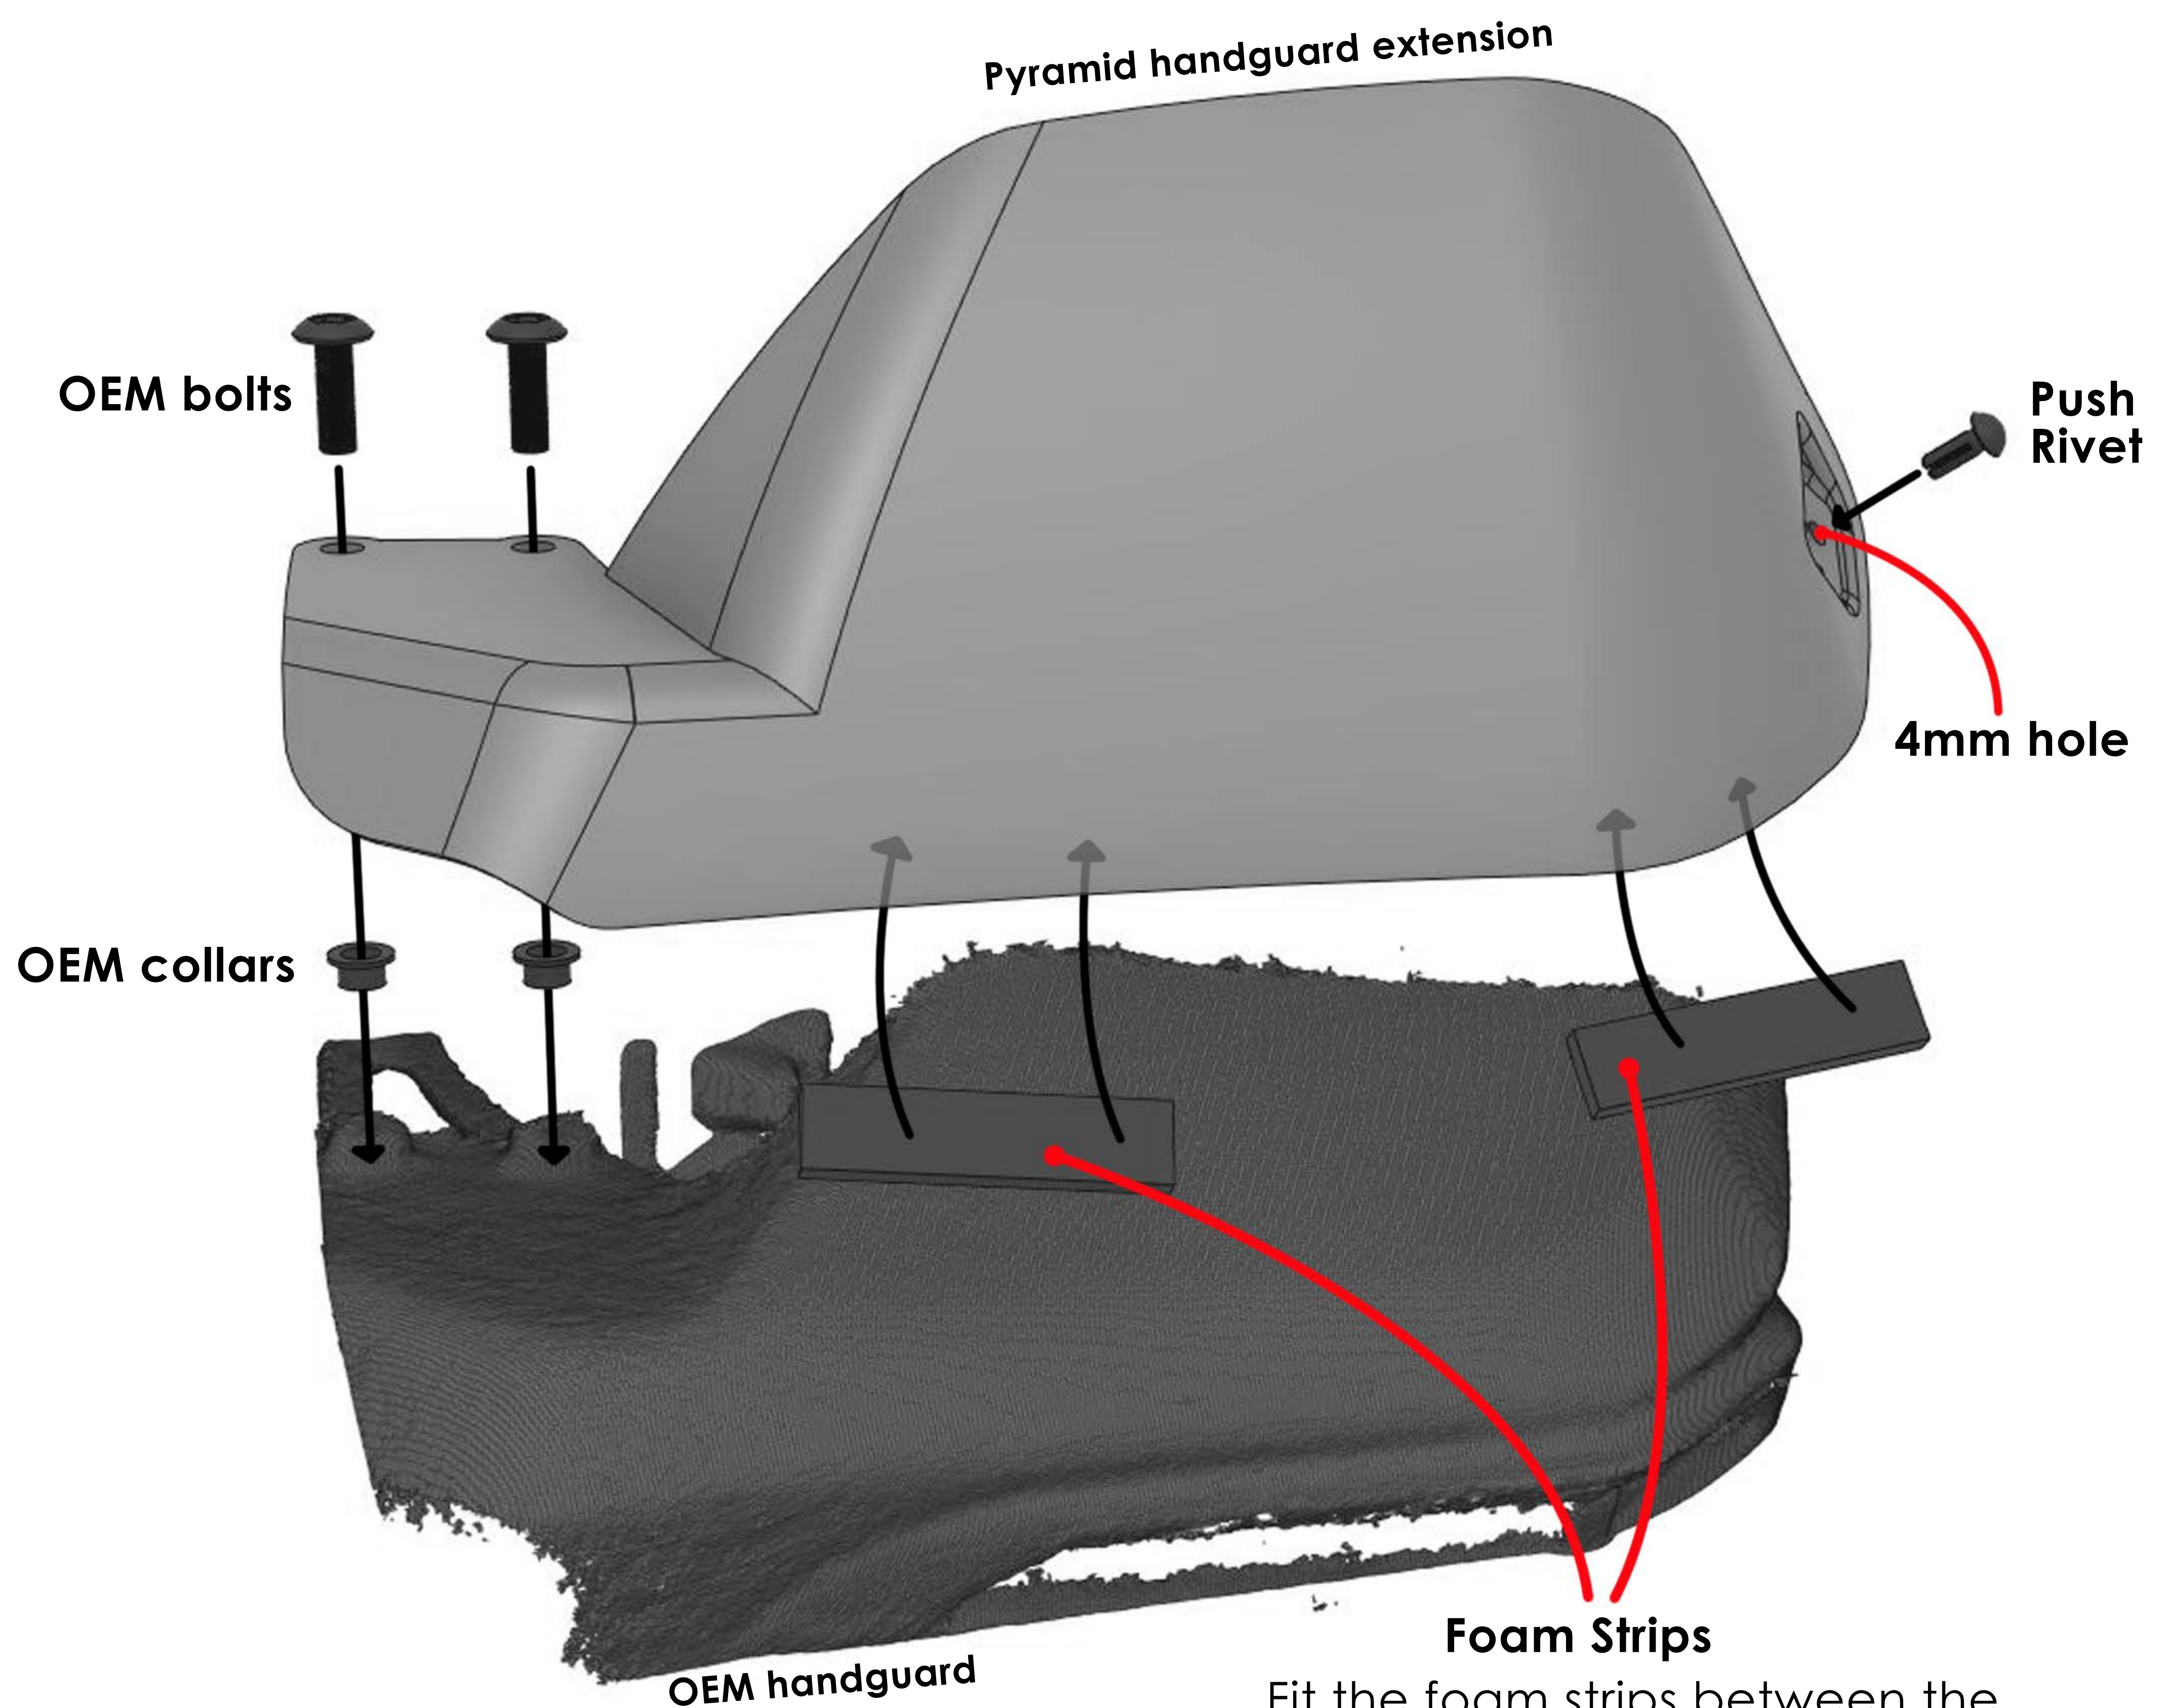

Fit the foam strips between the OEM handguard and the handguard extension.

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!