

30203 Yamaha MT-09 Handguards Fitting Instructions

Kit Includes:

2X	C30203	Handguards (pair)
2X	CFK30203	Brackets (pair)
2X	CBOLM60018	M6 X 50mm Countersunk Bolt
2X	CWASM60005	M6 Countersunk Washer
2X	CWASM60001	M6 Washer
2X	CSPAM60014	M6 Spacer
4X	CBOLM50007	M5 X 16mm Bolt
4X	CNUTM50002	M5 Nyloc Nut
4X	CSPAM50003	M5 Collar

- Remove the bar ends from both sides of the handlebars.
- Remove the left-hand side mirror. Remove the brake fluid reservoir mounting bracket on the right-hand side.
- Loosely attach the smaller bracket to the left-hand side of the bike, underneath the brake fluid reservoir mounting bracket. Loosely attach the larger bracket to the right-hand side of the bike, underneath the mirror mounting point (see Fig 1 & 2).
- Loosely attach the handguards to the bar ends using the M6 fittings supplied (see Fig 3).
- Loosely attach the brackets to the handguards using the M5 fittings supplied (see Fig 4).
- Now tighten all of the fixing points and adjust the left-hand side mirror if needed - this can be achieved by adjusting the two nuts on the mounting point of the mirror.
- Check fixings periodically.

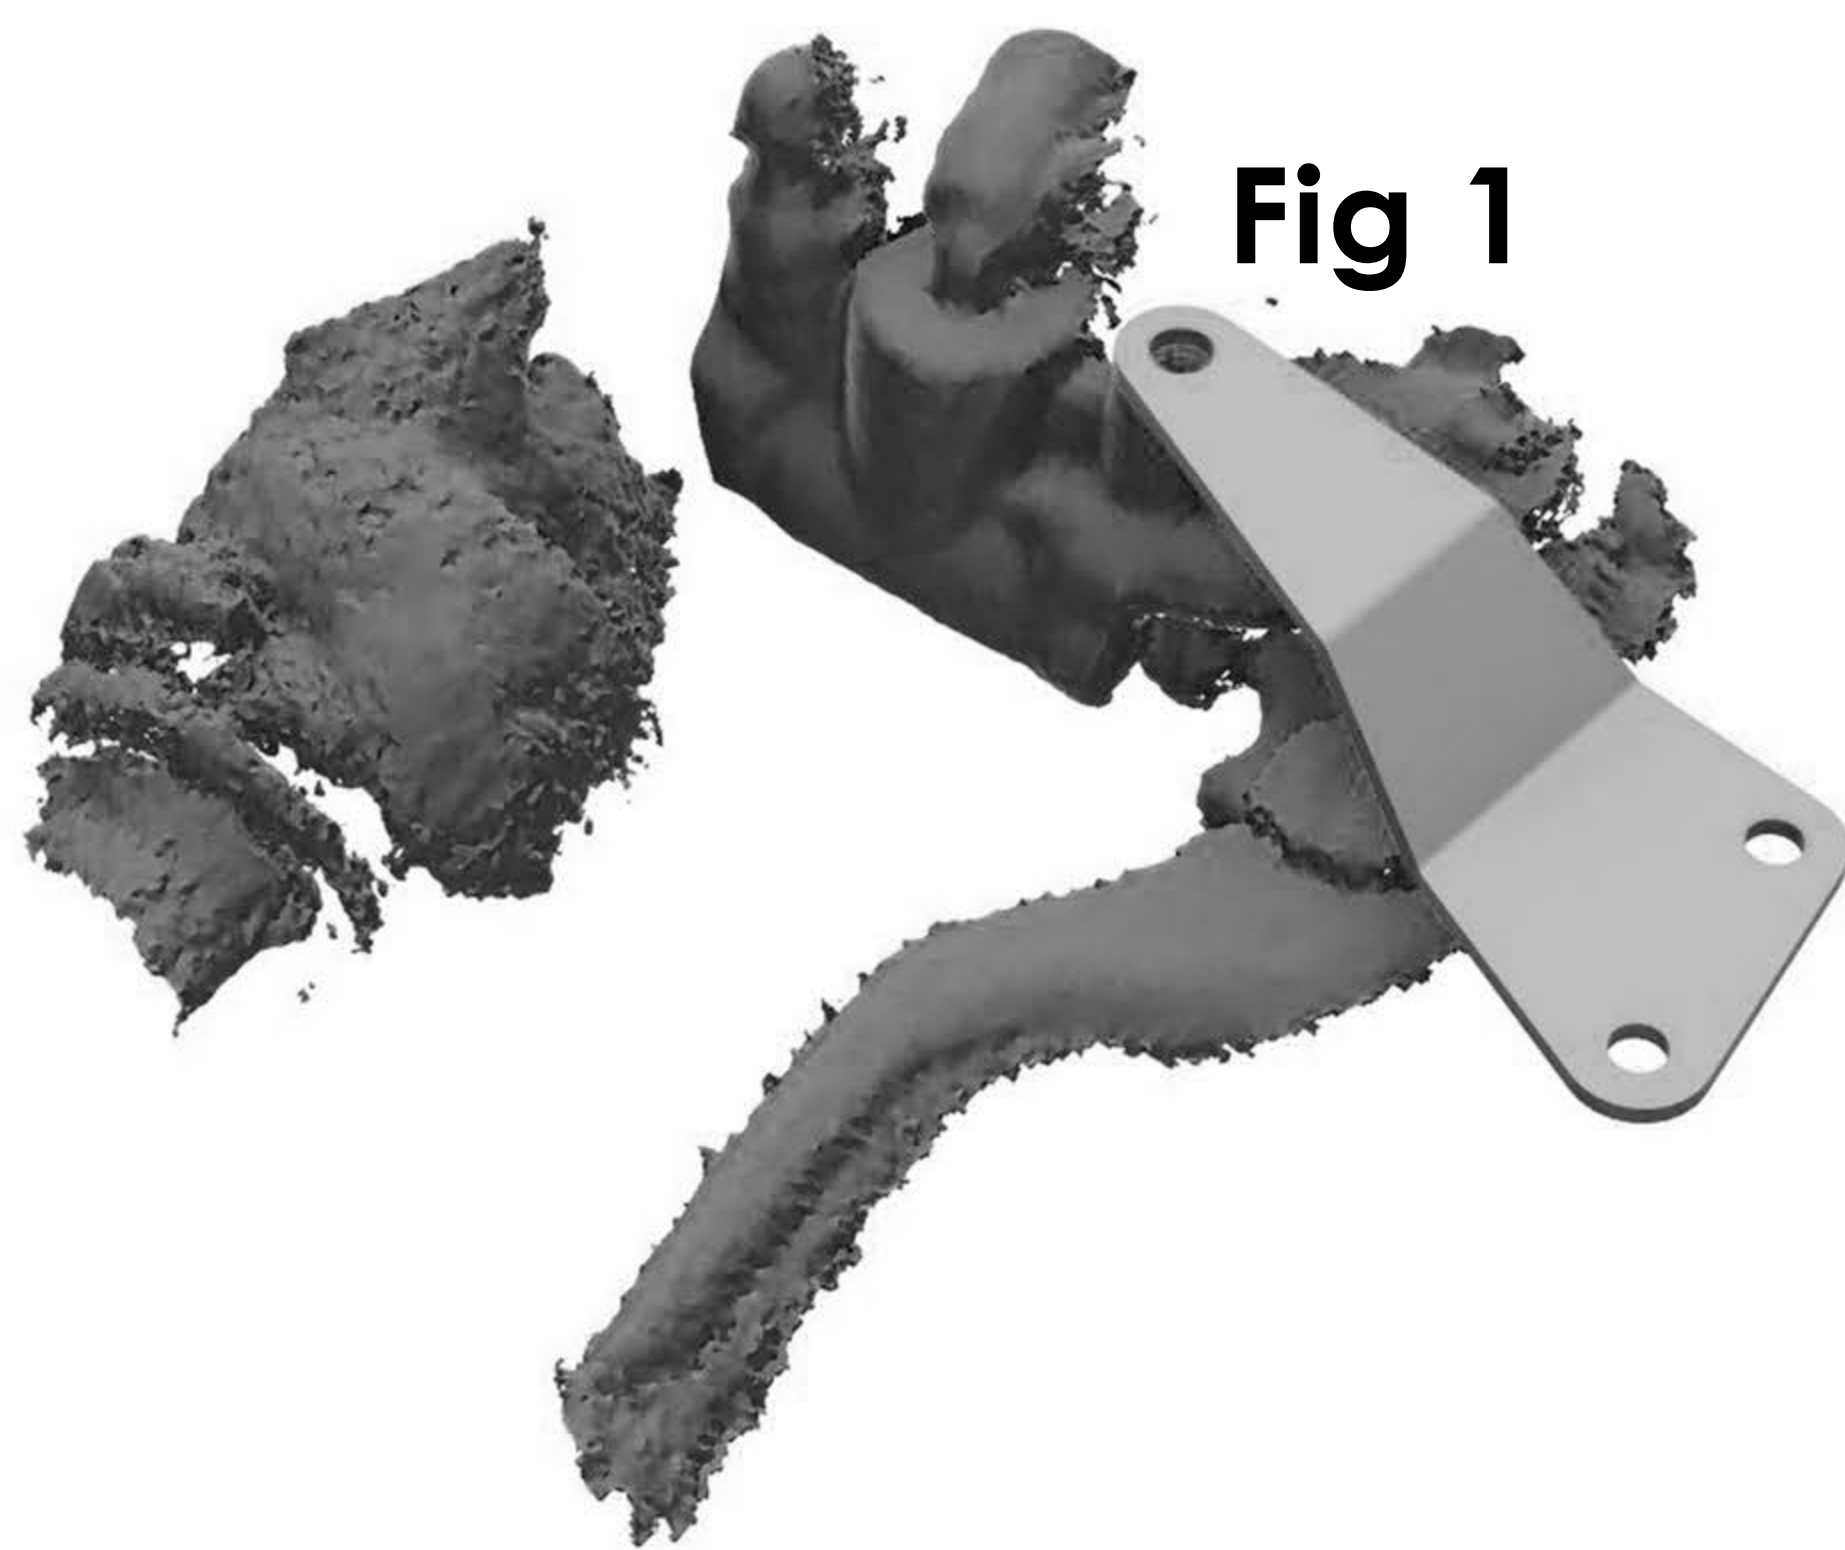


Fig 1

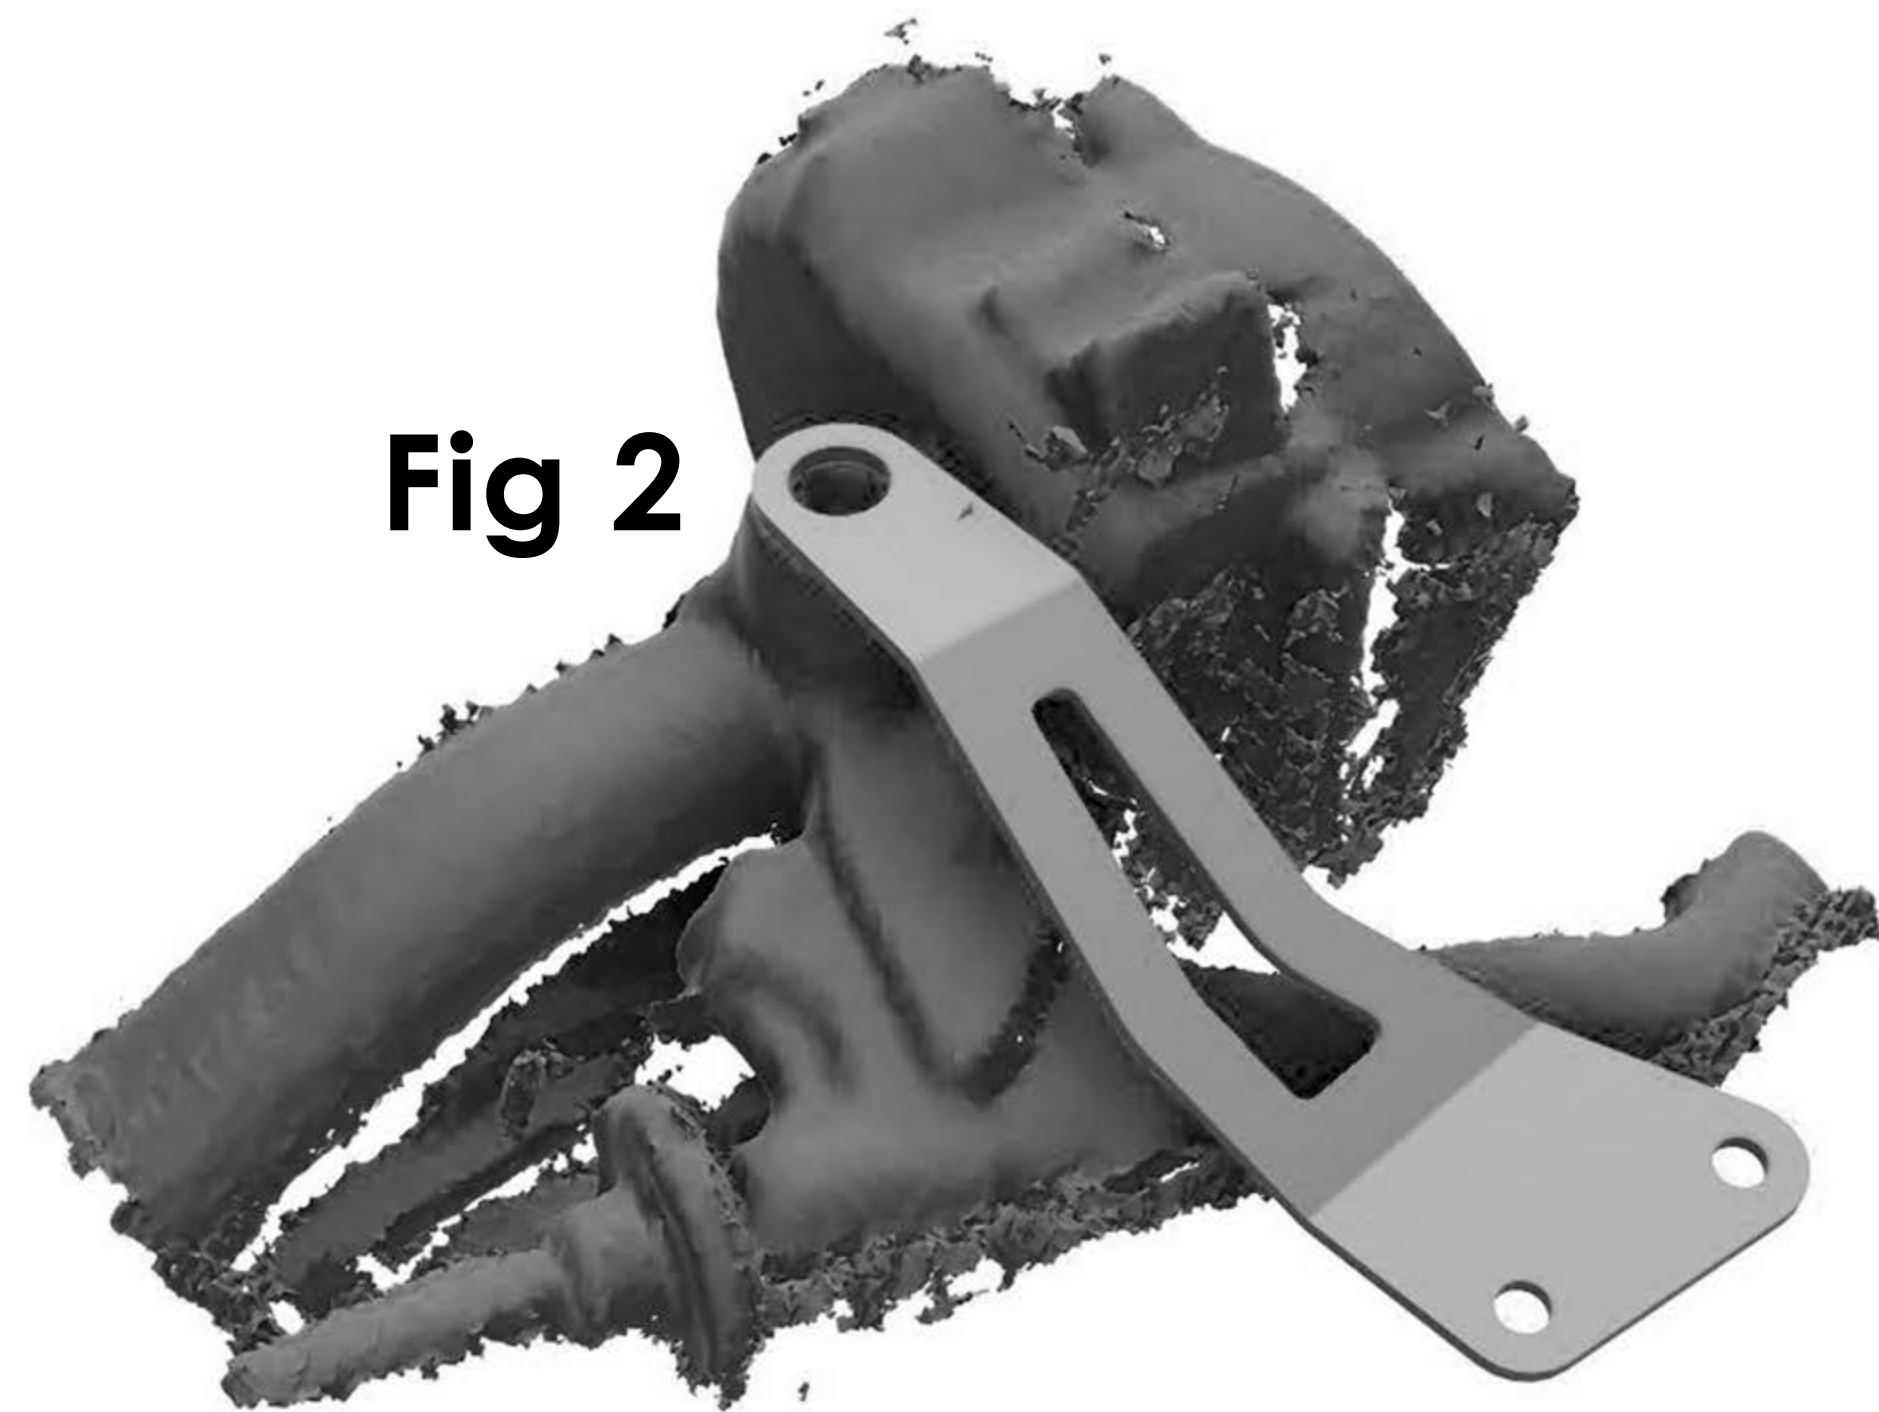


Fig 2

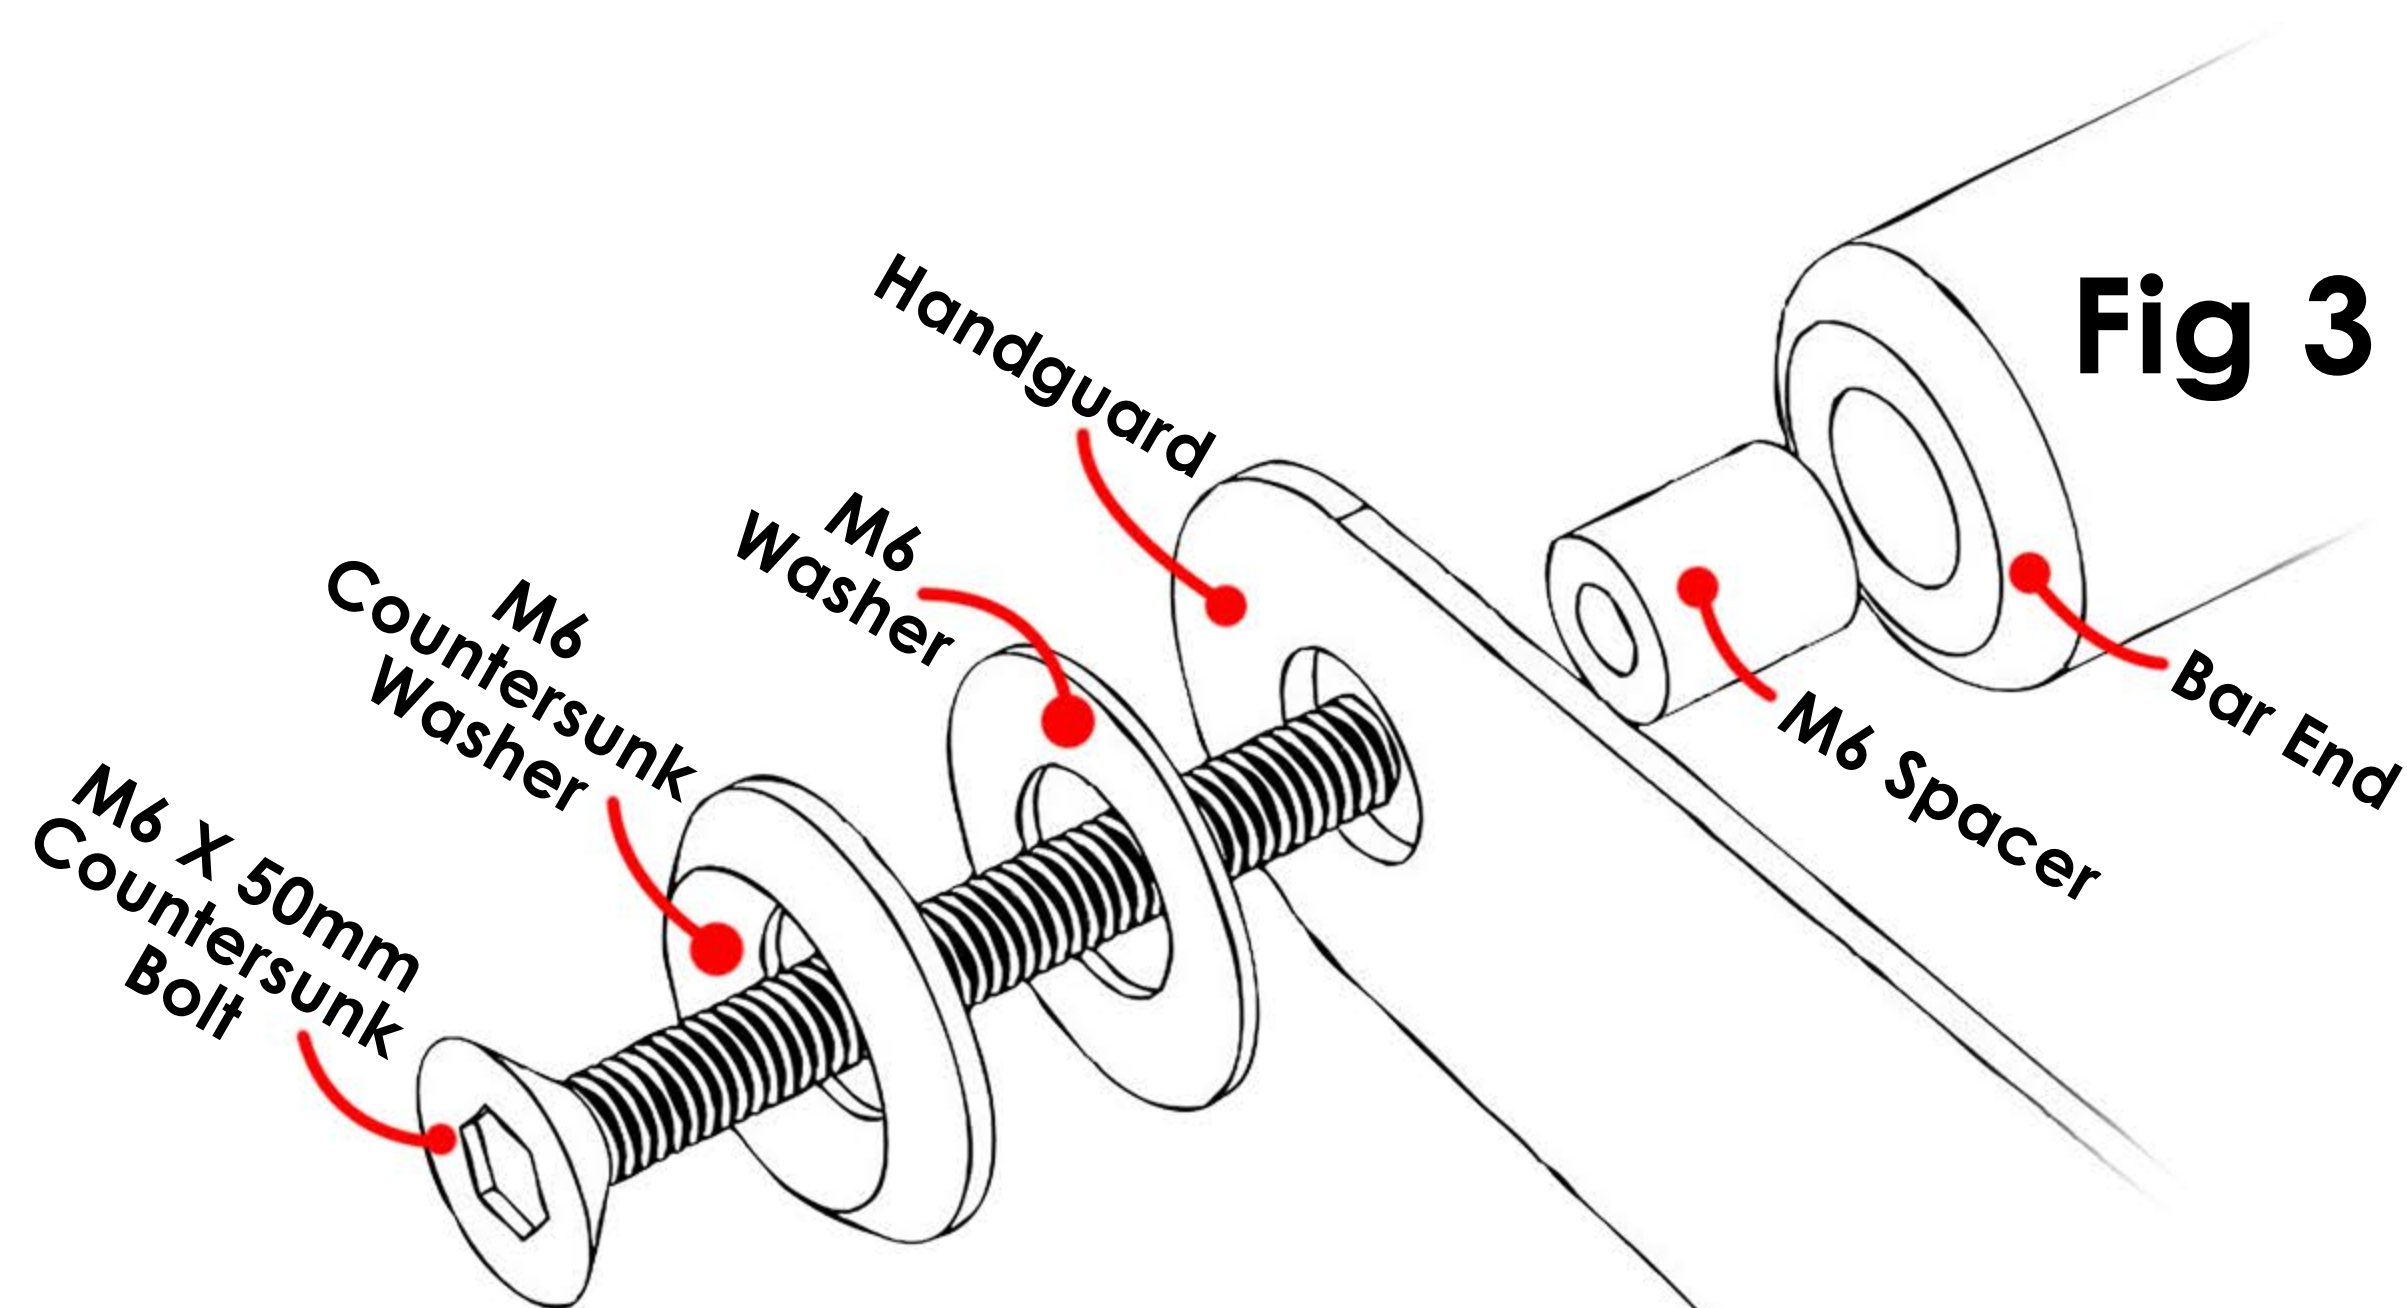


Fig 3

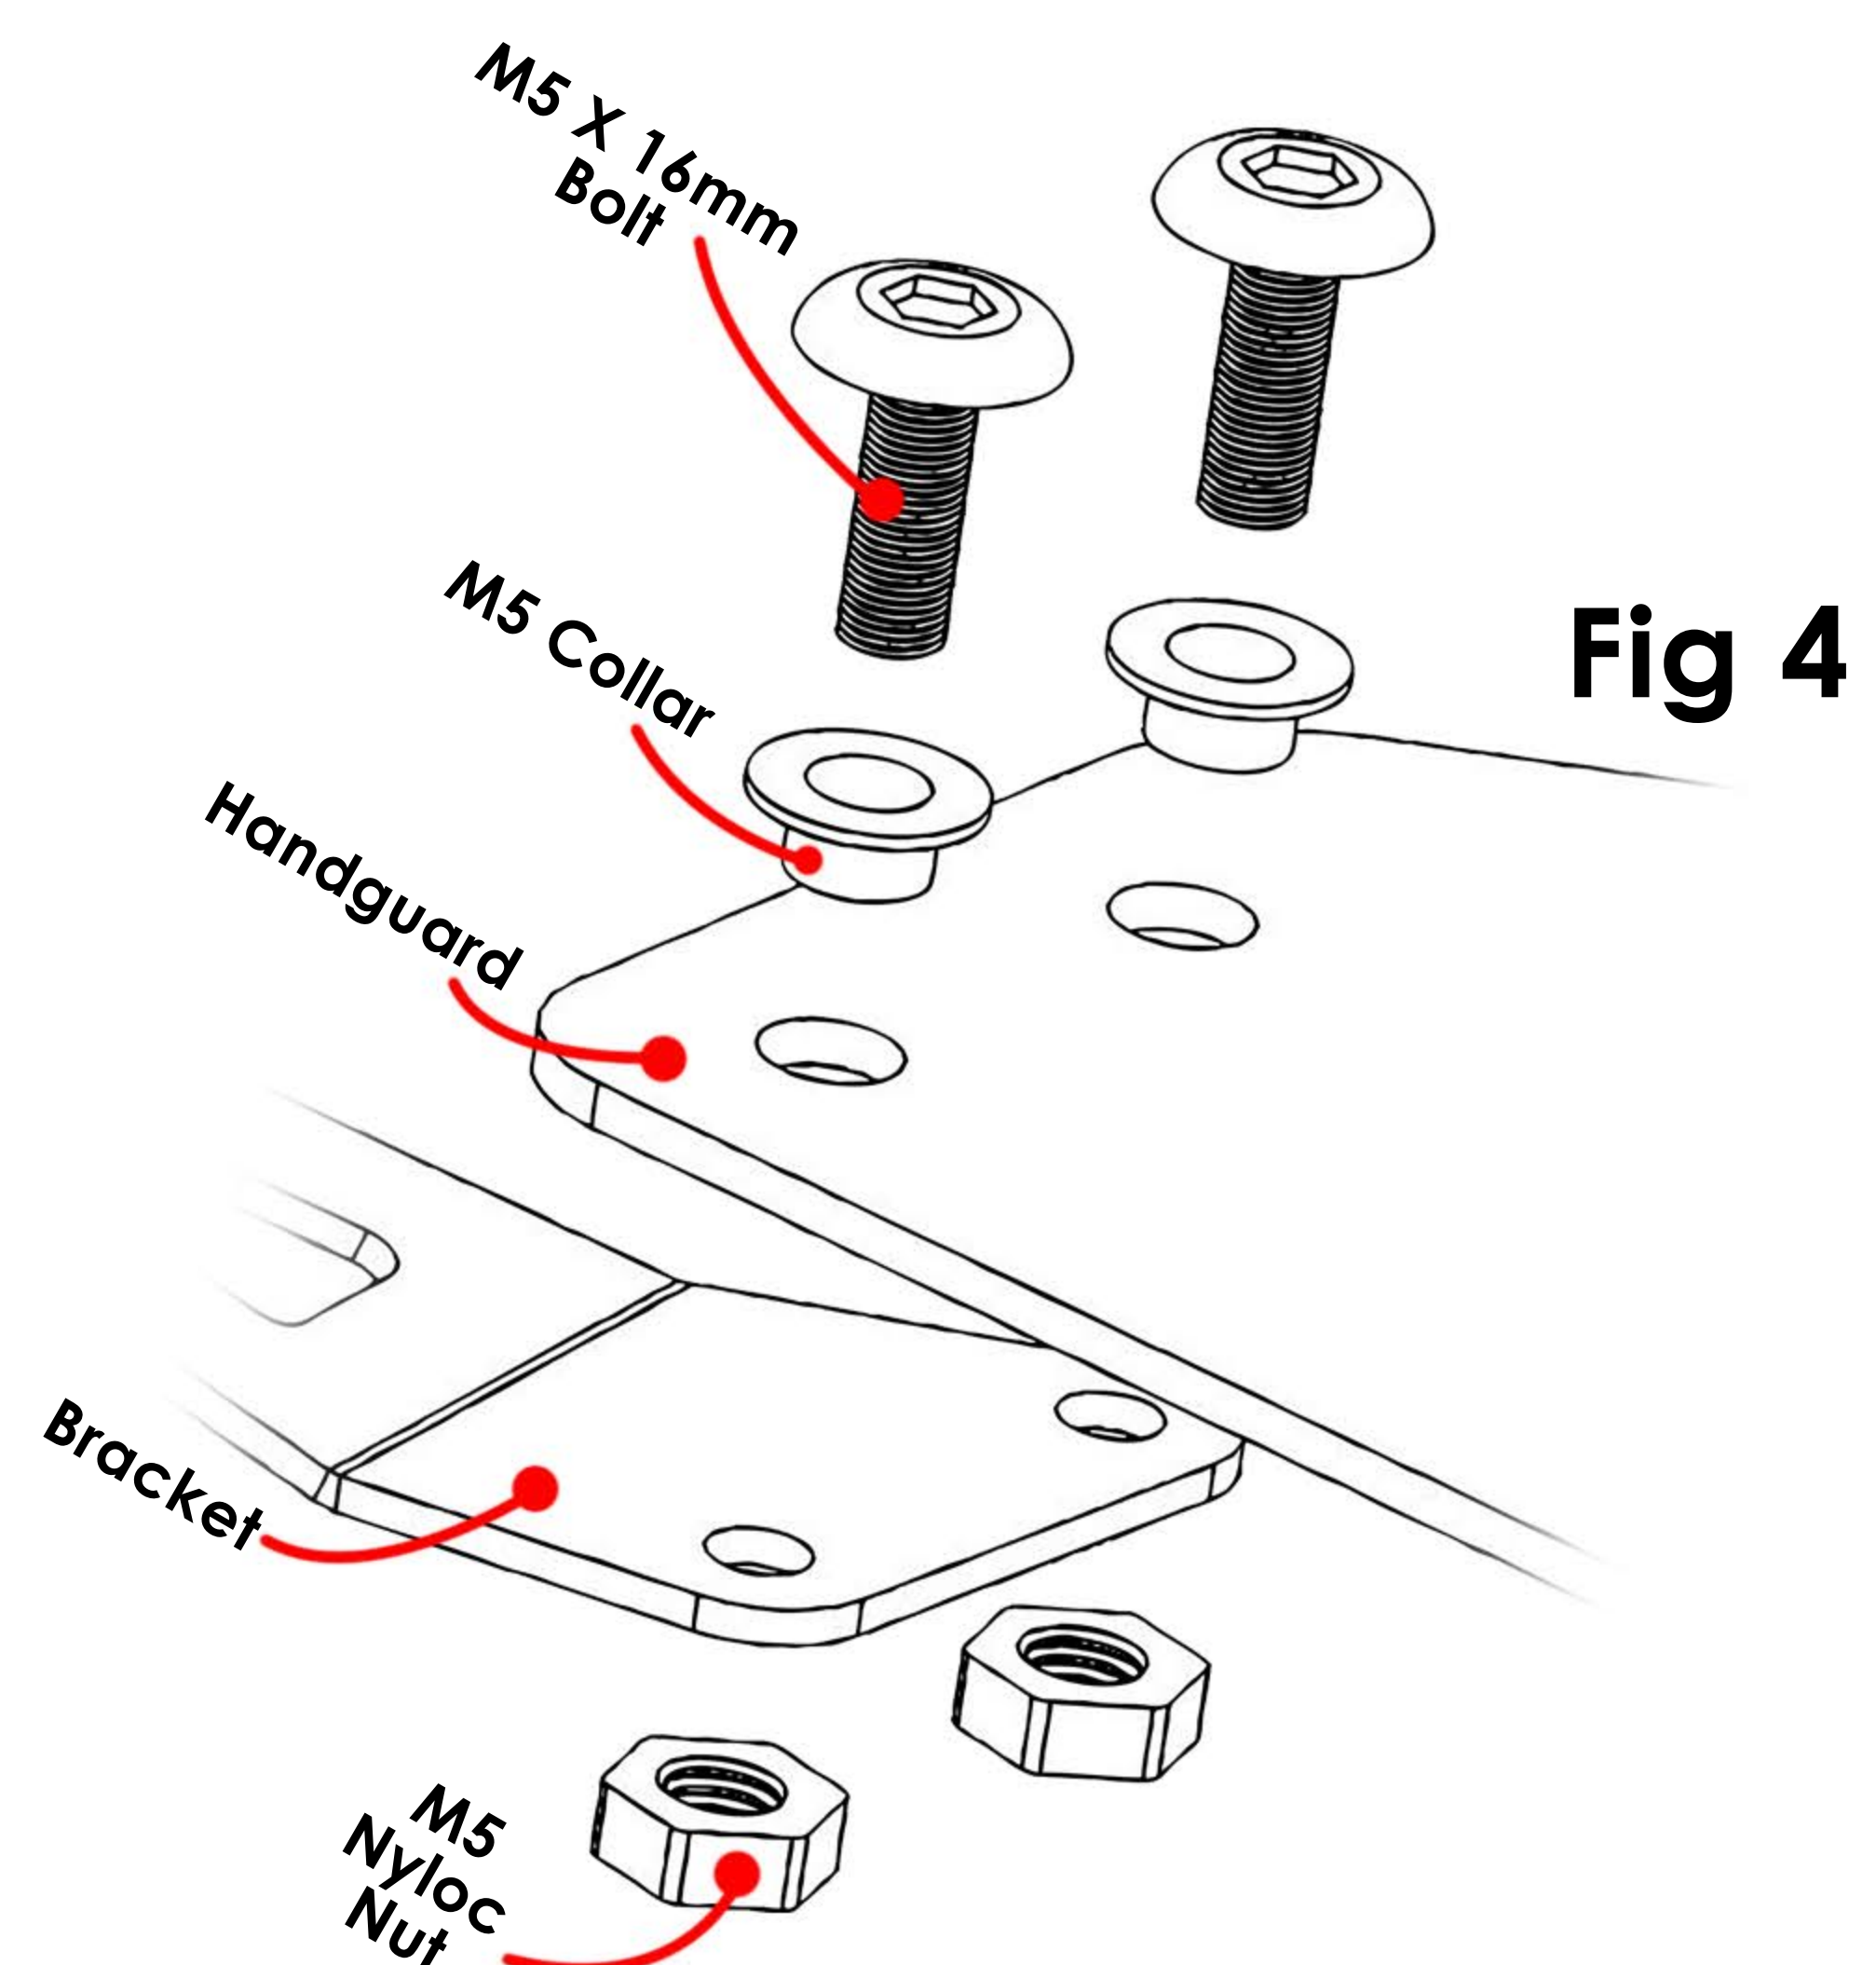


Fig 4

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!