


31900 KTM 1290 Superduke R GP Wings Fitting Instructions

Kit Includes:

1X	C31900	Mouldings (pair)
2X	CBOLM50009	M5 X 20mm Bolt
2X	CWASM60004	Large Plastic Washer
2X	CNUTM40003	Anchor Nut
2X	CBUM0005	Rubber Foot

- The Pyramid GP Wings are simple to fit. Simply remove the OEM bolt from beneath the side fairing on each side of the bike and fit the Pyramid GP Wings as shown in the diagram below.

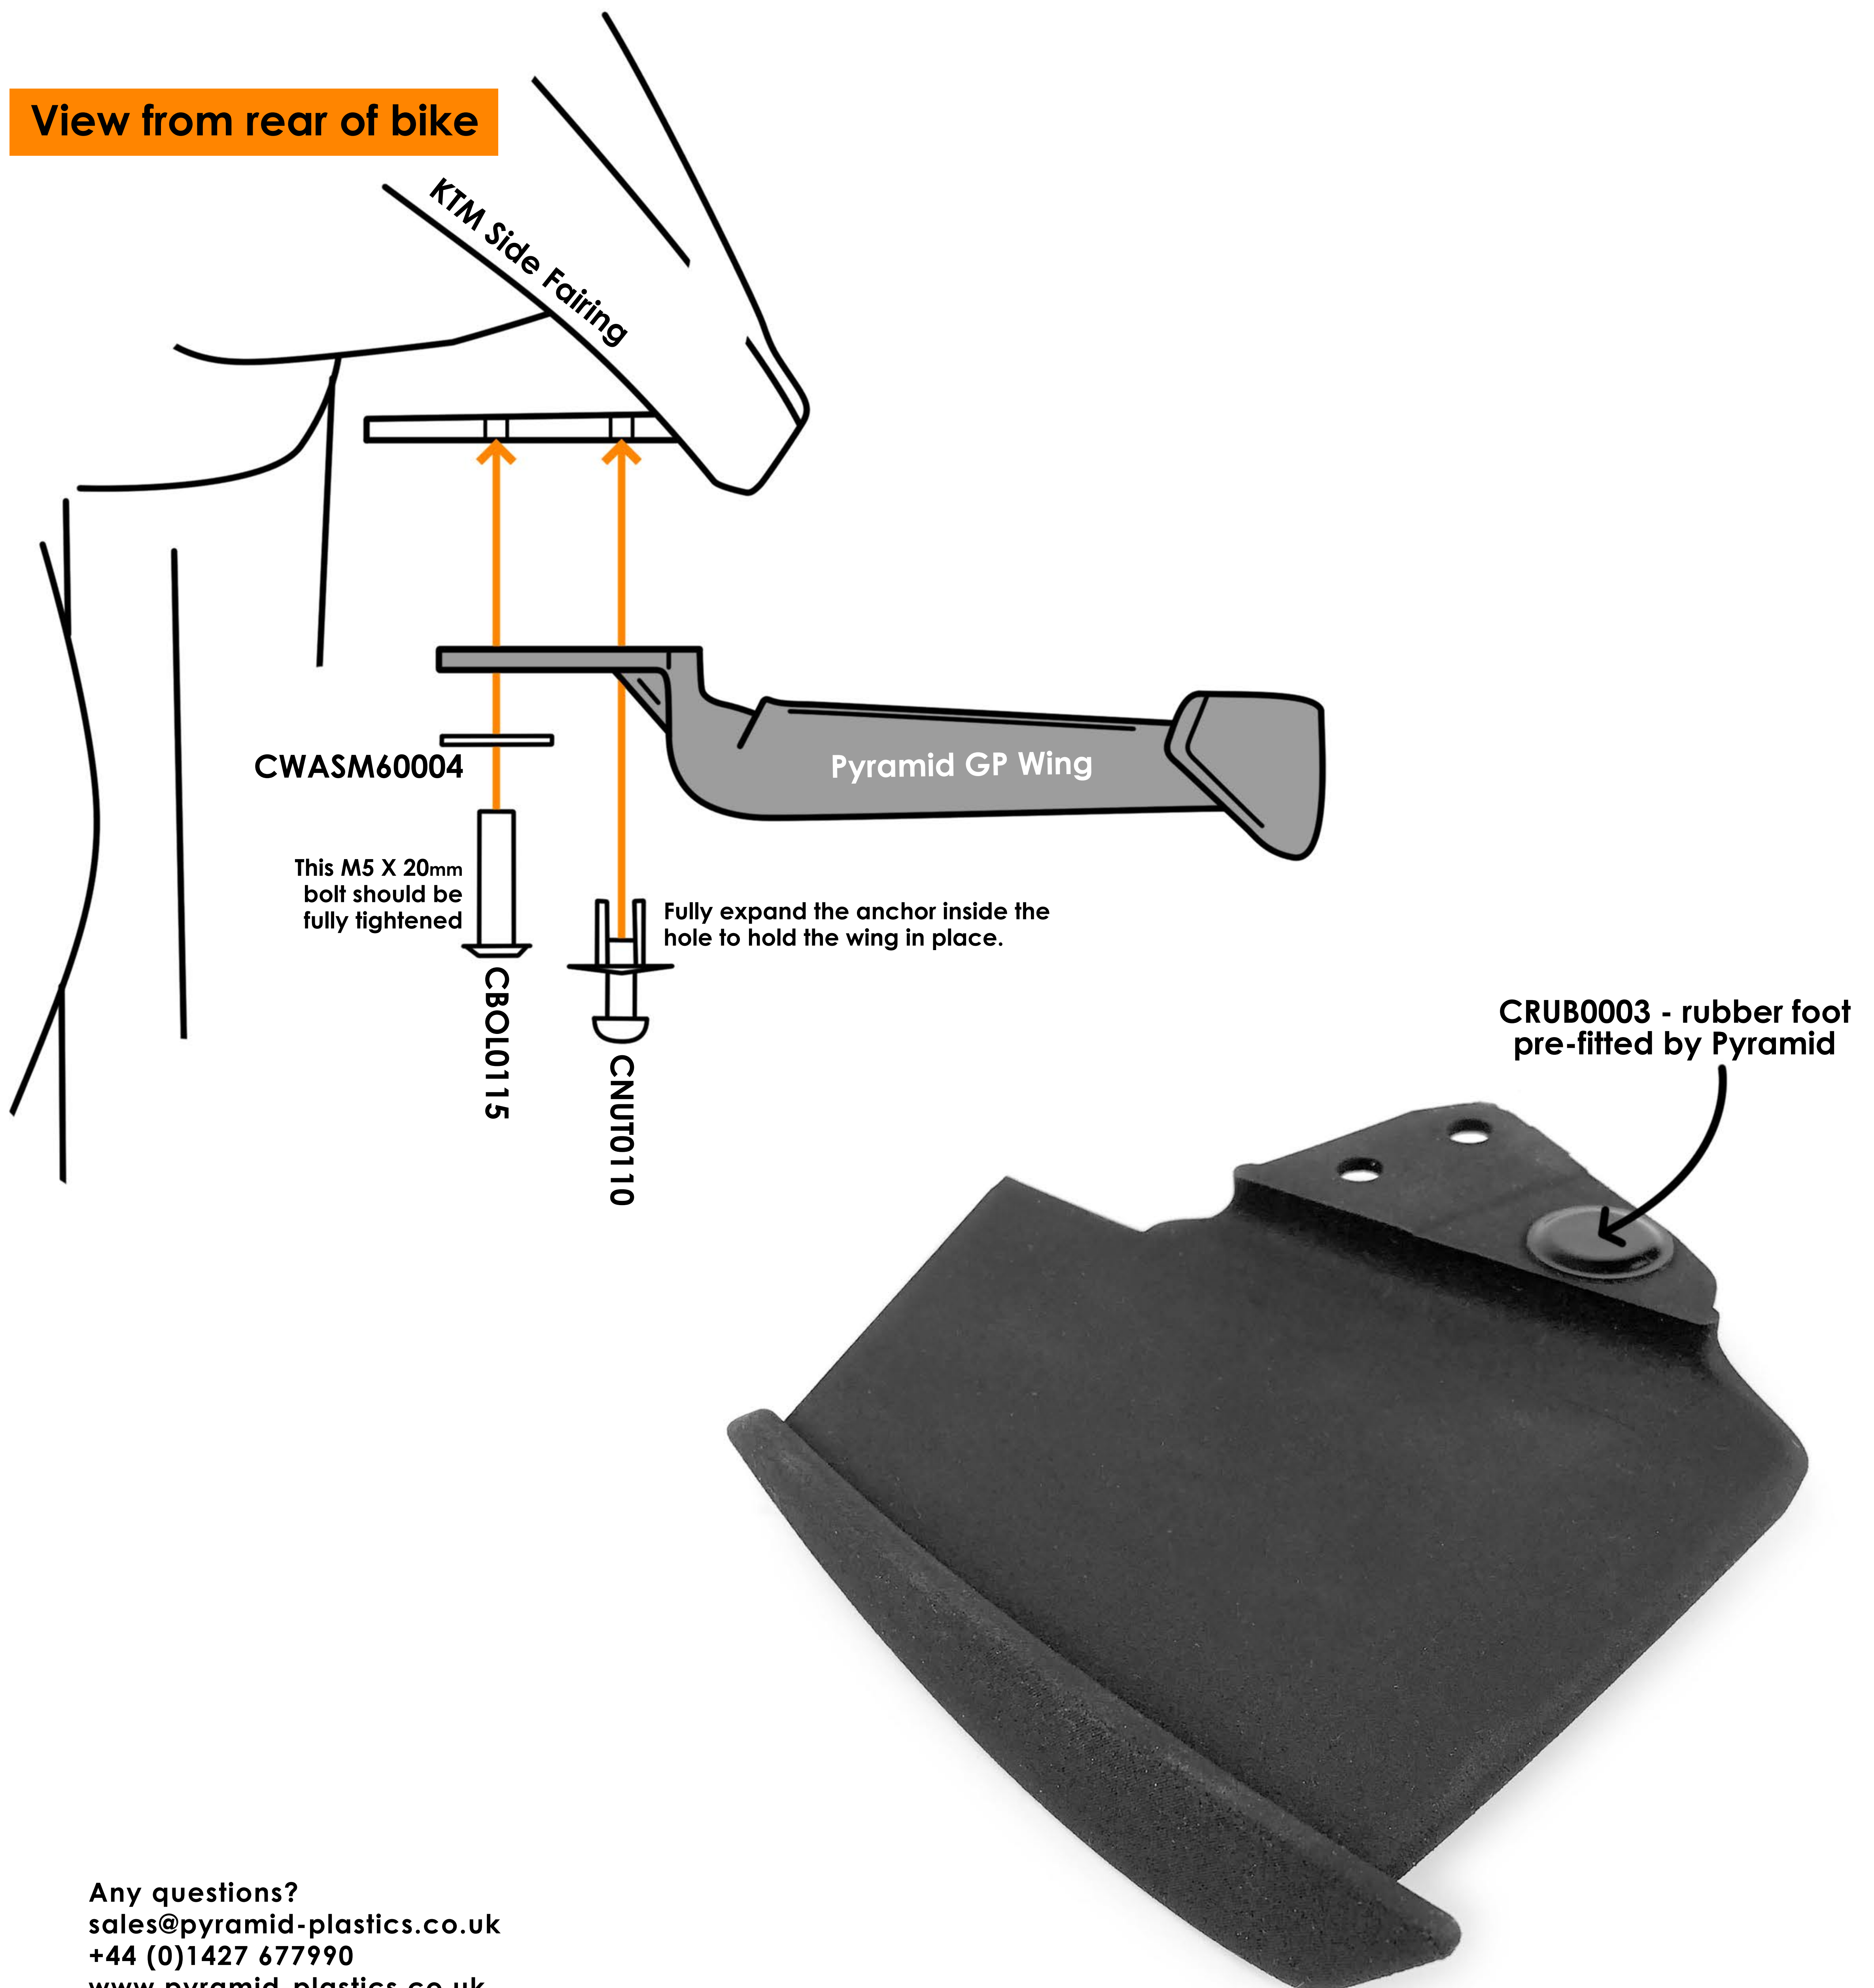

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!