

# PYRAMID



## 32280 Yamaha Tracer 9 TFT Peaks Fitting Instructions

2X	TFT Peaks (pair)	C32280
1X	Stick-fit Pads	CTAP0052
1X	Sandpaper Square	CSAN0002

- Use the sandpaper supplied to abrade the inside of the TFT peaks. This will help with adhesion. Be sure to remove any loose material after sanding and before proceeding to the next step.
- Clean the top of the TFT displays prior to fitting.
- Attach the stick-fit pads (**see Fig 1**).

**Note:** Familiarise yourself fully with how the TFT peaks fit. There is a left hand and right hand side. It is possible to adjust the exact position of the TFT peaks (both forwards and backwards) prior to the final fit. Ensure you are happy with your chosen position before proceeding to the final fit (**see Fig 2**).

- Remove the backing paper from the stickfit pads (a sharp knife is useful here).
- Carefully attach the TFT peaks in the desired position and then press down on the contact areas for a **minimum of 60 seconds**.
- **Allow 12 hours for the adhesive to fully cure.**

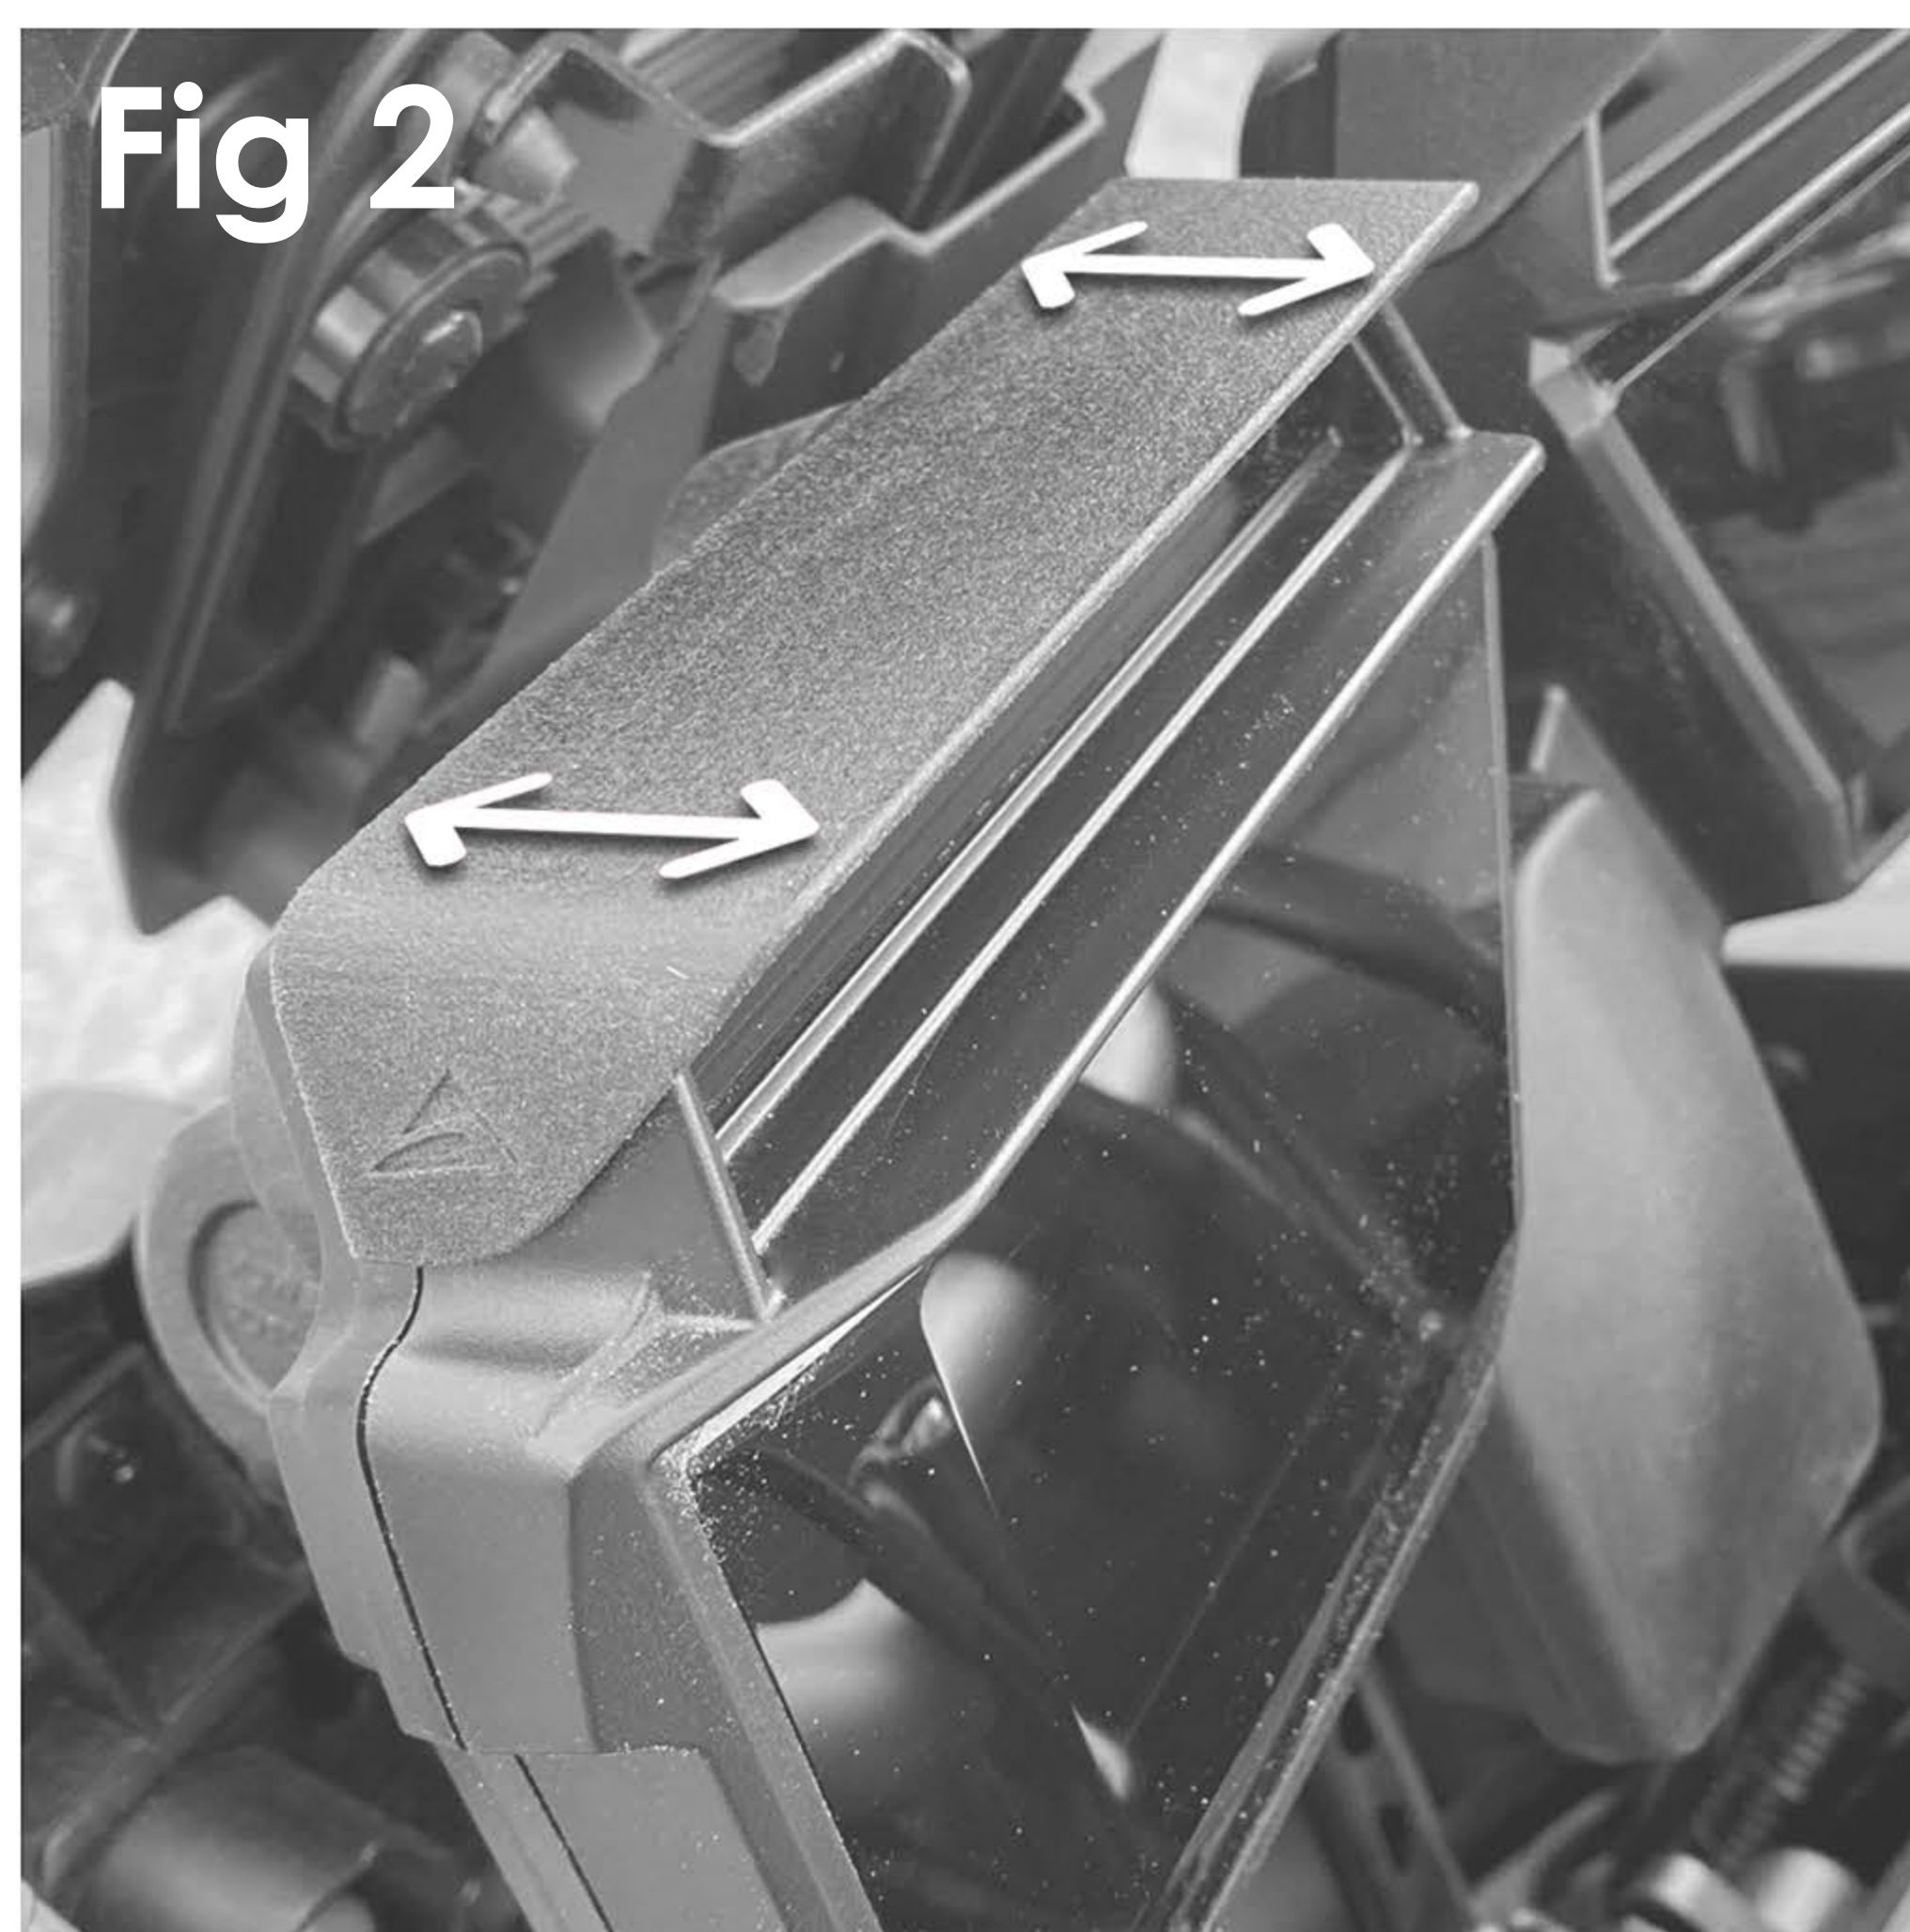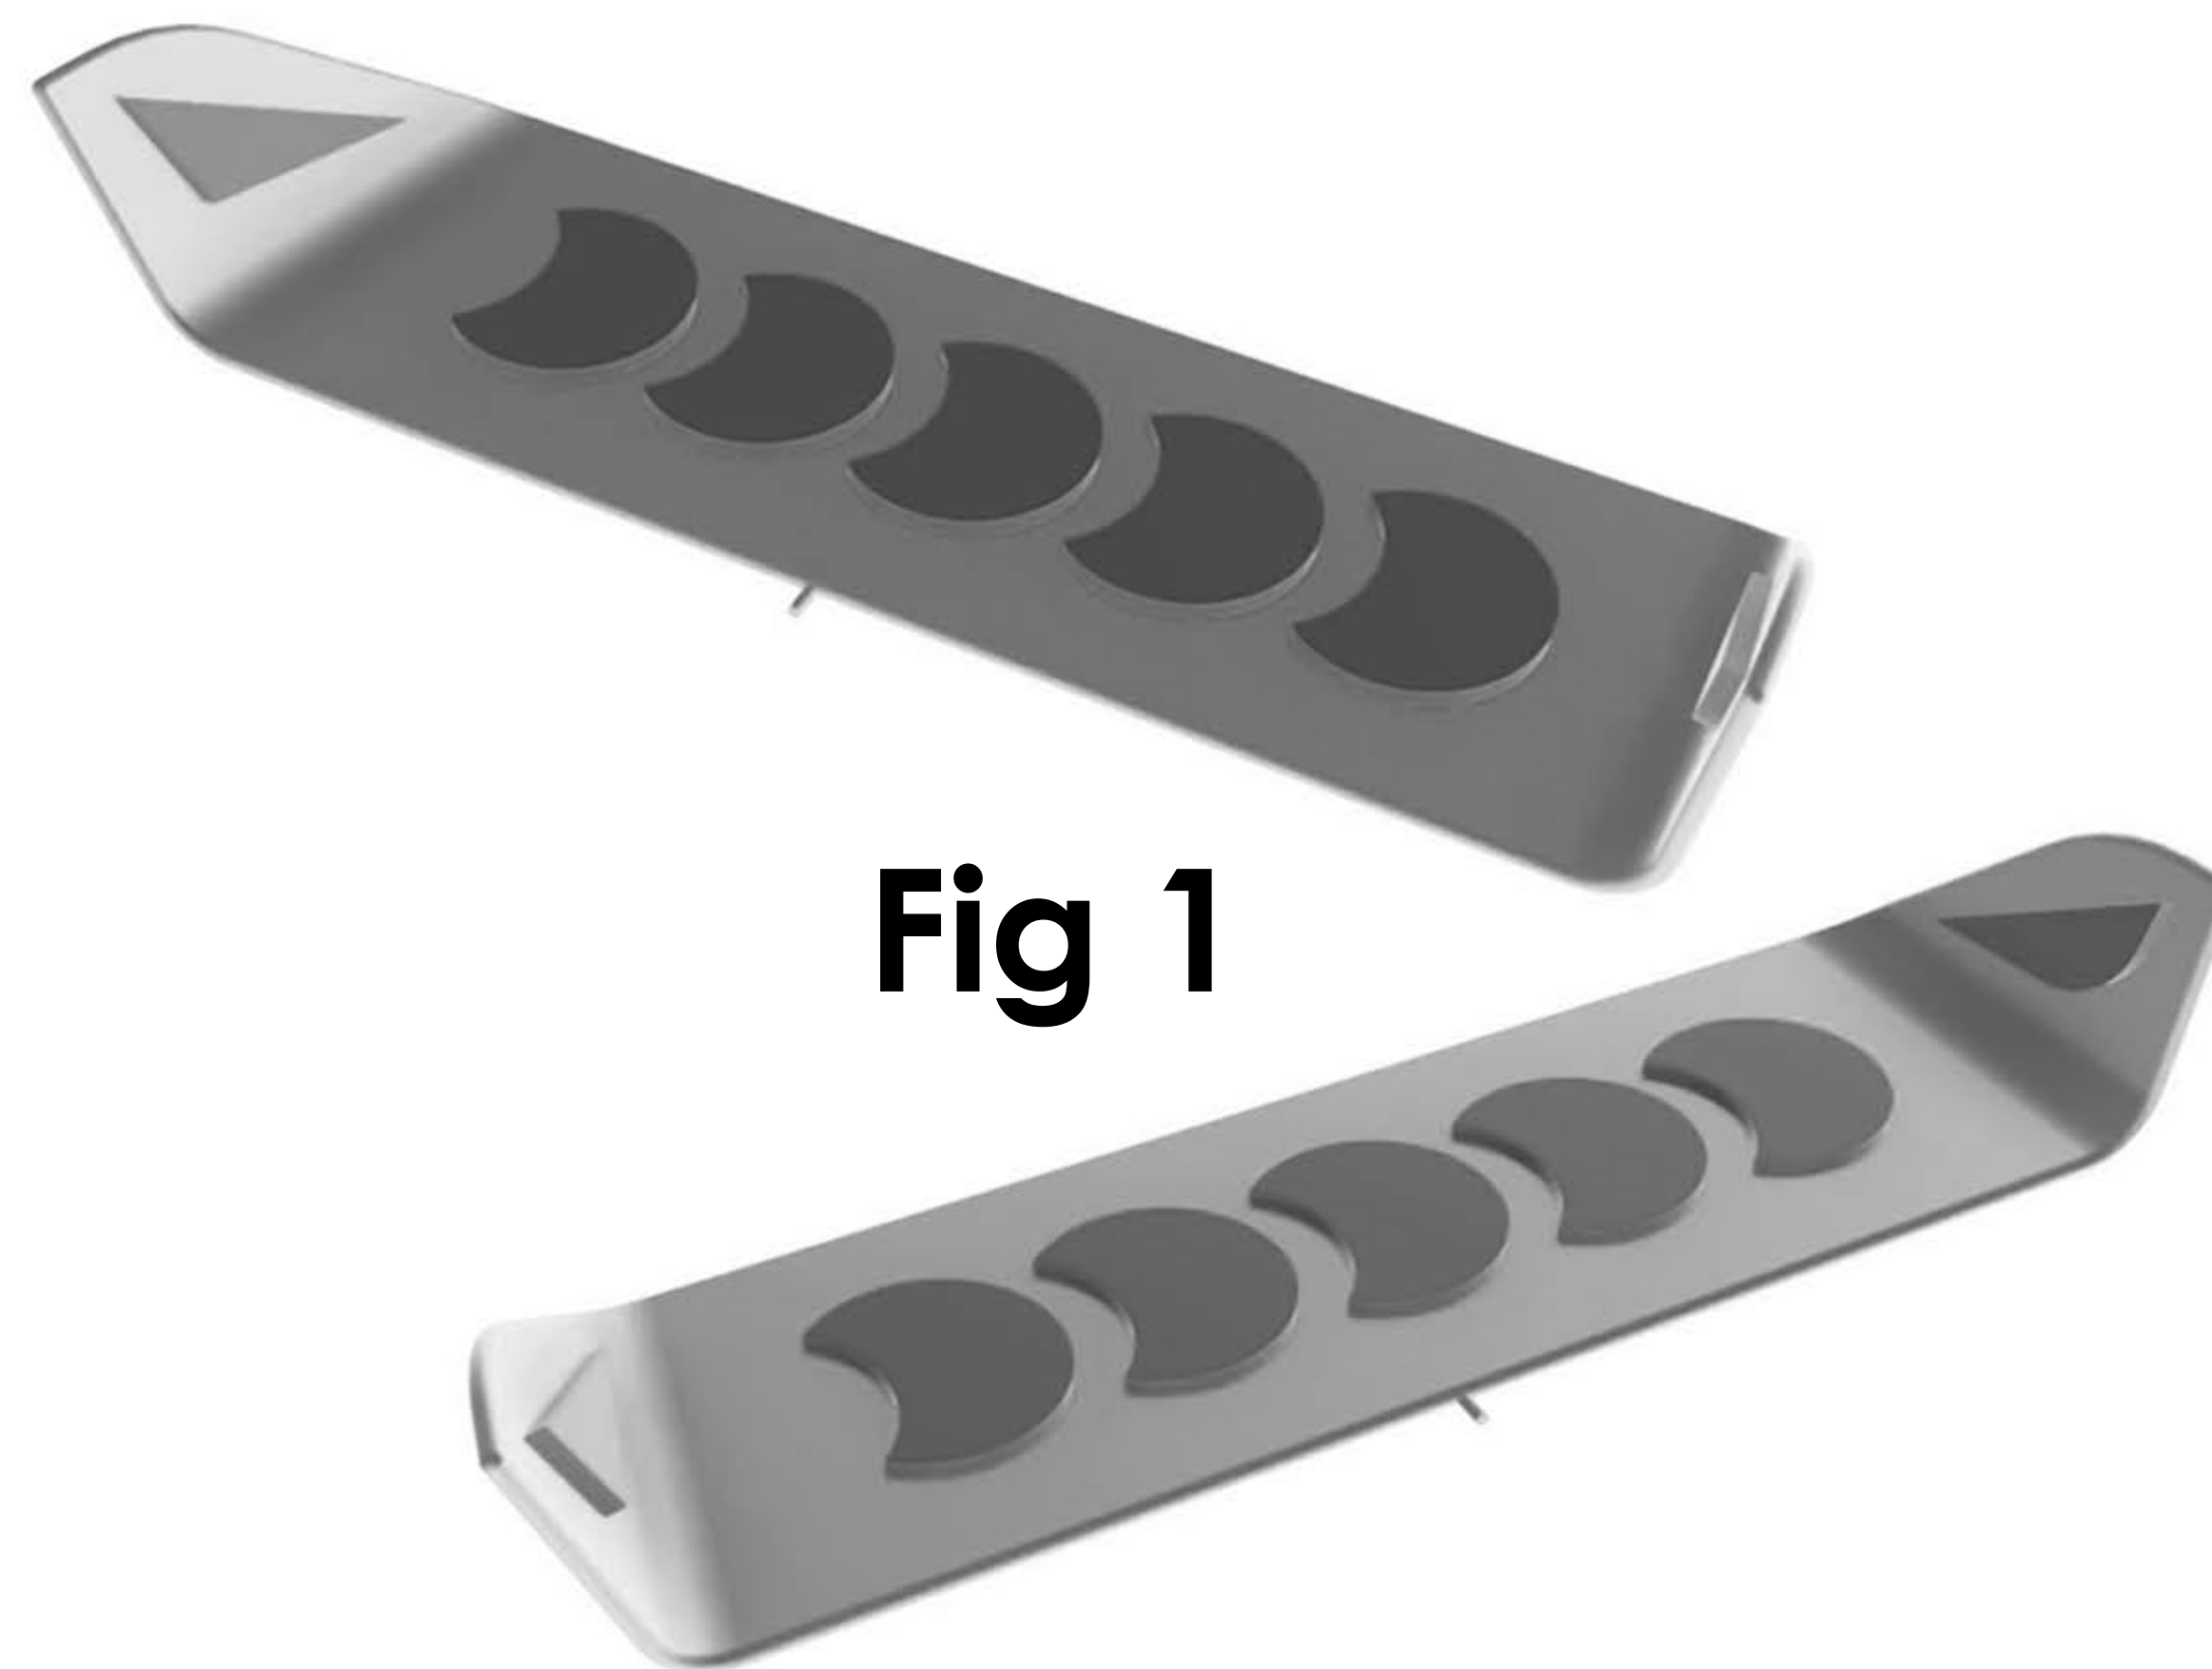

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

