


## 34901 BMW F900R & F900XR Rear Splash Protector Fitting Instructions

Kit Includes:

1X	C34901	Rear Splash Protector
4X	CBOLM50013	M5 X 20mm Black Stainless Steel Bolts
4X	CWASM50001	M5 Washers

- The Pyramid rear splash protector is simple to fit. **Remove the four bolts** from the underside of the license support and **fit the Pyramid rear splash protector to the same four mounting points using the bolts and washers supplied.**
- Check fixings periodically.

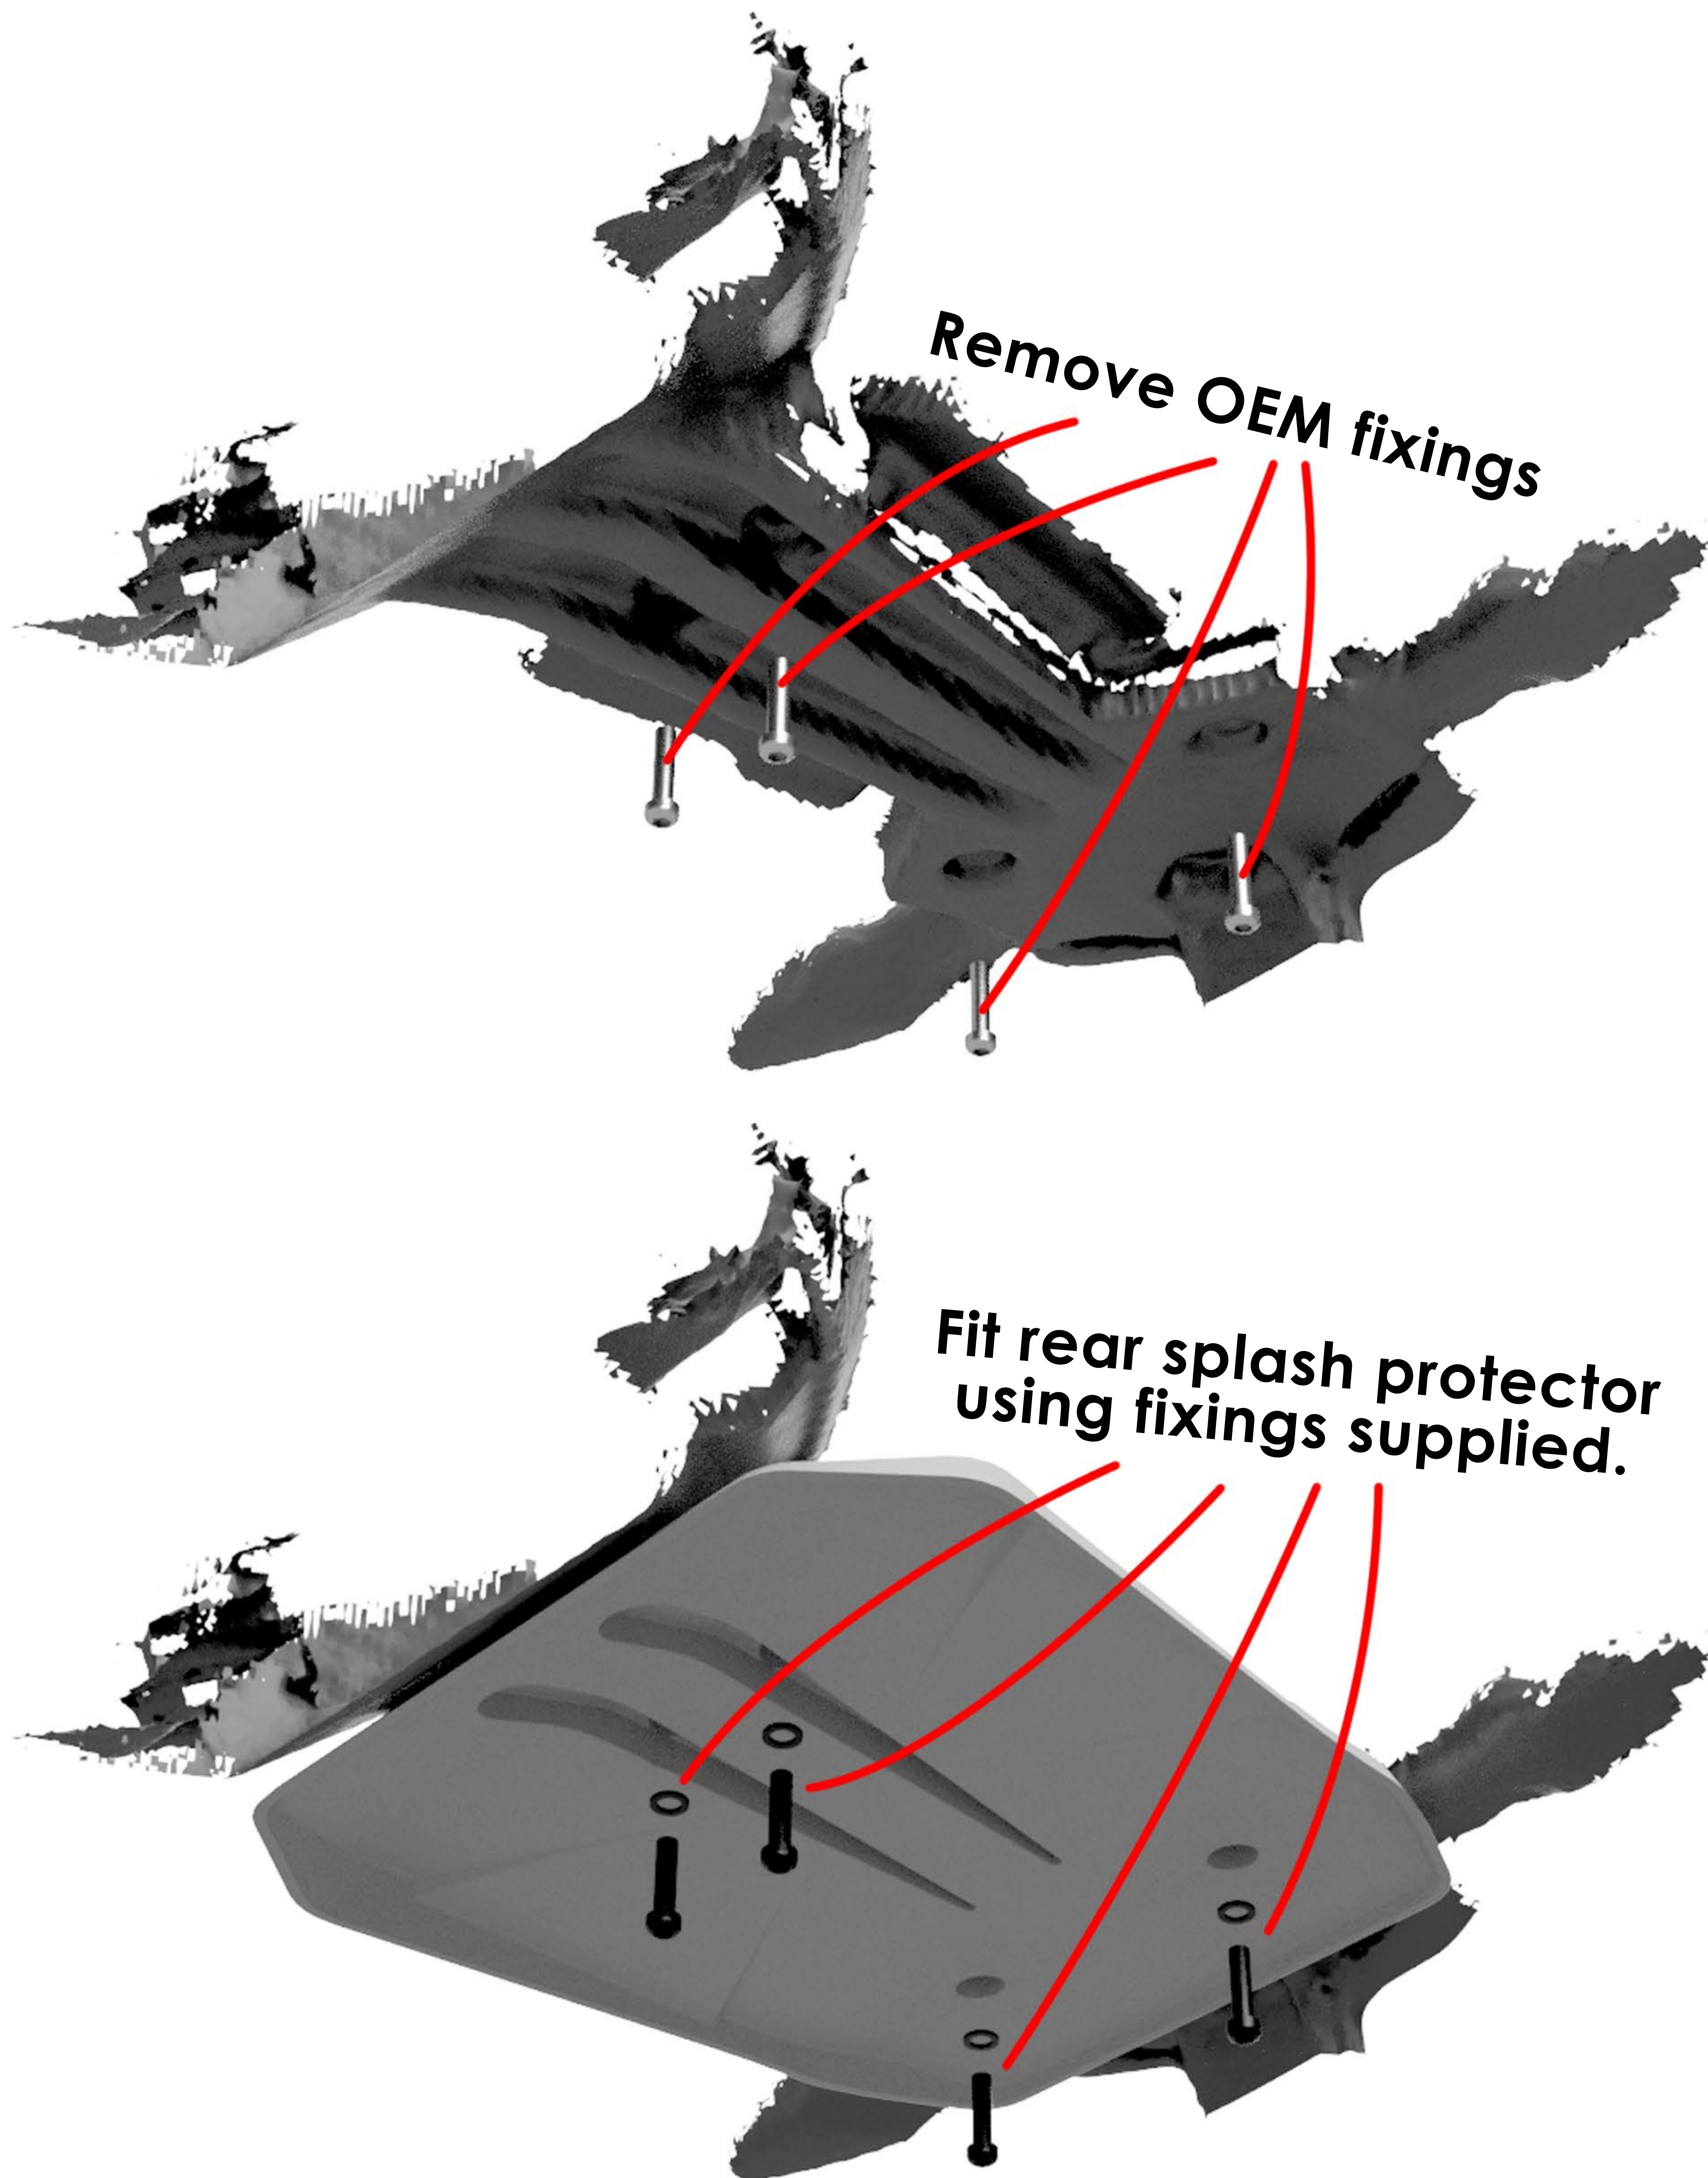

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!