

35160 Honda CB500X Horn Guard Fitting Instructions

Kit Includes:

1X	C35160	Horn Guard
3X	CRUB0006	Rubber Dot




- The Pyramid horn guard is simple to fit - remove the OEM bolt and fit the horn guard using the same OEM bolt. The rubber dots supplied can be fitted on the back of the horn guard to protect the horn.

Any questions? We're here to help!
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

OEM bolt

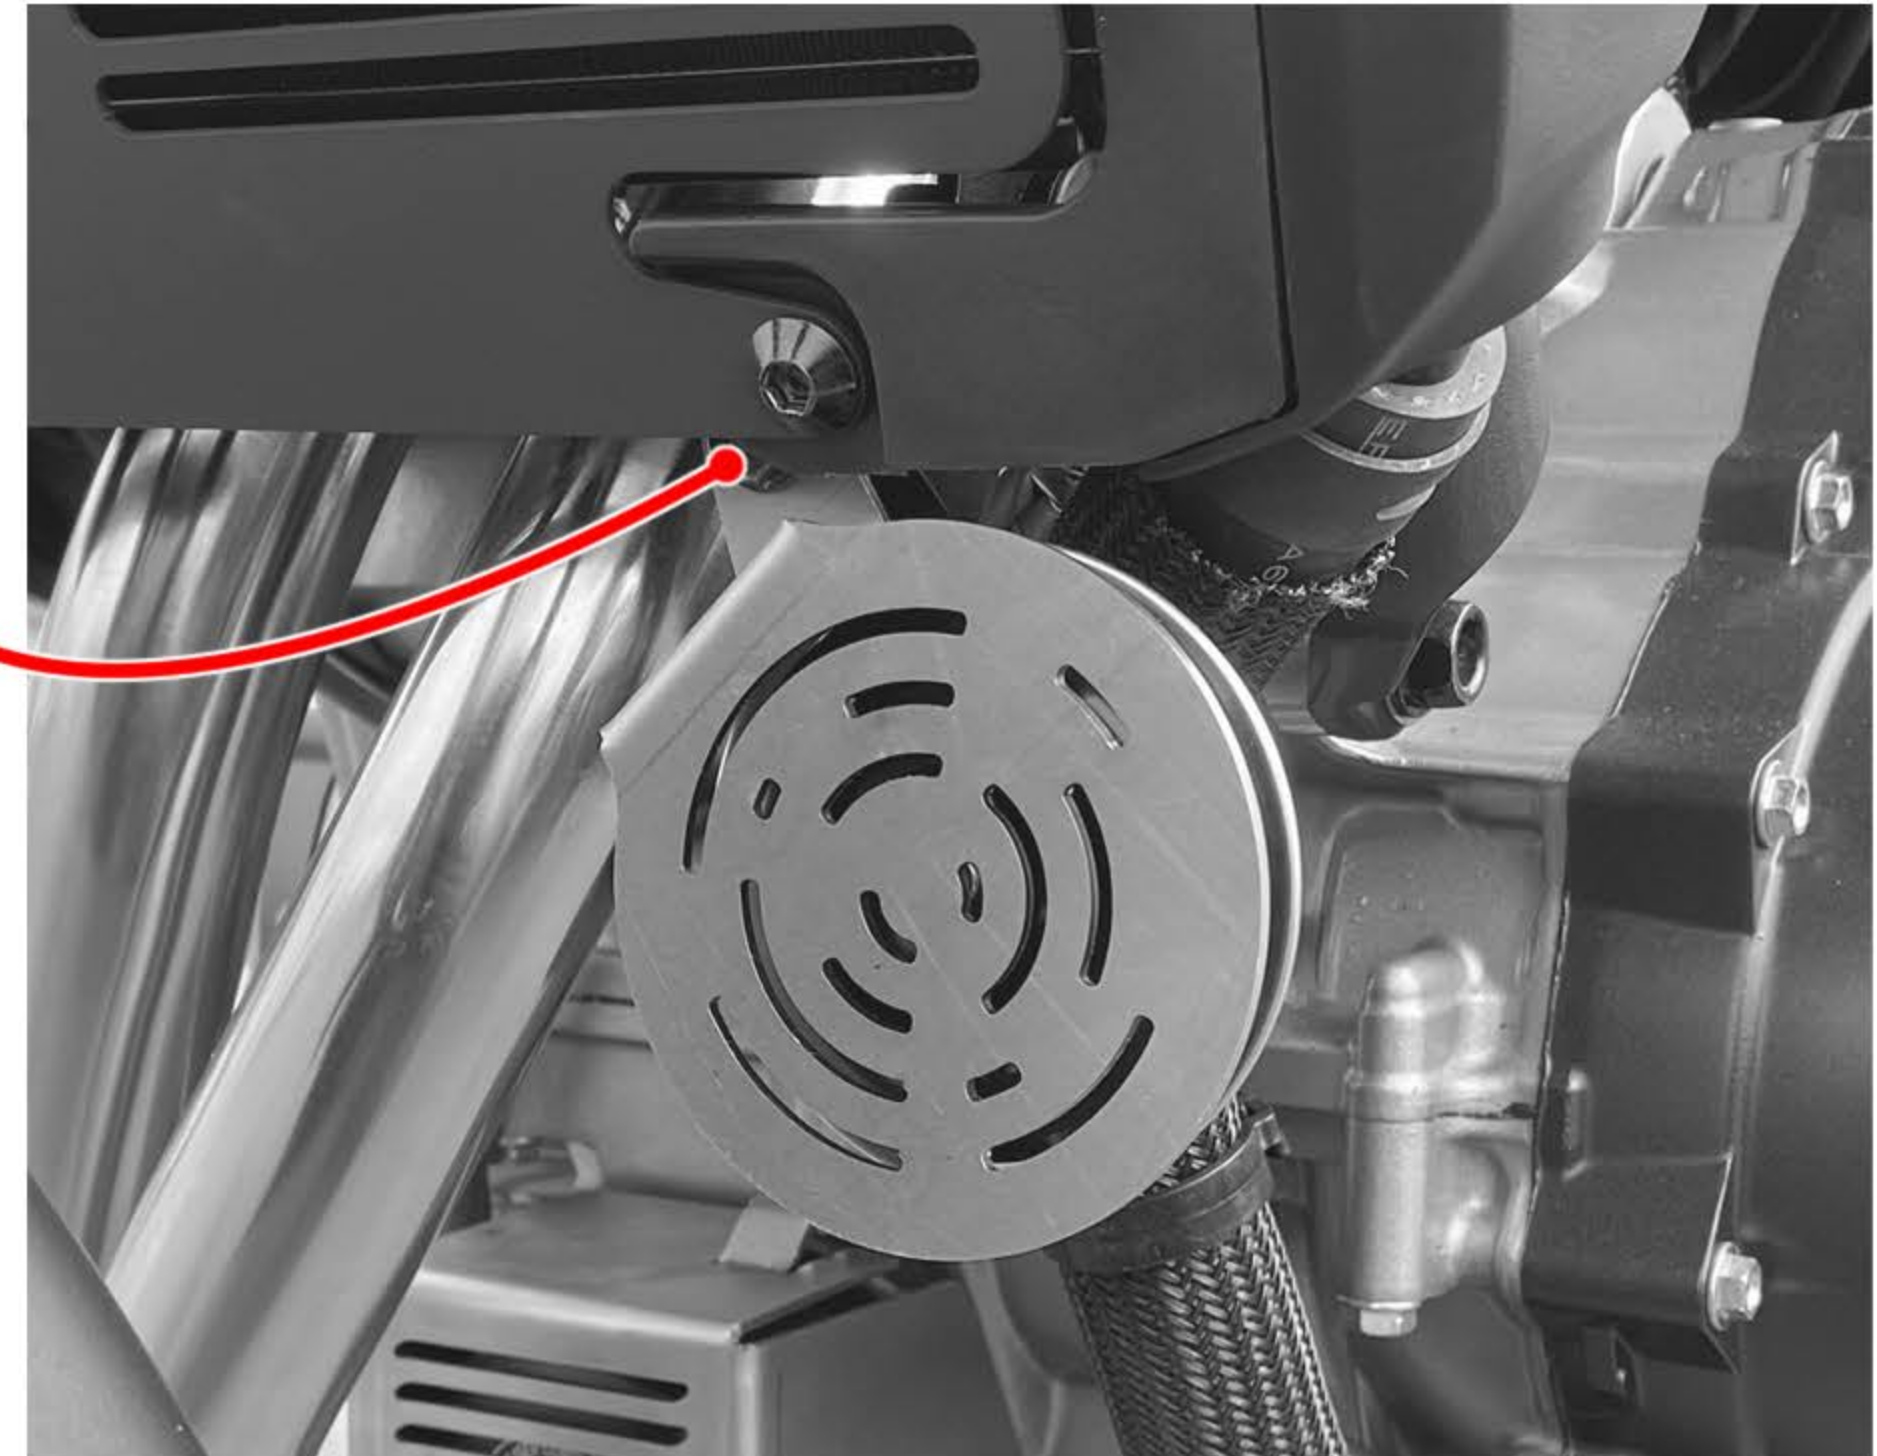

35160 Honda CB500X Horn Guard Fitting Instructions

Kit Includes:

1X	C35160	Horn Guard
3X	CRUB0006	Rubber Dot




- The Pyramid horn guard is simple to fit - remove the OEM bolt and fit the horn guard using the same OEM bolt. The rubber dots supplied can be fitted on the back of the horn guard to protect the horn.

Any questions? We're here to help!
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

OEM bolt

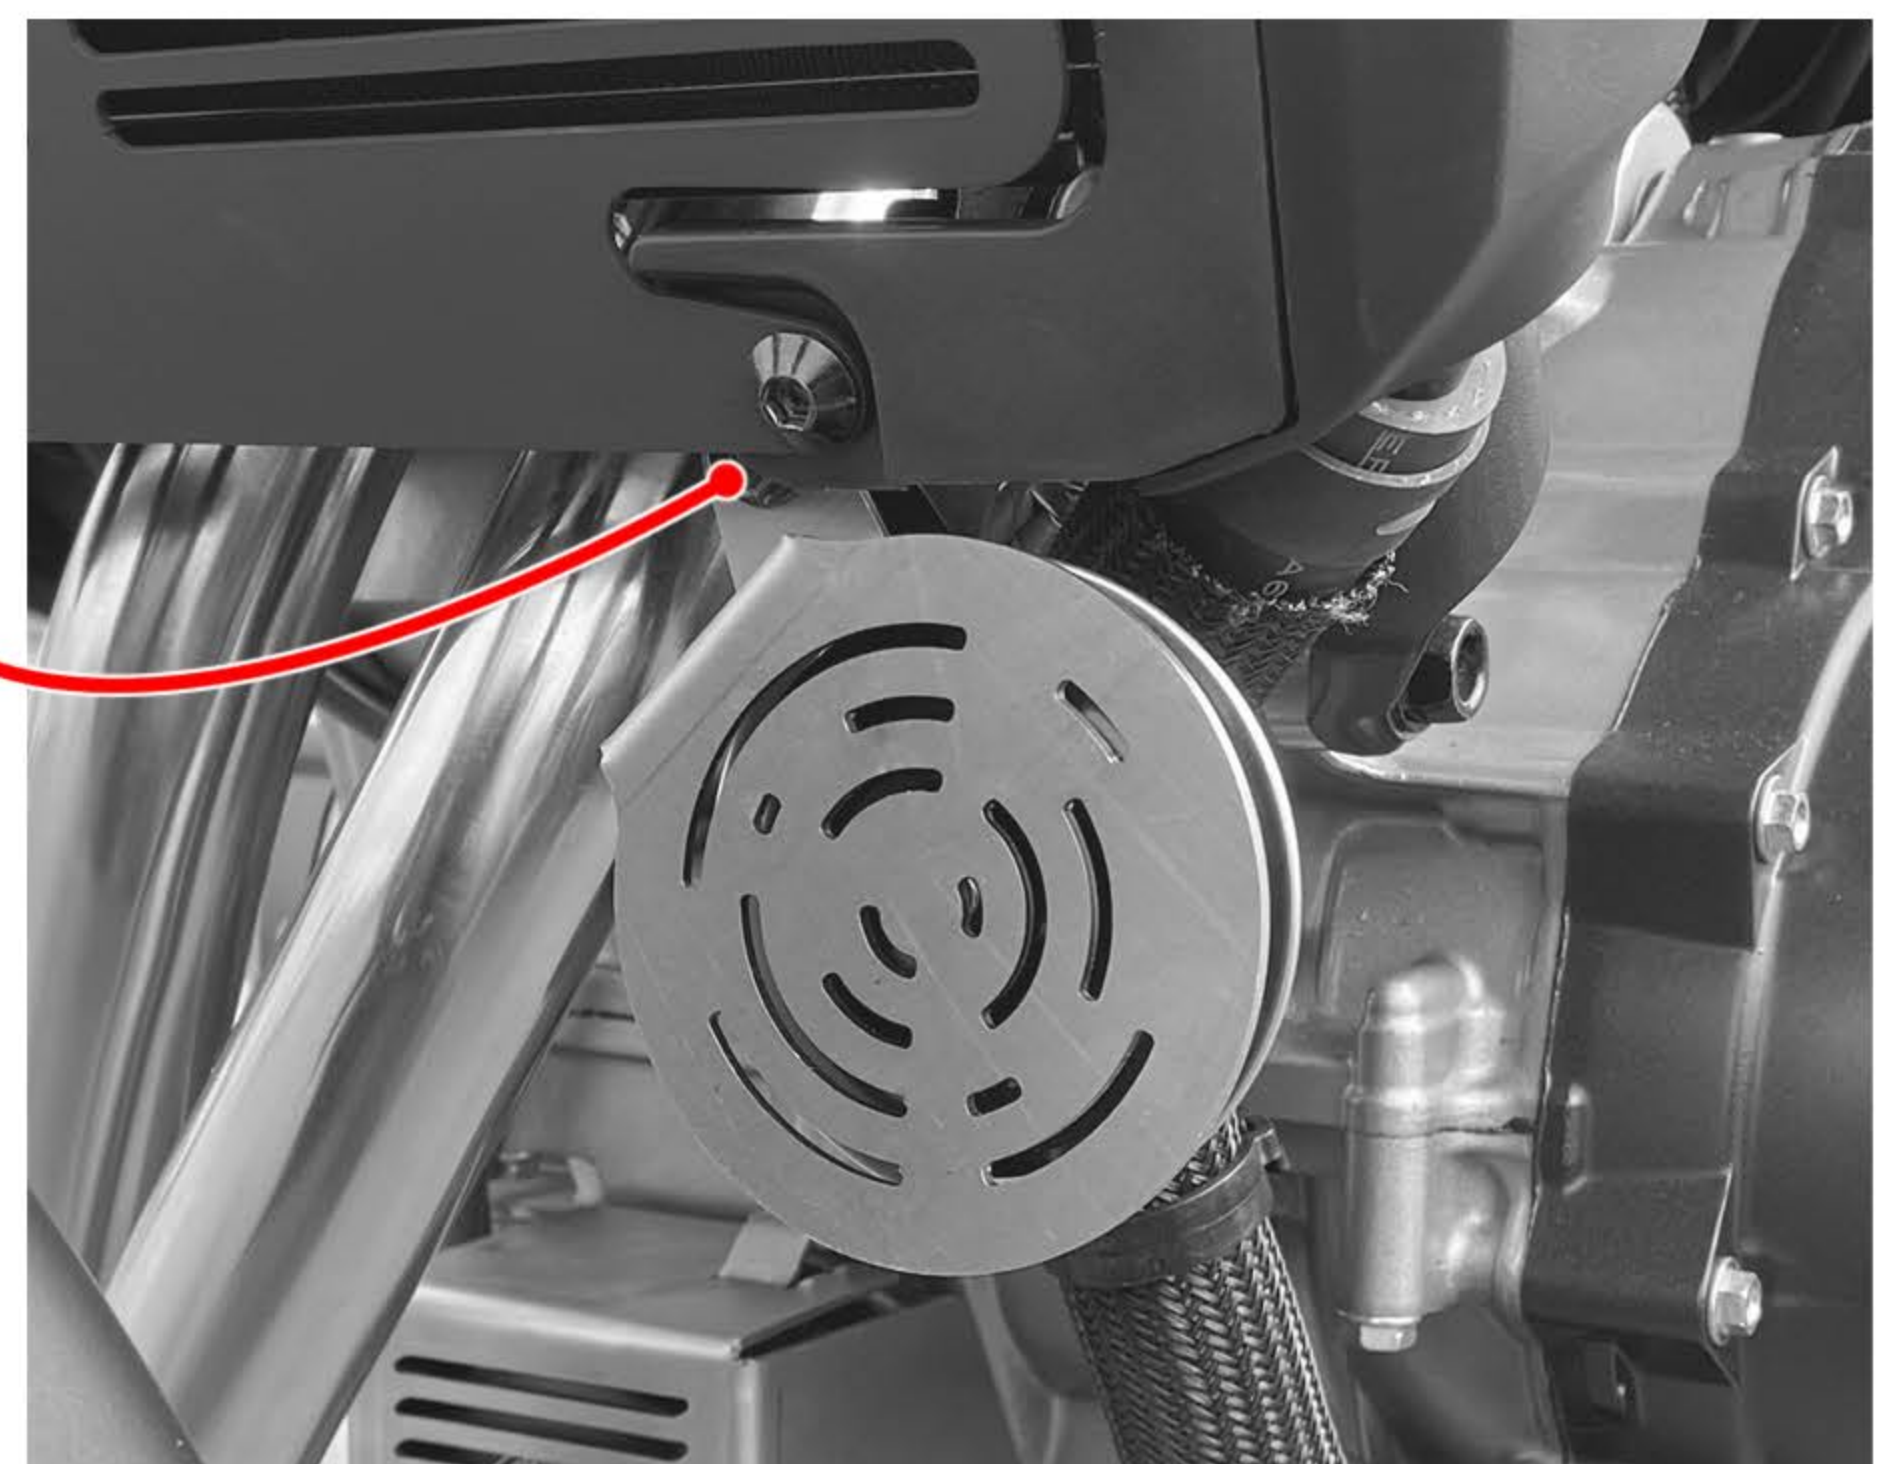

35160 Honda CB500X Horn Guard Fitting Instructions

Kit Includes:

1X	C35160	Horn Guard
3X	CRUB0006	Rubber Dot



- The Pyramid horn guard is simple to fit - remove the OEM bolt and fit the horn guard using the same OEM bolt. The rubber dots supplied can be fitted on the back of the horn guard to protect the horn.

Any questions? We're here to help!
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

OEM bolt

