


PYRAMID

35600 Triumph Tiger 900 Infill Panel Fitting Instructions

Kit includes:

1X Infill Panel C35600

- The Pyramid Infill Panel is simple to fit. Remove the two bolts holding the rear footpeg on the right-hand side. The Pyramid Infill Panel is then fitted behind the footpeg. Refit the two bolts.
- Check fixings periodically.

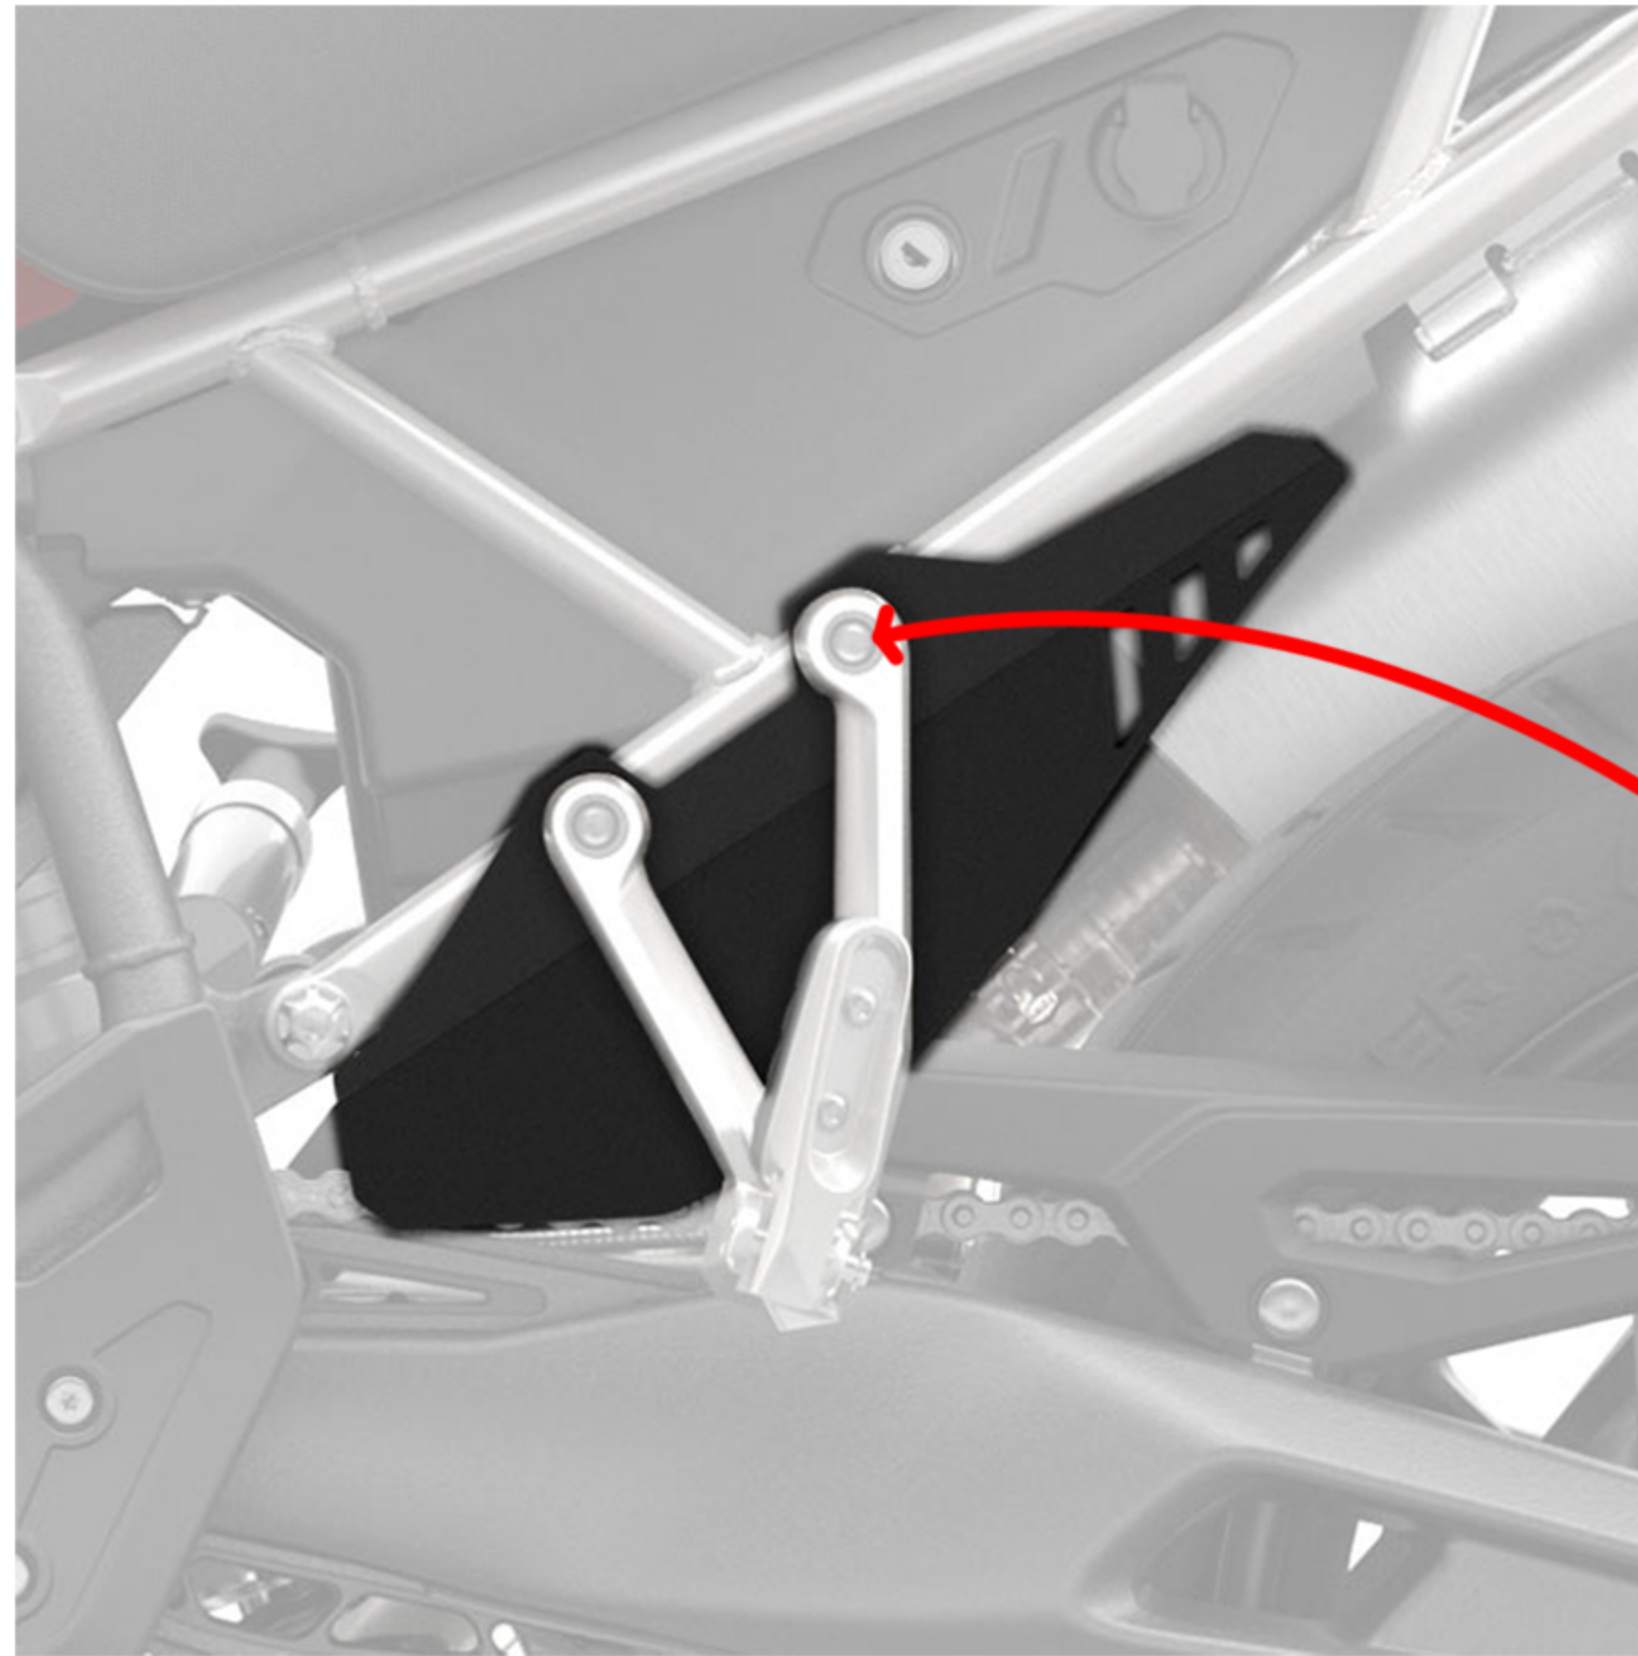

Rear footpeg
mounting bolts

Any questions?
sales@pyramid-plastics.co.uk
01427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!




PYRAMID

35600 Triumph Tiger 900 Infill Panel Fitting Instructions

Kit includes:

1X Infill Panel C35600

- The Pyramid Infill Panel is simple to fit. Remove the two bolts holding the rear footpeg on the right-hand side. The Pyramid Infill Panel is then fitted behind the footpeg. Refit the two bolts.
- Check fixings periodically.

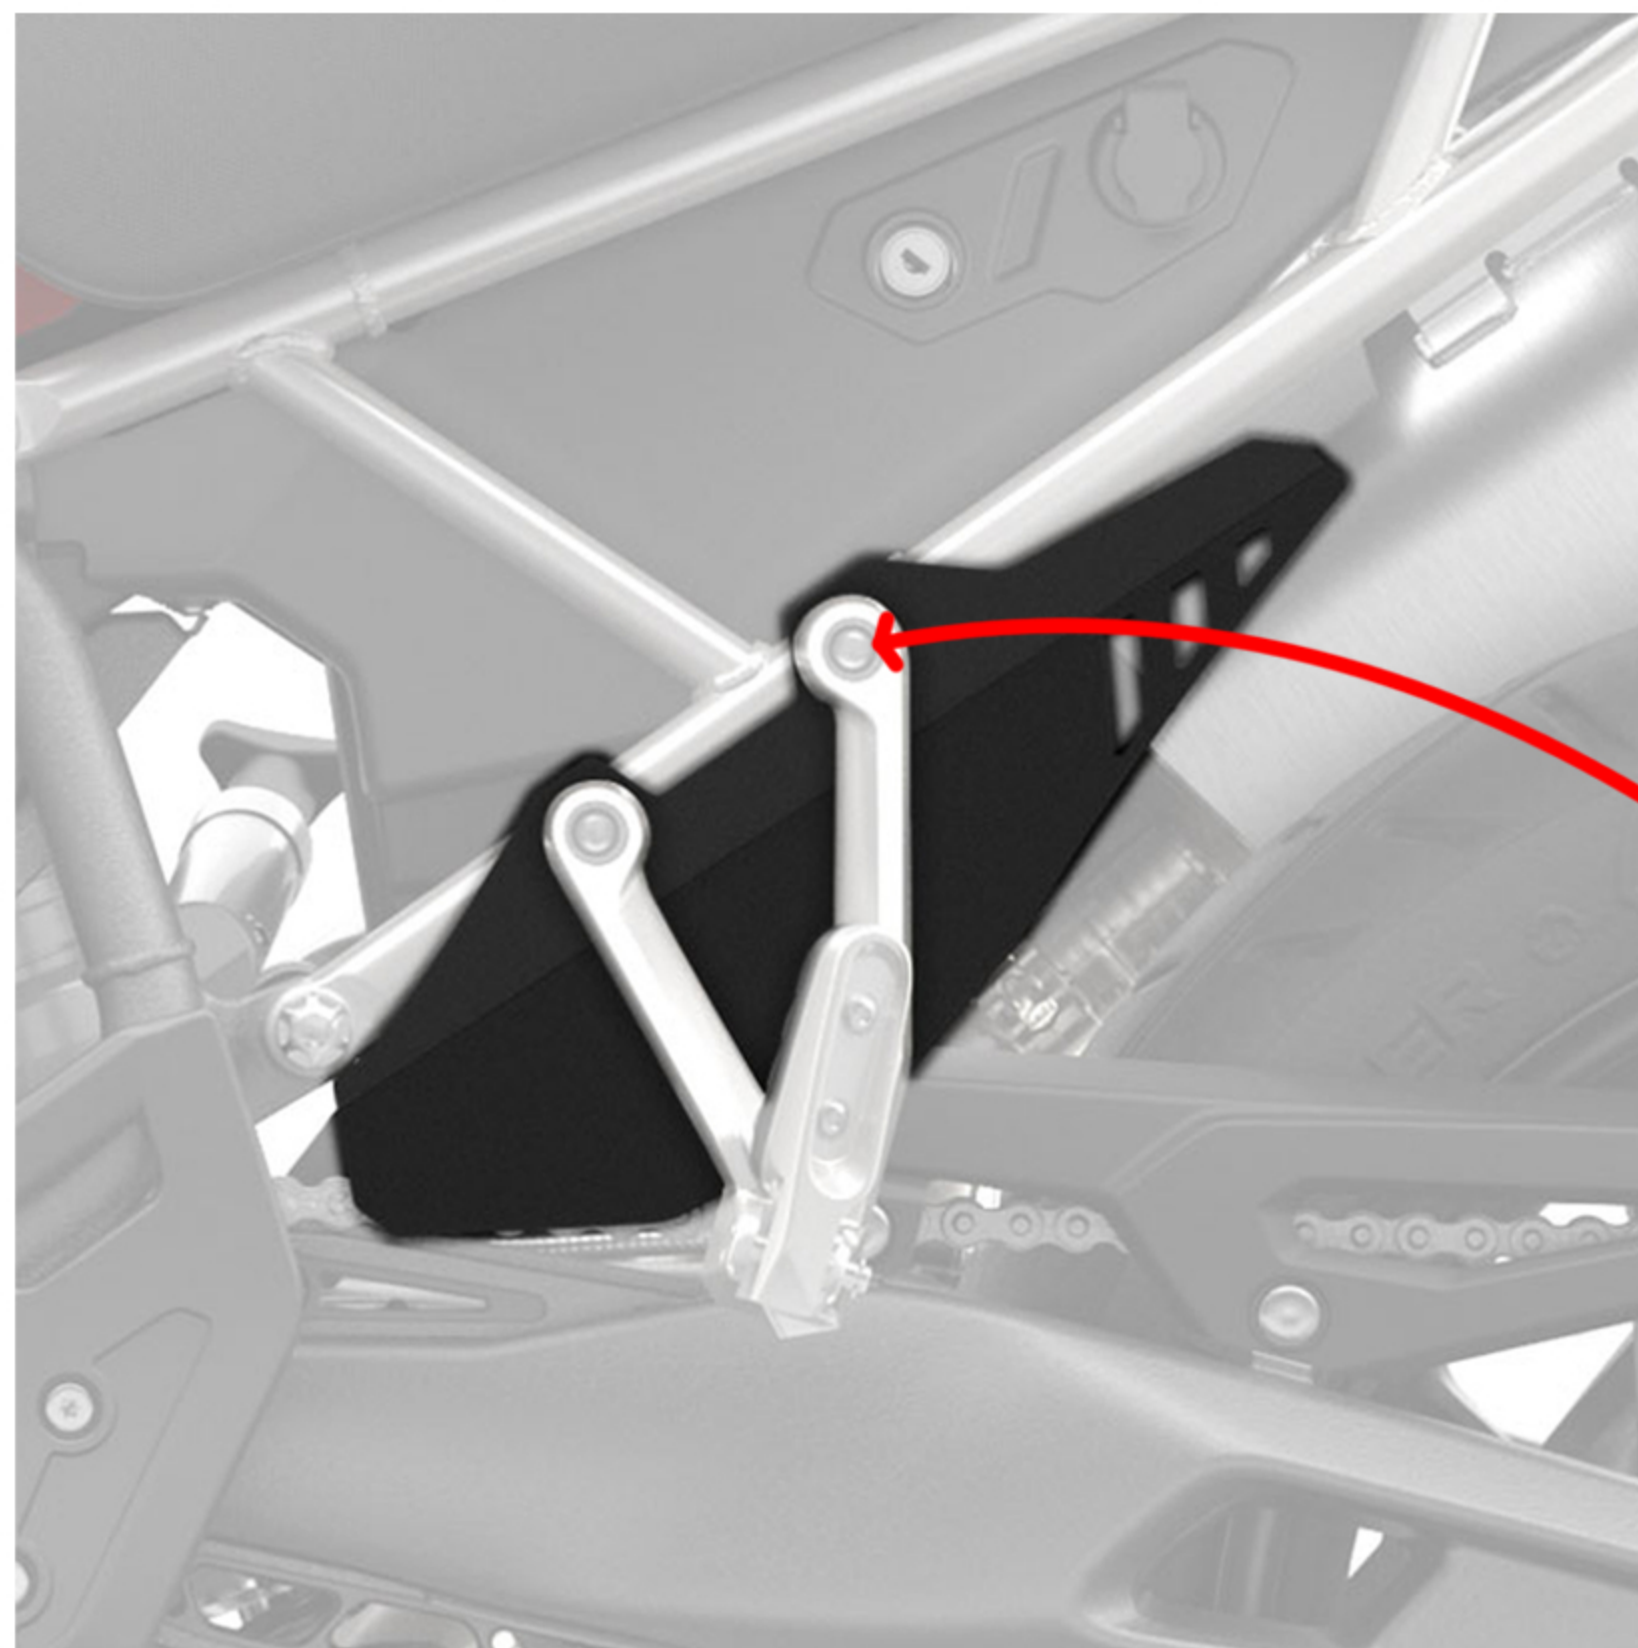

Rear footpeg
mounting bolts

Any questions?
sales@pyramid-plastics.co.uk
01427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

