




35850 Harley Davidson Pan America 1250 Infill Panels Fitting Instructions

Kit Includes:

2X C35850 Infill Panels (pair)

- The Pyramid infill panels are easy to fit. Simply remove the pillion footpegs and refit them with the infill panels in place (right-hand side of the bike shown in the image below).
- Check fixings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

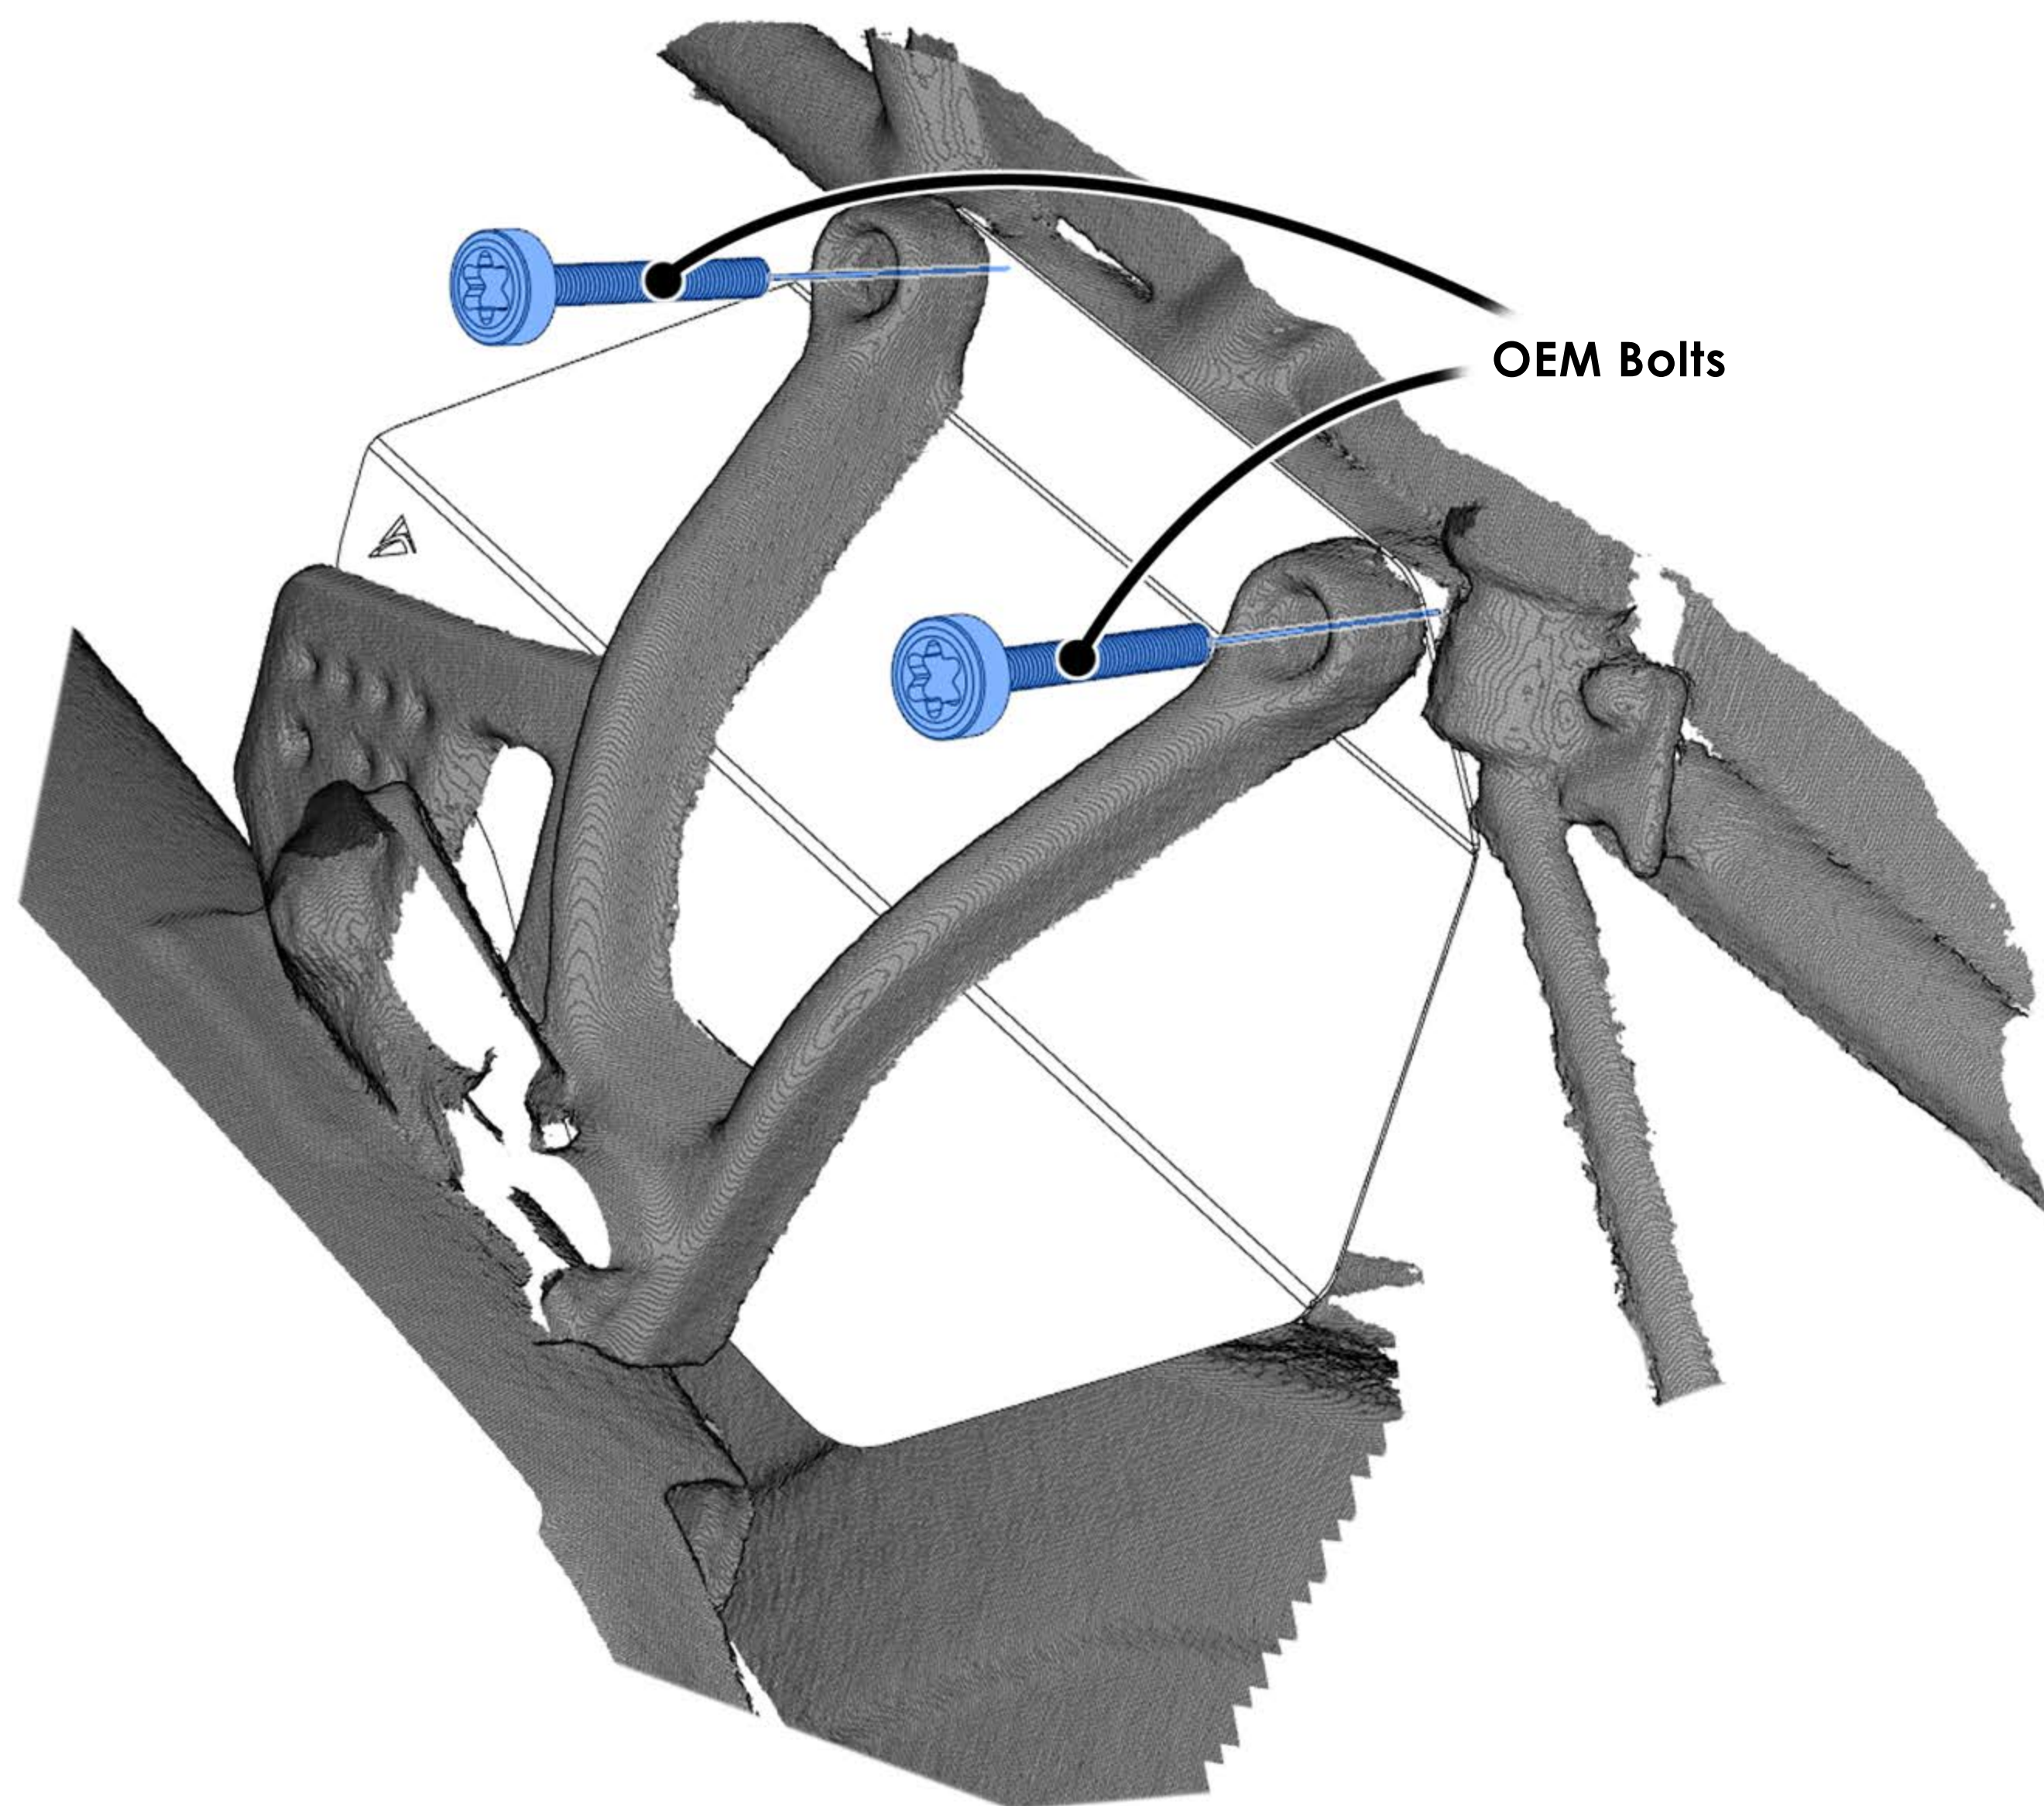

Illustrations and pictures are always clearer on our web version!




35850 Harley Davidson Pan America 1250 Infill Panels Fitting Instructions

Kit Includes:

2X C35850 Infill Panels (pair)

- The Pyramid infill panels are easy to fit. Simply remove the pillion footpegs and refit them with the infill panels in place (right-hand side of the bike shown in the image below).
- Check fixings periodically.

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

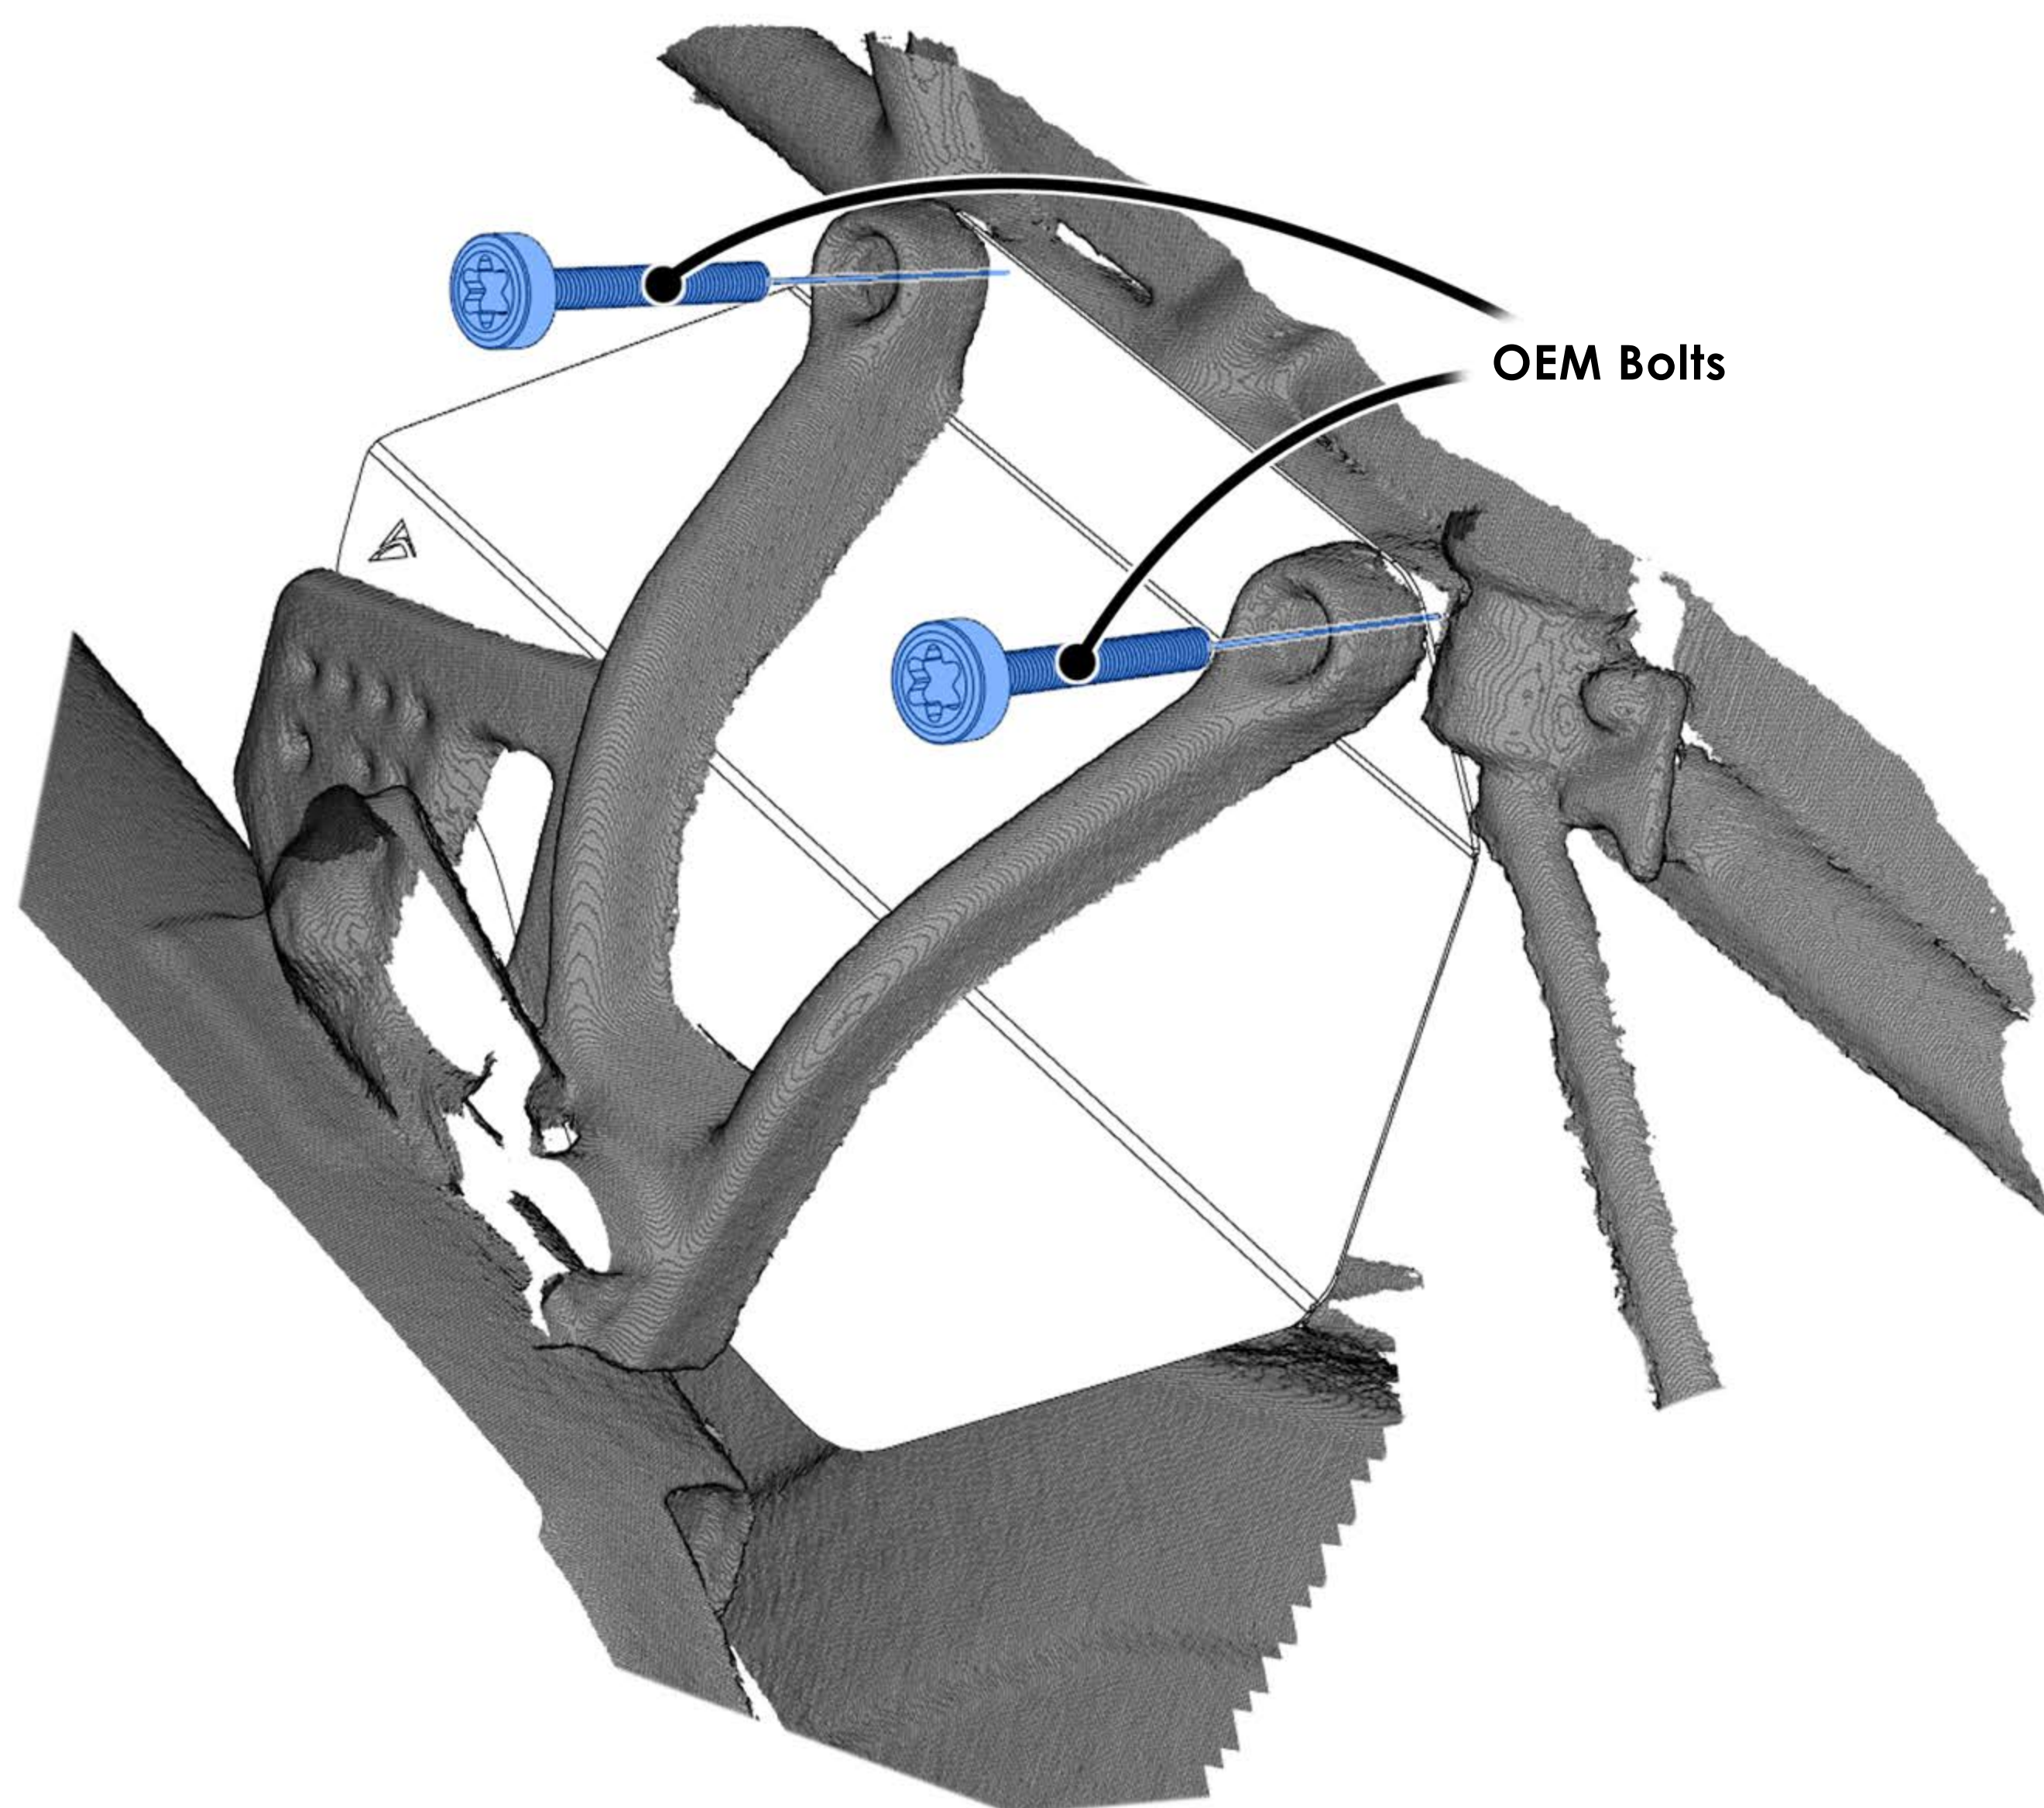

Illustrations and pictures are always clearer on our web version!