

36540 Triumph Tiger 1200 Lower Deflectors Fitting Instructions

Kit Includes:

2X	C36540	Lower Deflectors
2X	CFK36540	Brackets
4X	CBOLM60008	M6 x 16mm Flanged Bolt
4X	CWASM60003	M6 Washer
4X	CPNUT0001 <small>Pre-fitted by Pyramid</small>	Aluminium Nut





Pyramid advise the use of thread-locking fluid on all mountings.

The Pyramid lower deflectors are simple to fit.

Attach the brackets supplied using the OEM bolts on the bike (see **Fig 1** for LHS & **Fig 2** for RHS).

Fit the deflector plates to the brackets using the fittings supplied (see **Fig 3** for LHS & **4** for RHS).

Check fittings periodically.

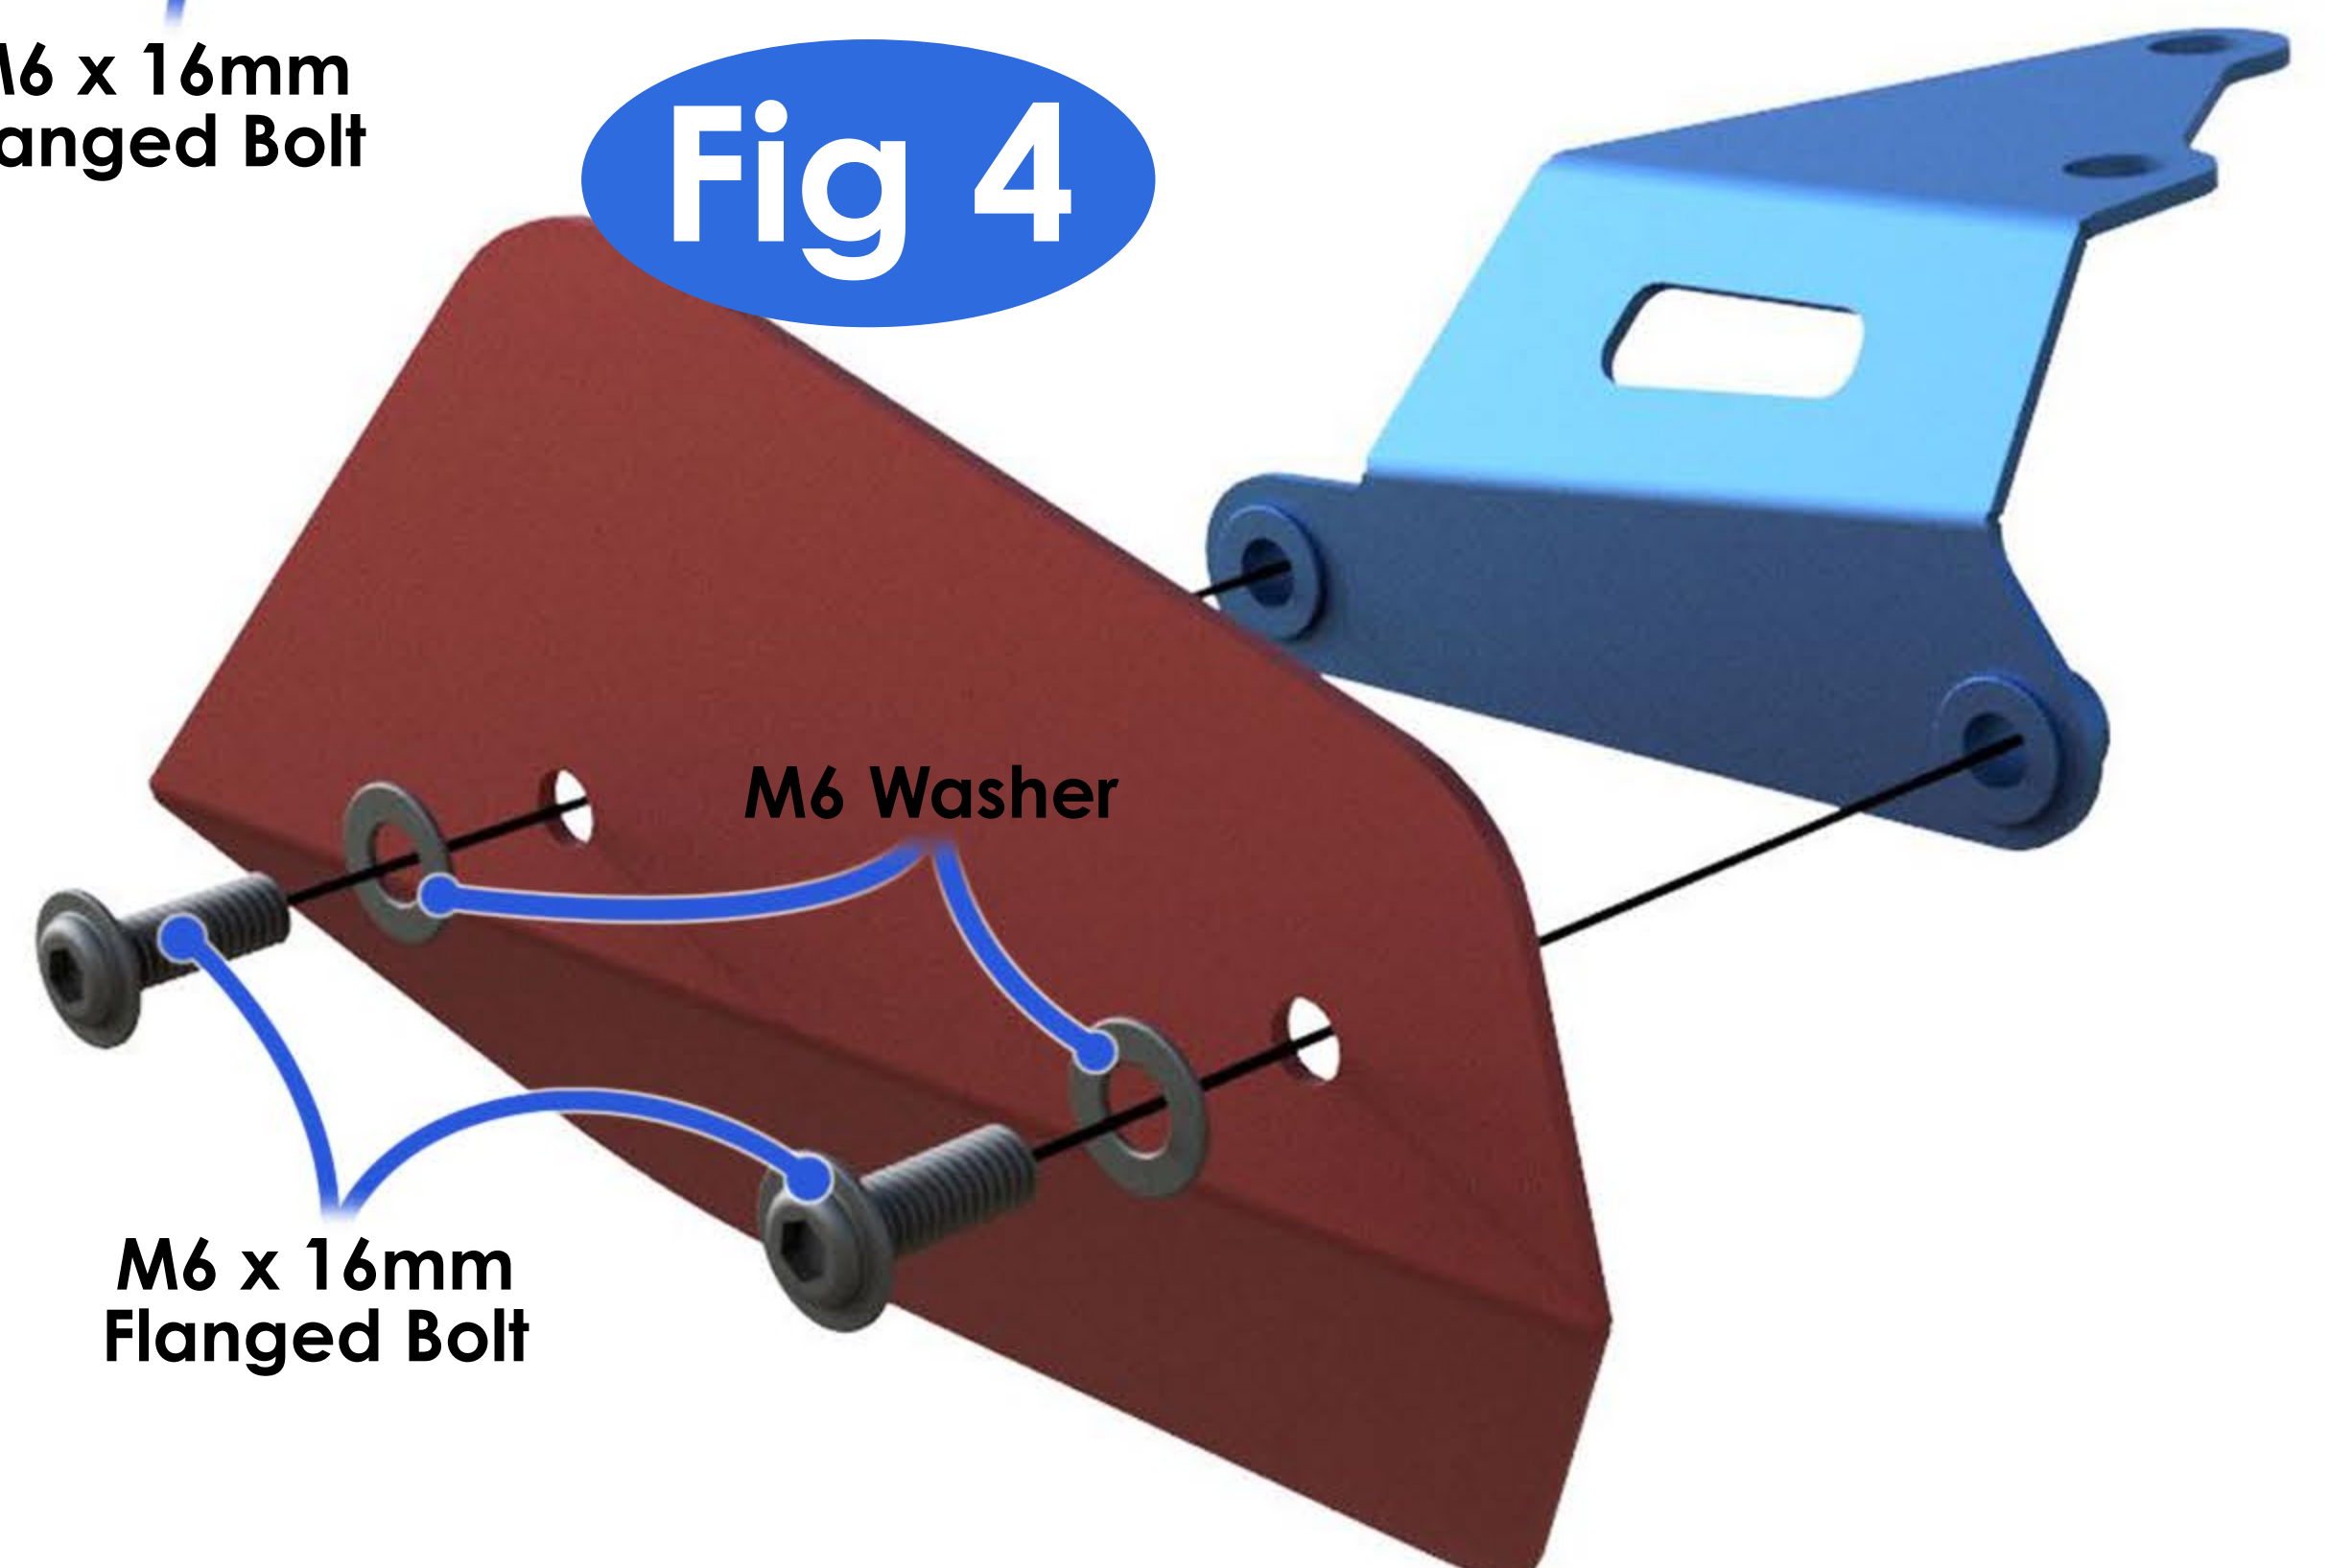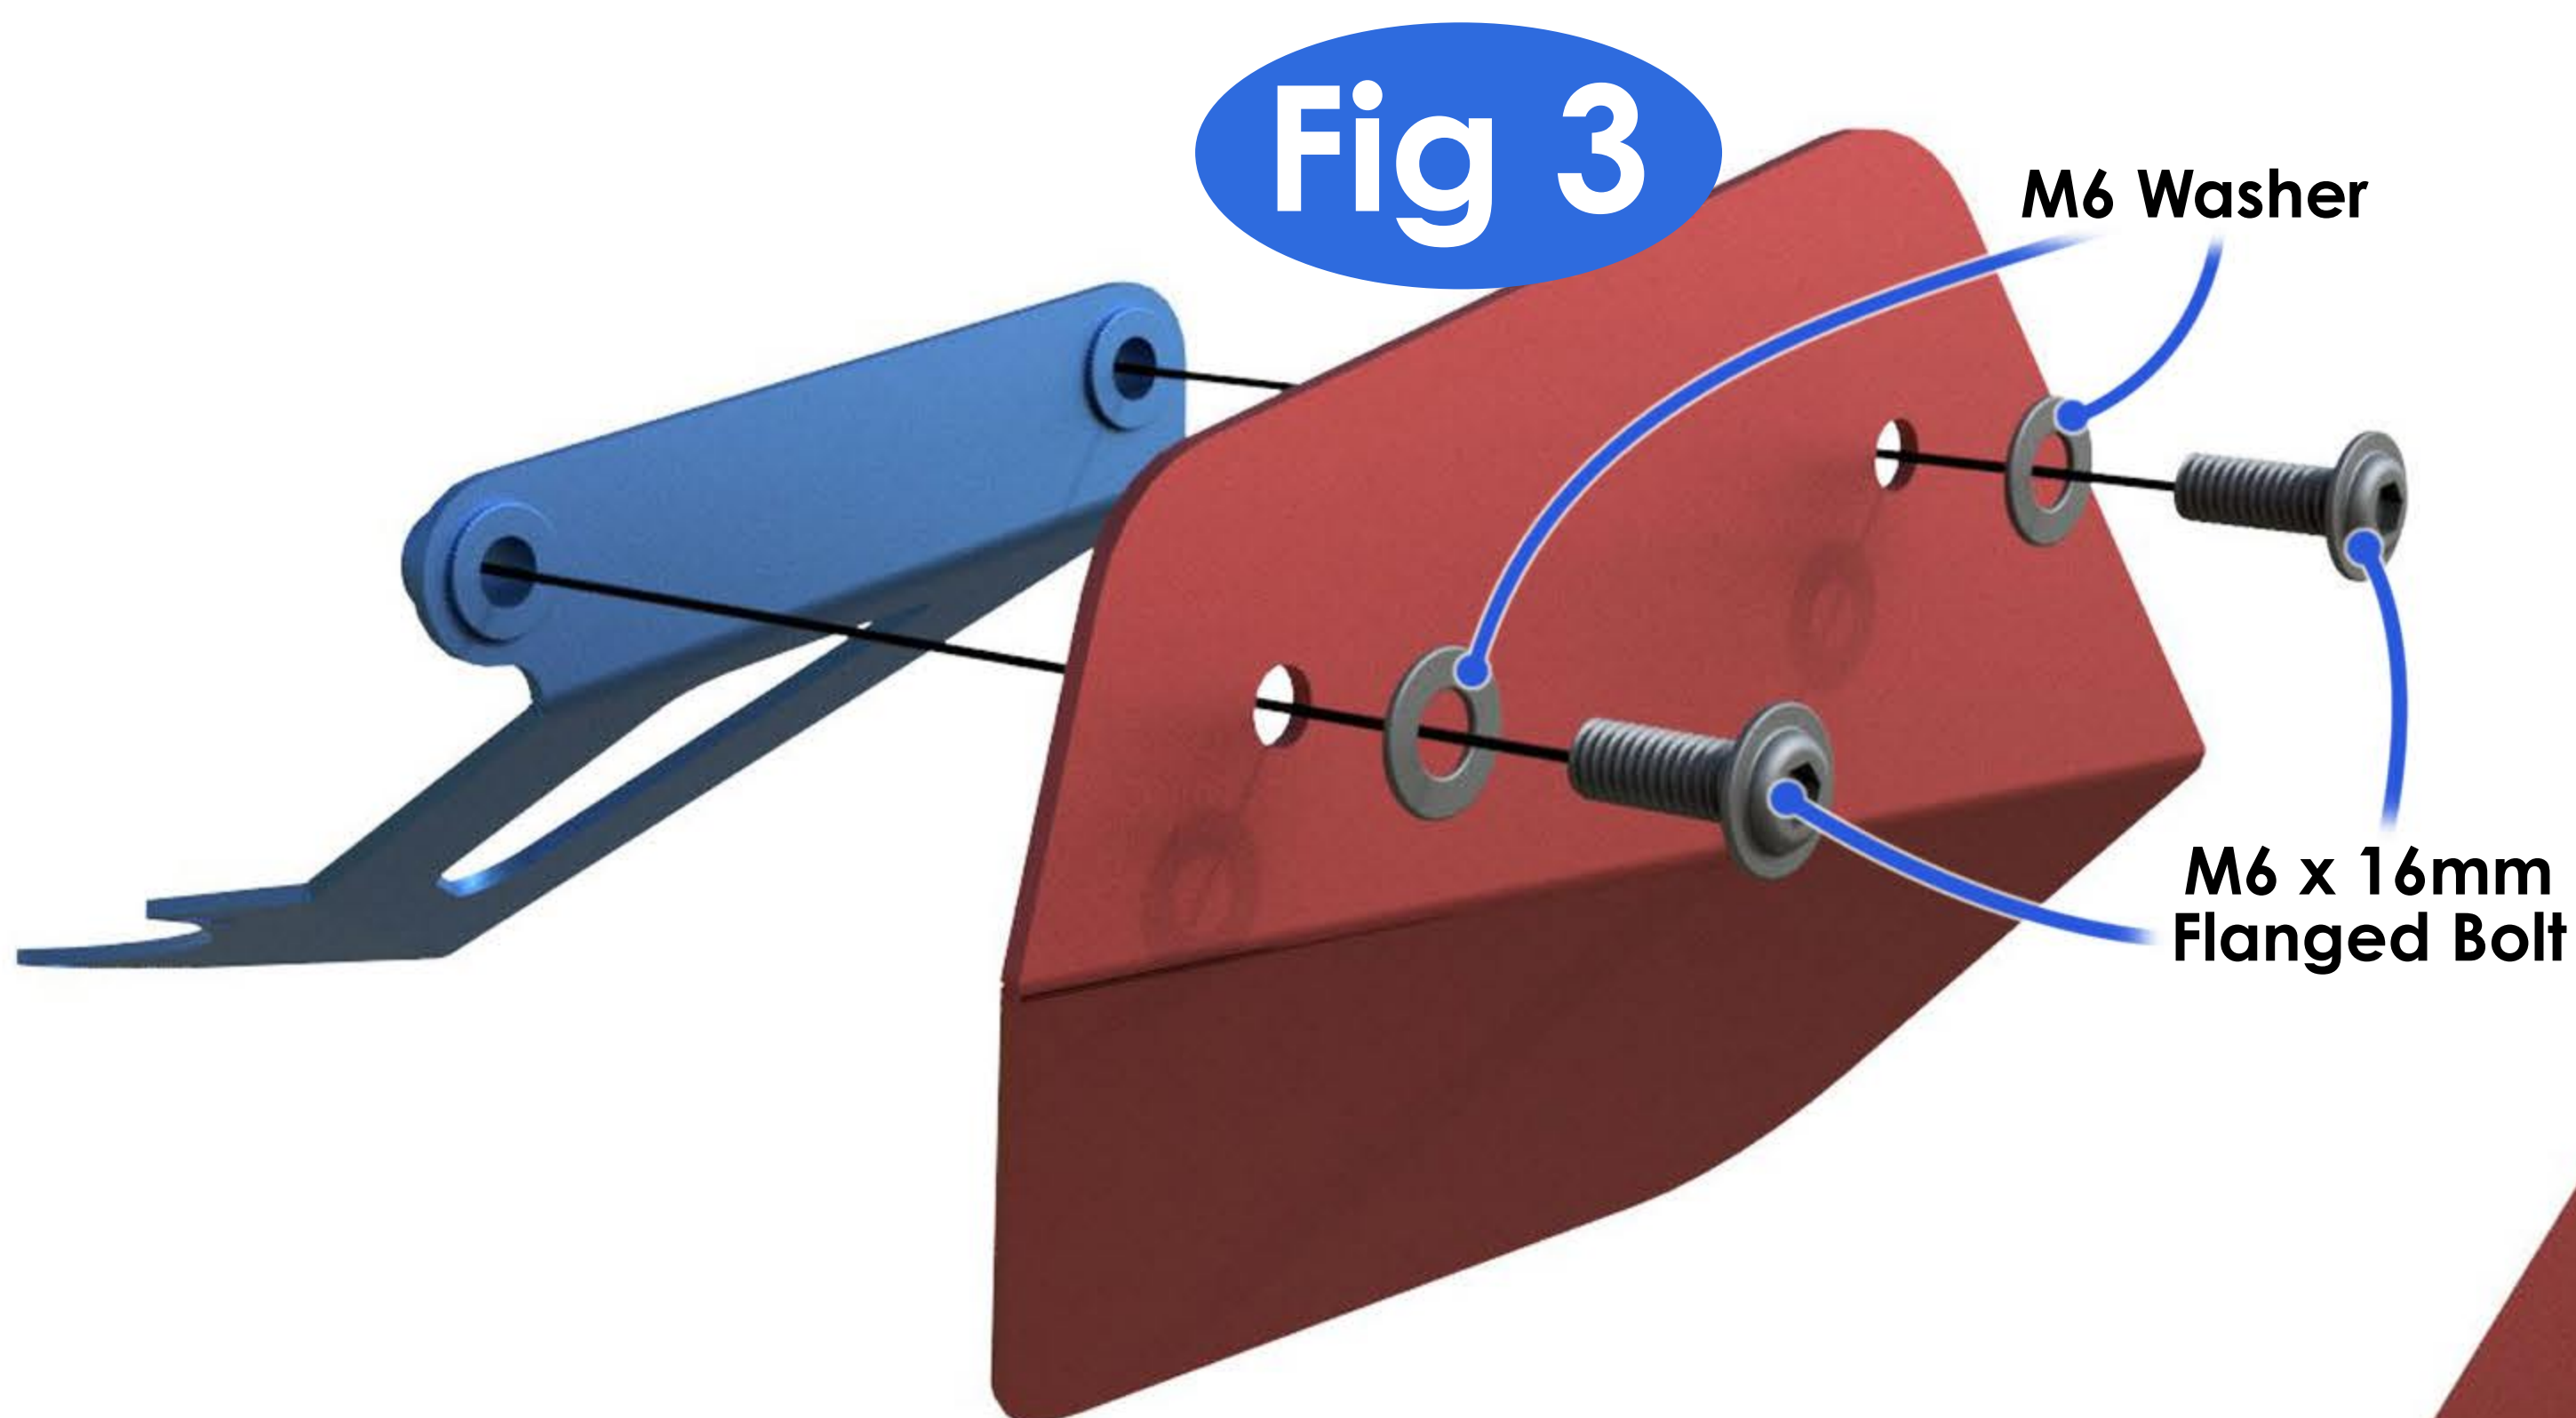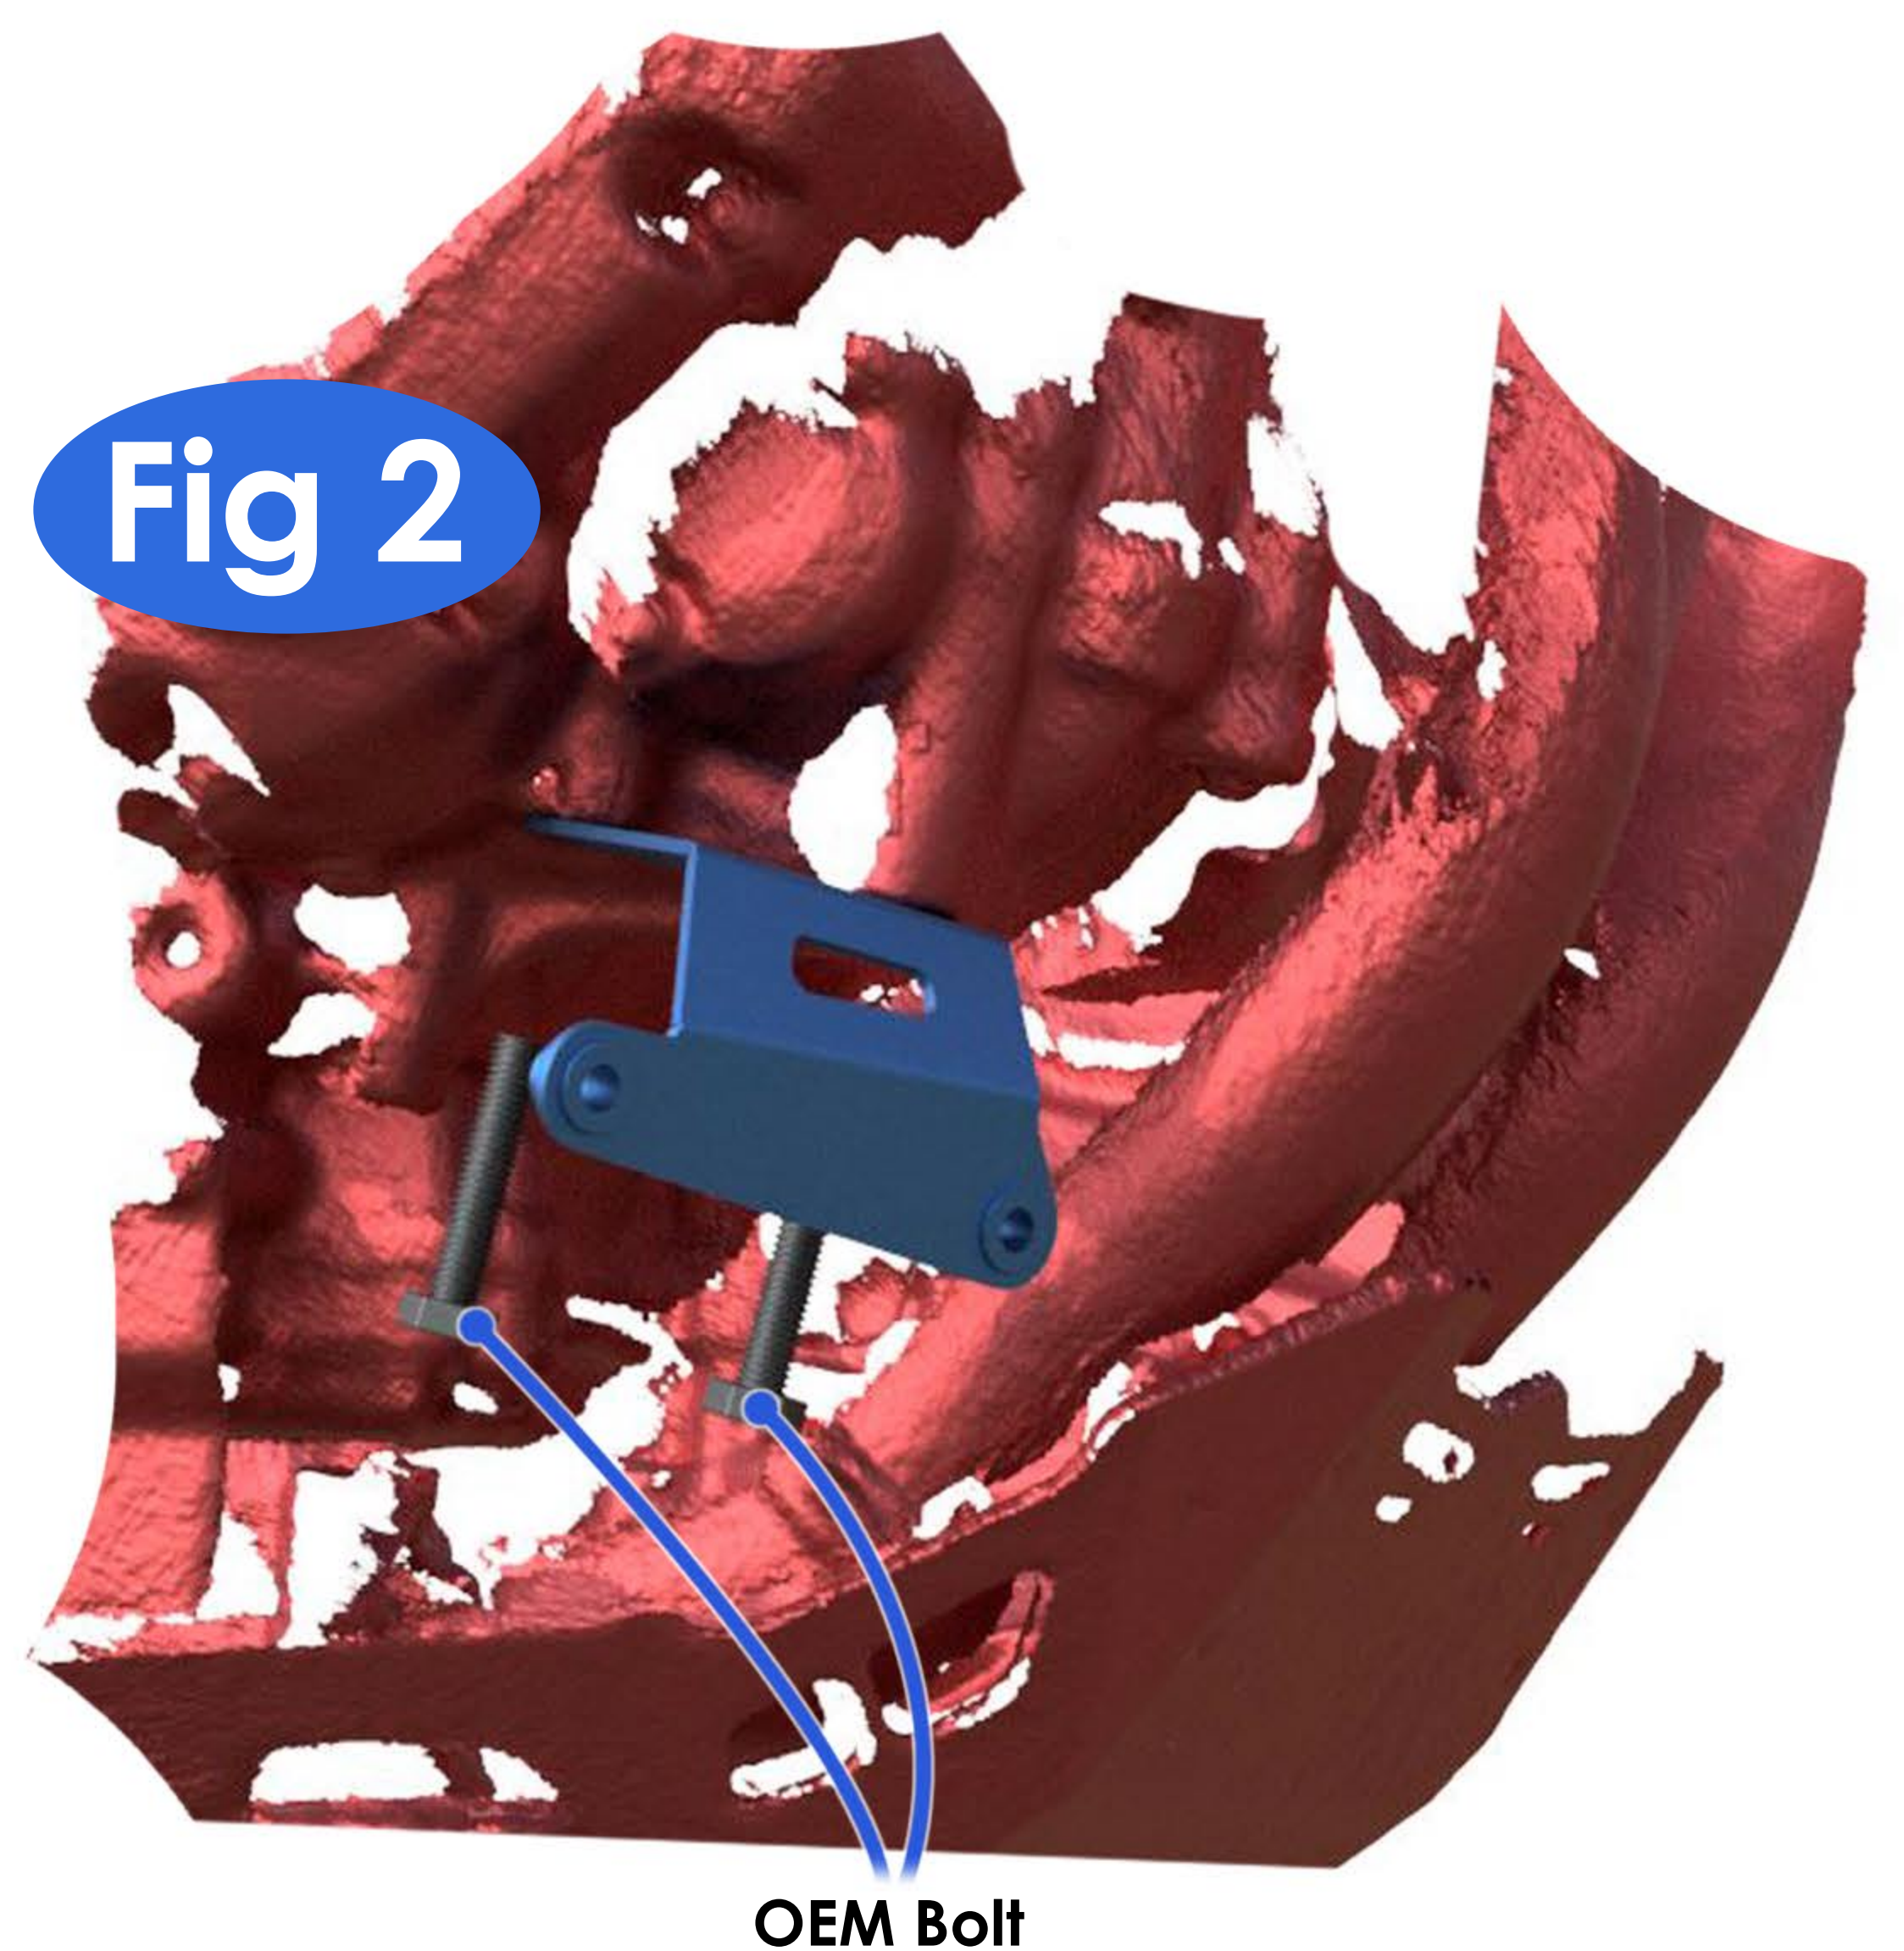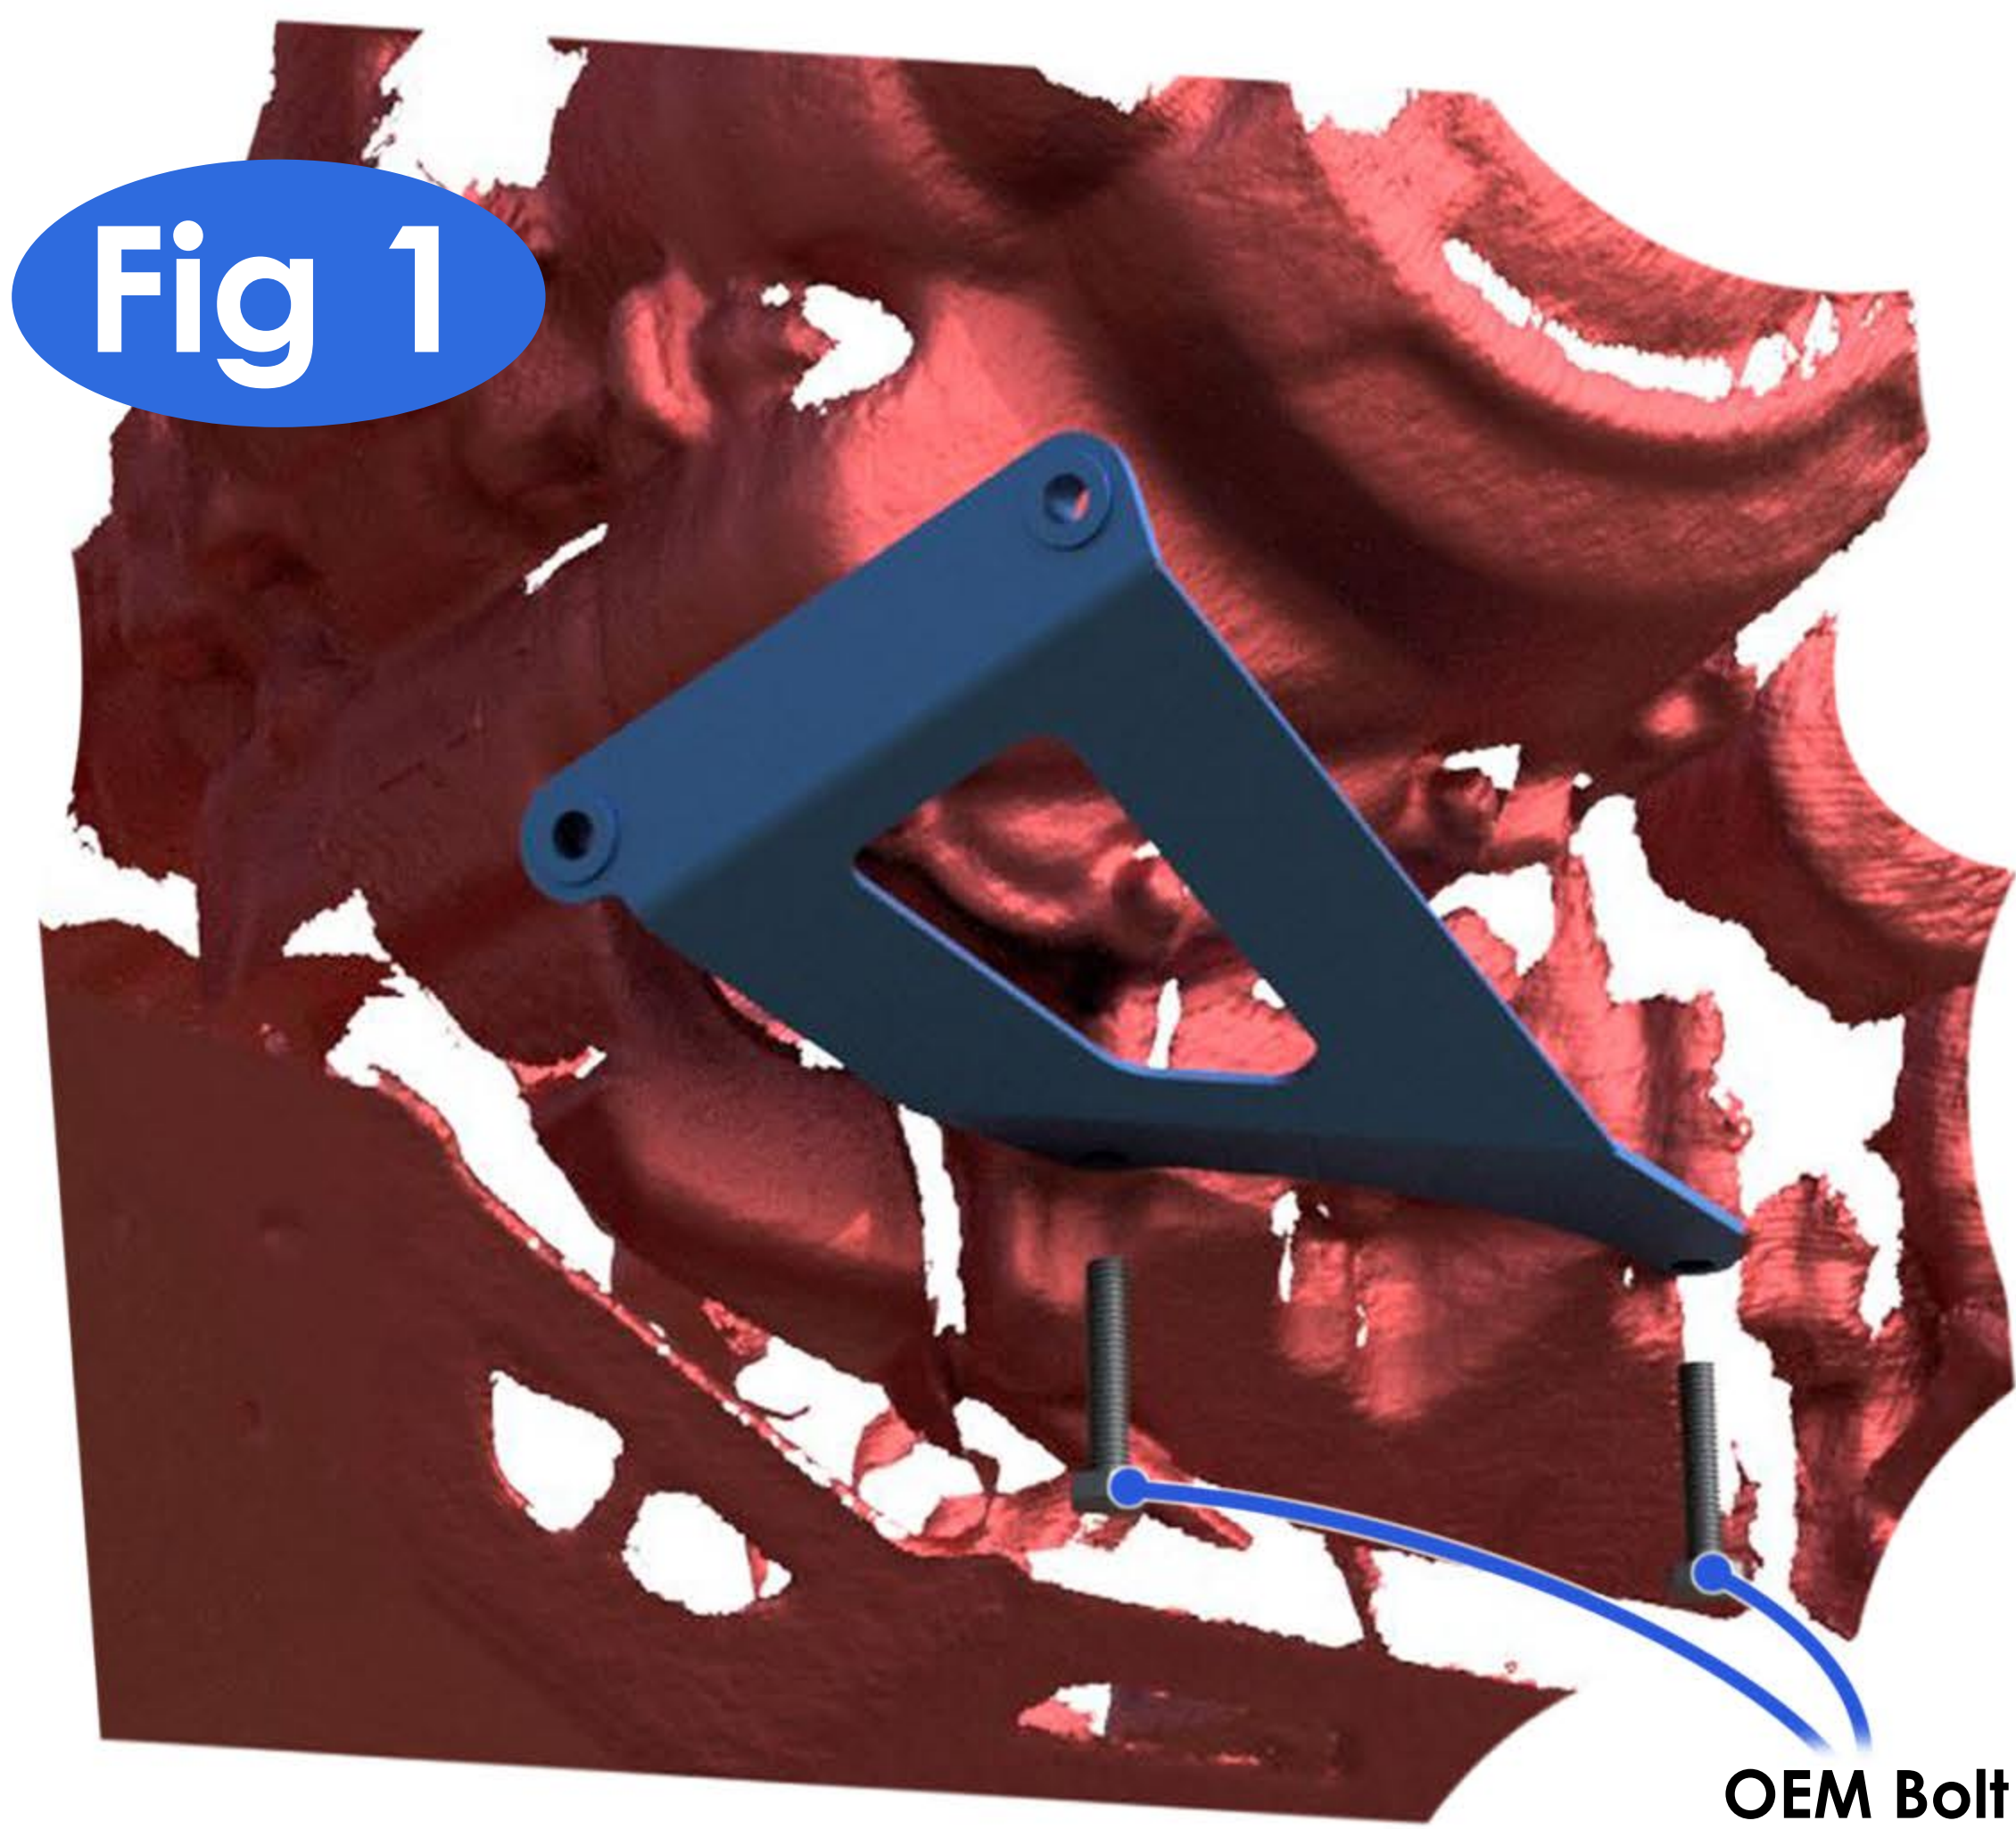

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
 feel free to leave us a review!