PYRAMD **38288** Yamaha MT-10 Frontal Wing Fitting Instructions

Kit Includes:

1X	C38288	Frontal Wing
1X	CFK38288	Bracket
3X	CBOLM50005	M5 X 12mm Black Stainless Steel Bolt
3X	CNUTM50002	M5 Stainless Steel Nyloc Nut
1X	CFOA0002 Pre-fitted by Pyramid	Foam Strip 20mm X ¹ .5mm (cut to 30mm in length)

Cut the foam strip supplied into small squares and attach (see Fig 1).


Attach the frontal wing to the bracket using the fittings provided (see **Fig 1**).

Attach the frontal wing using the OEM bolts on the rear of the headlights.

Any questions? sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

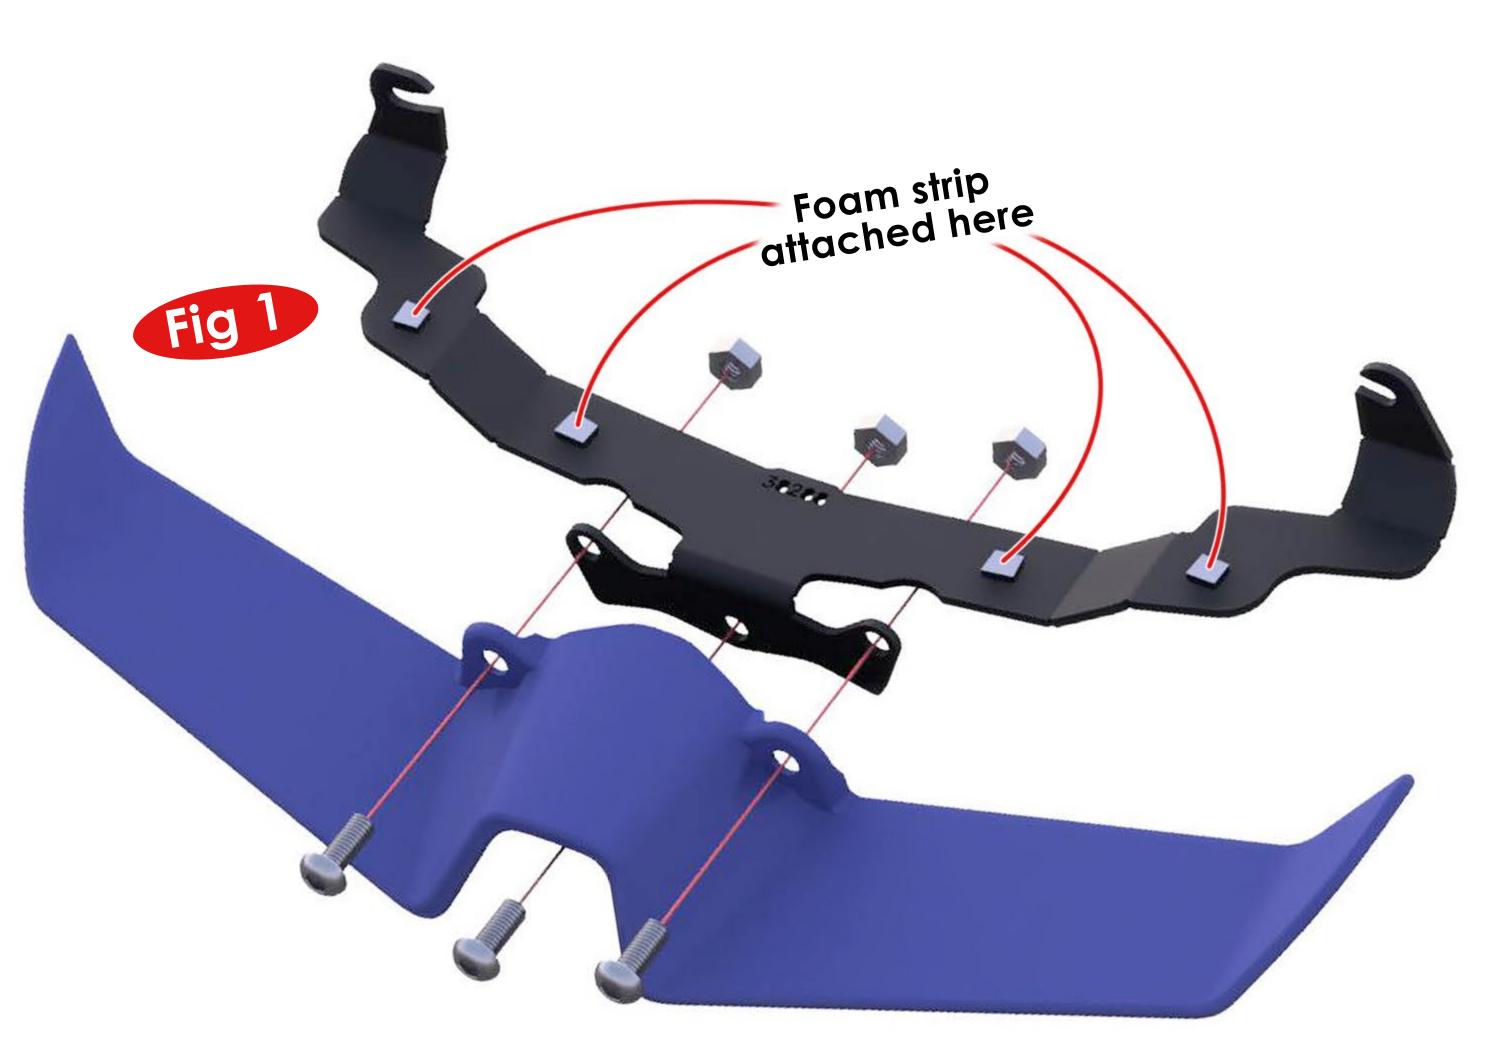

Illustrations and pictures are always clearer on our web version!

PTRAMD

38288 Yamaha MT-10 Frontal Wing Fitting Instructions

Kit Includes:

1X	C38288	Frontal Wing
1X	CFK38288	Bracket
3X	CBOLM50005	M5 X 12mm Black Stainless Steel Bolt
3X	CNUTM50002	M5 Stainless Steel Nyloc Nut

CFOA0002 Pre-fitted by Pyramid **1X** Foam Strip 20mm X 1.5mm (cut to 30mm in length)

Cut the foam strip supplied into small squares and attach (see Fig 1).

Attach the frontal wing to the bracket using the fittings provided (see **Fig 1**).

Attach the frontal wing using the OEM bolts on the rear of the headlights.

Any questions? sales@pyramid-plastics.co.uk +44 (0)1427 677990 www.pyramid-plastics.co.uk



Illustrations and pictures are always clearer on our web version!

