



39205 Yamaha Ténéré 700 Screen Deflectors Fitting Instructions

Kit Includes:


2X Mouldings

8X Washers CWASM60003

- The Pyramid screen deflectors are a direct replacement of the OEM part on the bike. Simply remove the OEM part and refit the Pyramid screen deflectors in place.
- The washers supplied with the kit are used to reposition the OEM screen and align it with the Pyramid screen deflectors. Remove the OEM screen and fit 2 of each washer behind each mounting point.

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

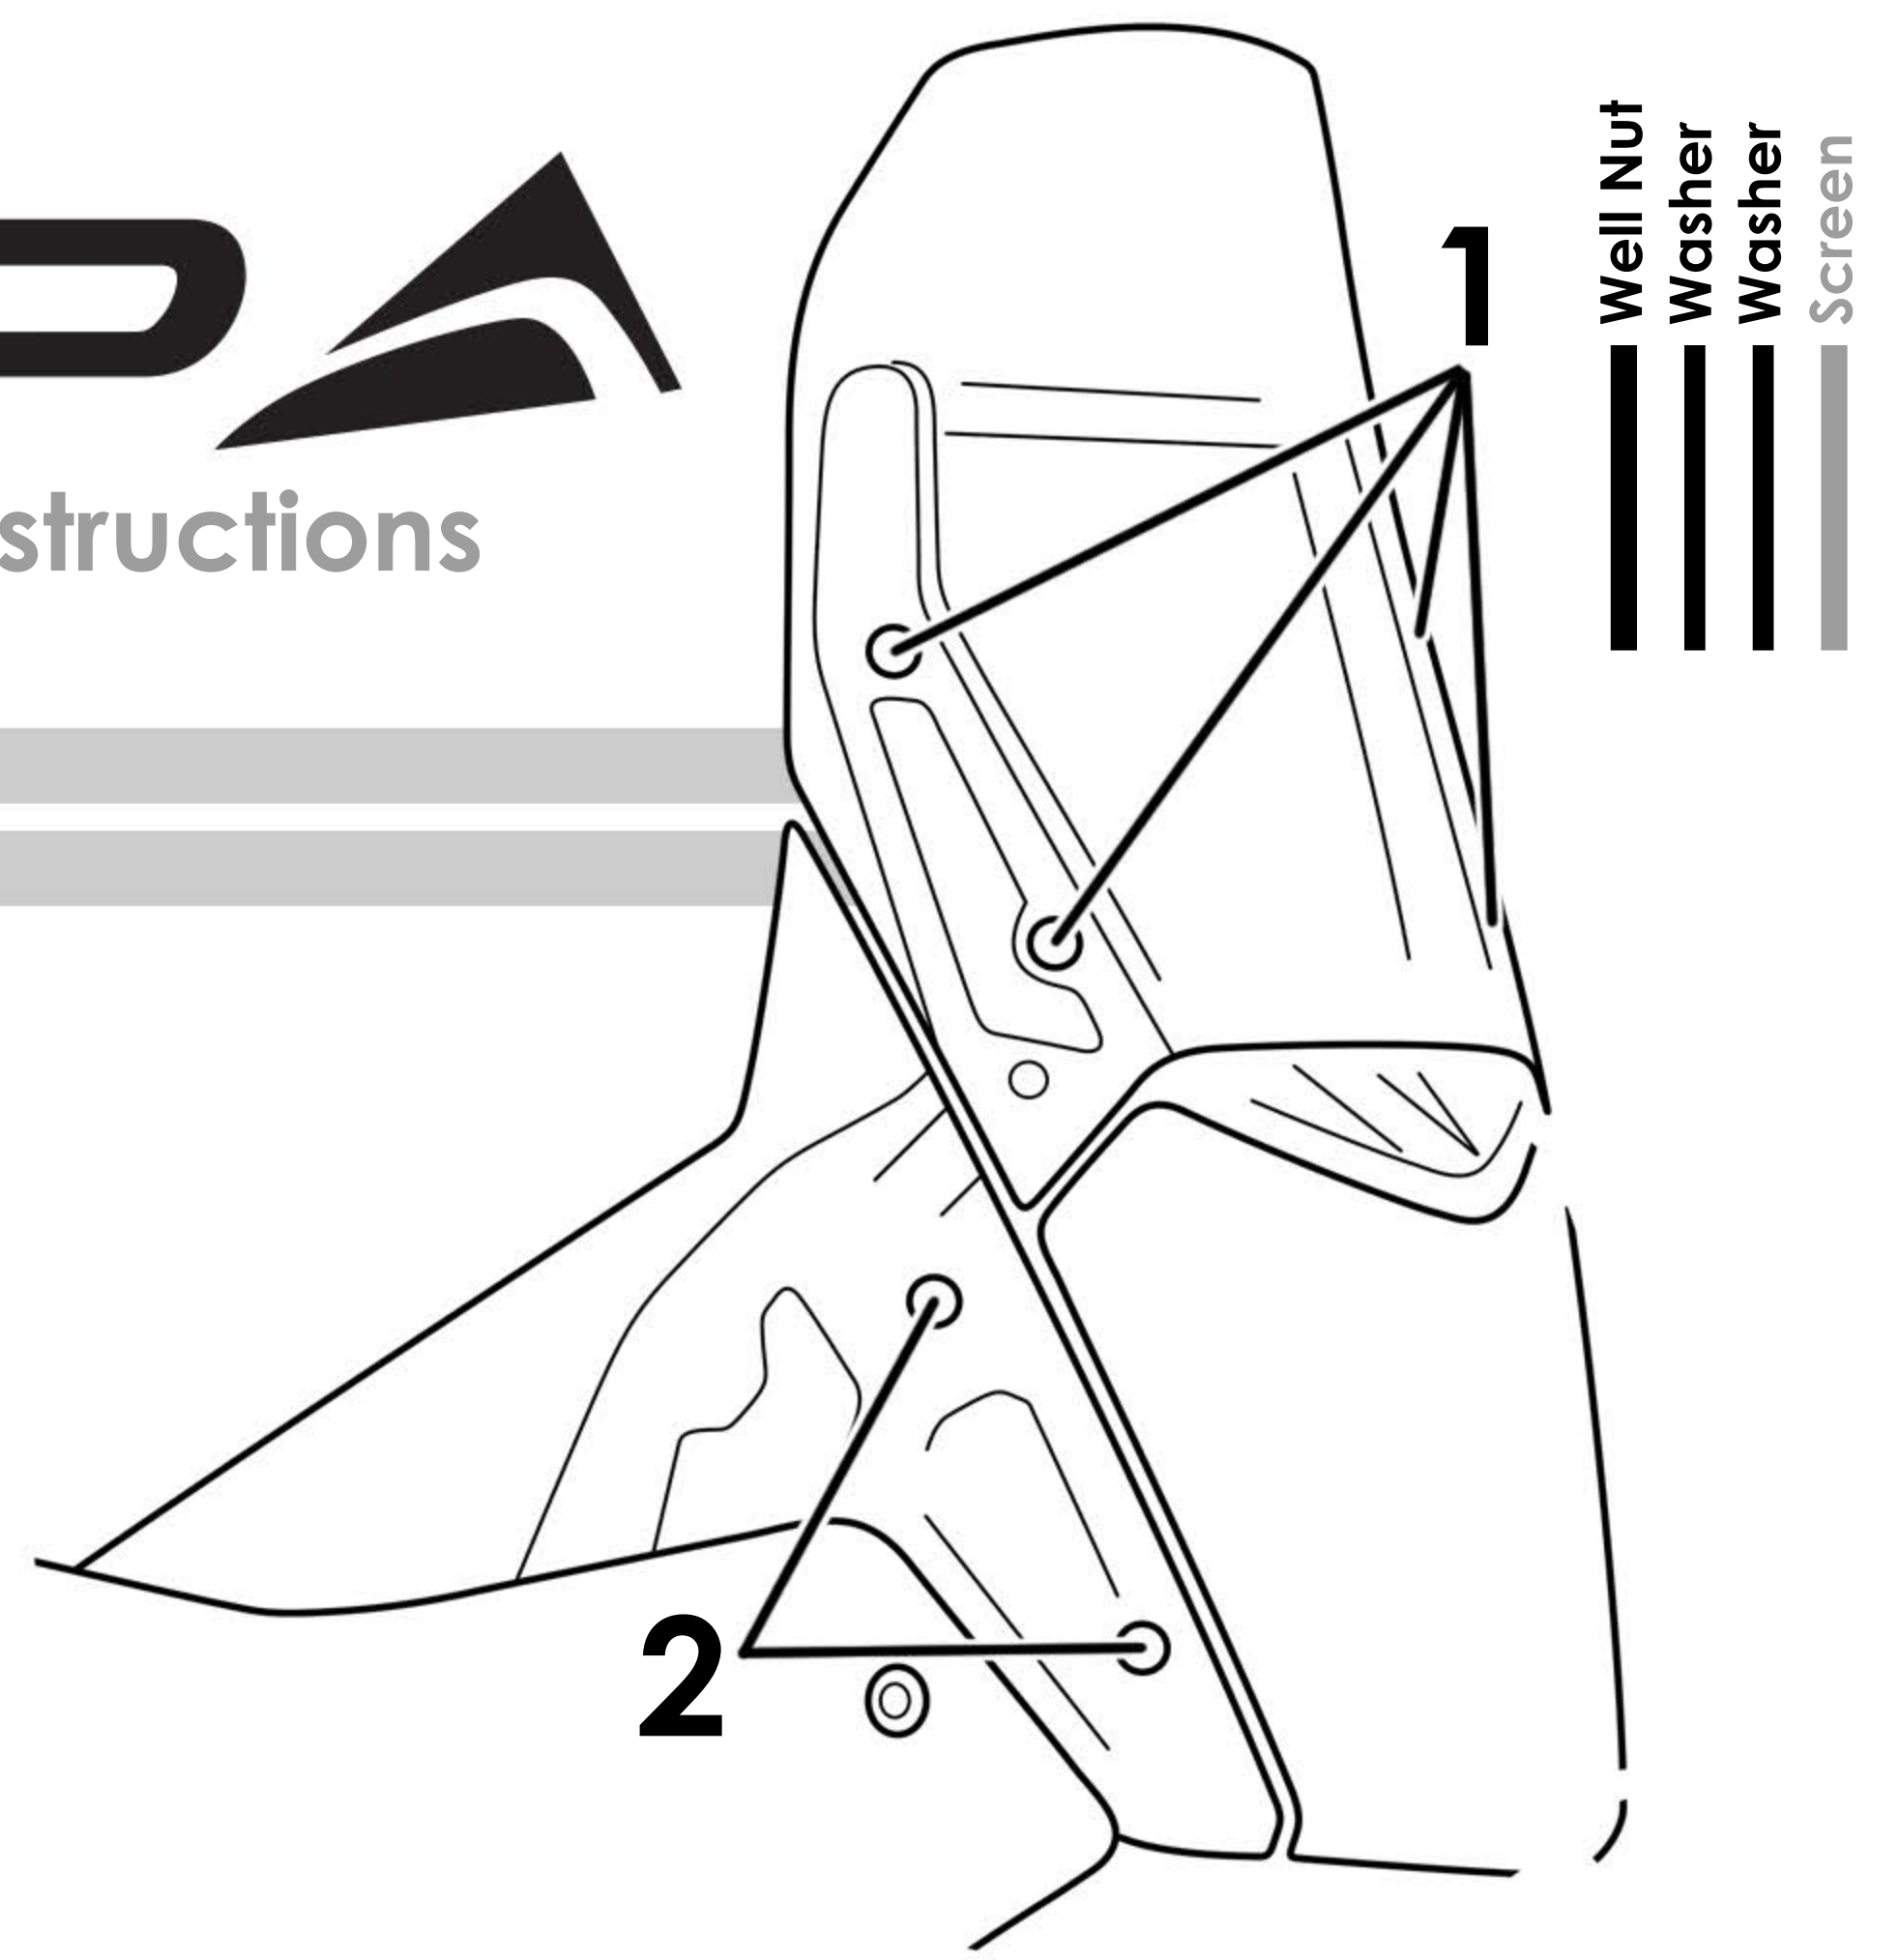

39205 Yamaha Ténéré 700 Screen Deflectors Fitting Instructions

Kit Includes:


2X Mouldings

8X Washers CWASM60003

- The Pyramid screen deflectors are a direct replacement of the OEM part on the bike. Simply remove the OEM part and refit the Pyramid screen deflectors in place.
- The washers supplied with the kit are used to reposition the OEM screen and align it with the Pyramid screen deflectors. Remove the OEM screen and fit 2 of each washer behind each mounting point.

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

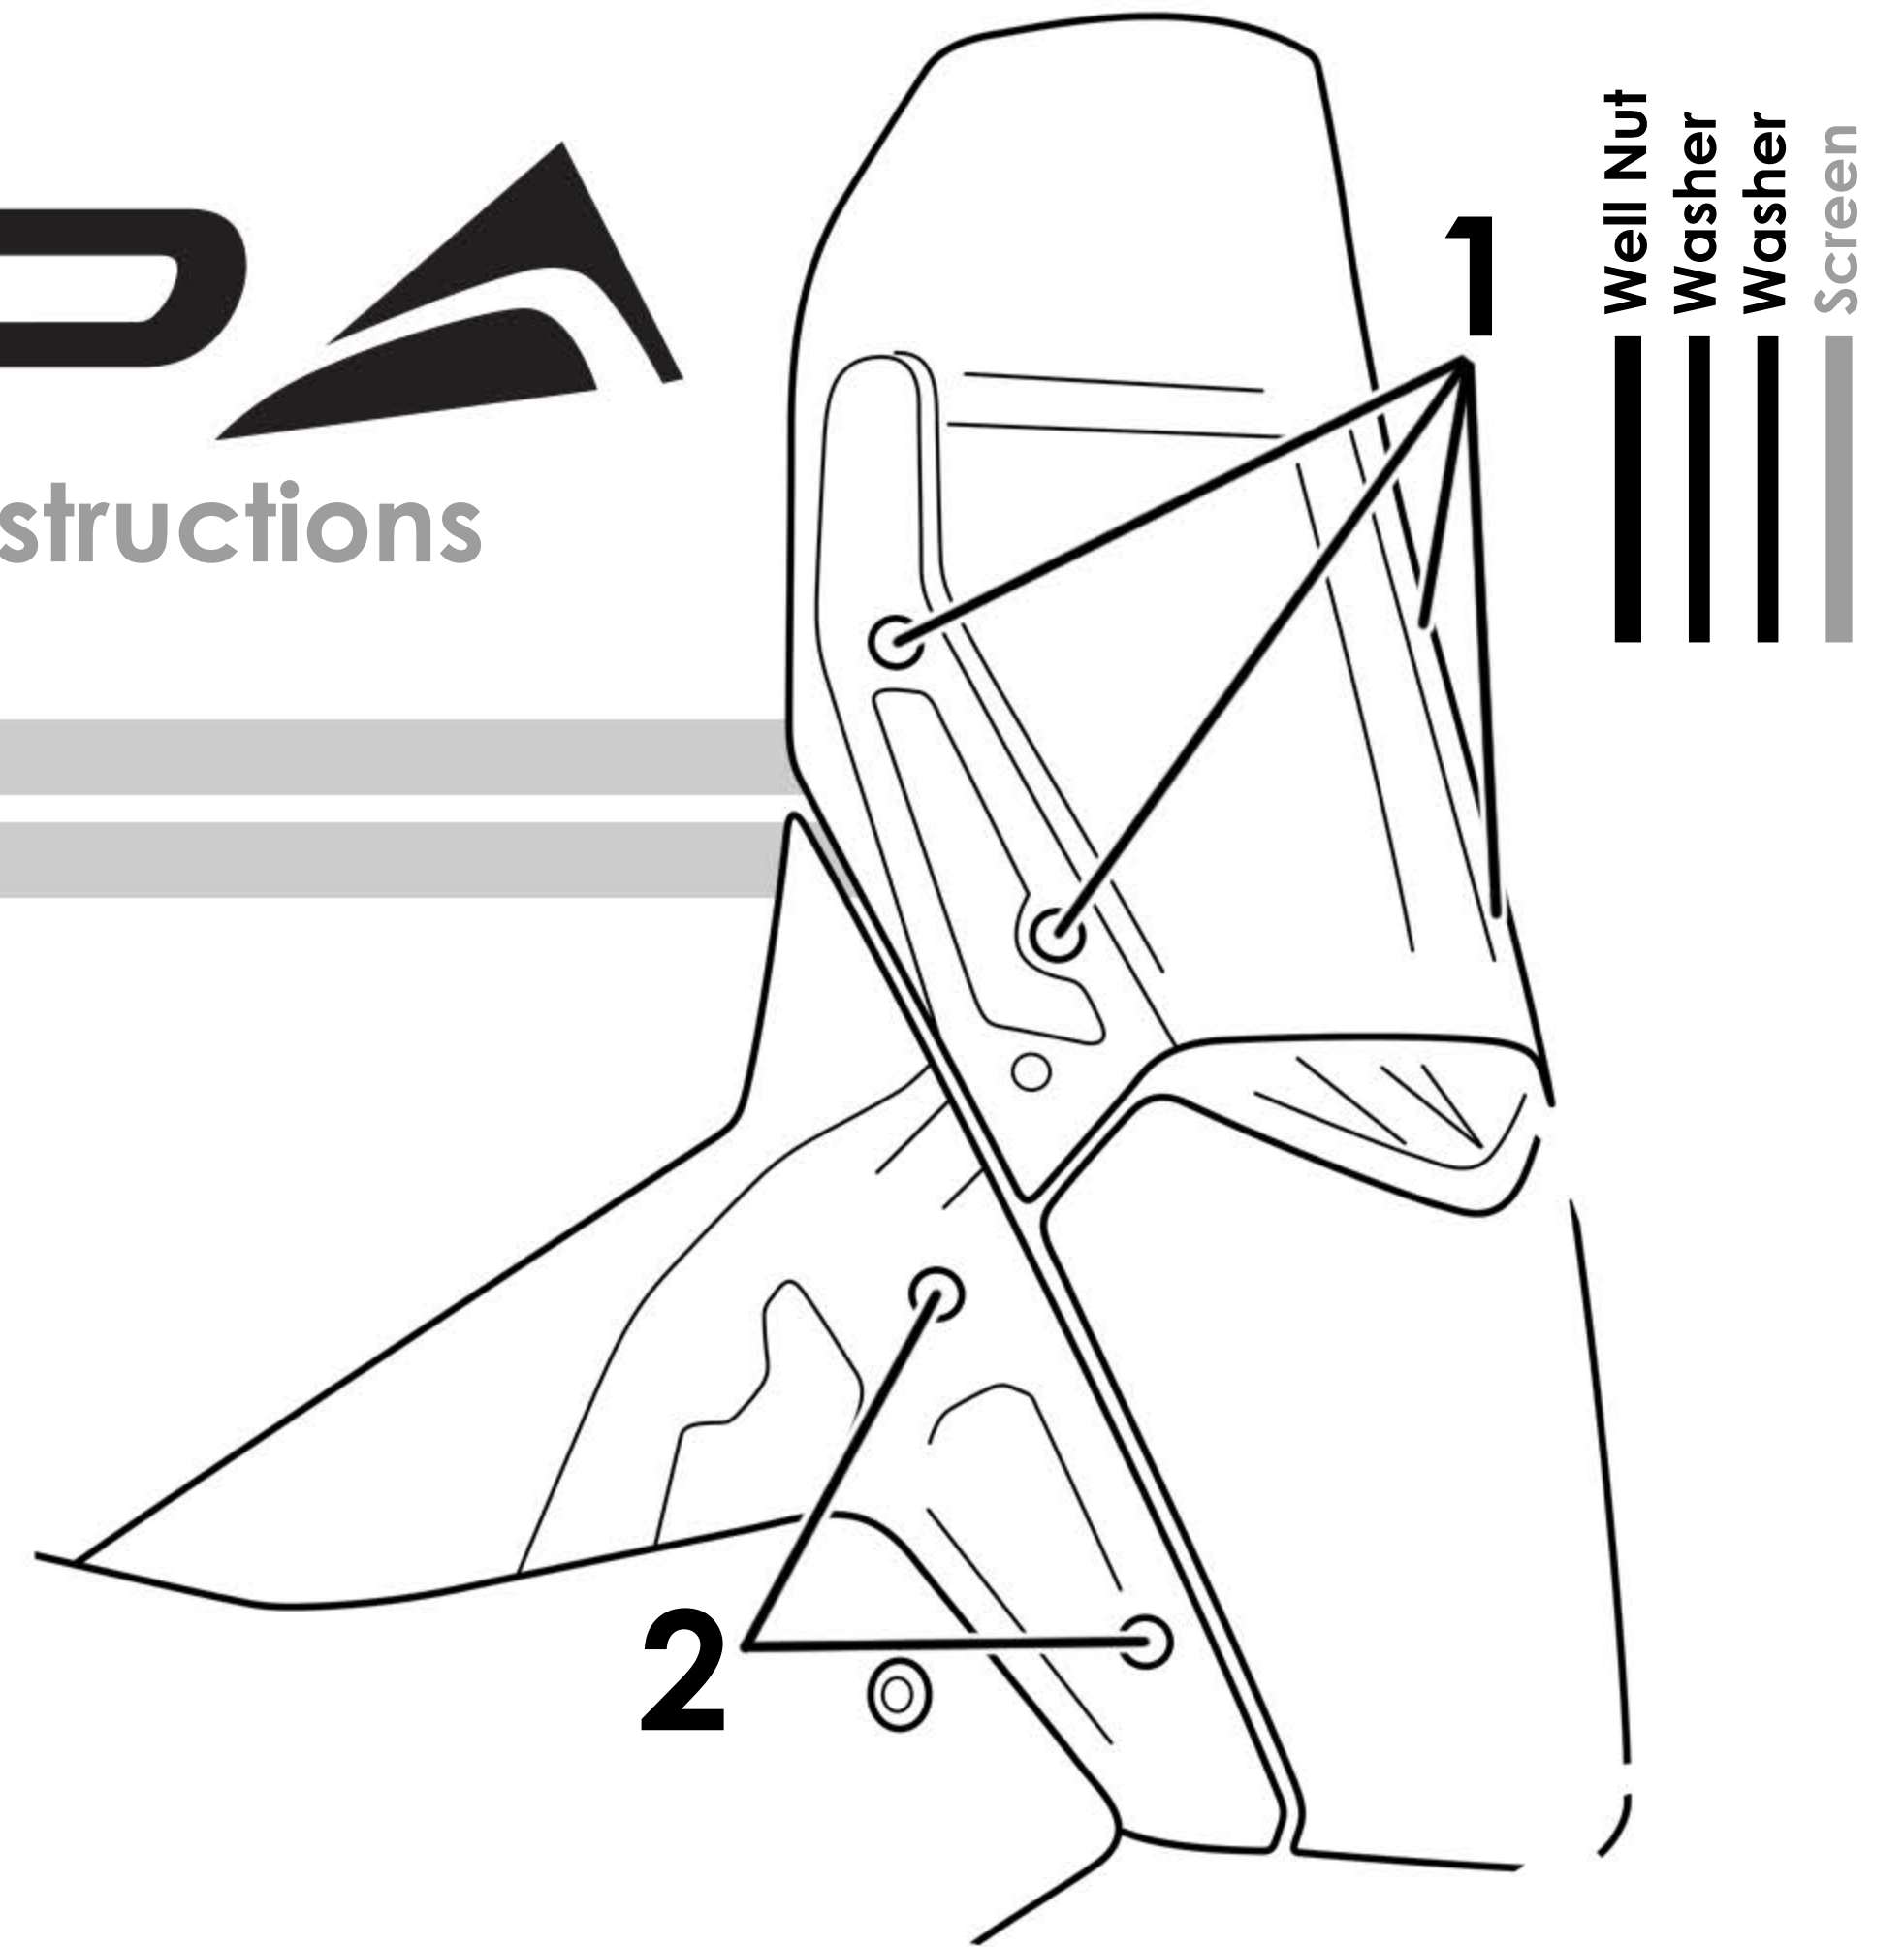

39205 Yamaha Ténéré 700 Screen Deflectors Fitting Instructions

Kit Includes:

2X Mouldings

8X Washers CWASM60003

- The Pyramid screen deflectors are a direct replacement of the OEM part on the bike. Simply remove the OEM part and refit the Pyramid screen deflectors in place.
- The washers supplied with the kit are used to reposition the OEM screen and align it with the Pyramid screen deflectors. Remove the OEM screen and fit 2 of each washer behind each mounting point.

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

