

51601 Triumph Speed 400 & Triumph Scrambler 400X 2024 Tail Tidy Fitting Instructions

Kit Includes:

1X	C51601	Tail Tidy + Fitting kit
2X	CWASM60001	M6 Washer
2X	CNUTM60003	M6 Nyloc Nut

Fitting this Tail Tidy is simple - If in any doubt, seek help from a qualified mechanic

Assembly Instructions:


- Begin by removing the Seat
- Access the four fixings that secure the Original Licence Plate Holder - This will require removing or moving any obstructions to the fixings. This may include panels, brackets and wiring.
- Locate and disconnect the Licence Plate Light and Indicators.
- Remove the four bolts securing the original Licence Plate Holder to the motorcycle. Then proceed to fully remove the Licence Plate Holder and feed the wires through the frame at the rear of the motorcycle, making sure that these wires do not snag.
- **Reusing OEM Indicators?**
 - Remove all the bolts holding the number plate bracket, cable-cover/undertray to allow the removal of the indicators and indicator wiring.
 - Proceed to fit the OEM indicators to the Tail Tidy. Take care to fit these on the correct side. You will need to use the provided M6 Washers & M6 Nyloc Nuts to fix the OEM Indicators to each side of the Tail Tidy.
 - Fit the new Licence plate LED to the new Tail Tidy, ensuring the LEDs used to illuminate the licence plate will point downwards.
 - The new Licence plate LED can be connected by attaching the plug from the original Licence plate light. Cut the original wire and plug from the original number plate light and connect the plug end to the new LED with the supplied bullet connectors (**See Fig 2**). Leave approximately 20mm of wire remaining. Ensure the cable is long enough to connect the new compact LED light. This allows the reuse of the original number plate electrical plug. (**See Fig 1**).
 - Insert the original rubber grommet in the new Tail Tidy, then proceed to fit and feed all wires through the grommet, using cable ties to secure them neatly to the Tail Tidy.
 - Feed the wires through the original aperture in the motorcycle. Then loosely fit the Tail Tidy to the motorcycle using the four provided M6 bolts and washers.
 - Align the Tail Tidy and tighten the bolts.
 - Reconnect the indicator, number plate light and rear light wiring sockets.
 - Note: If the Number Plate Light does not work, you should disconnect it and then swap and reconnect the bullet connectors. LED lights only work if the polarity is correct.
 - Refit any brackets and panels.
 - Fit the Number Plate to the new Tail Tidy, and then refit the seat.
 - Test the Indicators and Number Plate Light before riding.
 - Check fixings periodically.

IMPORTANT: After fitting the number plate, please verify that the clearance between the rear tyre and the number plate is sufficient for your style of riding. Contact between the number plate and the tyre could cause serious injury. Take the weight of the rider, pillion, luggage (including panniers) and rear spring settings into consideration and make any necessary adjustments.

Fig 2



Fig 1

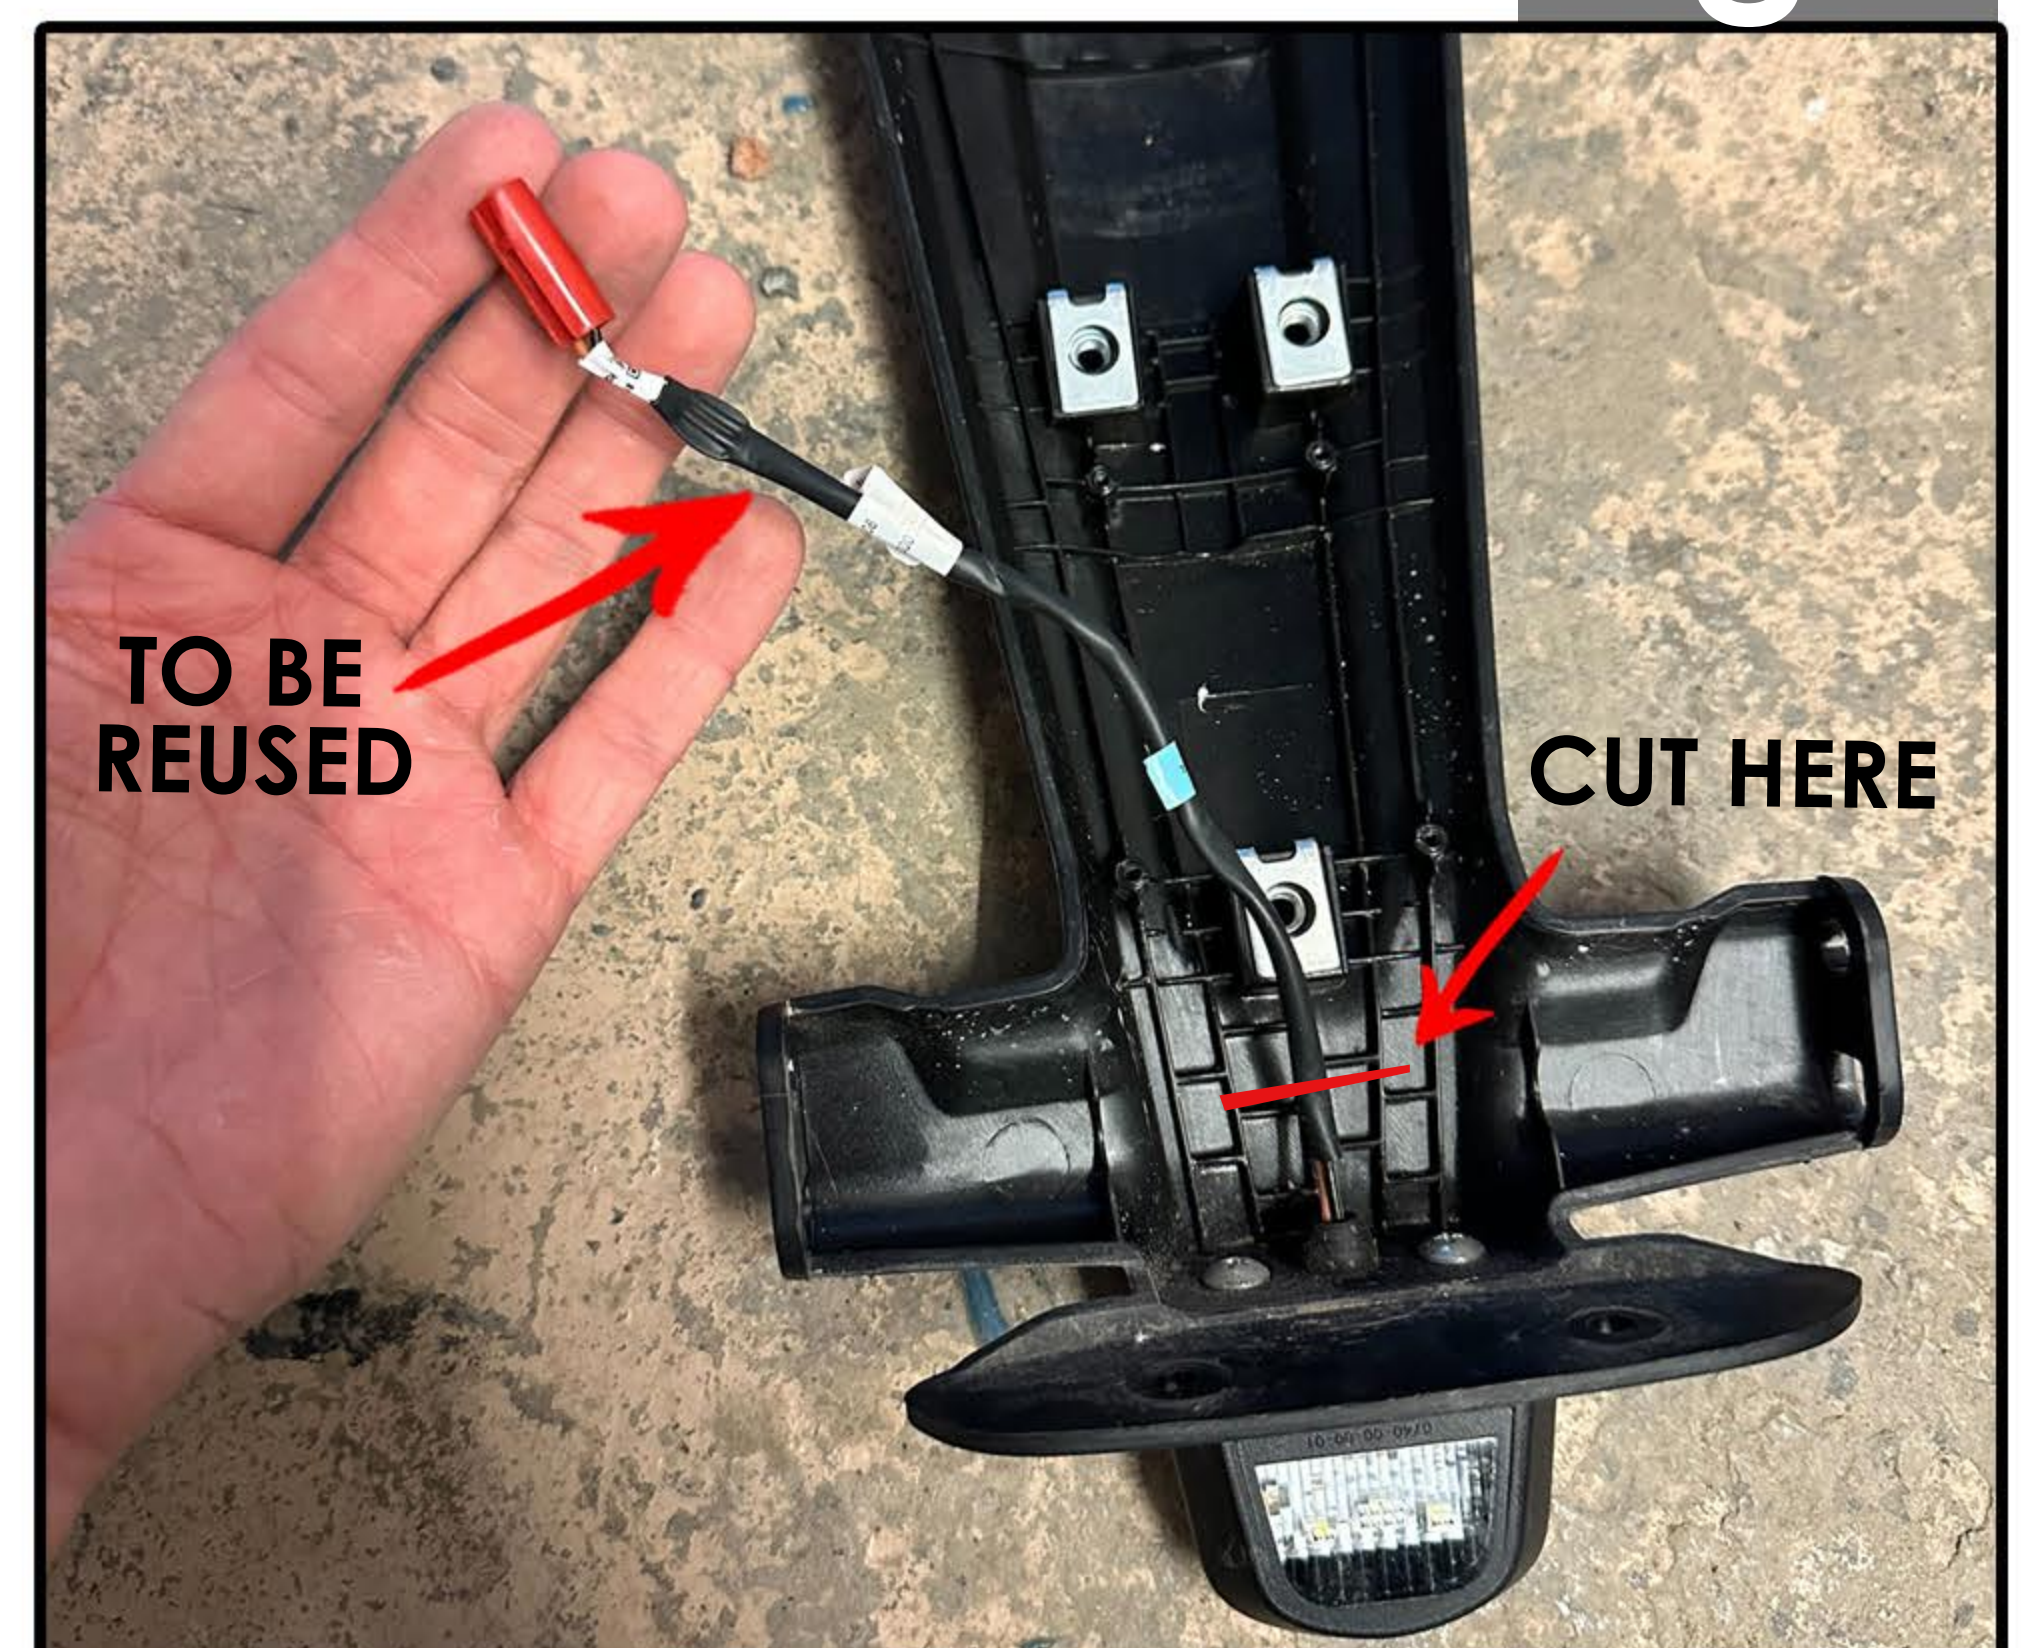

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!