

51700 Aprilia Tuono/RS 660 2021> + RSV4/Tuono V4 Factory 1100 2021> Tail Tidy Fitting Instructions

Kit Includes:

1X C51700 Tail Tidy + Fitting kit

OEM Parts (From the Motorcycle):

2X M6 OEM Bolt

2X M6 OEM Nut

Fitting this Tail Tidy is simple - If in any doubt, seek help from a qualified mechanic.

Assembly Instructions:

- Begin by removing the rear seat followed by the rear side panels, underseat cover plate and seat locking mechanism.
- Locate and disconnect the 2 electrical plugs for the OEM indicators and Original Number Plate light. See '**FIG. 1**' for reference.
- Remove the 3 OEM bolts that secure the Original Number Plate Holder. Take care when removing these bolts as the Number Plate Holder will become loose. See '**FIG. 2**' for reference.
- Carefully remove the Number Plate Holder, ensuring that no wiring is caught in the process.
- Disassemble the Number Plate Holder. See '**FIG. 3**' for reference.
- Disconnect the connectors and remove the OEM indicators. See '**FIG. 4**' for reference.
- Fit the Rubber Grommet to the Tail Tidy to protect the wires while they are being fed through the Tail Tidy. See '**FIG. 5**' for reference.
- Loosely fit the OEM indicators to the Tail Tidy using the M6 OEM Bolts and Nuts. See '**FIG. 5**' for reference.
- Loosely fit the new LED Light to the tail tidy using the M3 Nuts provided. See '**FIG. 6**' for reference.
- Remove the 2 OEM Shouldered Spacers located between the undertray and the subframe. See '**FIG. 7**' for reference. To access them, loosen the OEM Bolts shown in '**FIG. 8**'. Once the Spacers have been removed, replace them with the large black washers provided.
- Before fitting the Tail Tidy to the motorcycle, reconnect the indicators and Number Plate Light to ensure they are working correctly. Proceed to tighten the indicator and light fixings.
- Neatly feed the wires through the original aperture in the motorcycle, using the heat shrink and cable ties provided.
- Loosely fit the Tail Tidy to the motorcycle using the M6 Bolts and M6 Nuts provided. See '**FIG. 9**' for reference.
- Once the Tail Tidy is in the correct position, fully tighten all fixings.
- Reattach the seat locking mechanism followed by the underseat cover plate, rear side panels and rear seat.
- Fit the Number Plate to the Tail Tidy.

Please Note:

We advise that all fixings are checked periodically.

Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and feel free to leave us a review!

2 Electrical plugs

FIG. 1

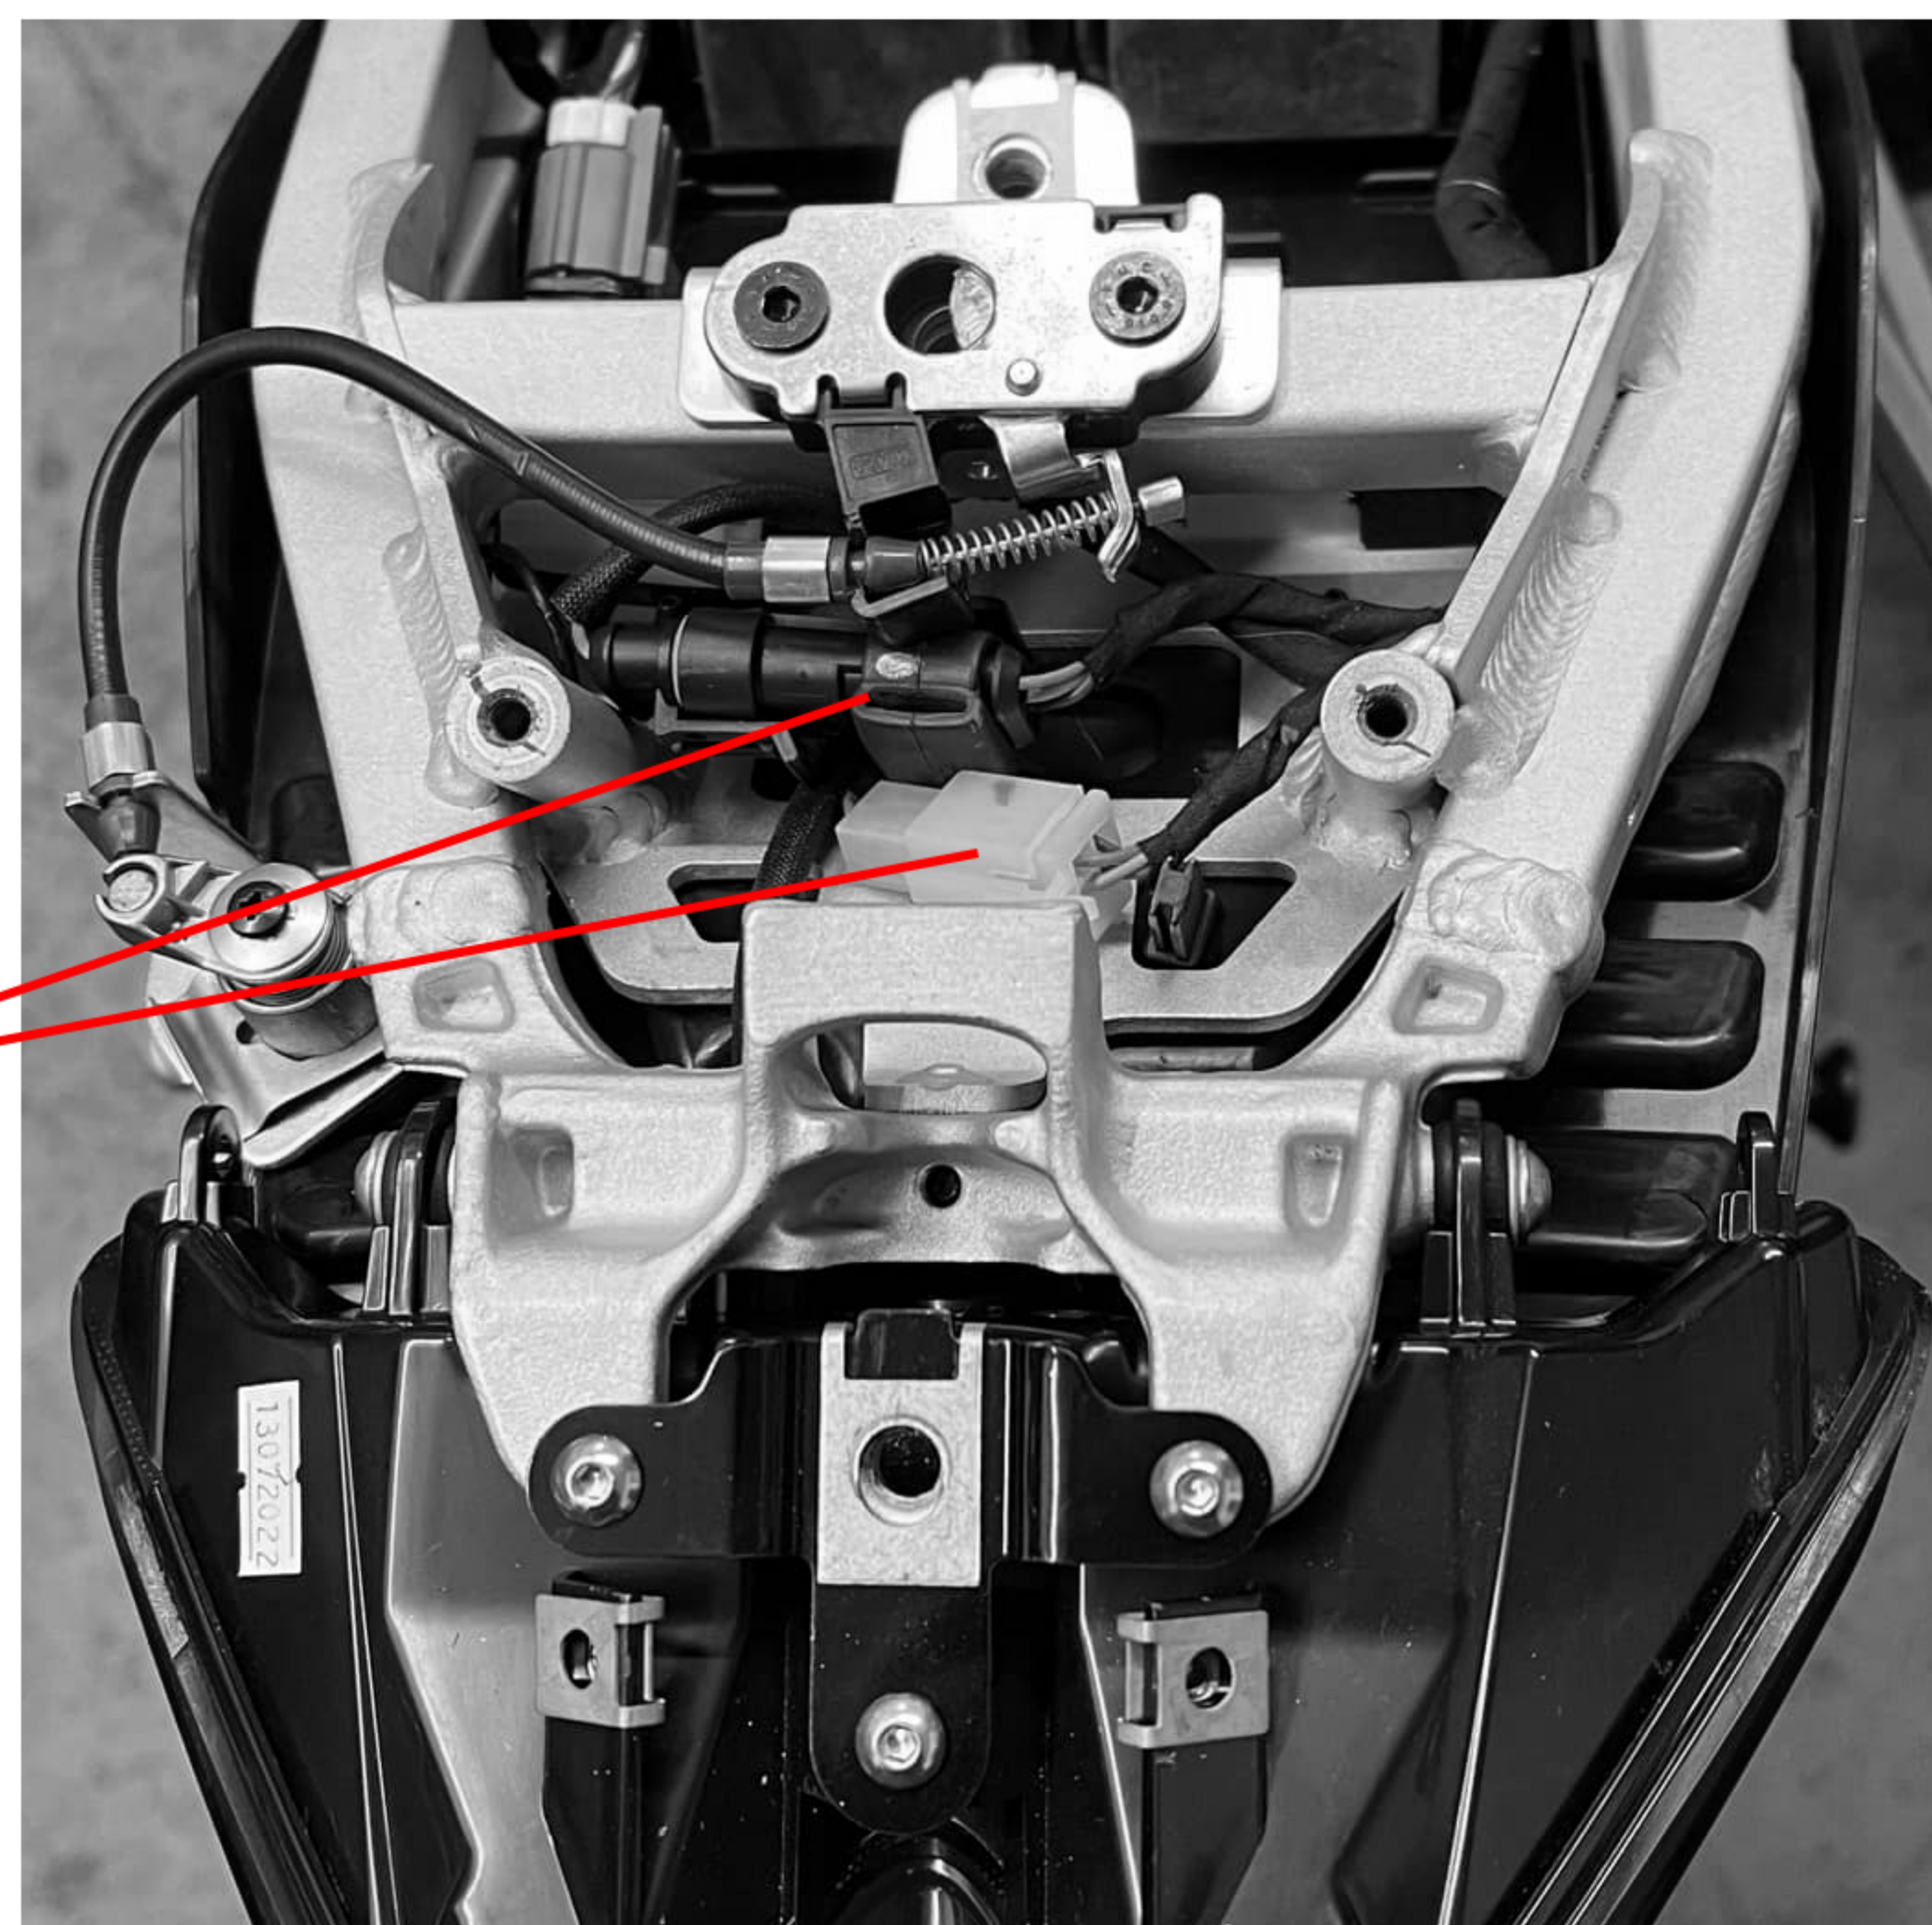


FIG. 2

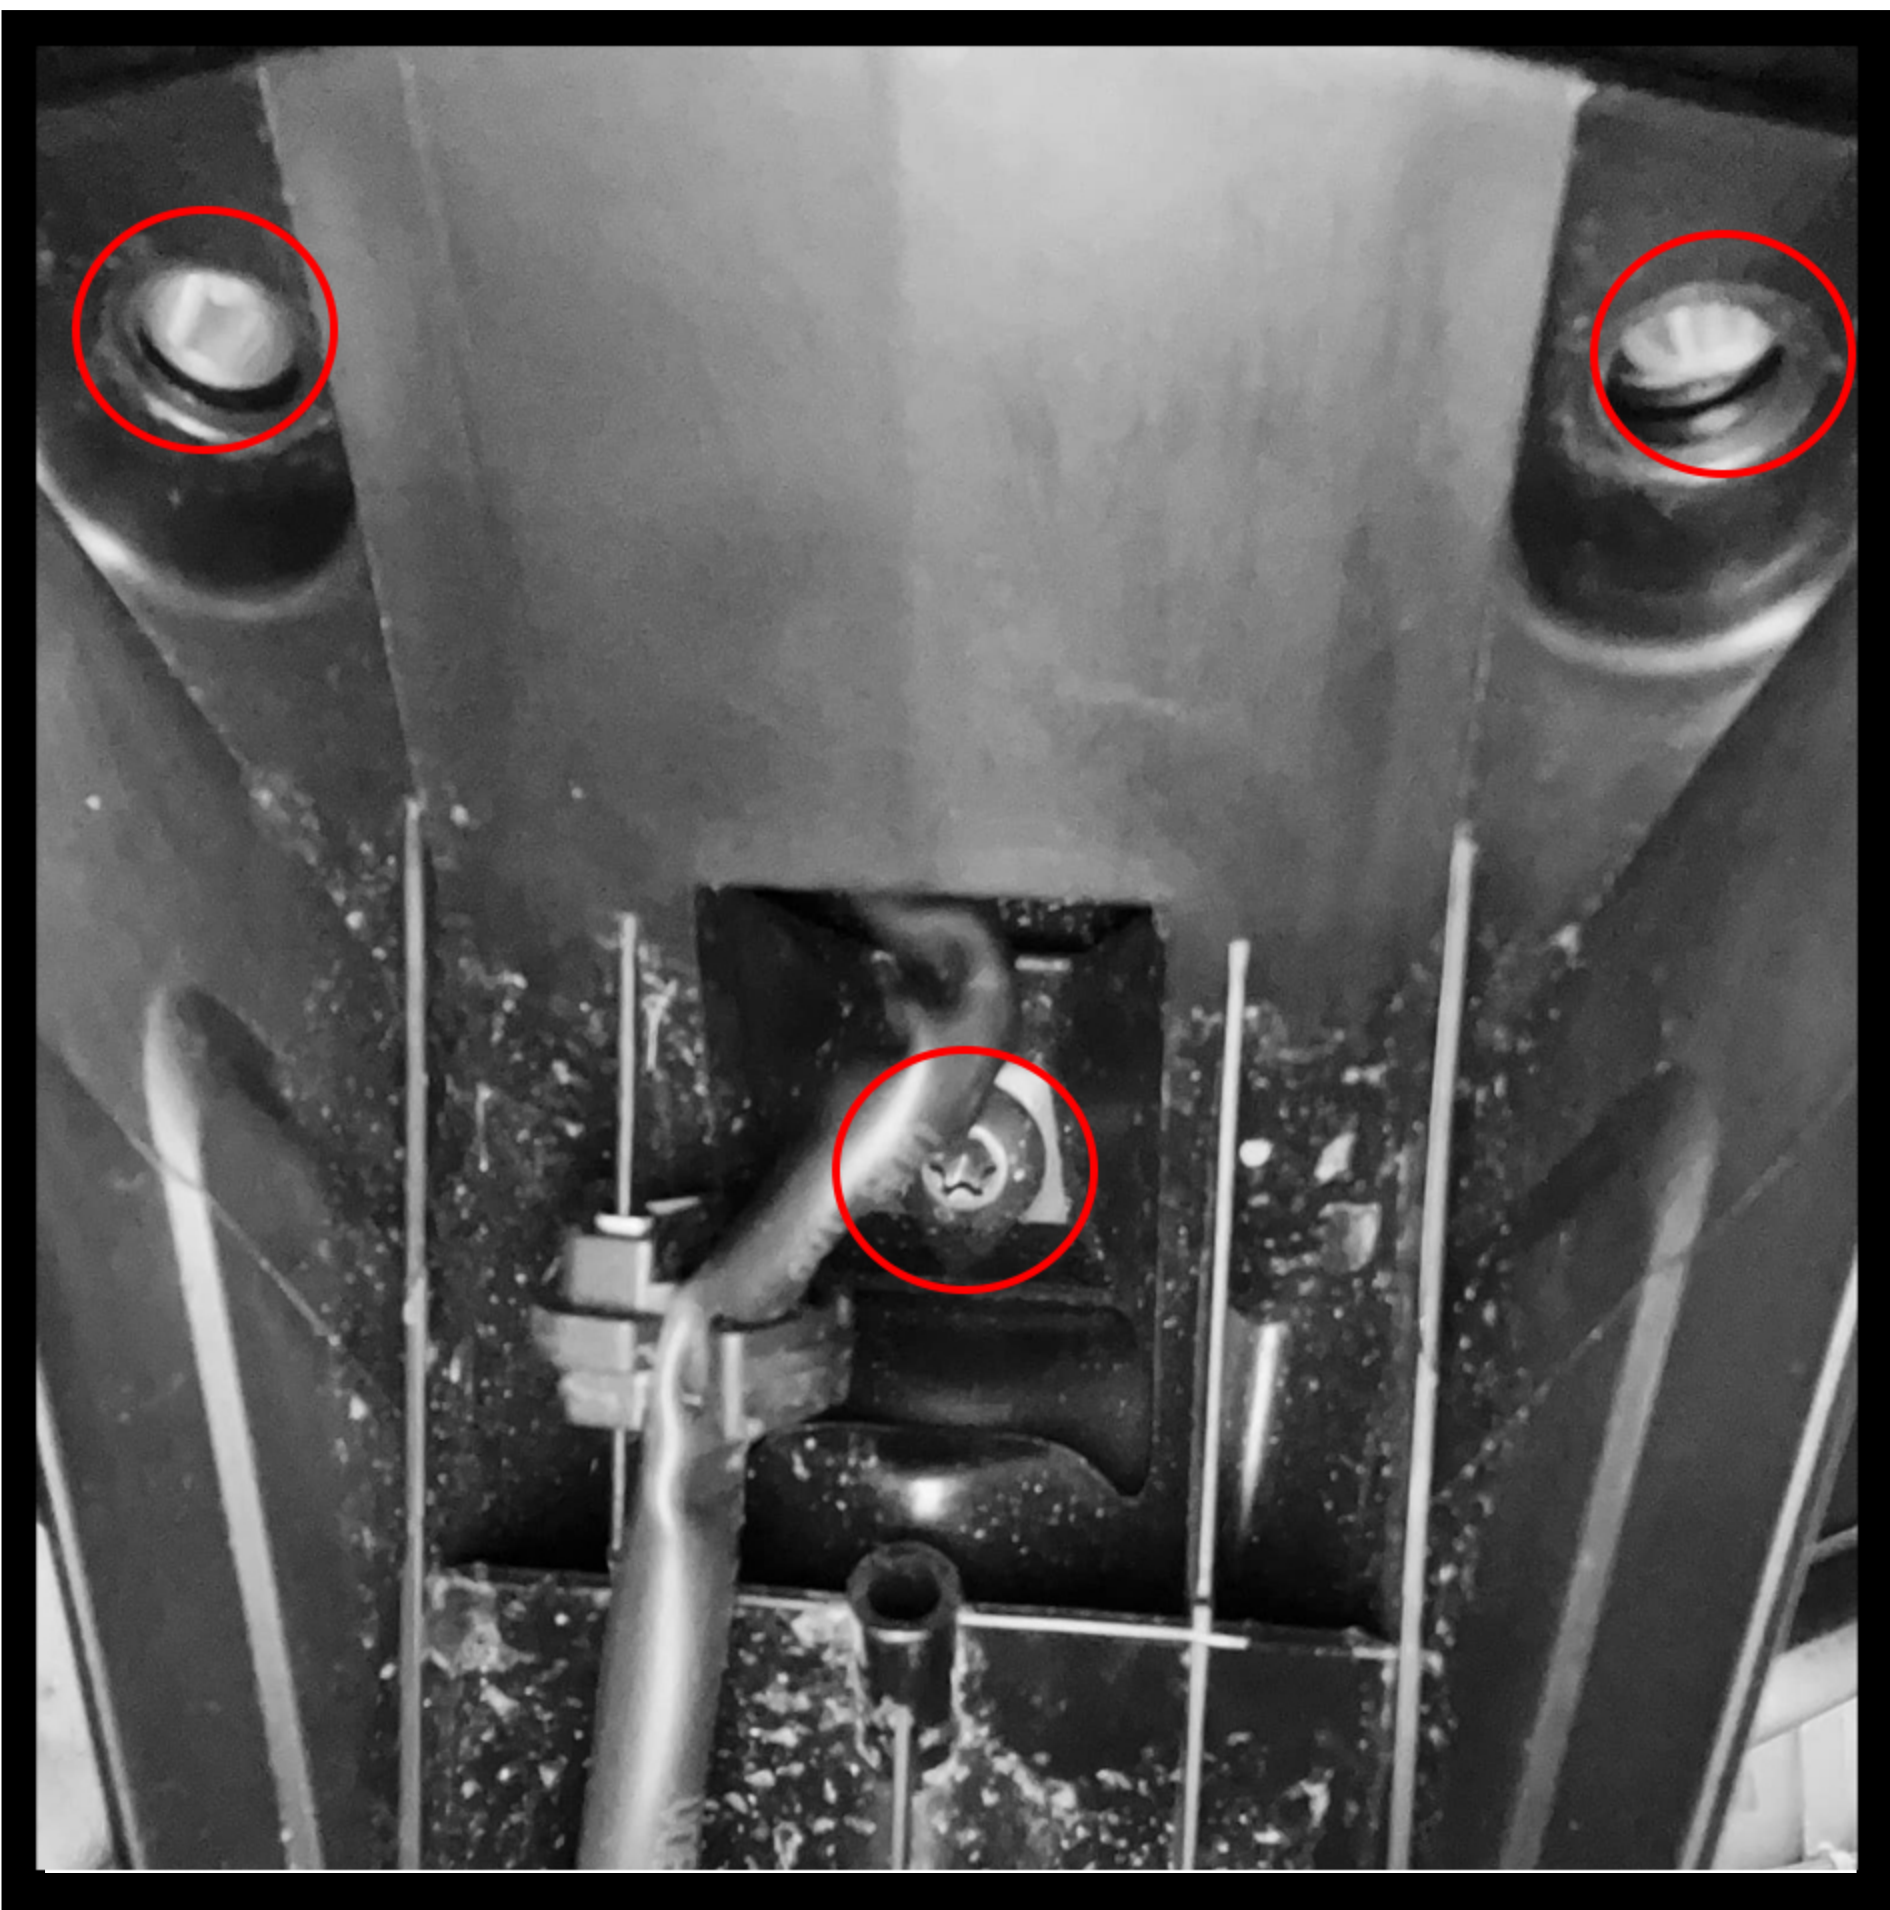


FIG. 3

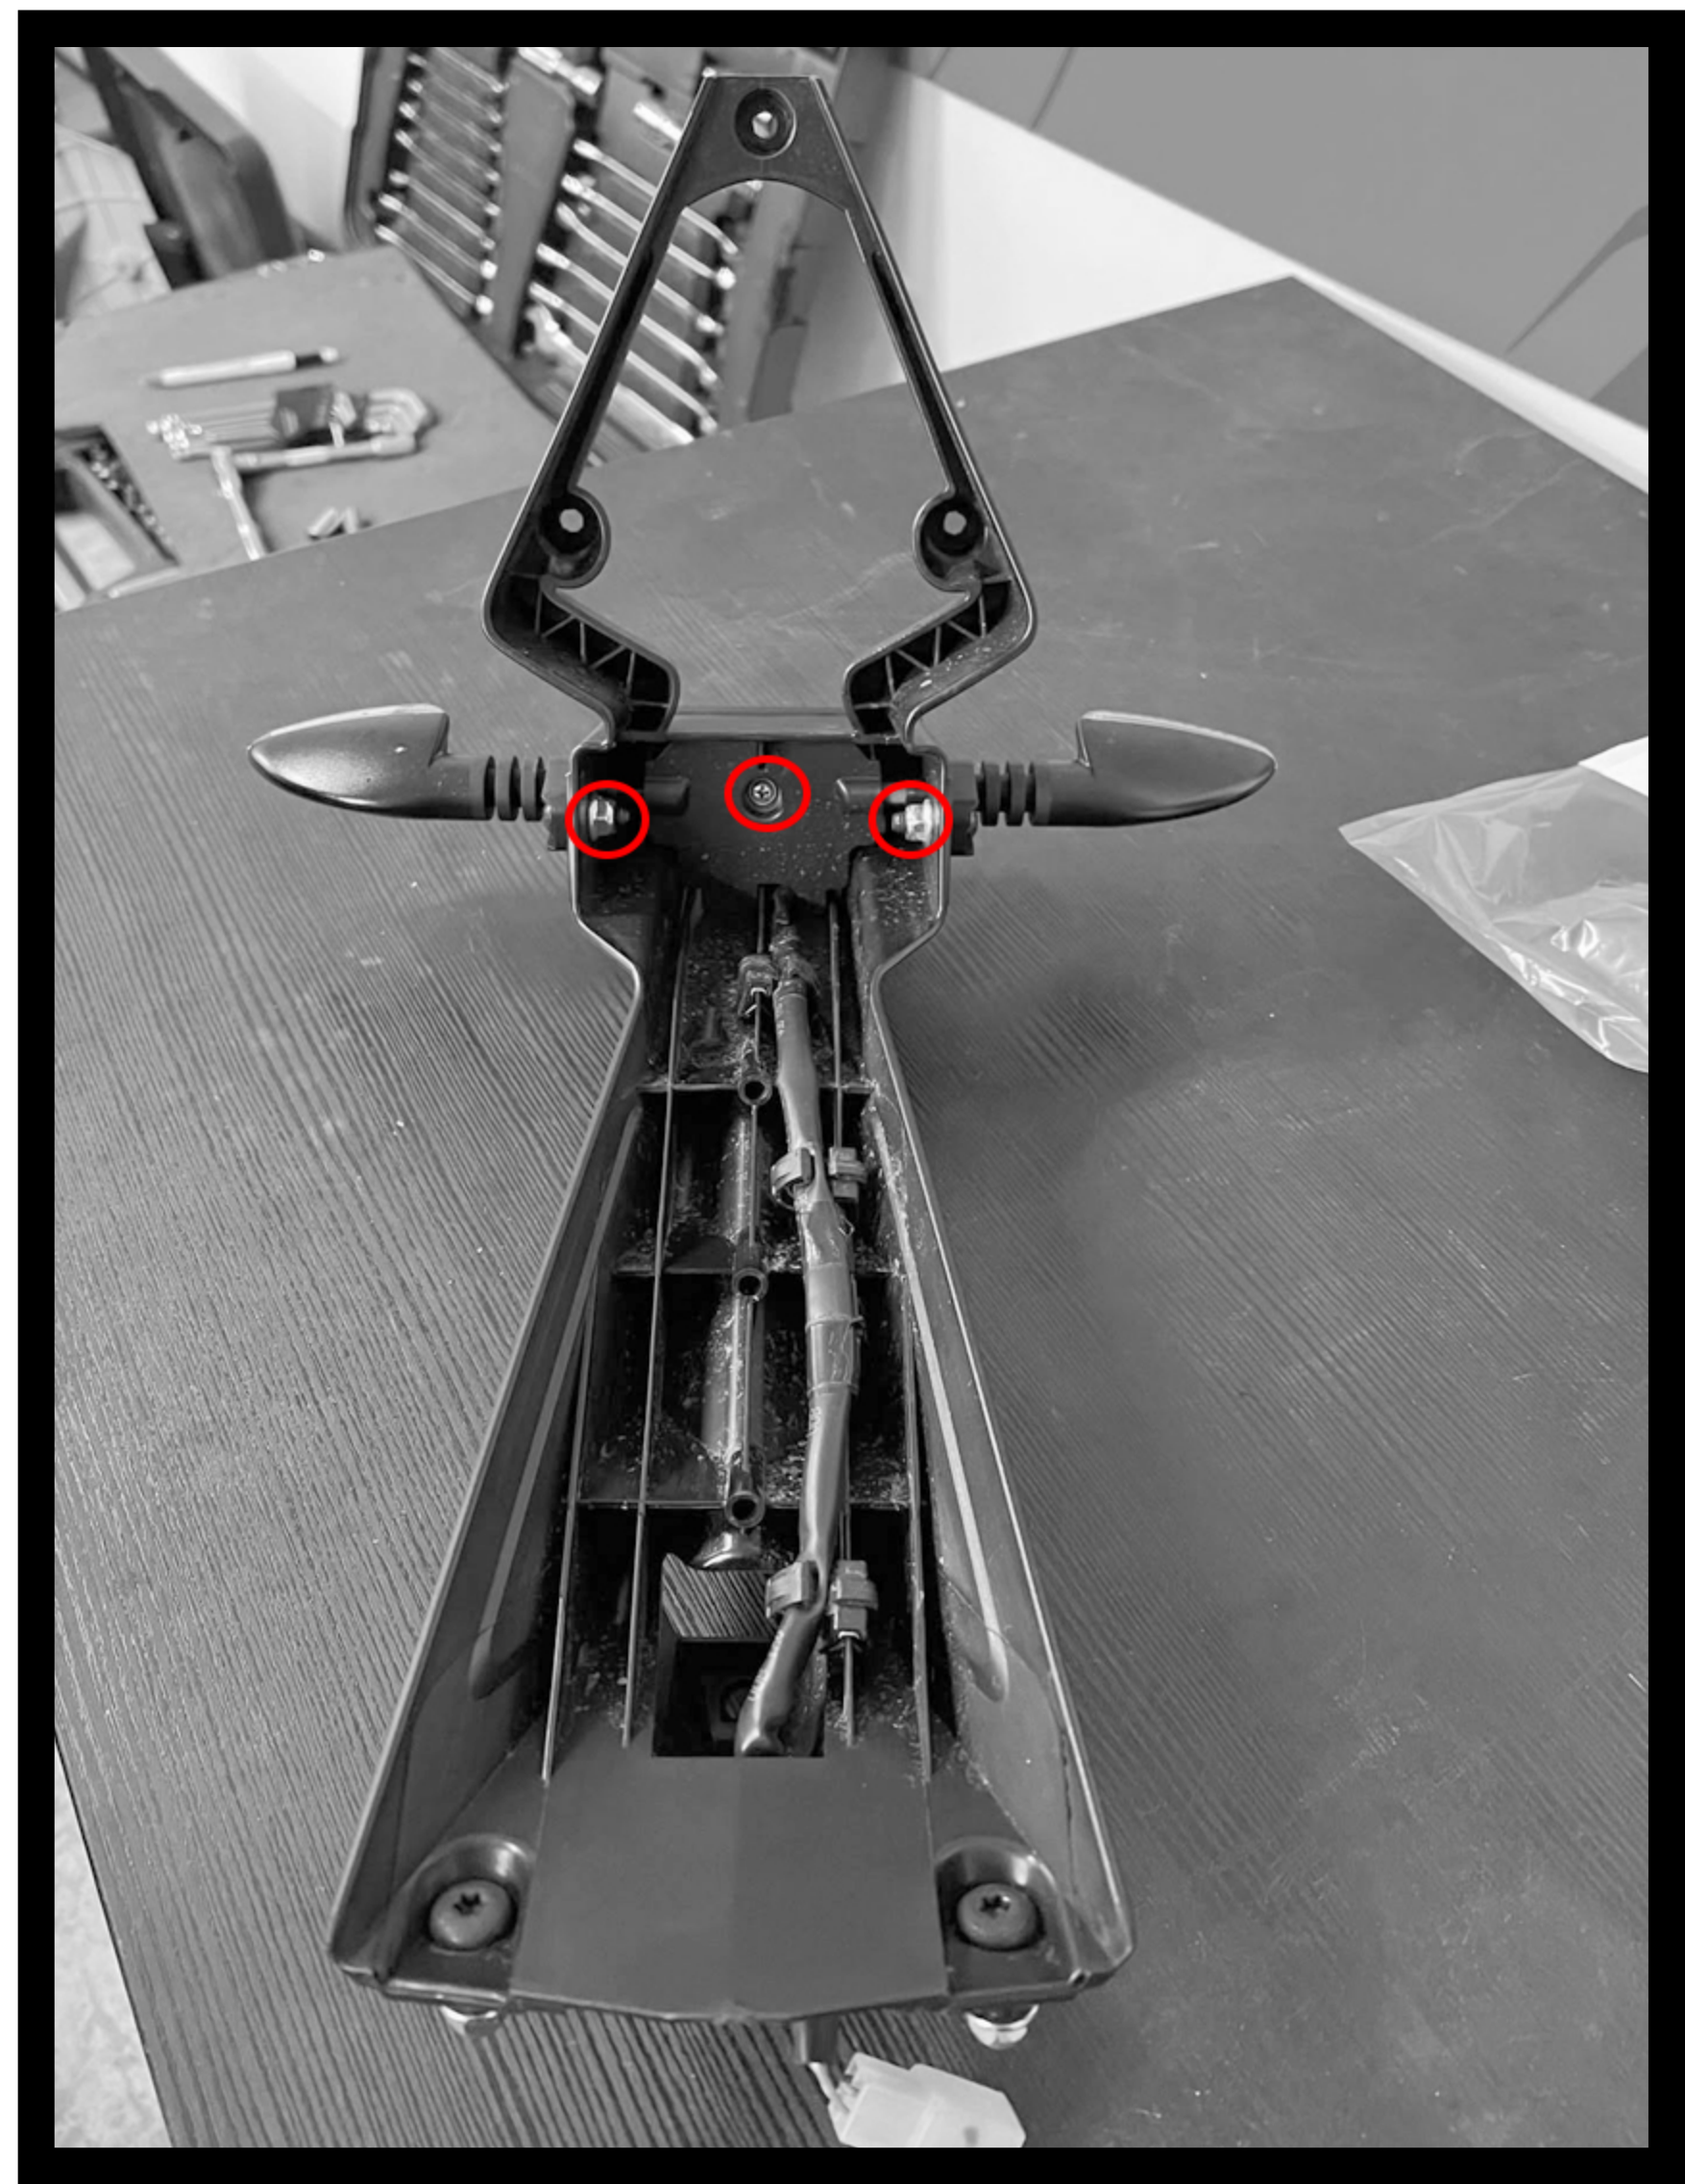


FIG. 4

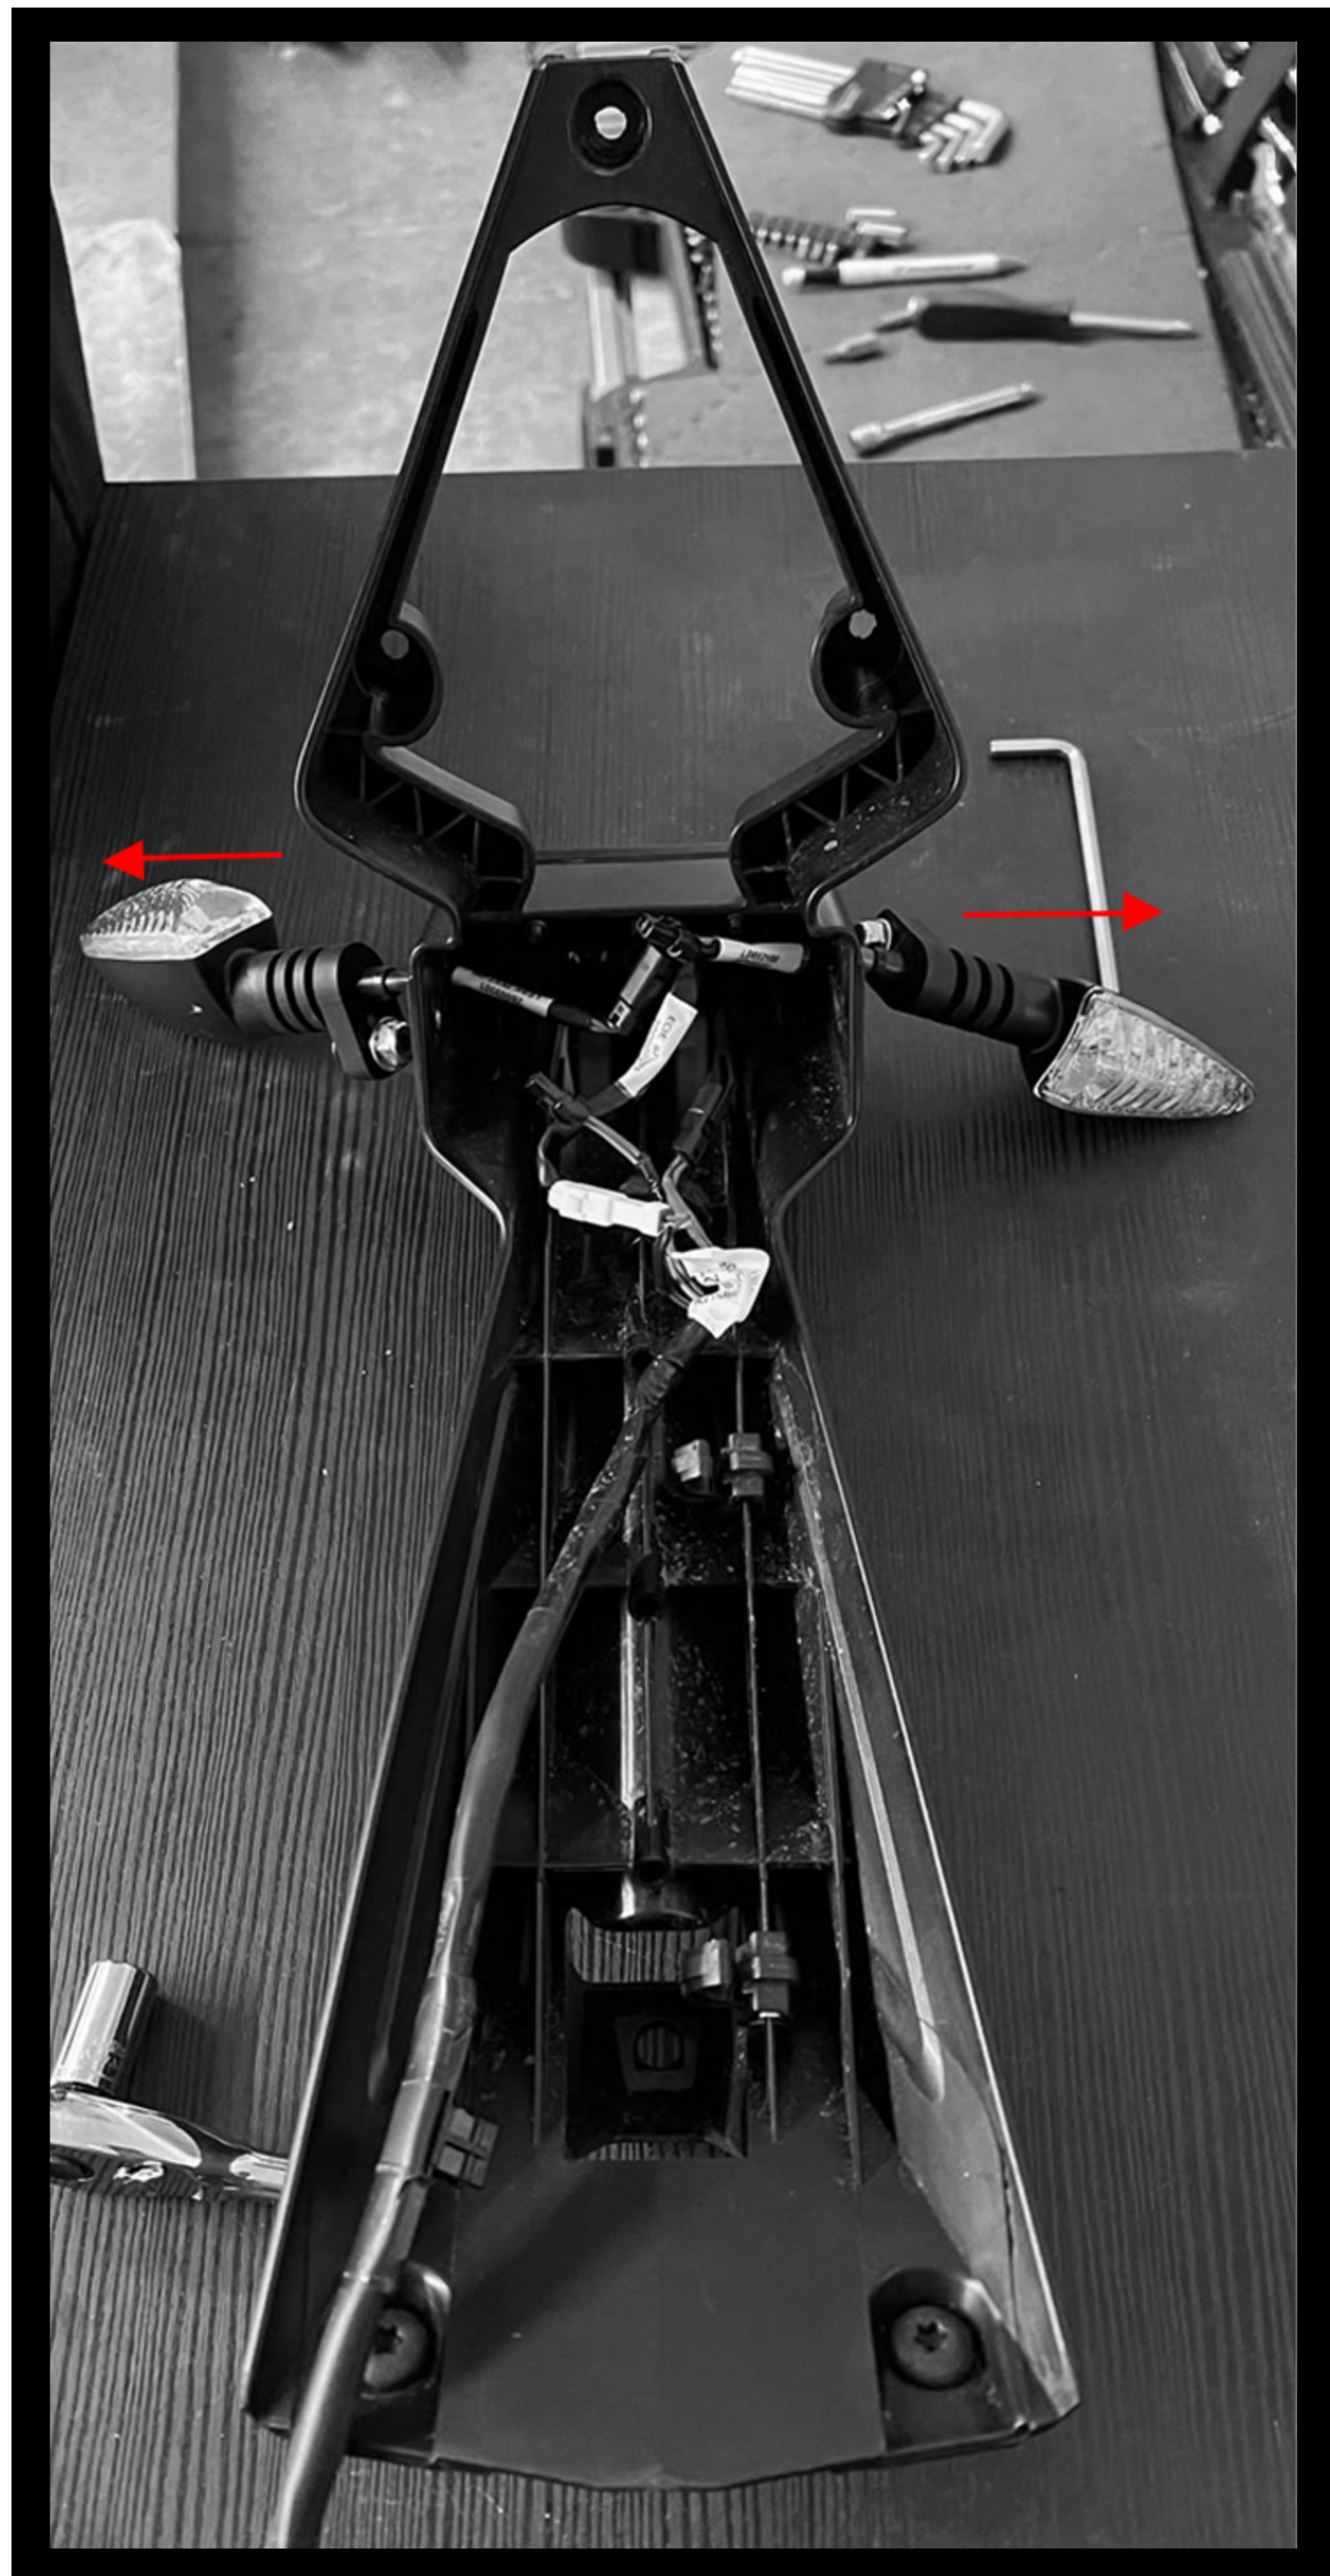


FIG. 5

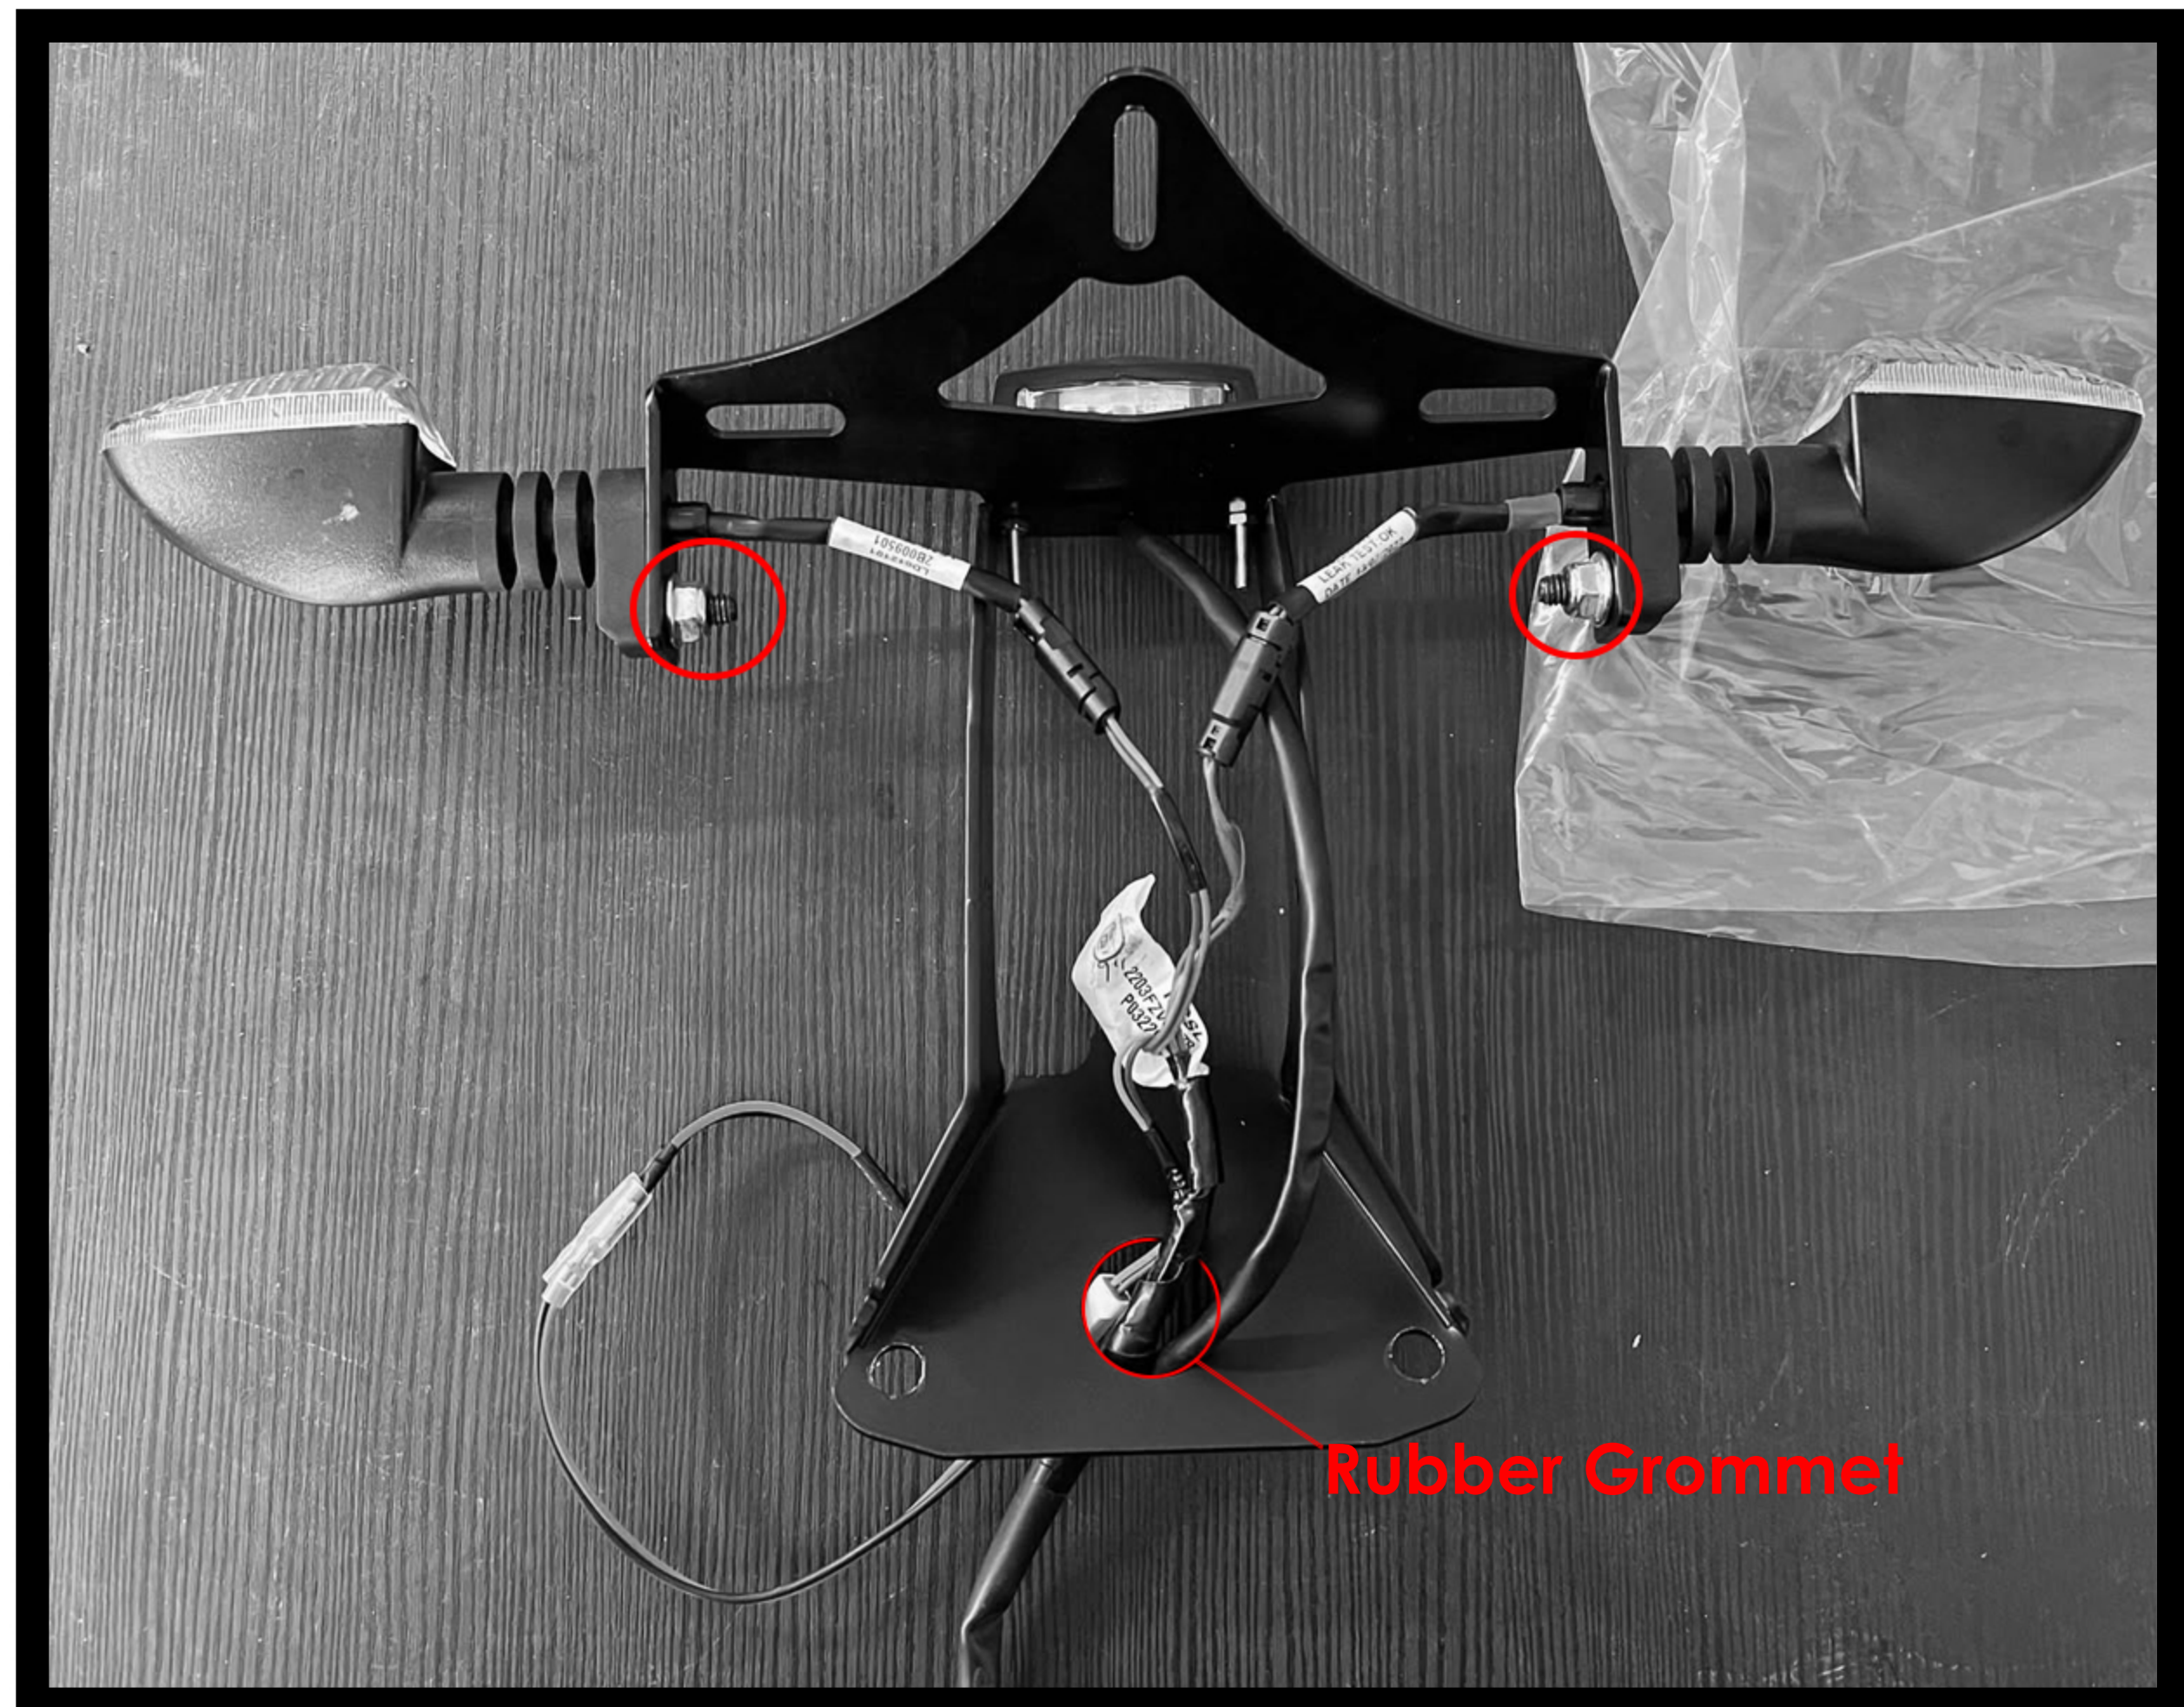


FIG. 6

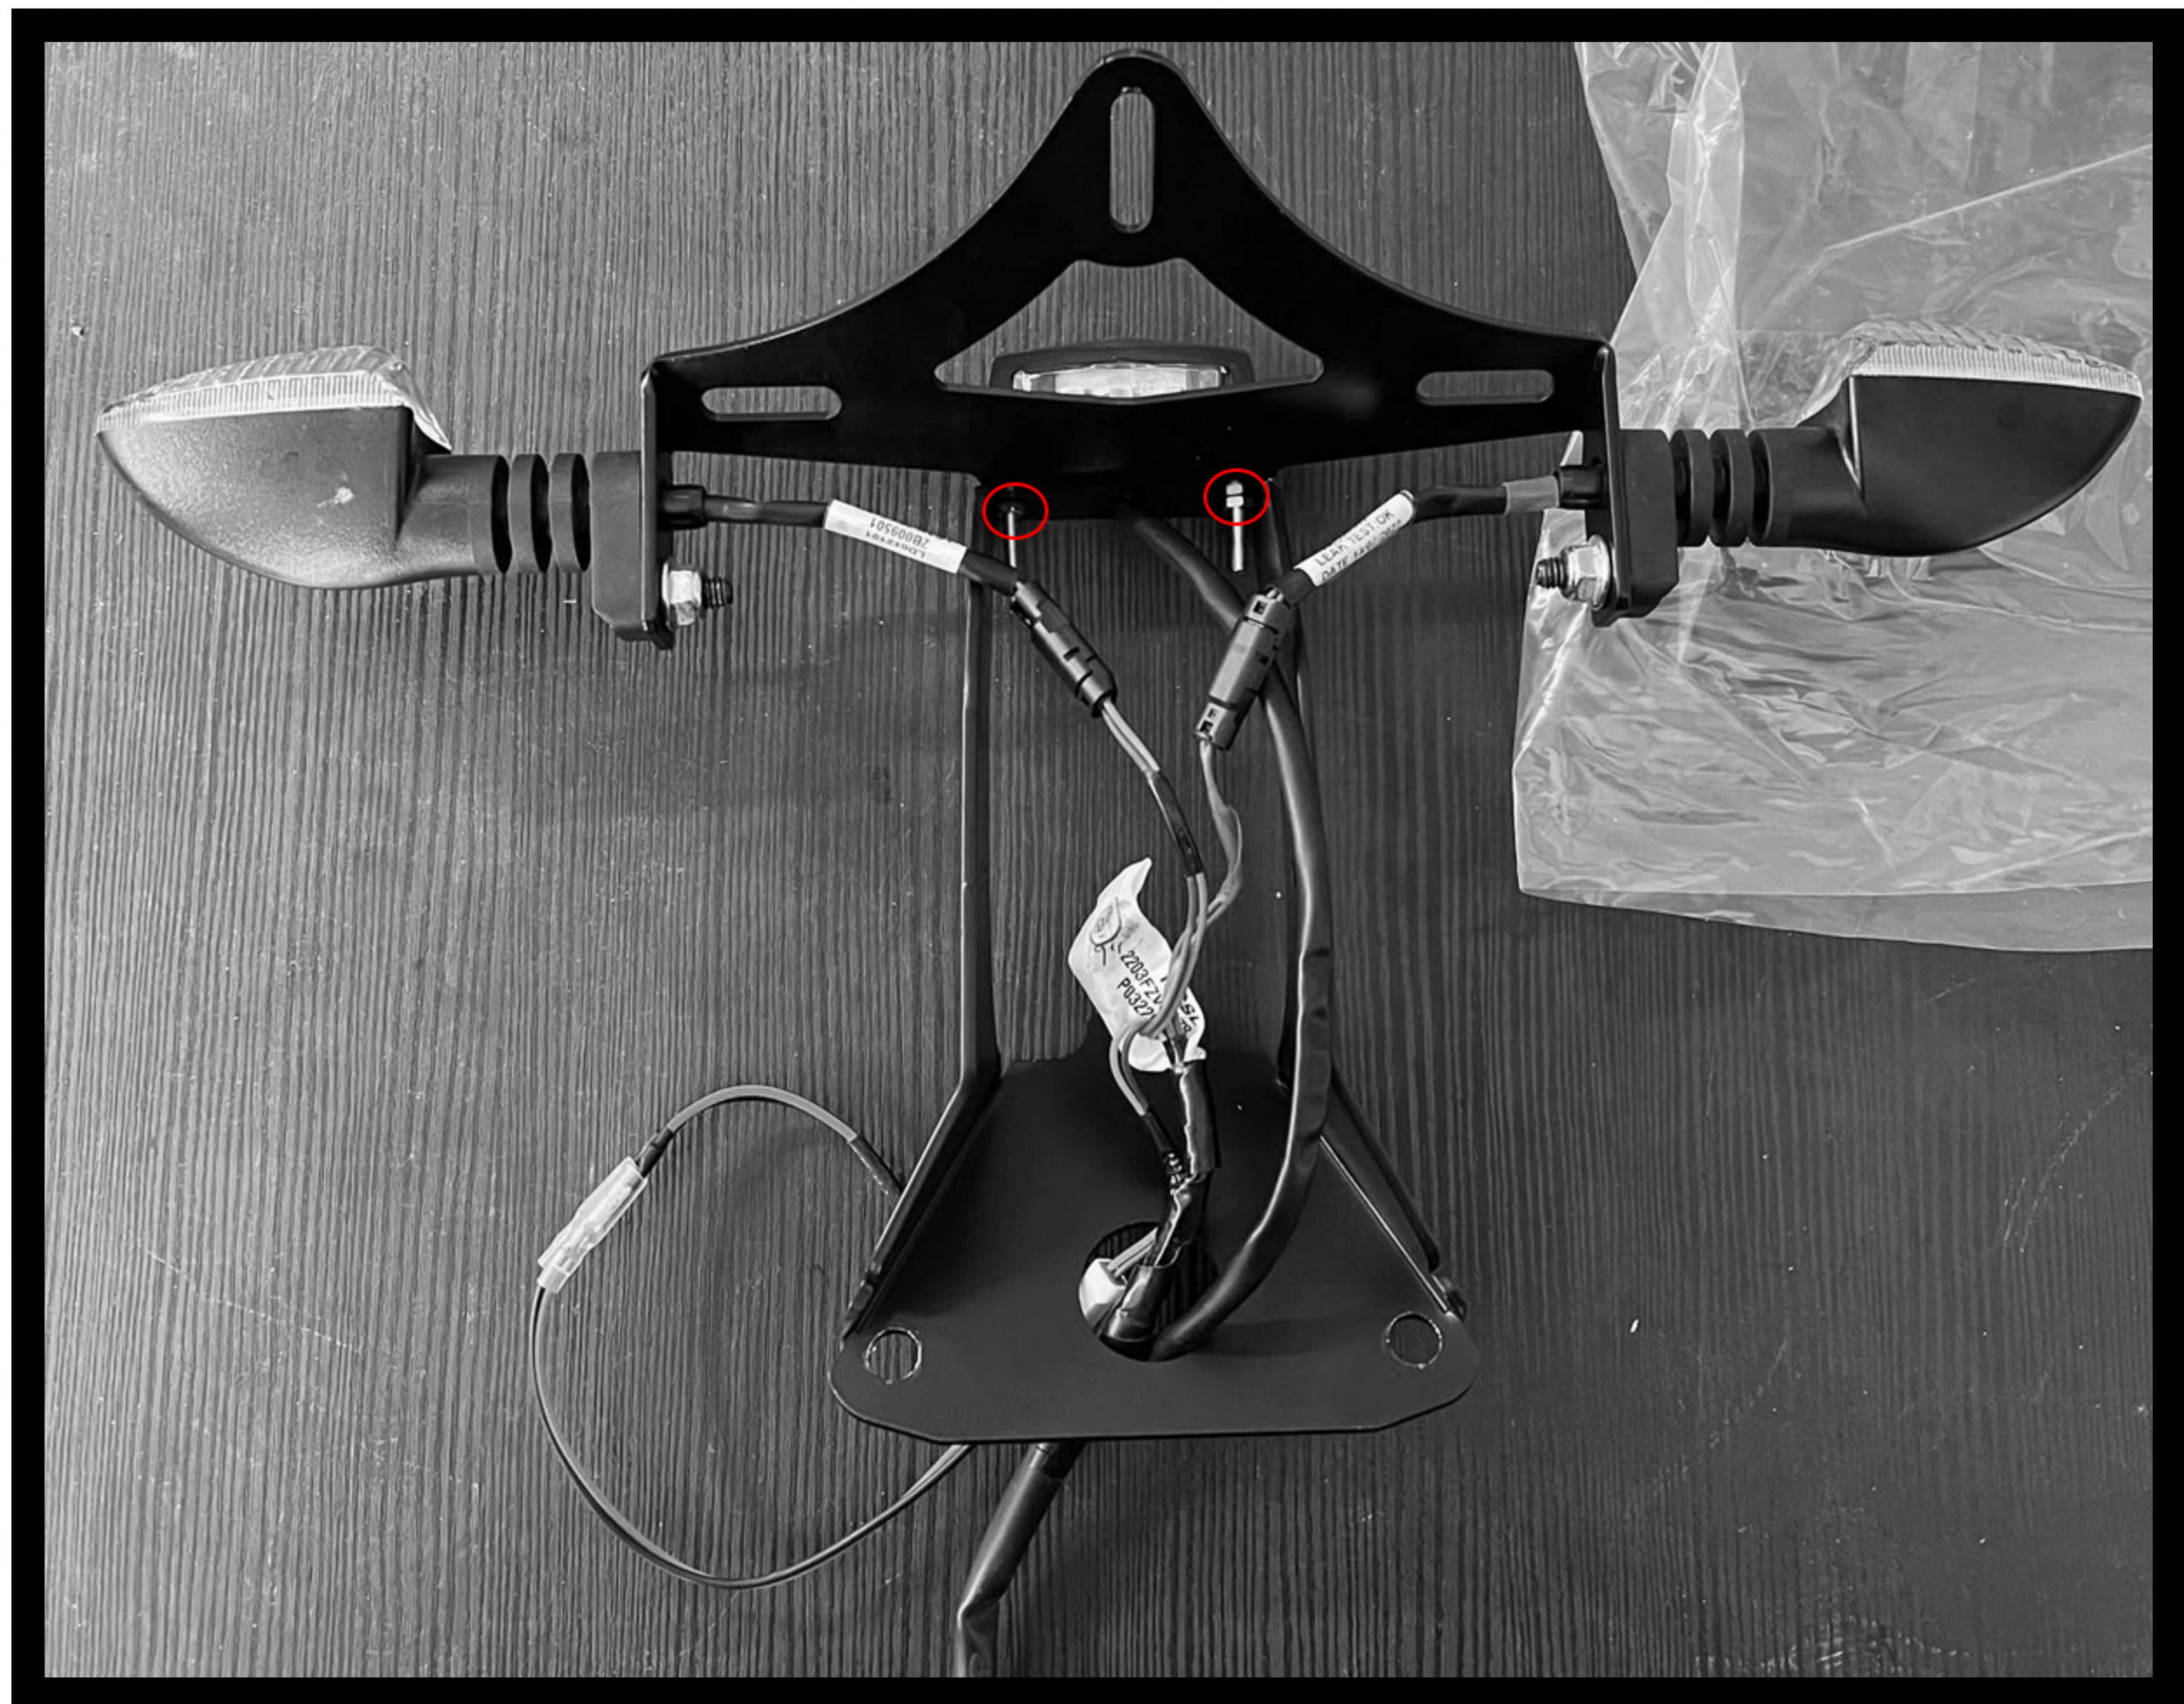


FIG. 7

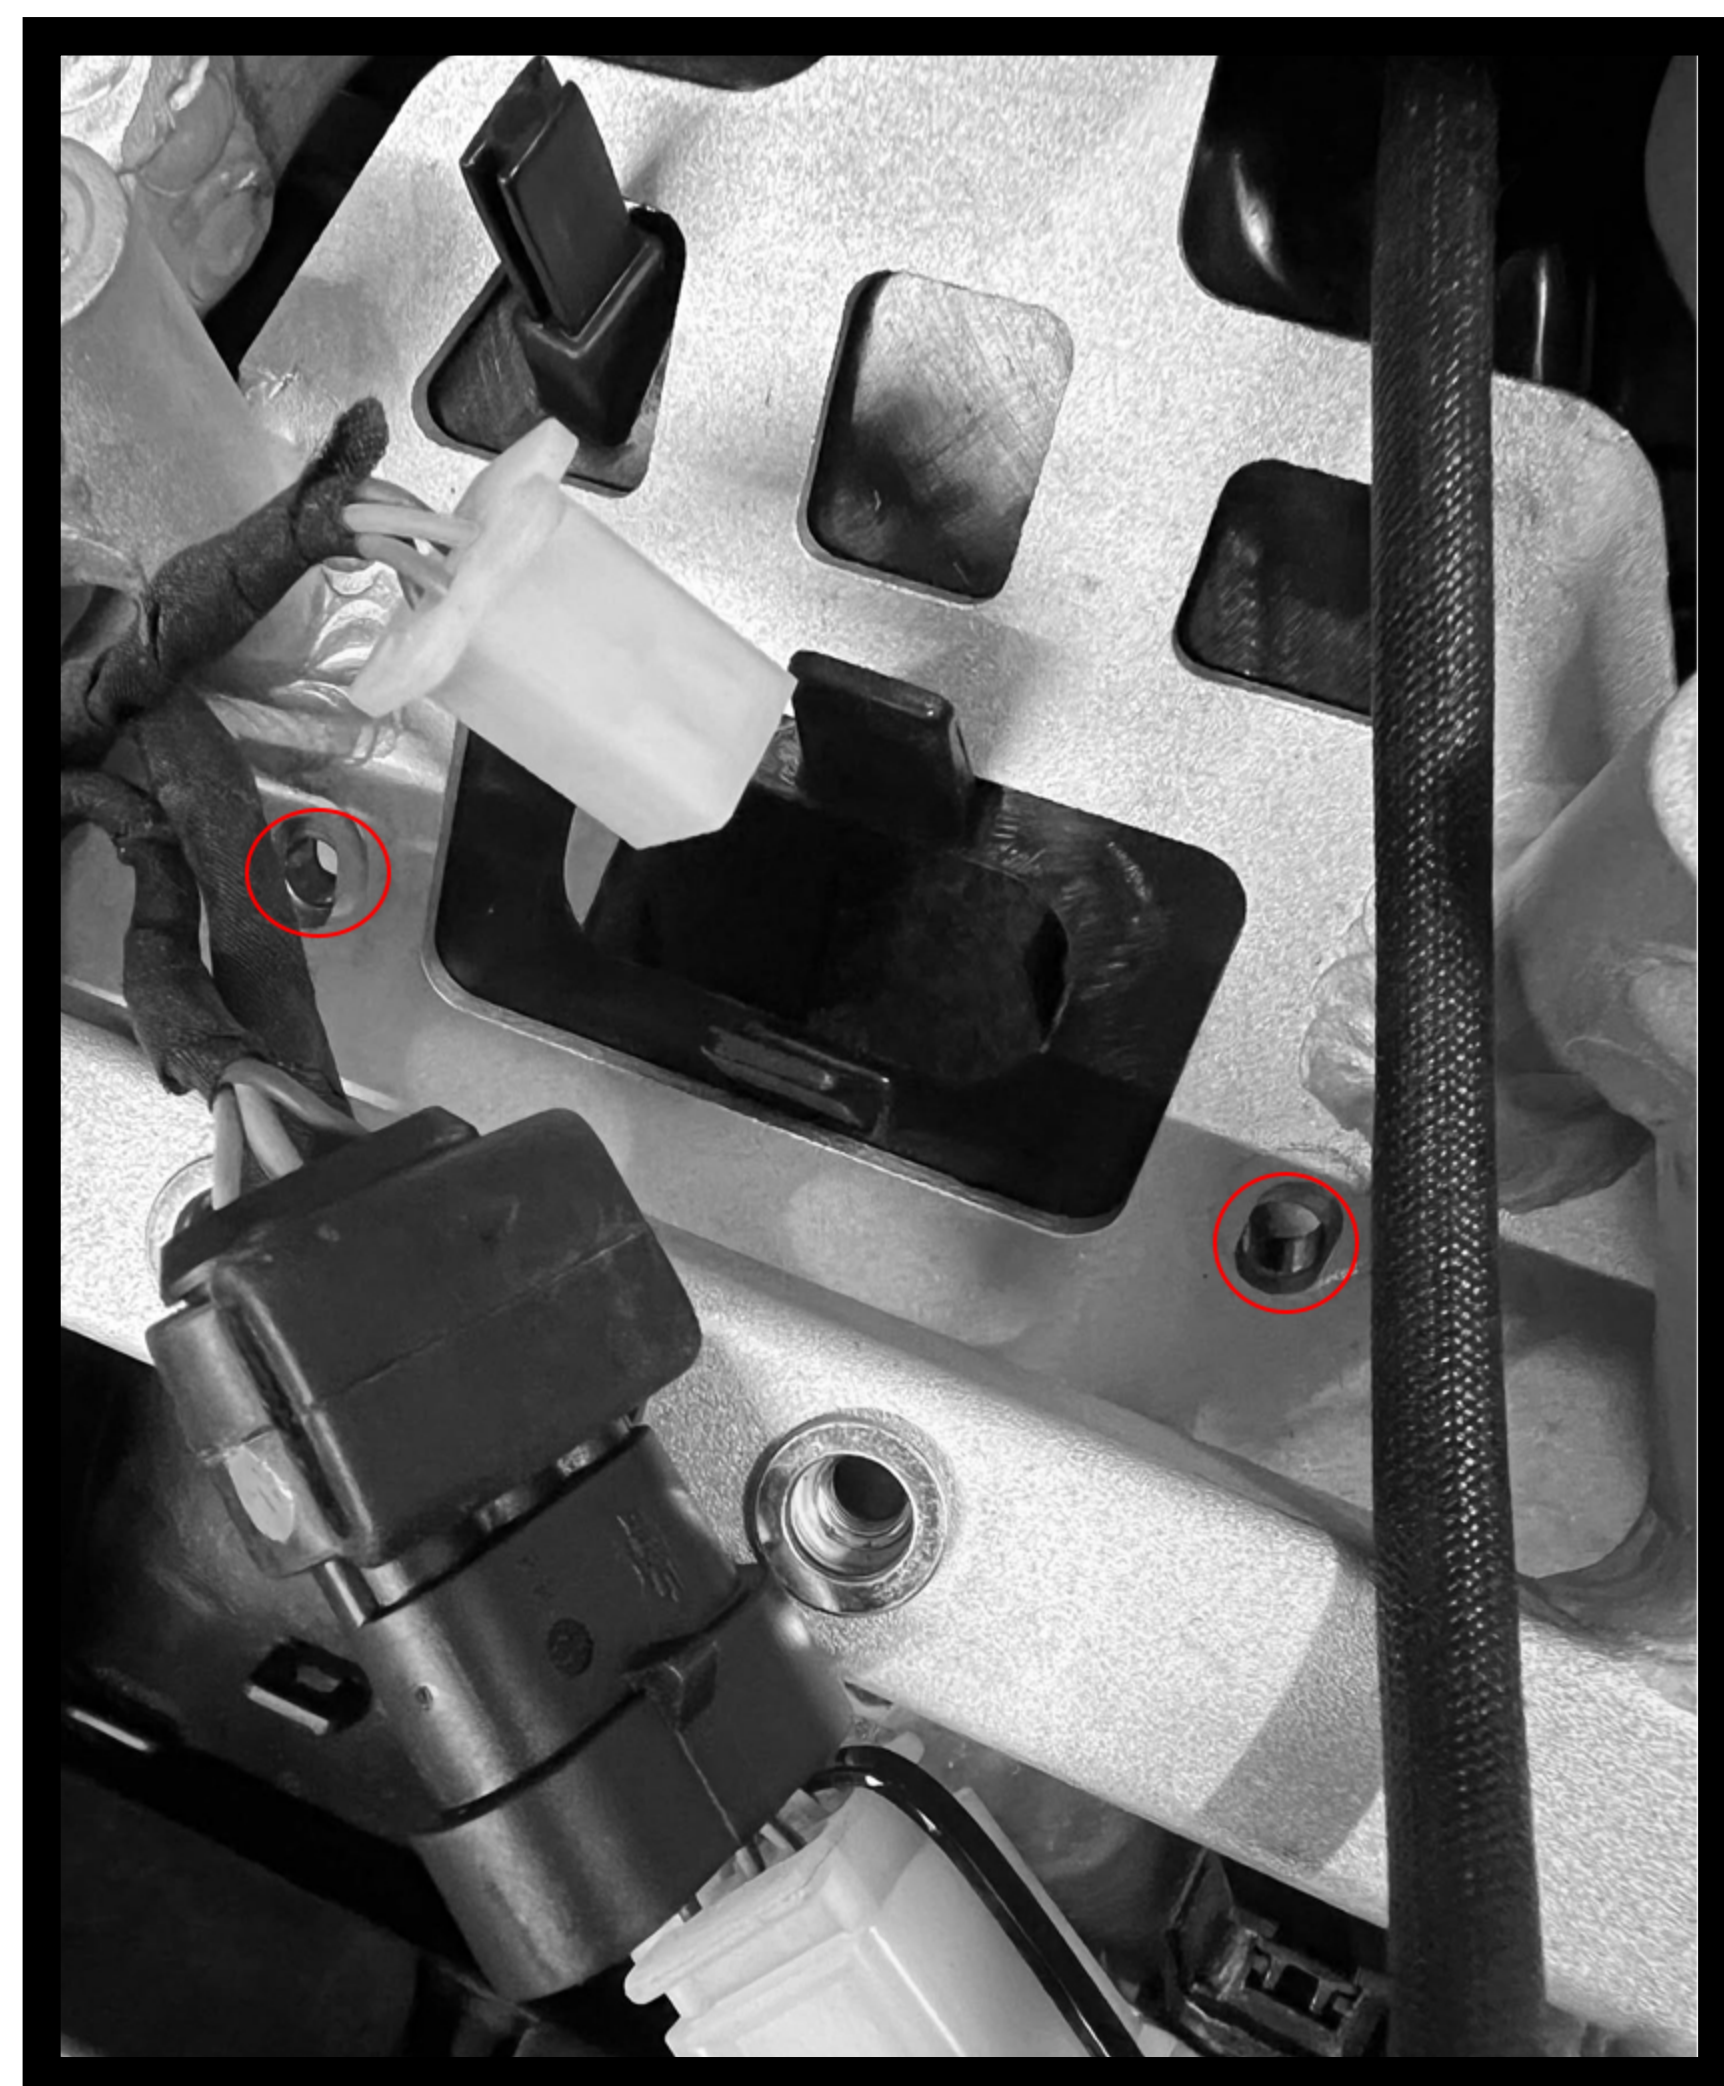


FIG. 8



FIG. 9

