

521202 Honda NC700 & NC750 S & X Radiator Guard Fitting Instructions

Kit Includes:

1X C521202 Radiator Guard


The Pyramid Radiator Guard is simple to fit. Remove the bolts and loosen the bracket as shown in **Fig 1** below.

Align the radiator guard with the top mounting locations. Begin threading the bolts back into their pre-existing positions but do not fully tighten.

Insert the bottom of the radiator guard between the previously loosened bracket and radiator.

Begin to fully tighten both the top fittings and the lower OEM bracket bolt.

Check fixings periodically.

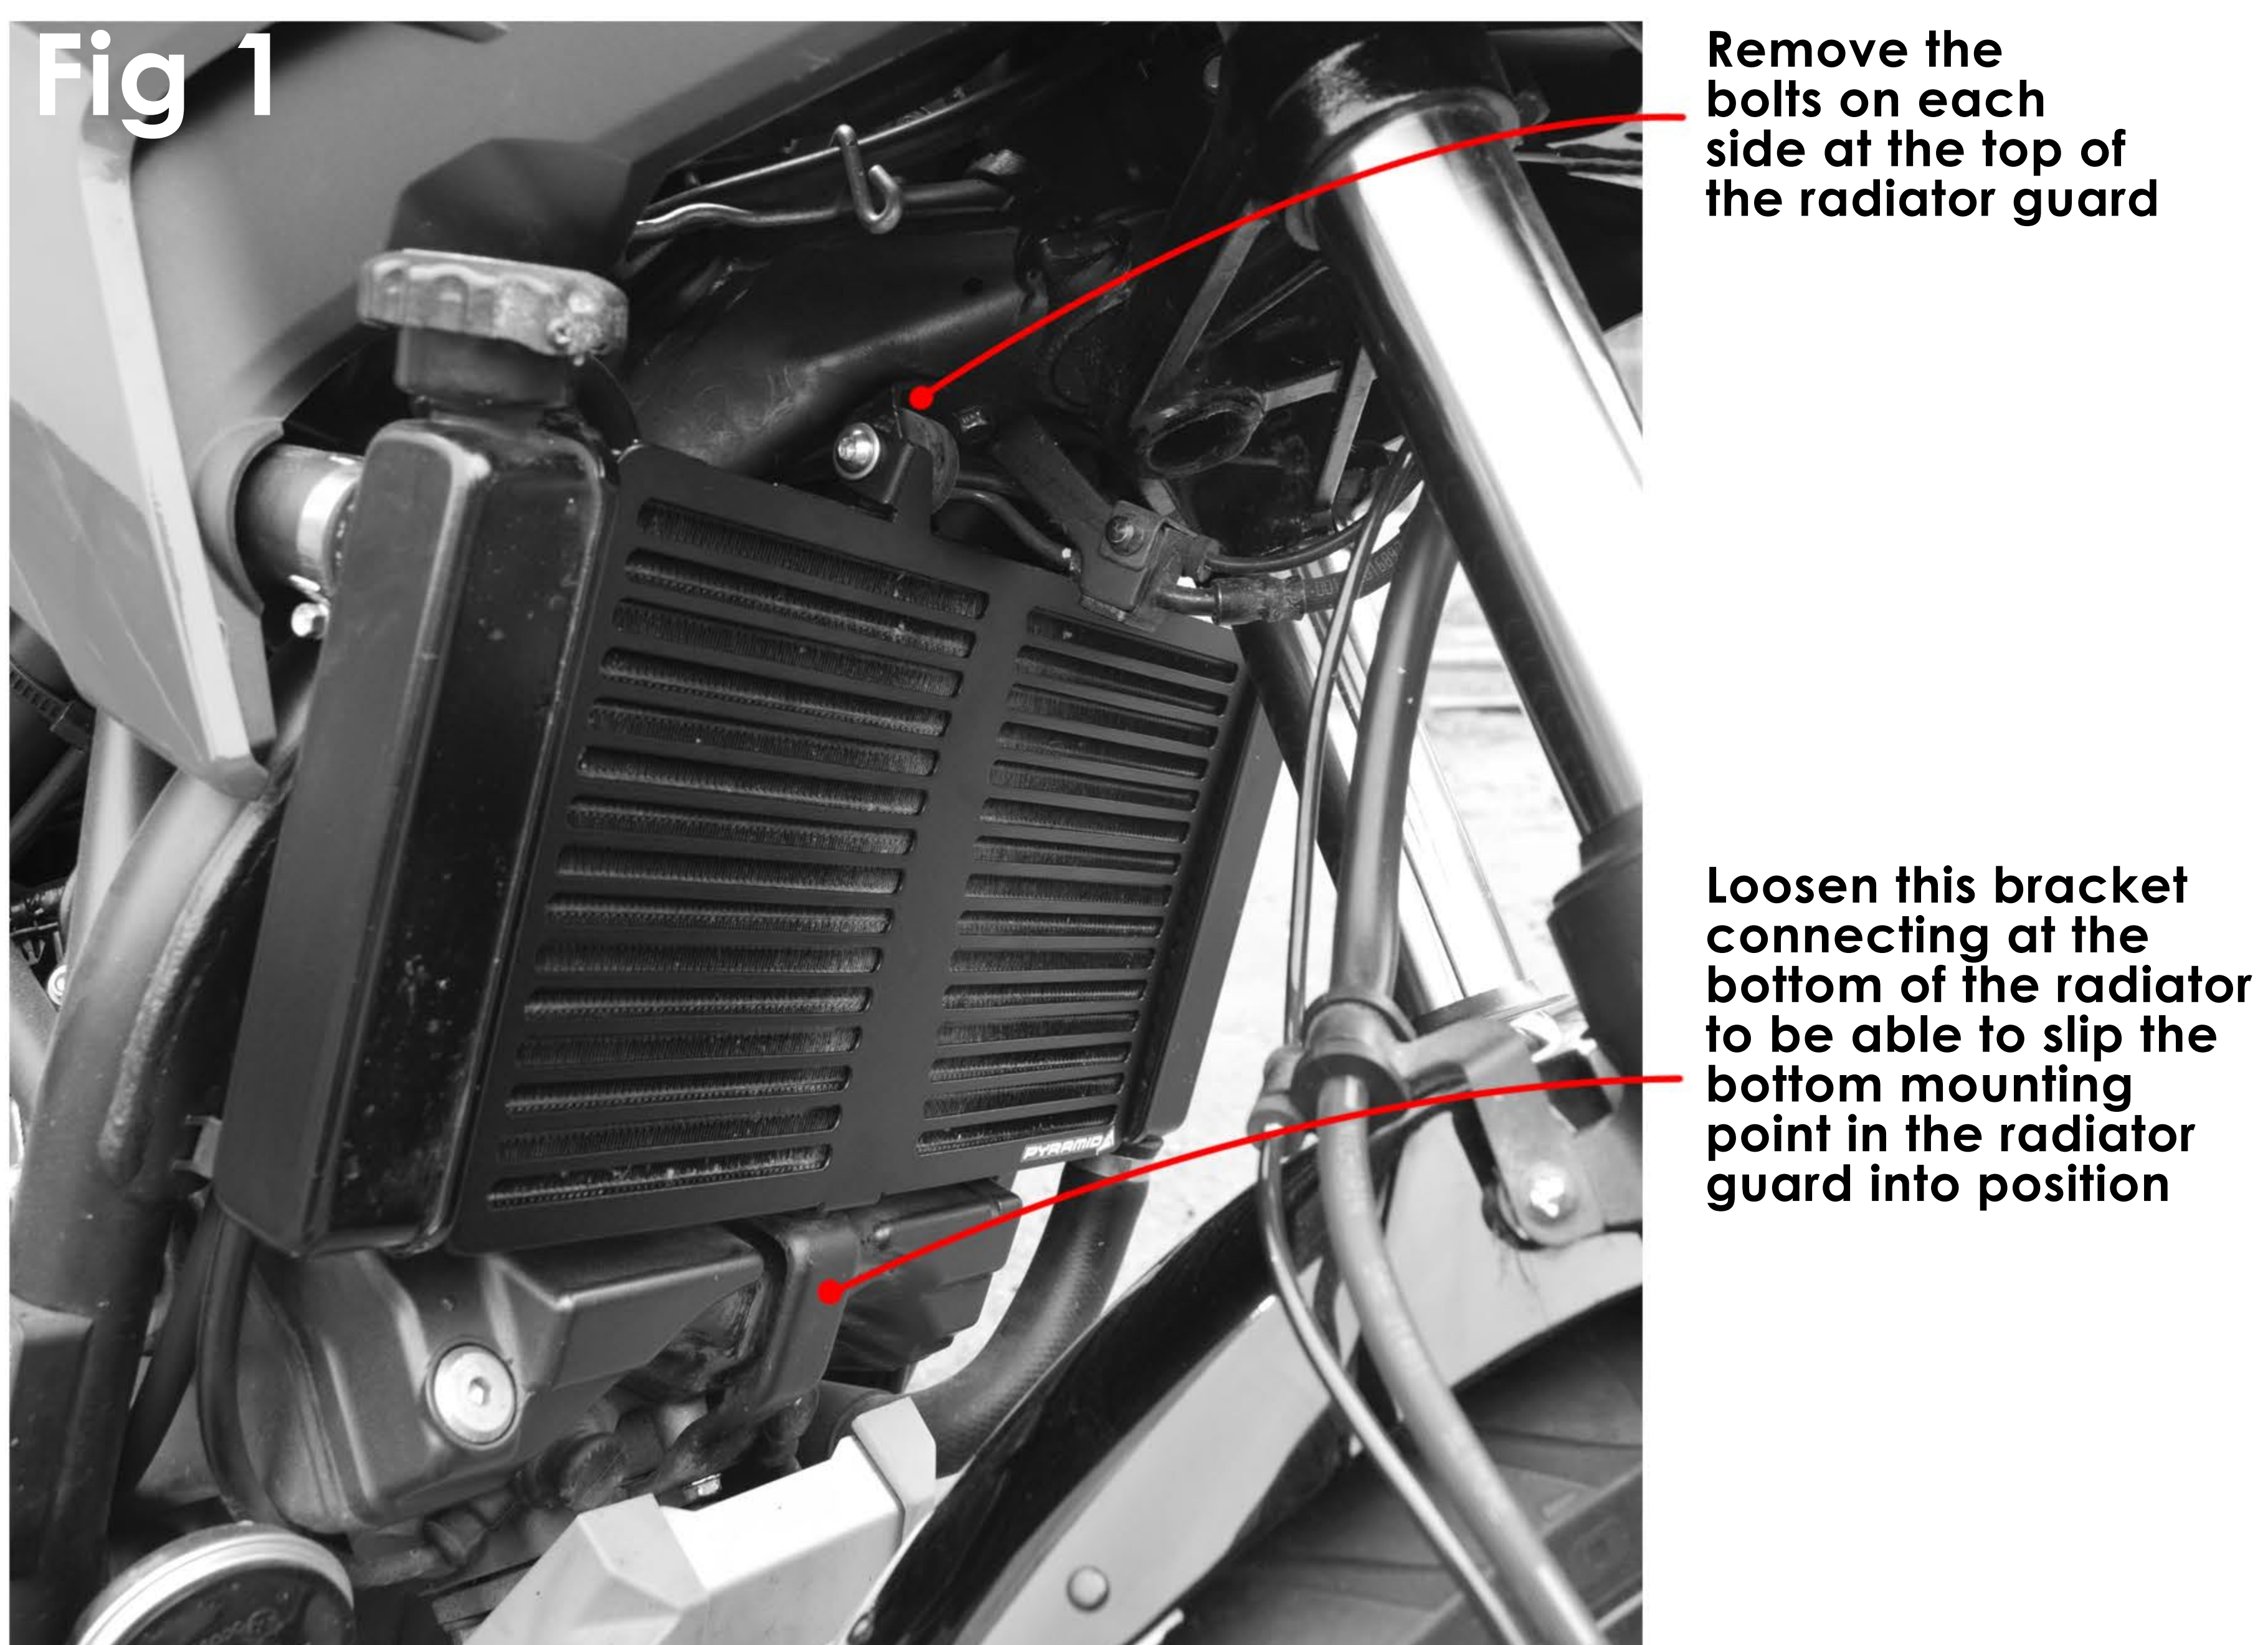

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!