


# 521919 Honda NC750X Radiator Guard Fitting Instructions

## Kit Includes:

1X	C521919	Radiator Guard
1X	CBOLM60012	M6 X 30mm SS Bolt
1X	CNUTM60003	M6 SS Nyloc Nut
2X	CWASM60001	M6 SS Washer
6X	CFOA0001	Foam Strip 50mm
1X	CAB0200	Small Cable Tie

**PYRAMID** 

- The Pyramid radiator guard is simple to fit - the foam strips provided should be fitted to the rear of the radiator guard to avoid any unnecessary contact between the radiator and the guard.
- Remove the OEM bolt as shown below and then fit the radiator guard using the same OEM bolt and M6 fittings provided in this fitting kit.
- Attach the small cable tie as shown below.
- Ensure fixings are checked periodically.

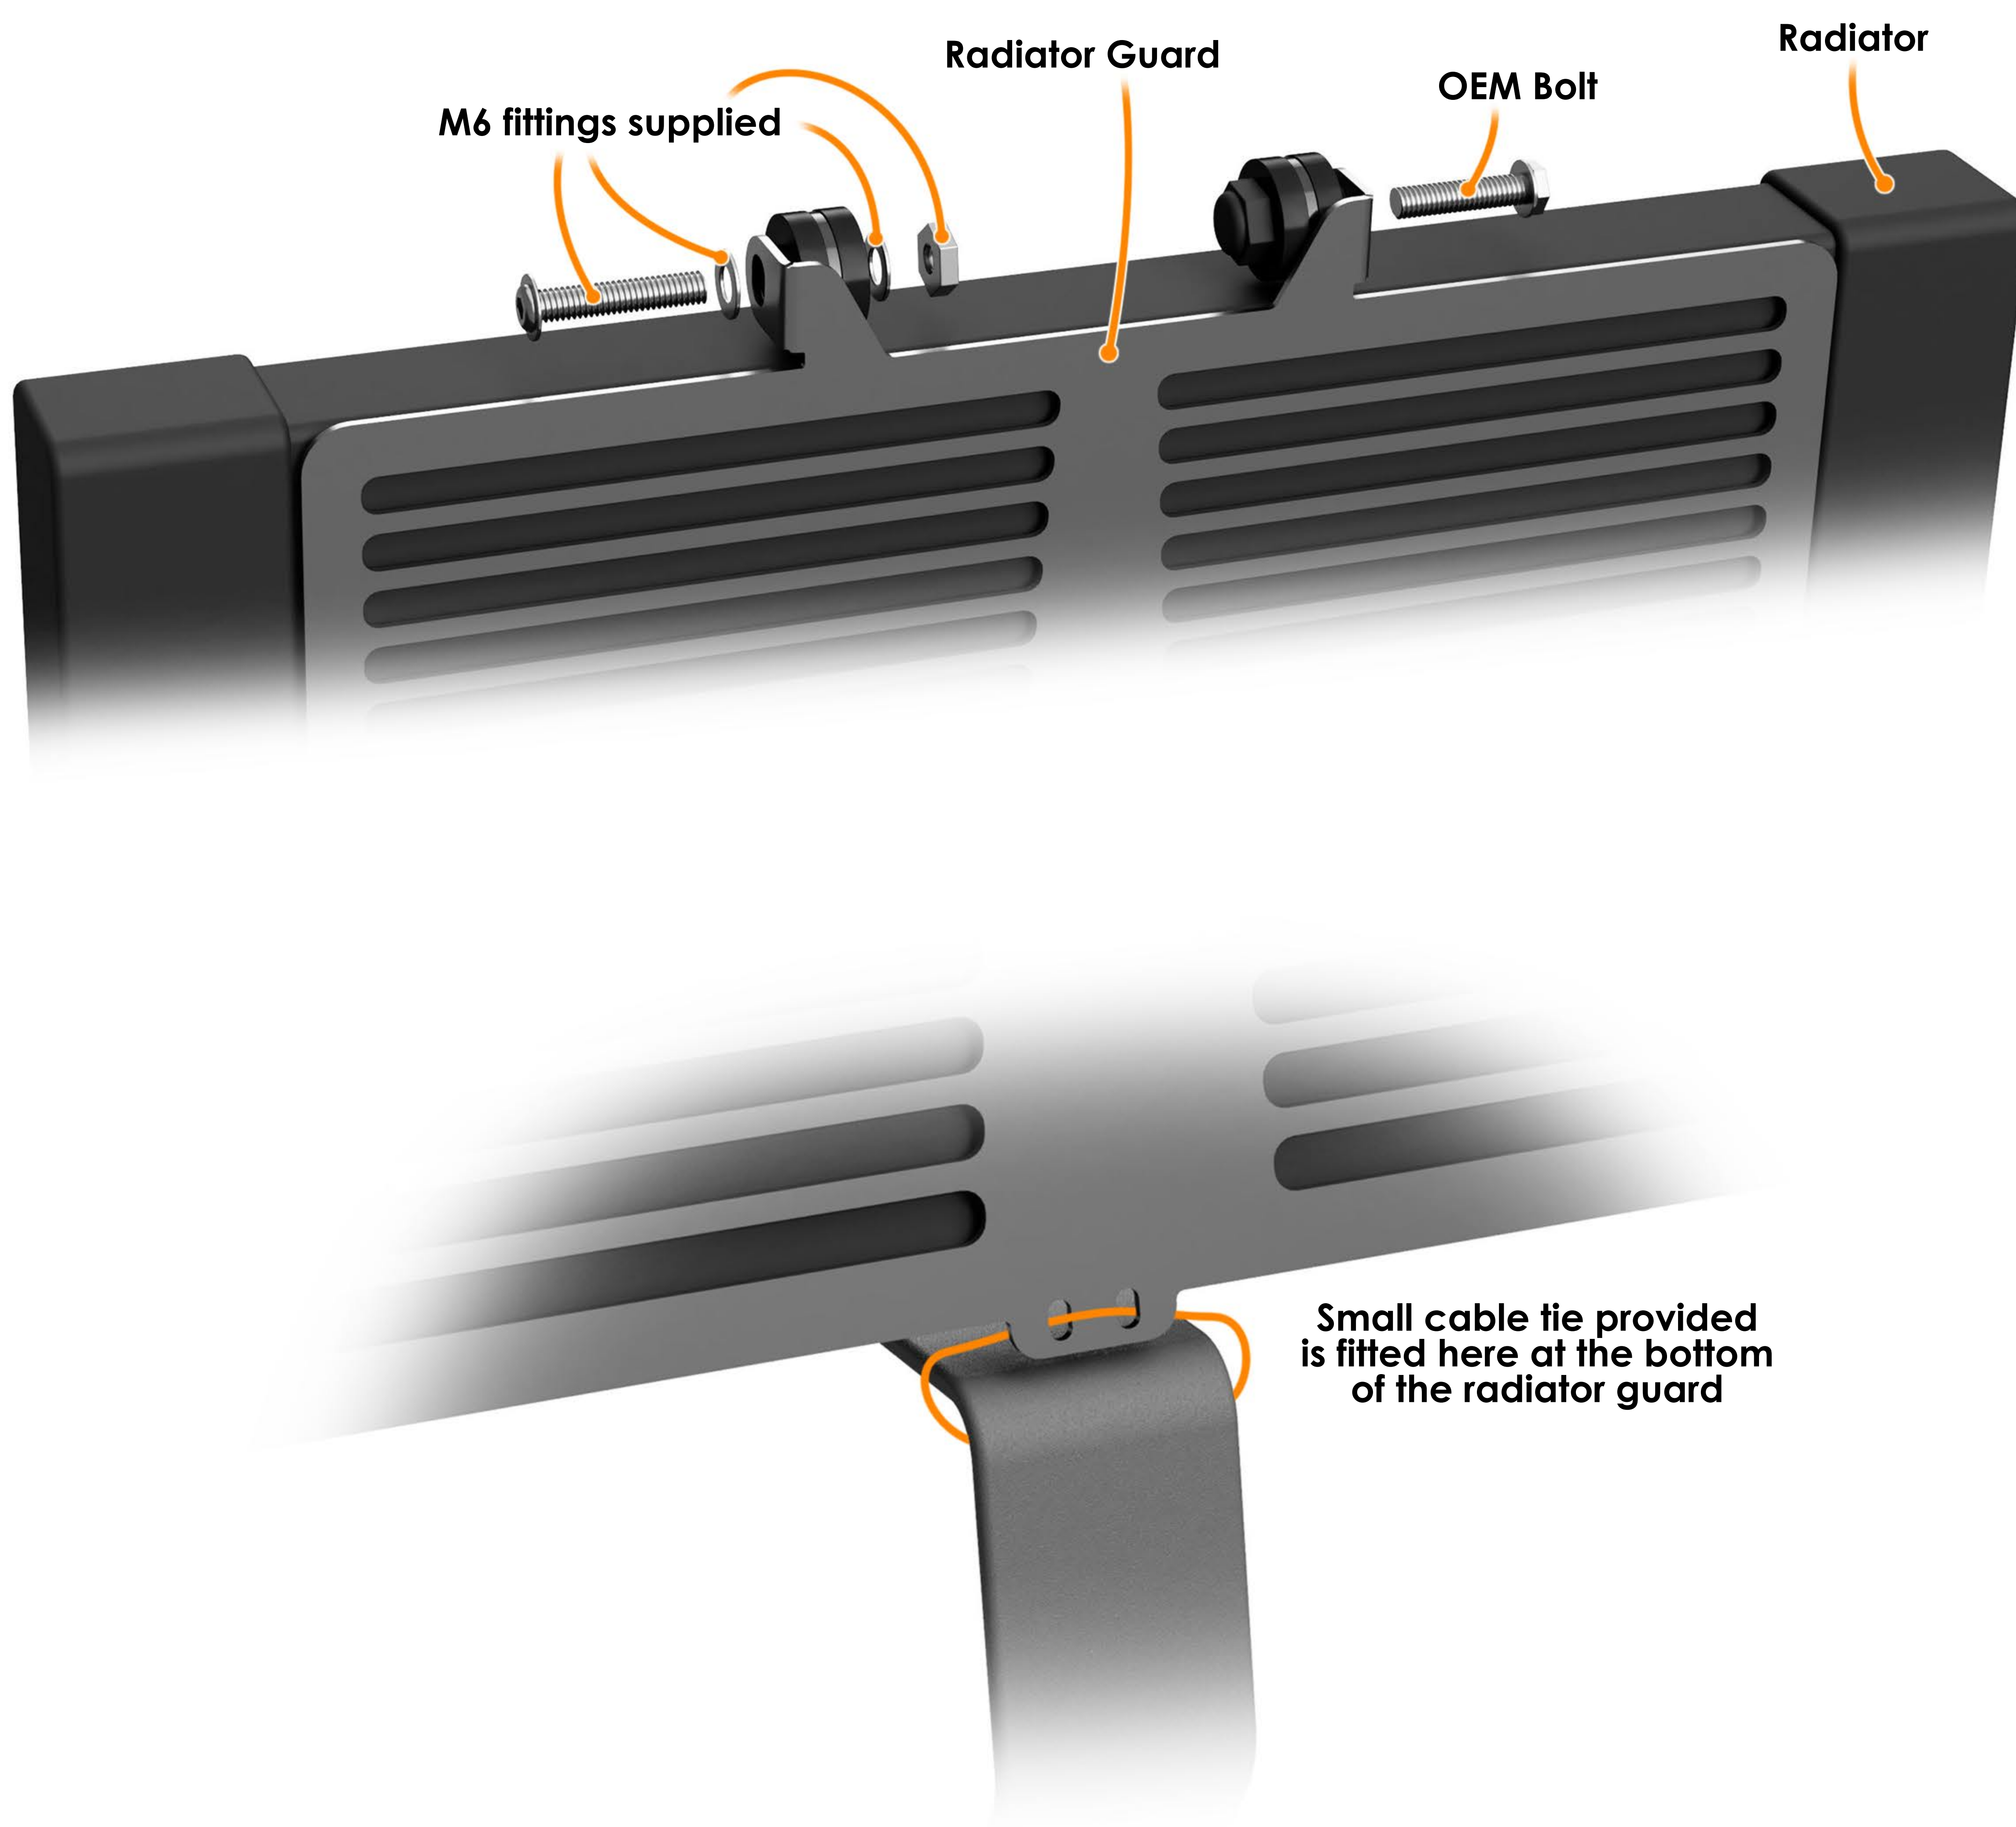

Any questions? We're here to help!  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
+44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
feel free to leave us a review!

Illustrations and pictures are always clearer on our website PDF!