


526120 Triumph T100 / T120 / Speed Twin / Street Twin + more Radiator Guard Fitting Instructions

Kit Includes:

1X	C526120	Radiator Guard
2X	CBOLM50008	M5 X 16mm Stainless Bolt
6X	CWASM50002	M5 Stainless Washer

- The Pyramid radiator guard is simple to fit.
- Remove the two OEM bolts (top and bottom of the radiator).
- Attach the radiator guard using the fittings supplied - see images below for fitting sequence.
- Check fittings periodically.

Note: these two washers behind the radiator create a gap for the radiator guard to clear the 'ribs' in the radiator.

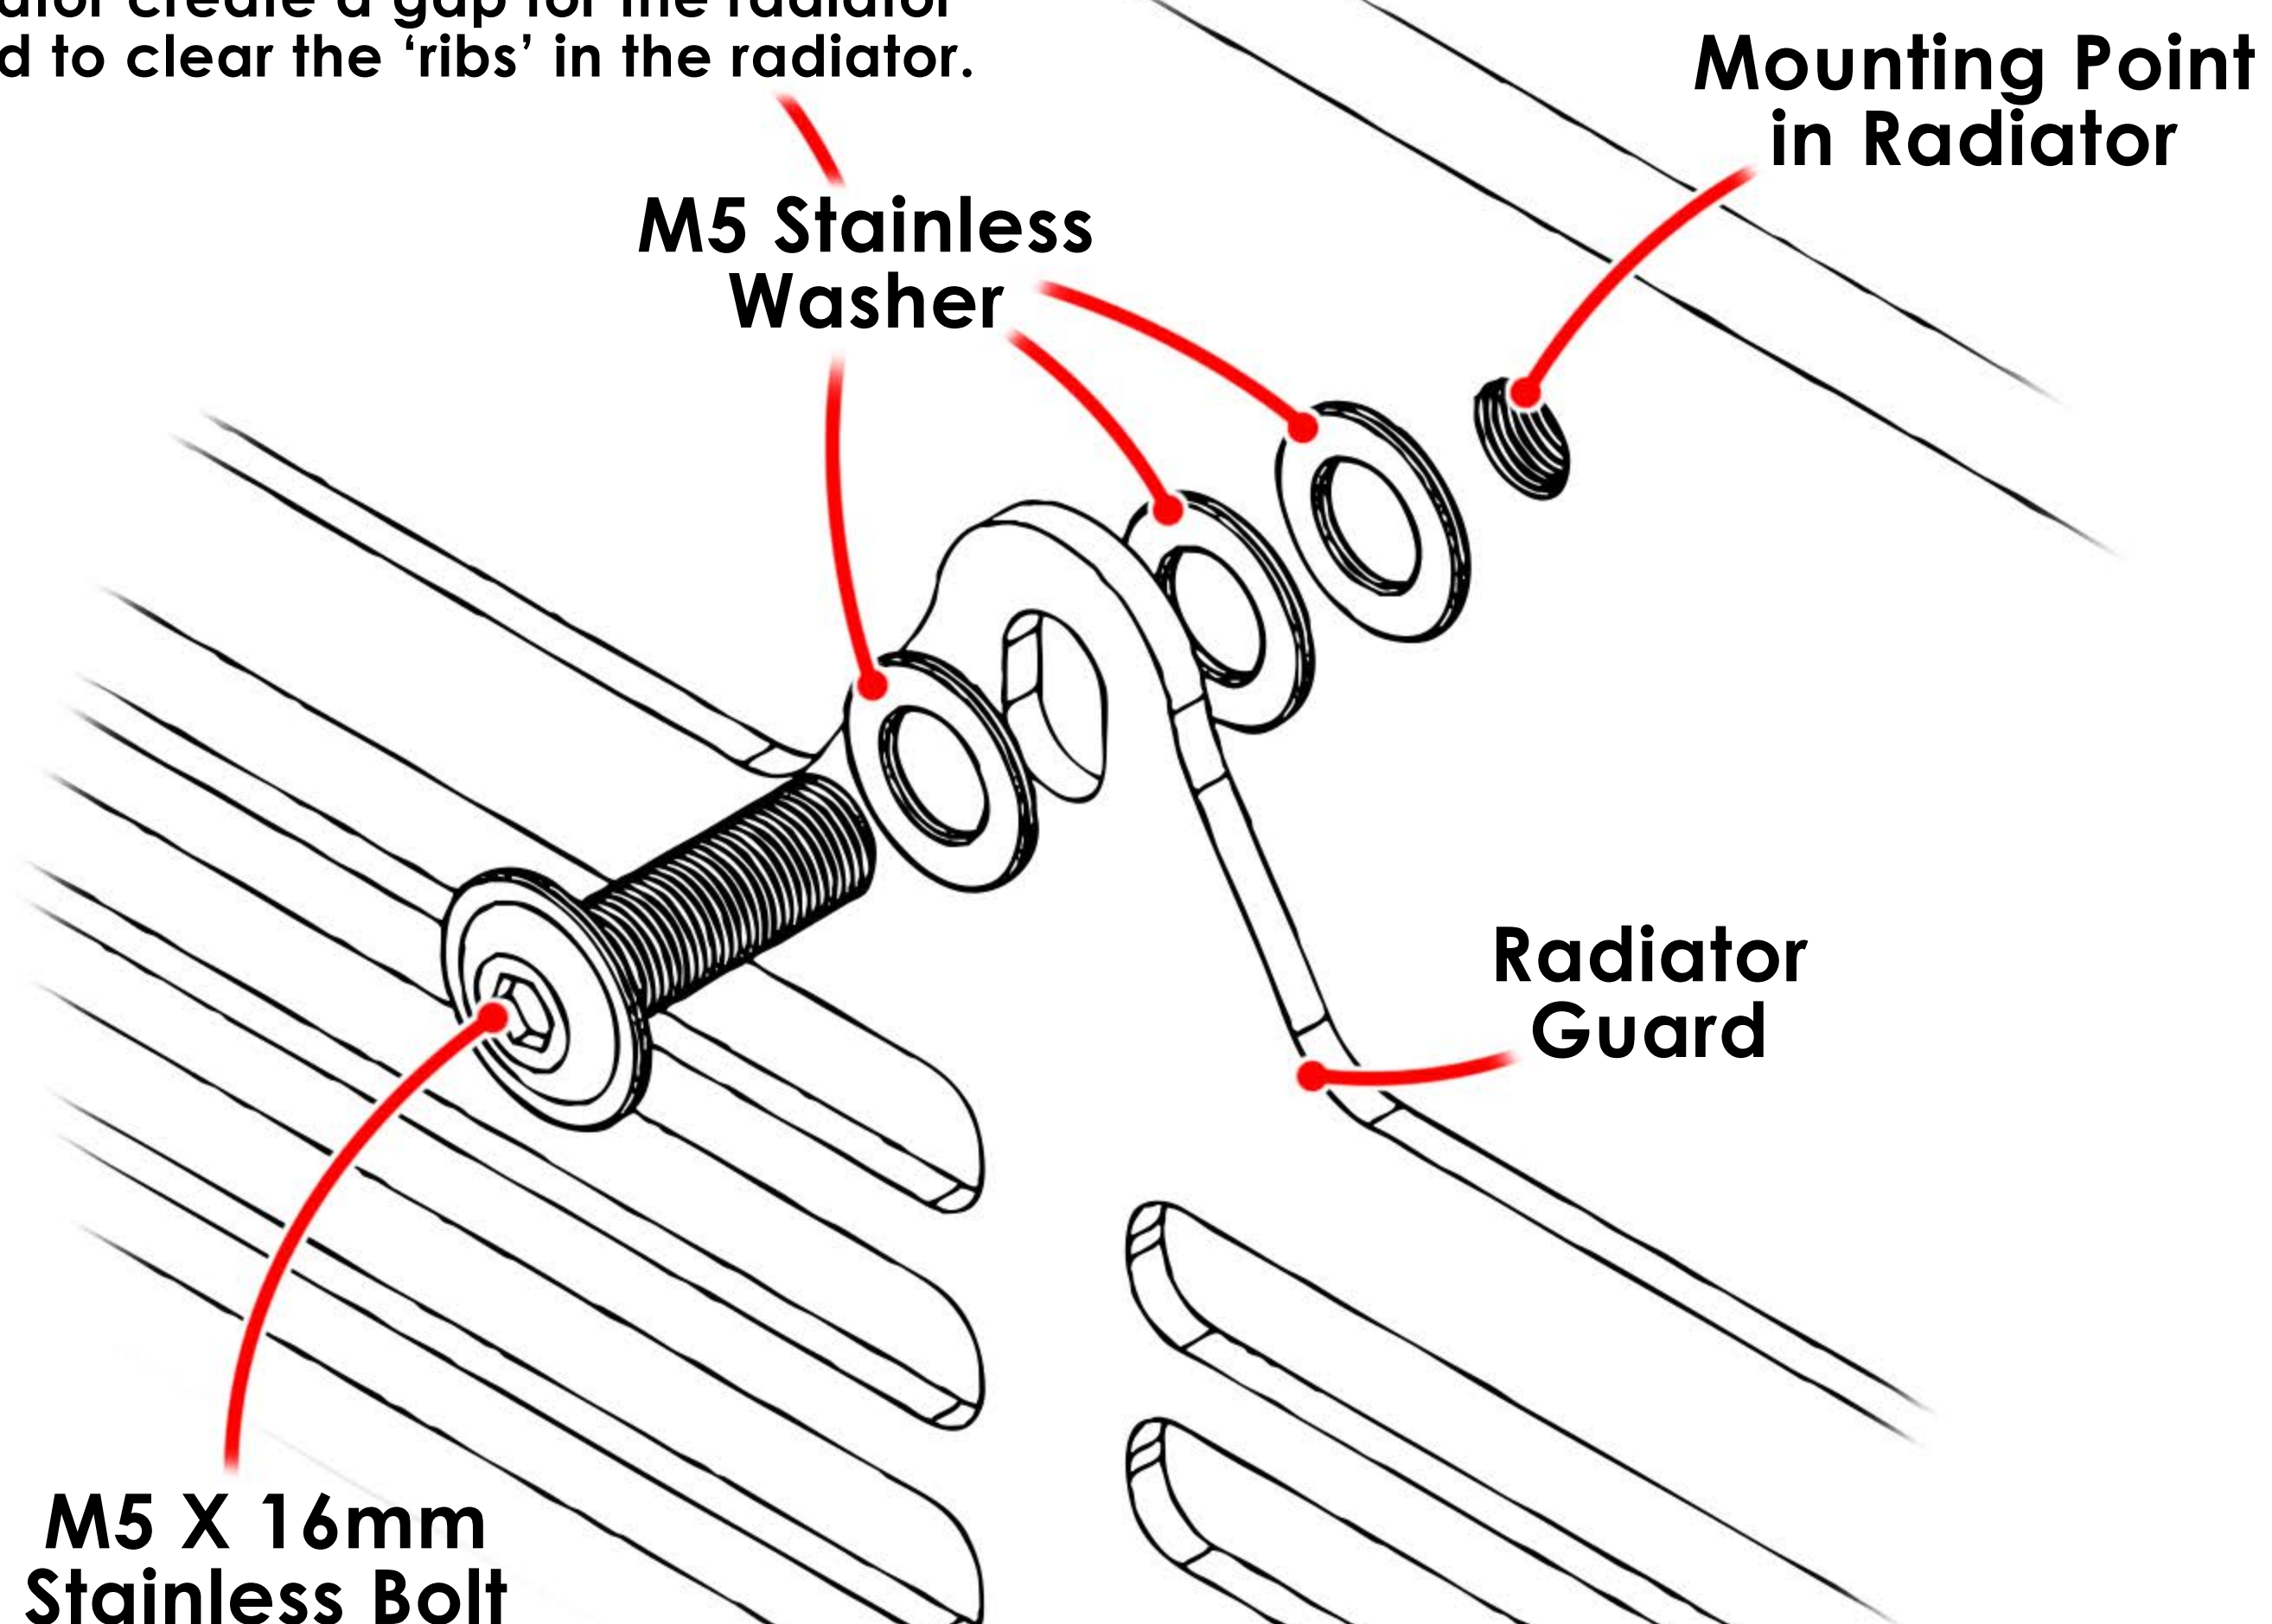

Any questions?
sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
feel free to leave us a review!