

PYRAMID

526600 Triumph Trident 660 Radiator Guard Fitting Instructions

Kit Includes:

1X	C526600	Radiator Guard
4X	CFOA0001	Foam Strip 50mm
8X	CWASM60001	M6 Stainless Steel Washer

- Remove the radiator cheeks from the Trident 660 (shown in image below).
- The foam strips supplied can be used on the inside of the radiator guard to create a gasket between the radiator and the radiator guard.
- Position the radiator guard on the bike and use the OEM bolts and stainless washers provided (2 under the radiator guard at each mounting point).


Check fixings periodically.

Any questions?

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

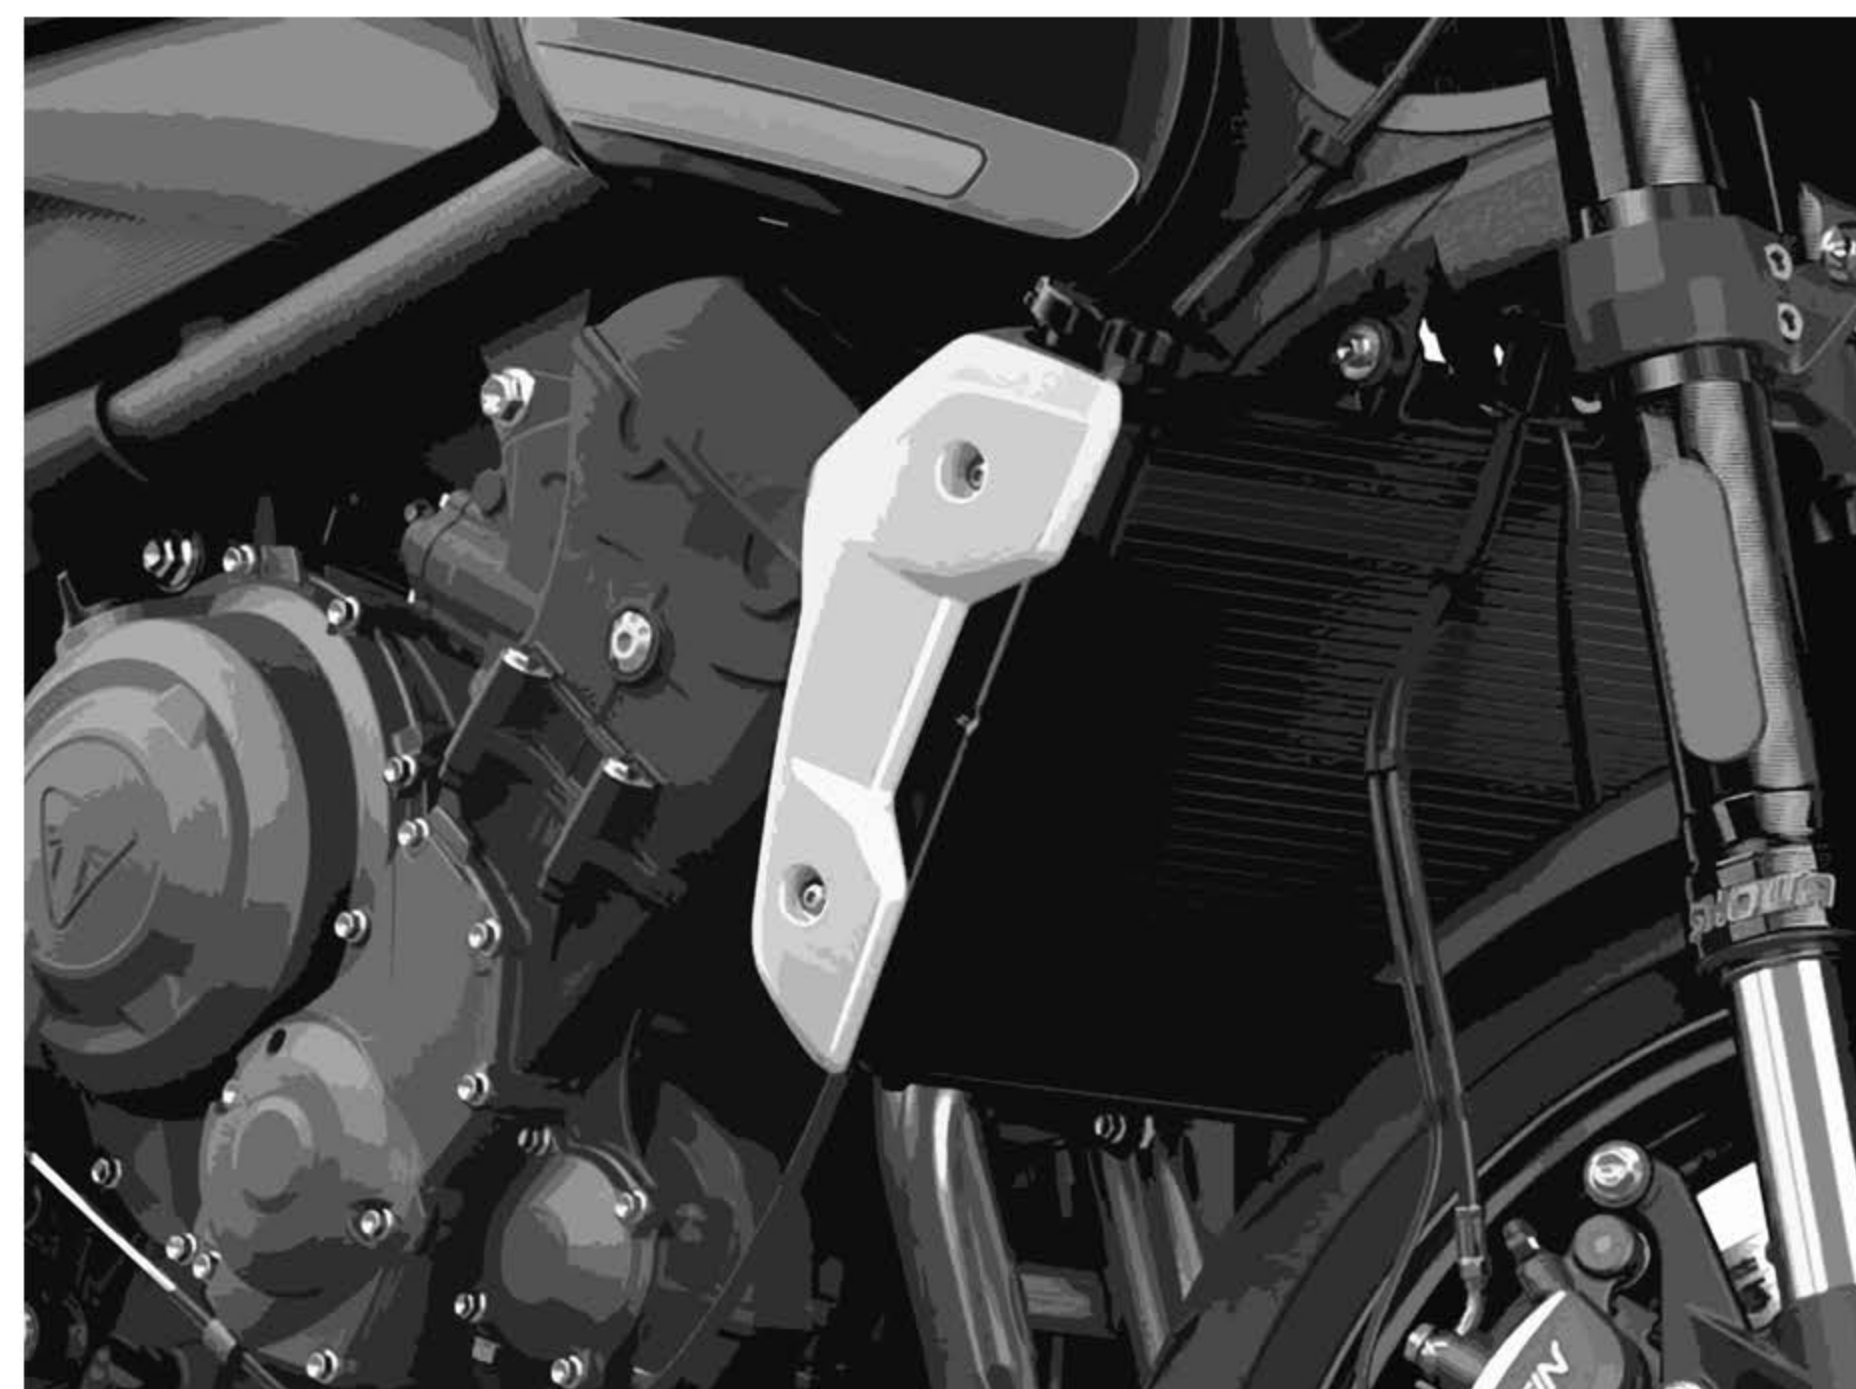

PYRAMID

526600 Triumph Trident 660 Radiator Guard Fitting Instructions

Kit Includes:

1X	C526600	Radiator Guard
4X	CFOA0001	Foam Strip 50mm
8X	CWASM60001	M6 Stainless Steel Washer

- Remove the radiator cheeks from the Trident 660 (shown in image below).
- The foam strips supplied can be used on the inside of the radiator guard to create a gasket between the radiator and the radiator guard.
- Position the radiator guard on the bike and use the OEM bolts and stainless washers provided (2 under the radiator guard at each mounting point).

Check fixings periodically.

Any questions?

sales@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

