

# 811005 Honda CB500X Shock Shield Fitting Instructions



## Kit Includes:


1X	C24444	Rubber Flap
1X	CFK811005	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80004	M8 X 10mm Stainless Hex-head Bolt

Fitting this Pyramid shock shield is quick and simple.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **Fig 1**).

Attach the bracket to the bike using the M8 bolts supplied (see **Fig 2**).

Check fixings periodically.

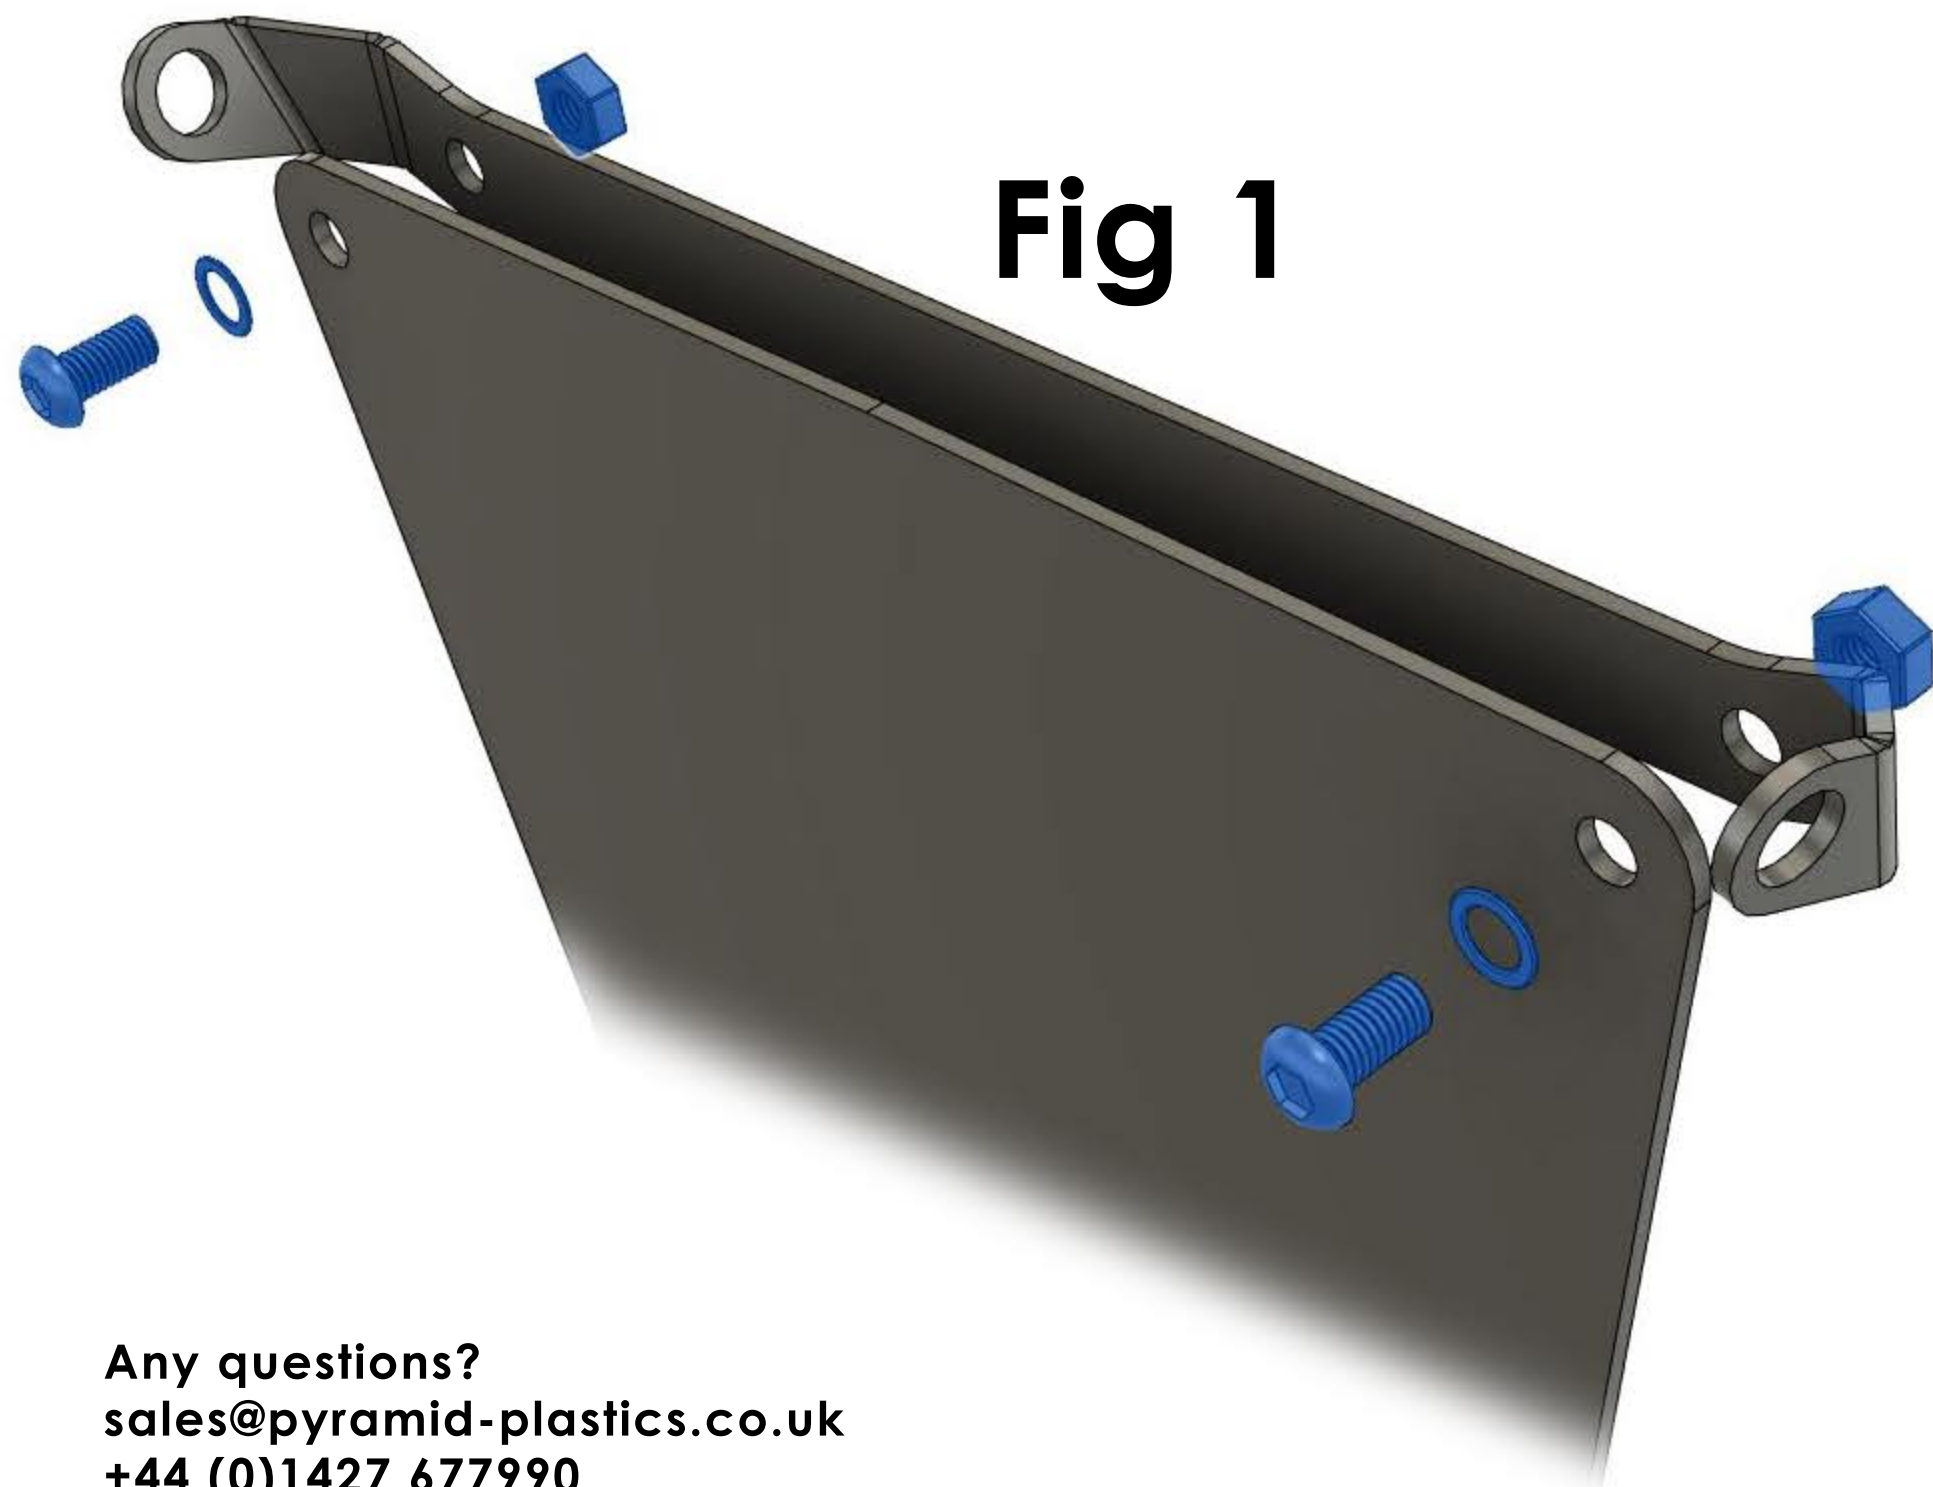


**Fig 1**

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and  
feel free to leave us a review!

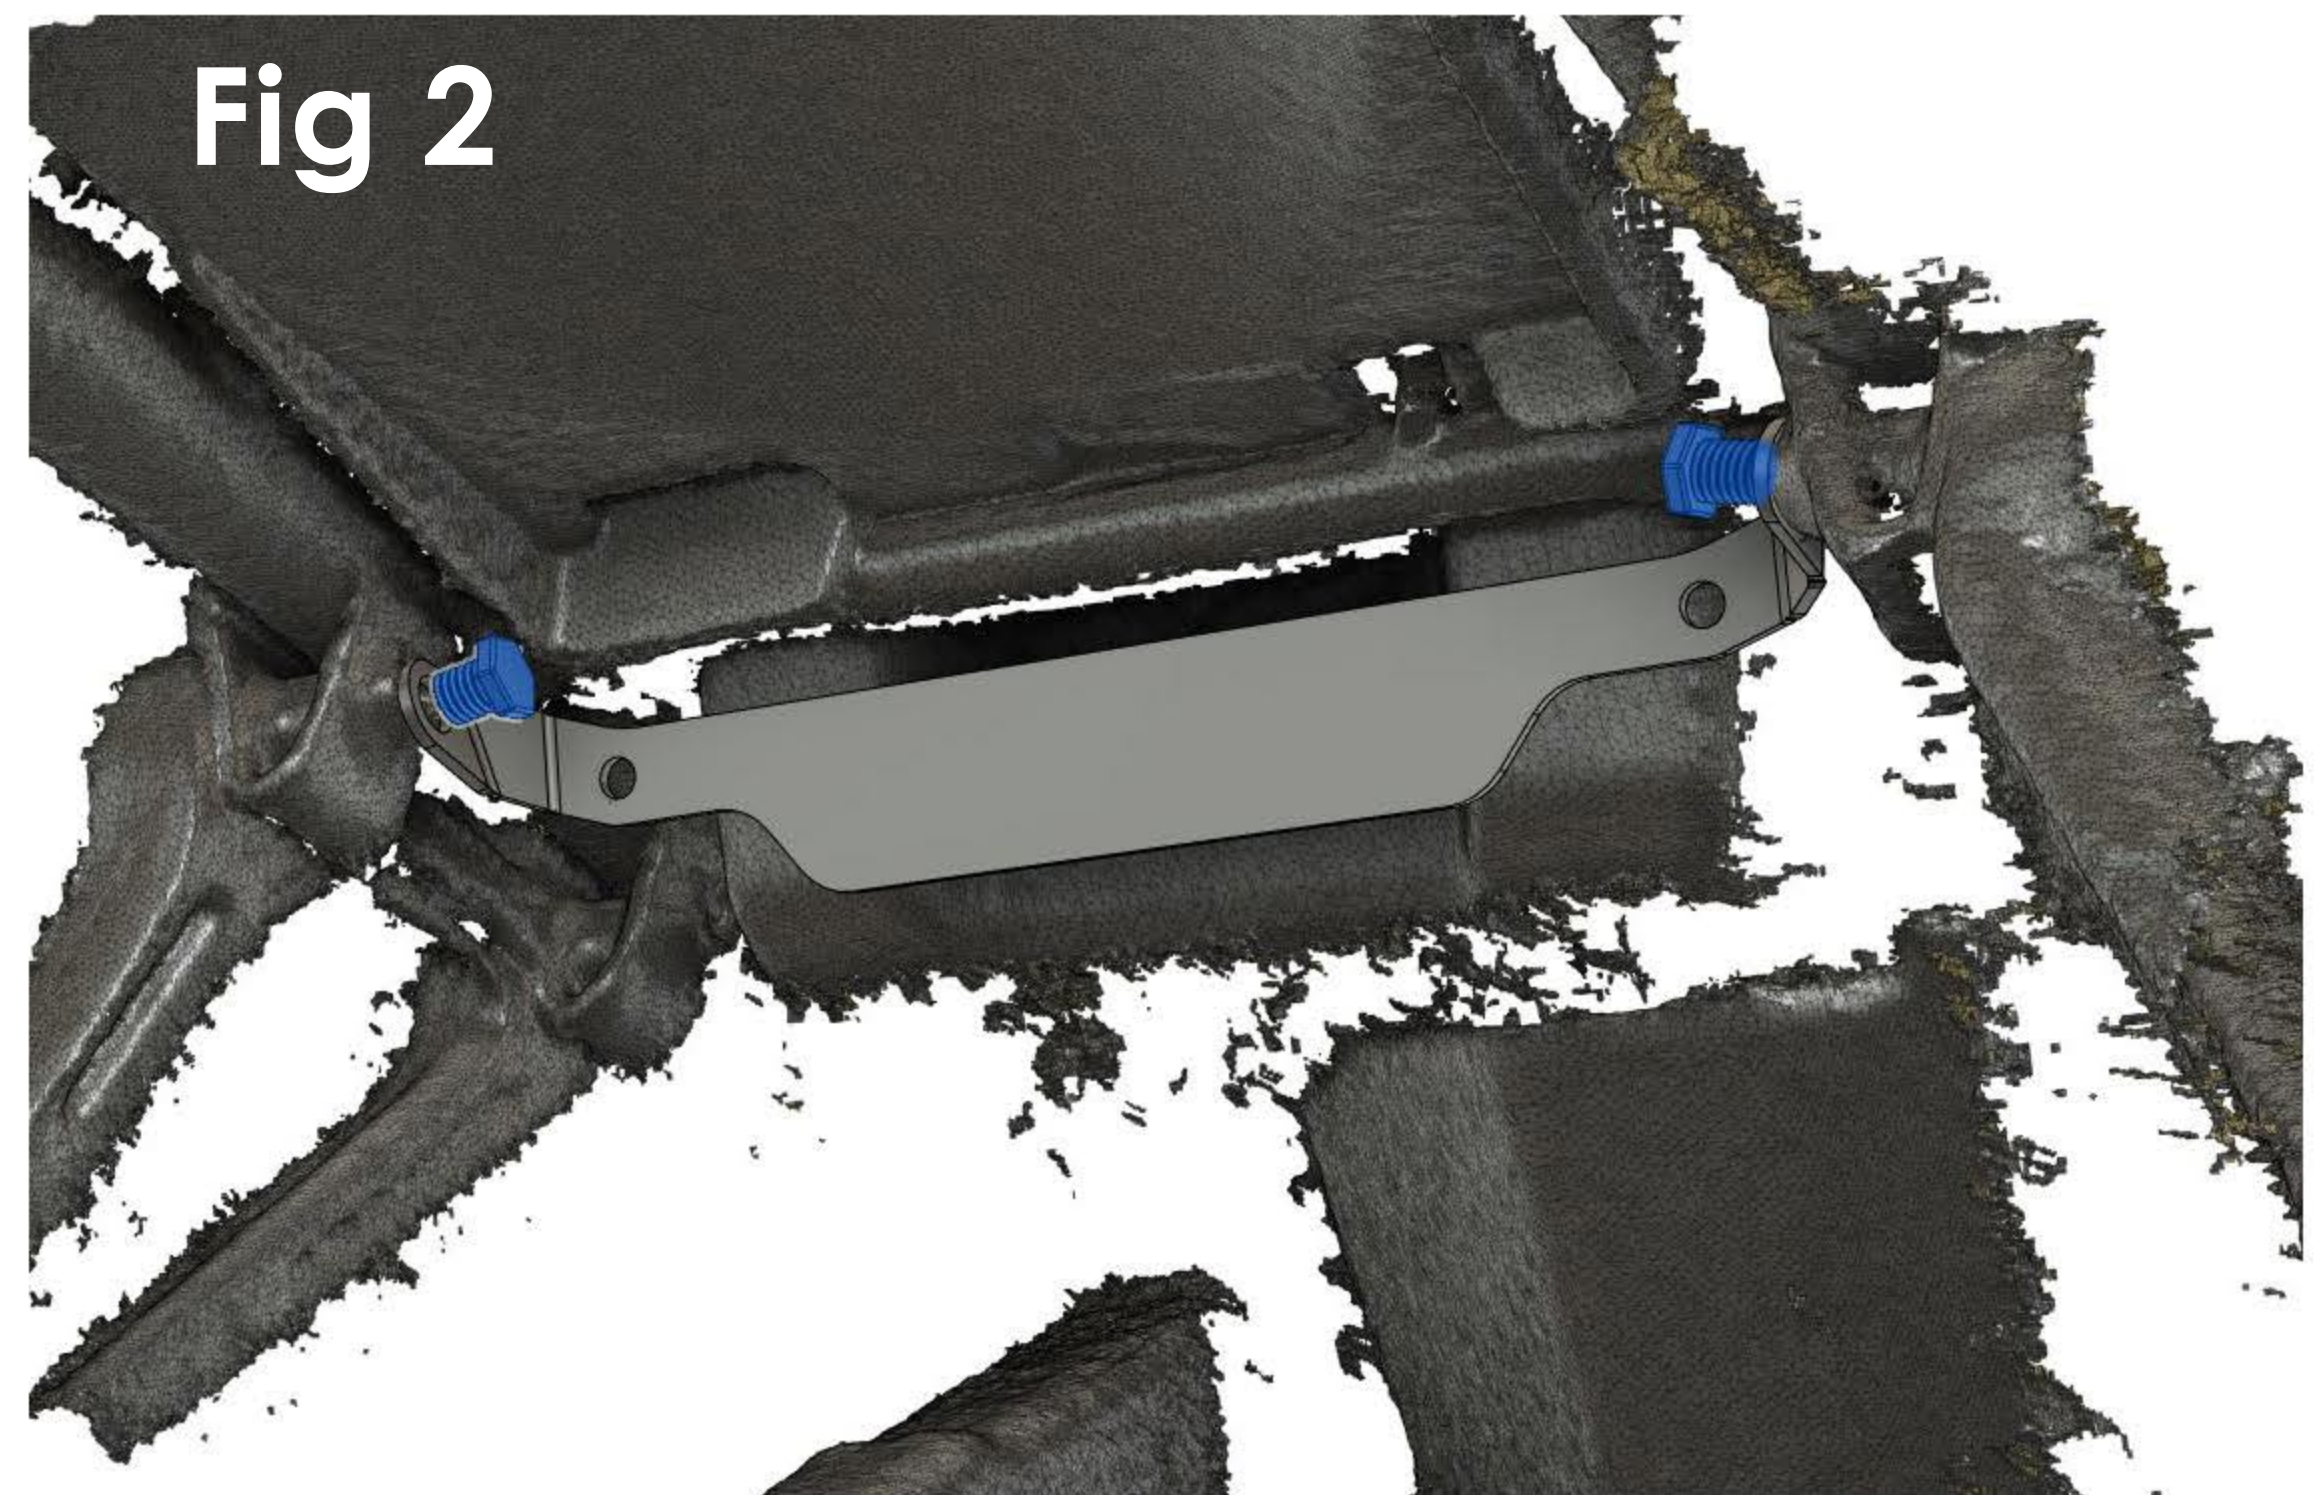

**Fig 2**

Note: we recommend attaching the M8 bolts using your hands to begin with - it can be awkward to gain access otherwise.

The M8 bolts highlighted here are fitted into the back of the pillion foot rest mounting points.

# 811005 Honda CB500X Shock Shield Fitting Instructions



## Kit Includes:


1X	C24444	Rubber Flap
1X	CFK811005	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Stainless Washer
2X	CBOLM80004	M8 X 10mm Stainless Hex-head Bolt

Fitting this Pyramid shock shield is quick and simple.

Attach the rubber flap to the bracket using the M5 fittings supplied (see **Fig 1**).

Attach the bracket to the bike using the M8 bolts supplied (see **Fig 2**).

Check fixings periodically.

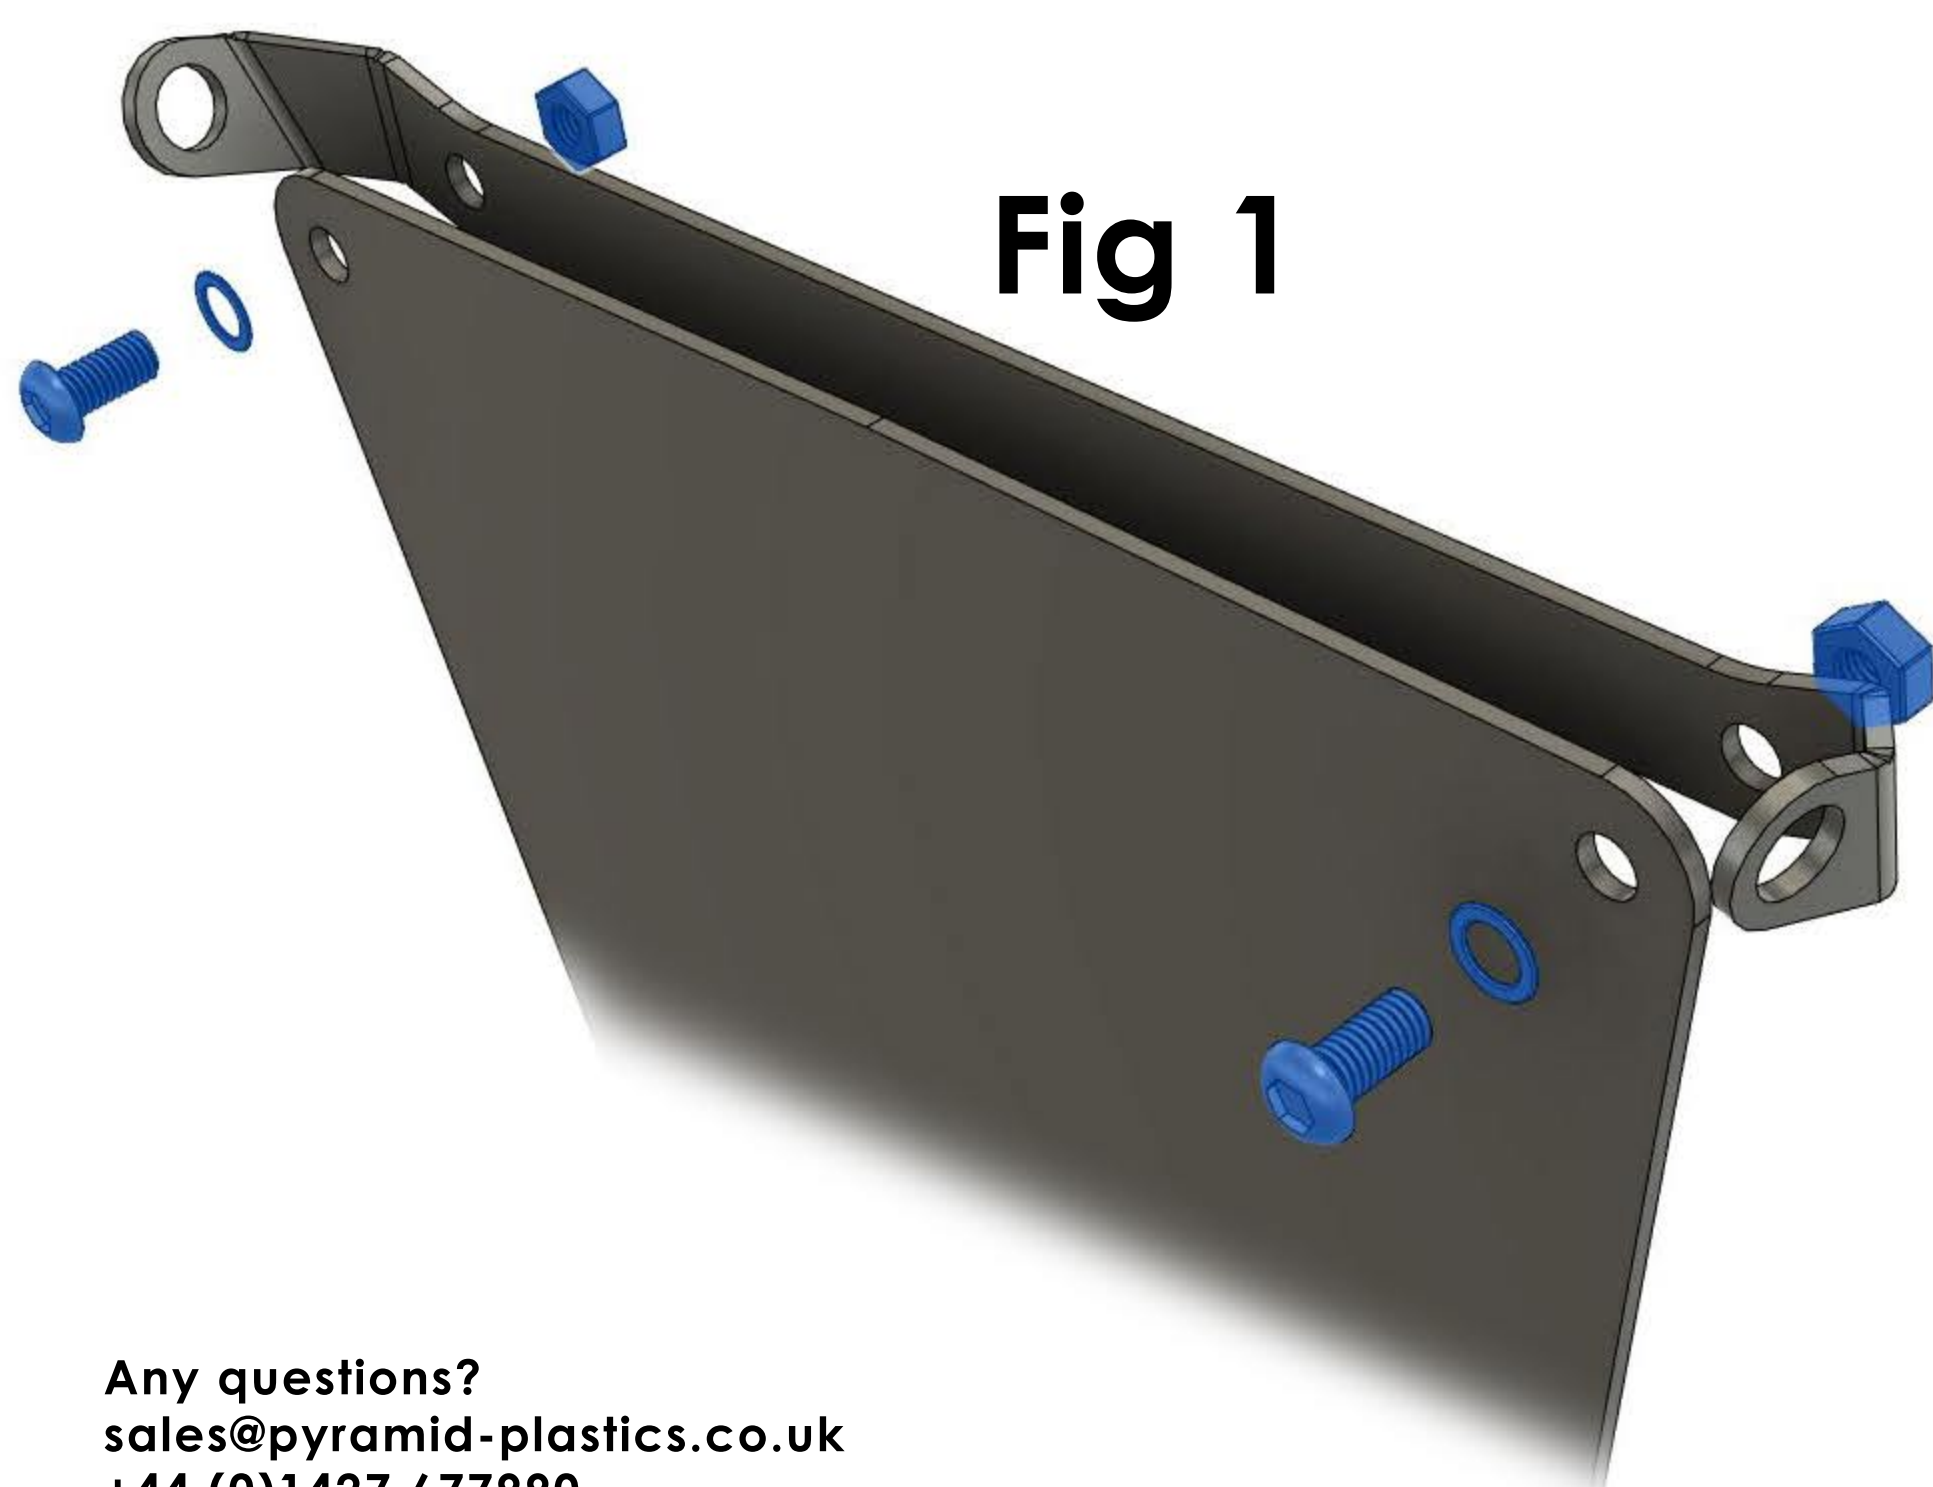


**Fig 1**

Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and  
feel free to leave us a review!

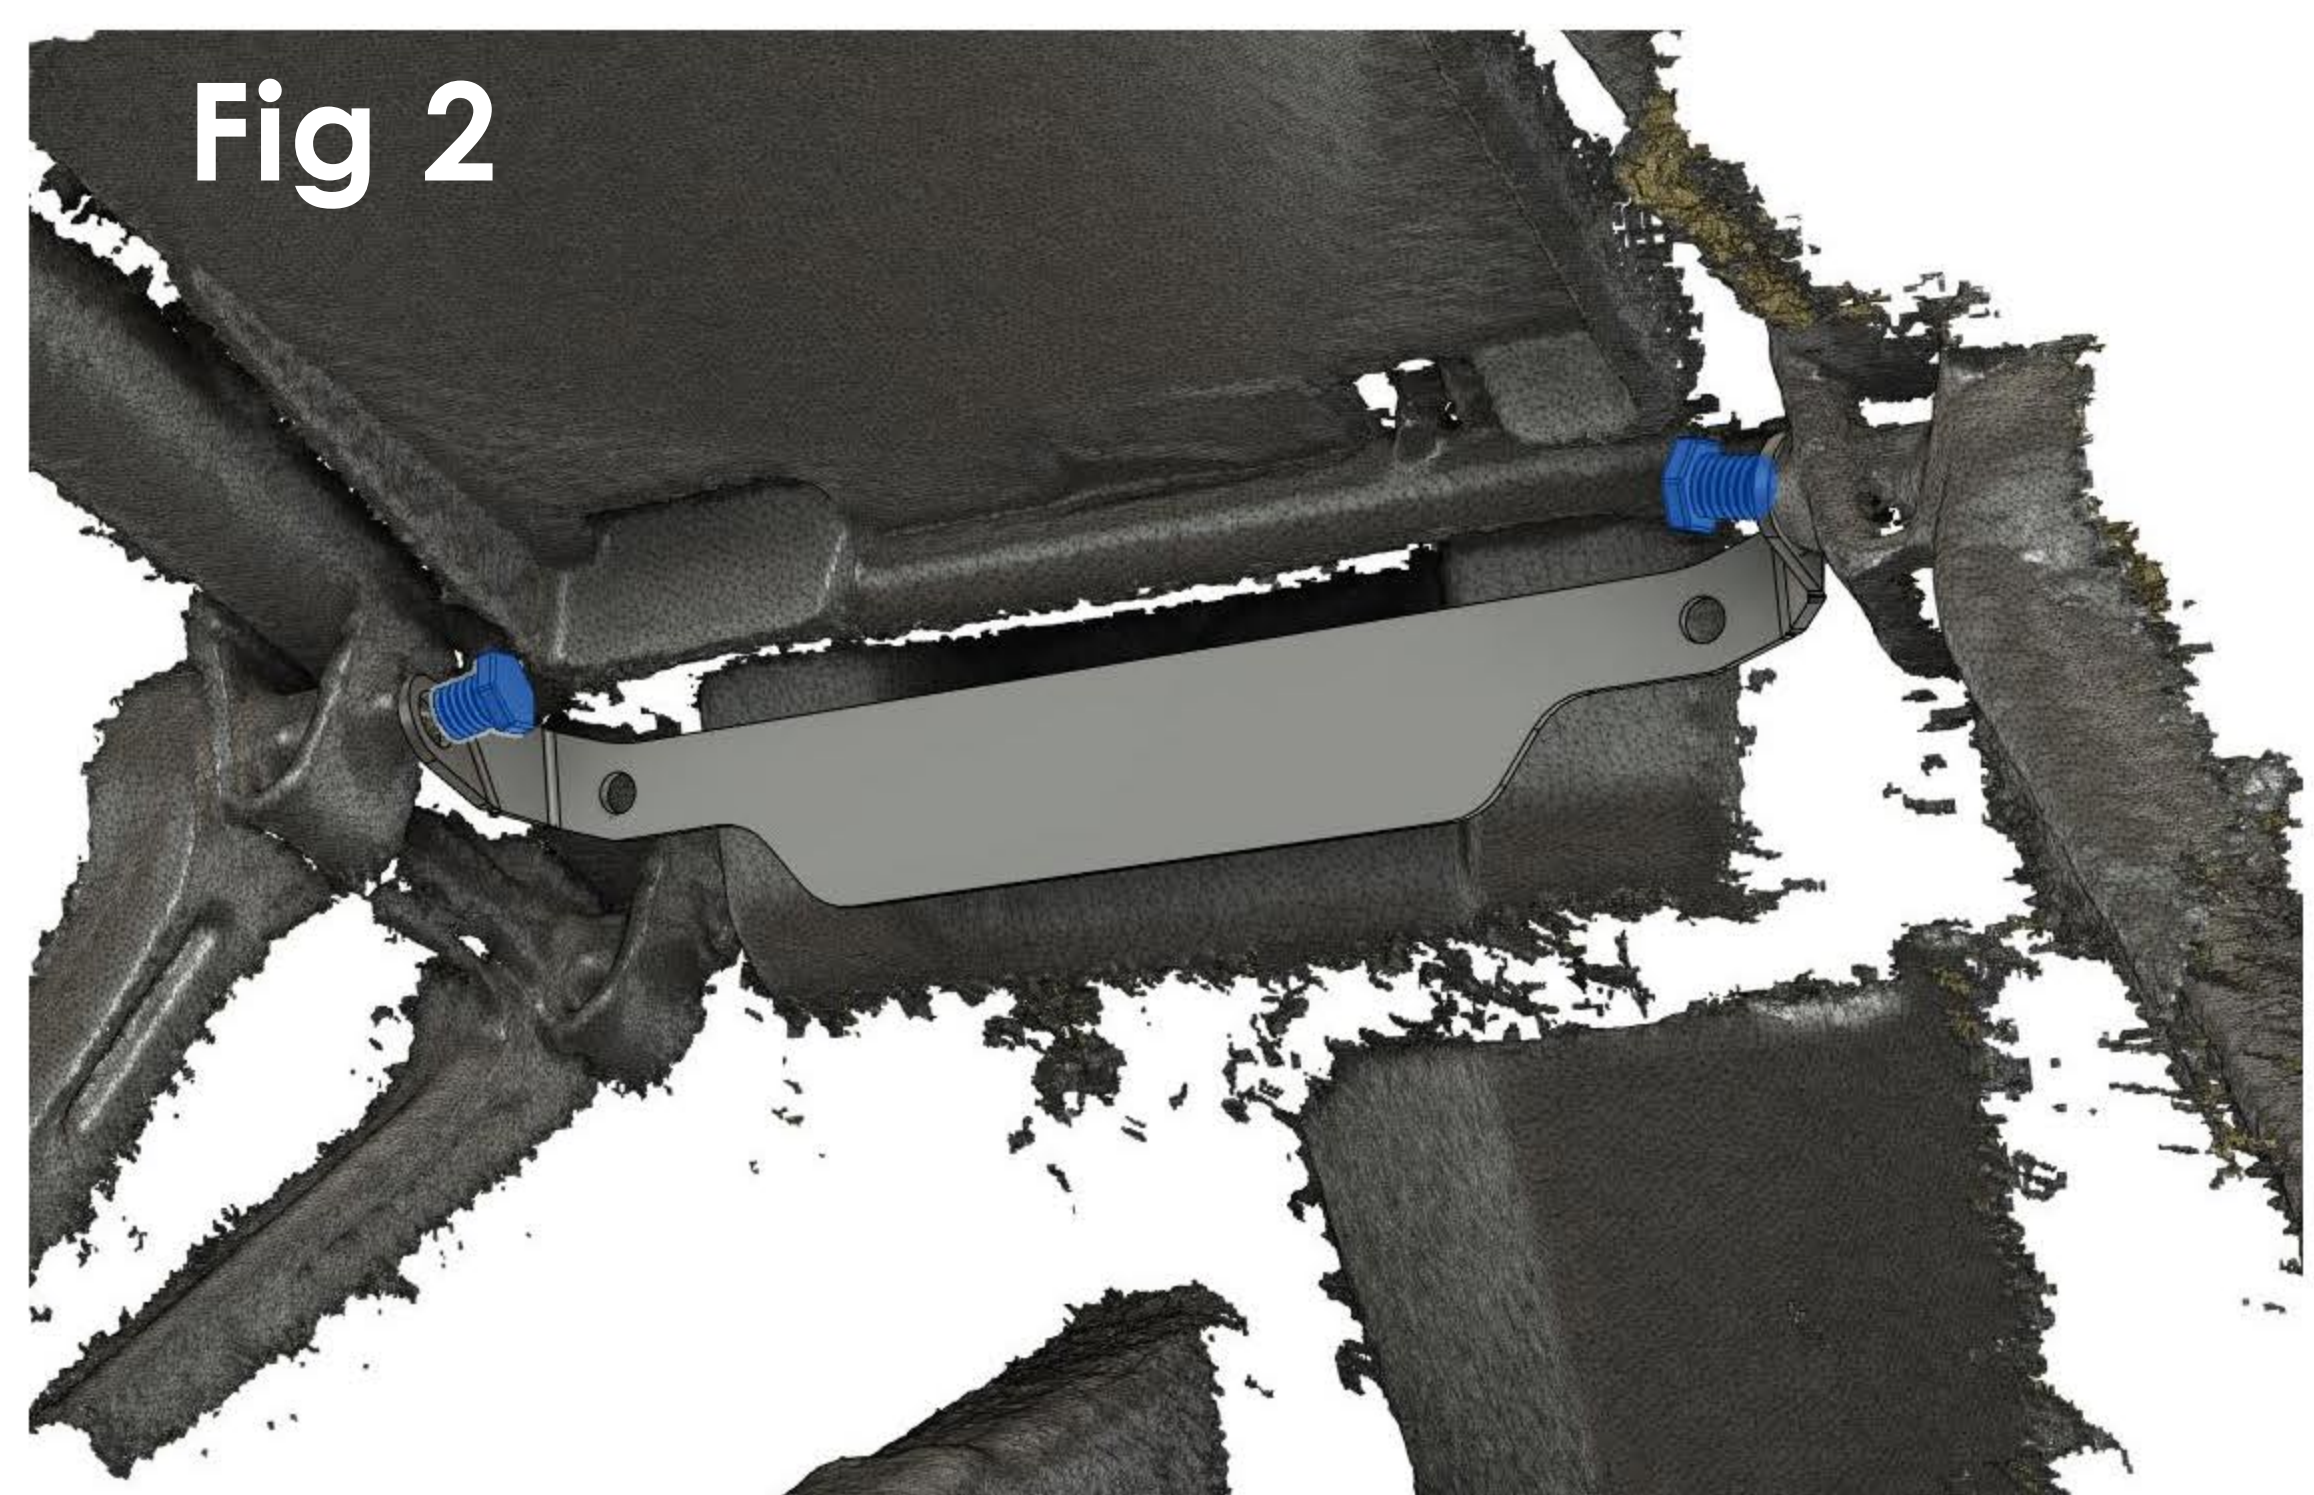

**Fig 2**

Note: we recommend attaching the M8 bolts using your hands to begin with - it can be awkward to gain access otherwise.

The M8 bolts highlighted here are fitted into the back of the pillion foot rest mounting points.