

## **811007** Honda NC 750 X Shock Shield 2021> Fitting Instructions

### Kit Includes:

1.	X1	811007	NC 750 X Shock Shield
2.	X1	CTAP0052	Adhesion Sticker Sheet
3.	X1	CWIP001	Adhesion Promotor Wipes
4.	X4	CRIV0003	Push Rivet

Please note: The push rivets (Item 4) are not a compulsory fitting method, as installation can also be completed by using the adhesive stickers only (Item 2). However, we personally recommend using the push rivets.

### **Assembly Instructions**

Before commencing the installation, wash the mounting area with soapy water and dry accordingly. Put the shock shield in place, so that it is similarly positioned to the image shown in 'FIG. 2'. Please ensure that the moulding is kept at a suitable distance away from the rear tyre. Both fitting methods will be detailed below.

#### **Push Rivet Method**

Disclaimer: Please be extremely careful when drilling into the battery box. Move all components and wiring away from the drilling area to avoid unwanted damage.

- Pre-drill a selection of 4 holes into the shock shield (Item 1), 2 on each face, as detailed in 'FIG. 4'. Please avoid the areas marked in red. Locate the shock shield in a suitable position, similar to that shown in 'FIG. 2' and drill 4 holes into the battery box of the motorcycle. It may help to use some of the adhesive stickers (Item 2) provided to secure the position of the shock shield.
- Insert push rivets (Item 4) to complete the installation.

#### **Adhesion Sticker Method**

- Use the adhesion promoter wipes (Item 3) and a variety of the stickers to evenly cover both faces marked in green in 'FIG. 5'. There is no need to use all the stickers provided. Please ensure the stickers are not placed too close to the areas marked in red, as this will reduce fitment strength.
- Firmly press into position, ensuring that all surfaces make contact. We recommend that the motorcycle is not ridden for a minimum of 12 hours to allow adequate time for the adhesive stickers to cure.



**FIG. 1**



**FIG. 2**

Any questions?  
sales@pyramidmoto.co.uk  
+44 (0)1427 677990  
www.pyramidmoto.co.uk




Follow us on social media and  
feel free to leave us a review!

## **811007** Honda NC 750 X Shock Shield 2021> Fitting Instructions


The images below will assist with identification and application of the components provided in the fitting kit.

**FIG. 3**

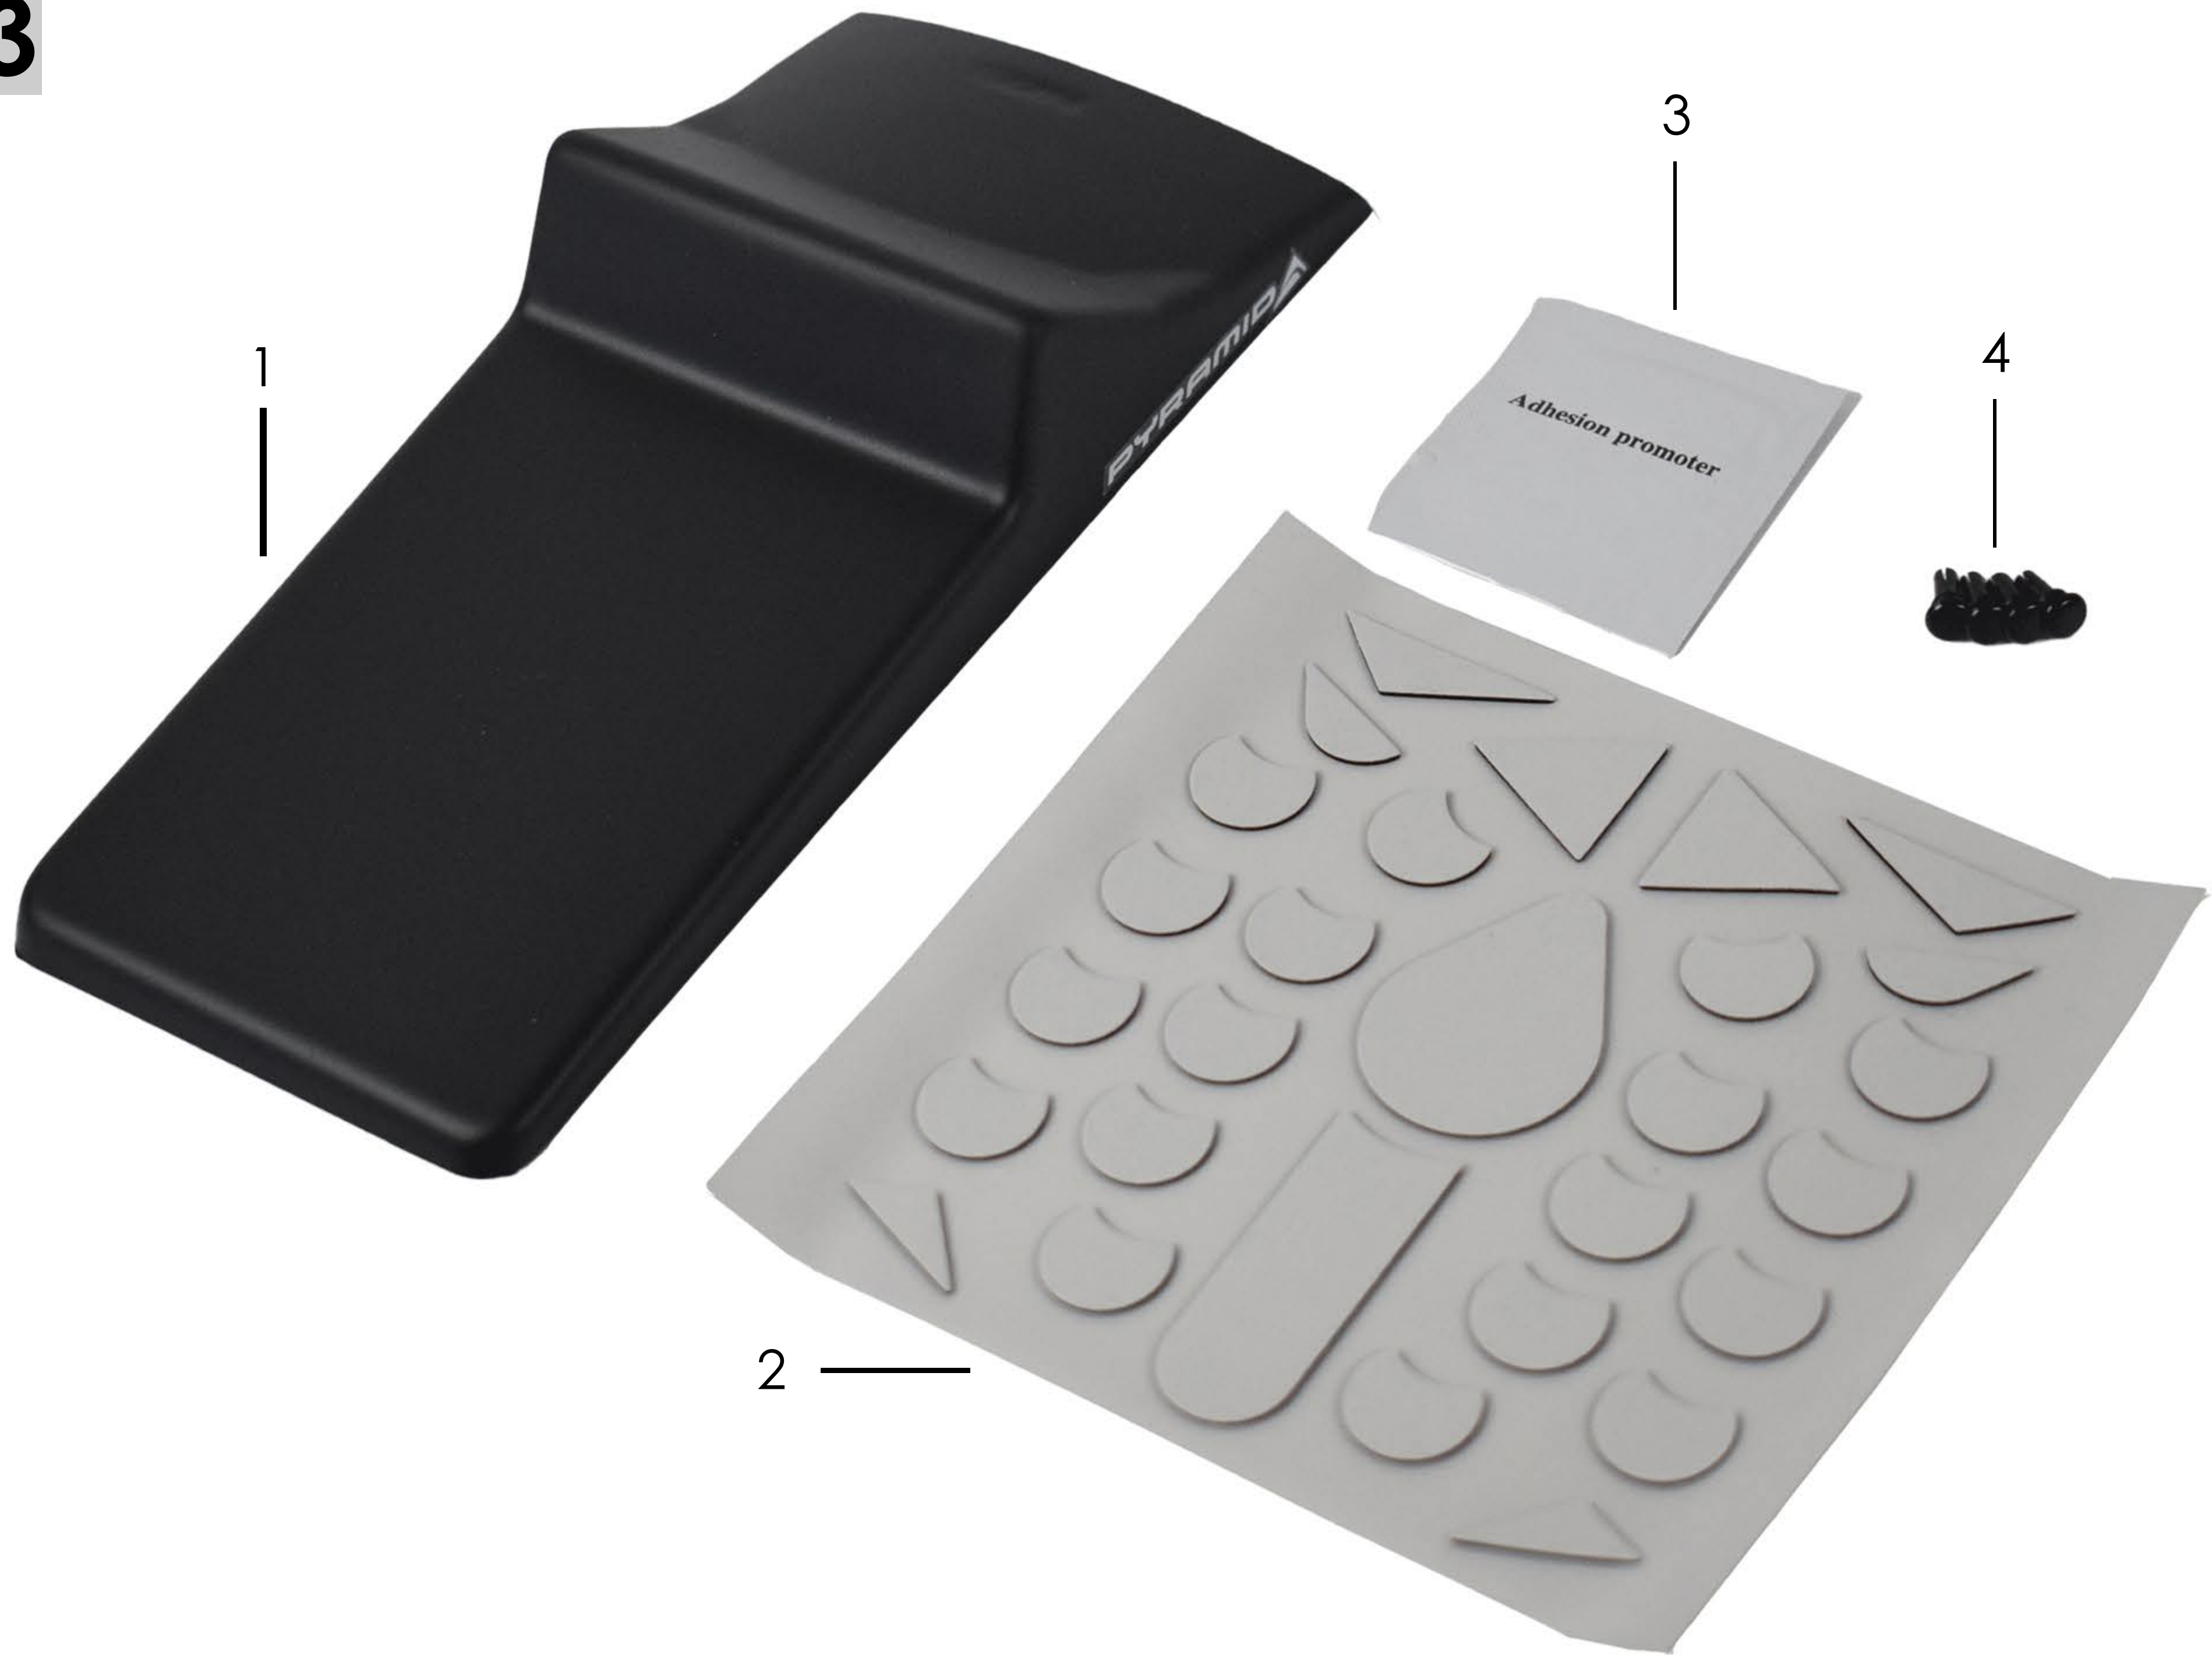

'FIG. 4' shows the surfaces where the adhesive stickers should be fitted. Please avoid placing stickers on the marked areas.

'FIG. 5' shows the surfaces that will be visible when inserting the push rivet fixings. 2 push rivets should be placed above the banded area marked and 2 further push rivets should be placed below the marked area. Please ensure that the push rivets are placed at a suitable distance from one another and that they are also away from both edges of the moulding and the areas marked area.

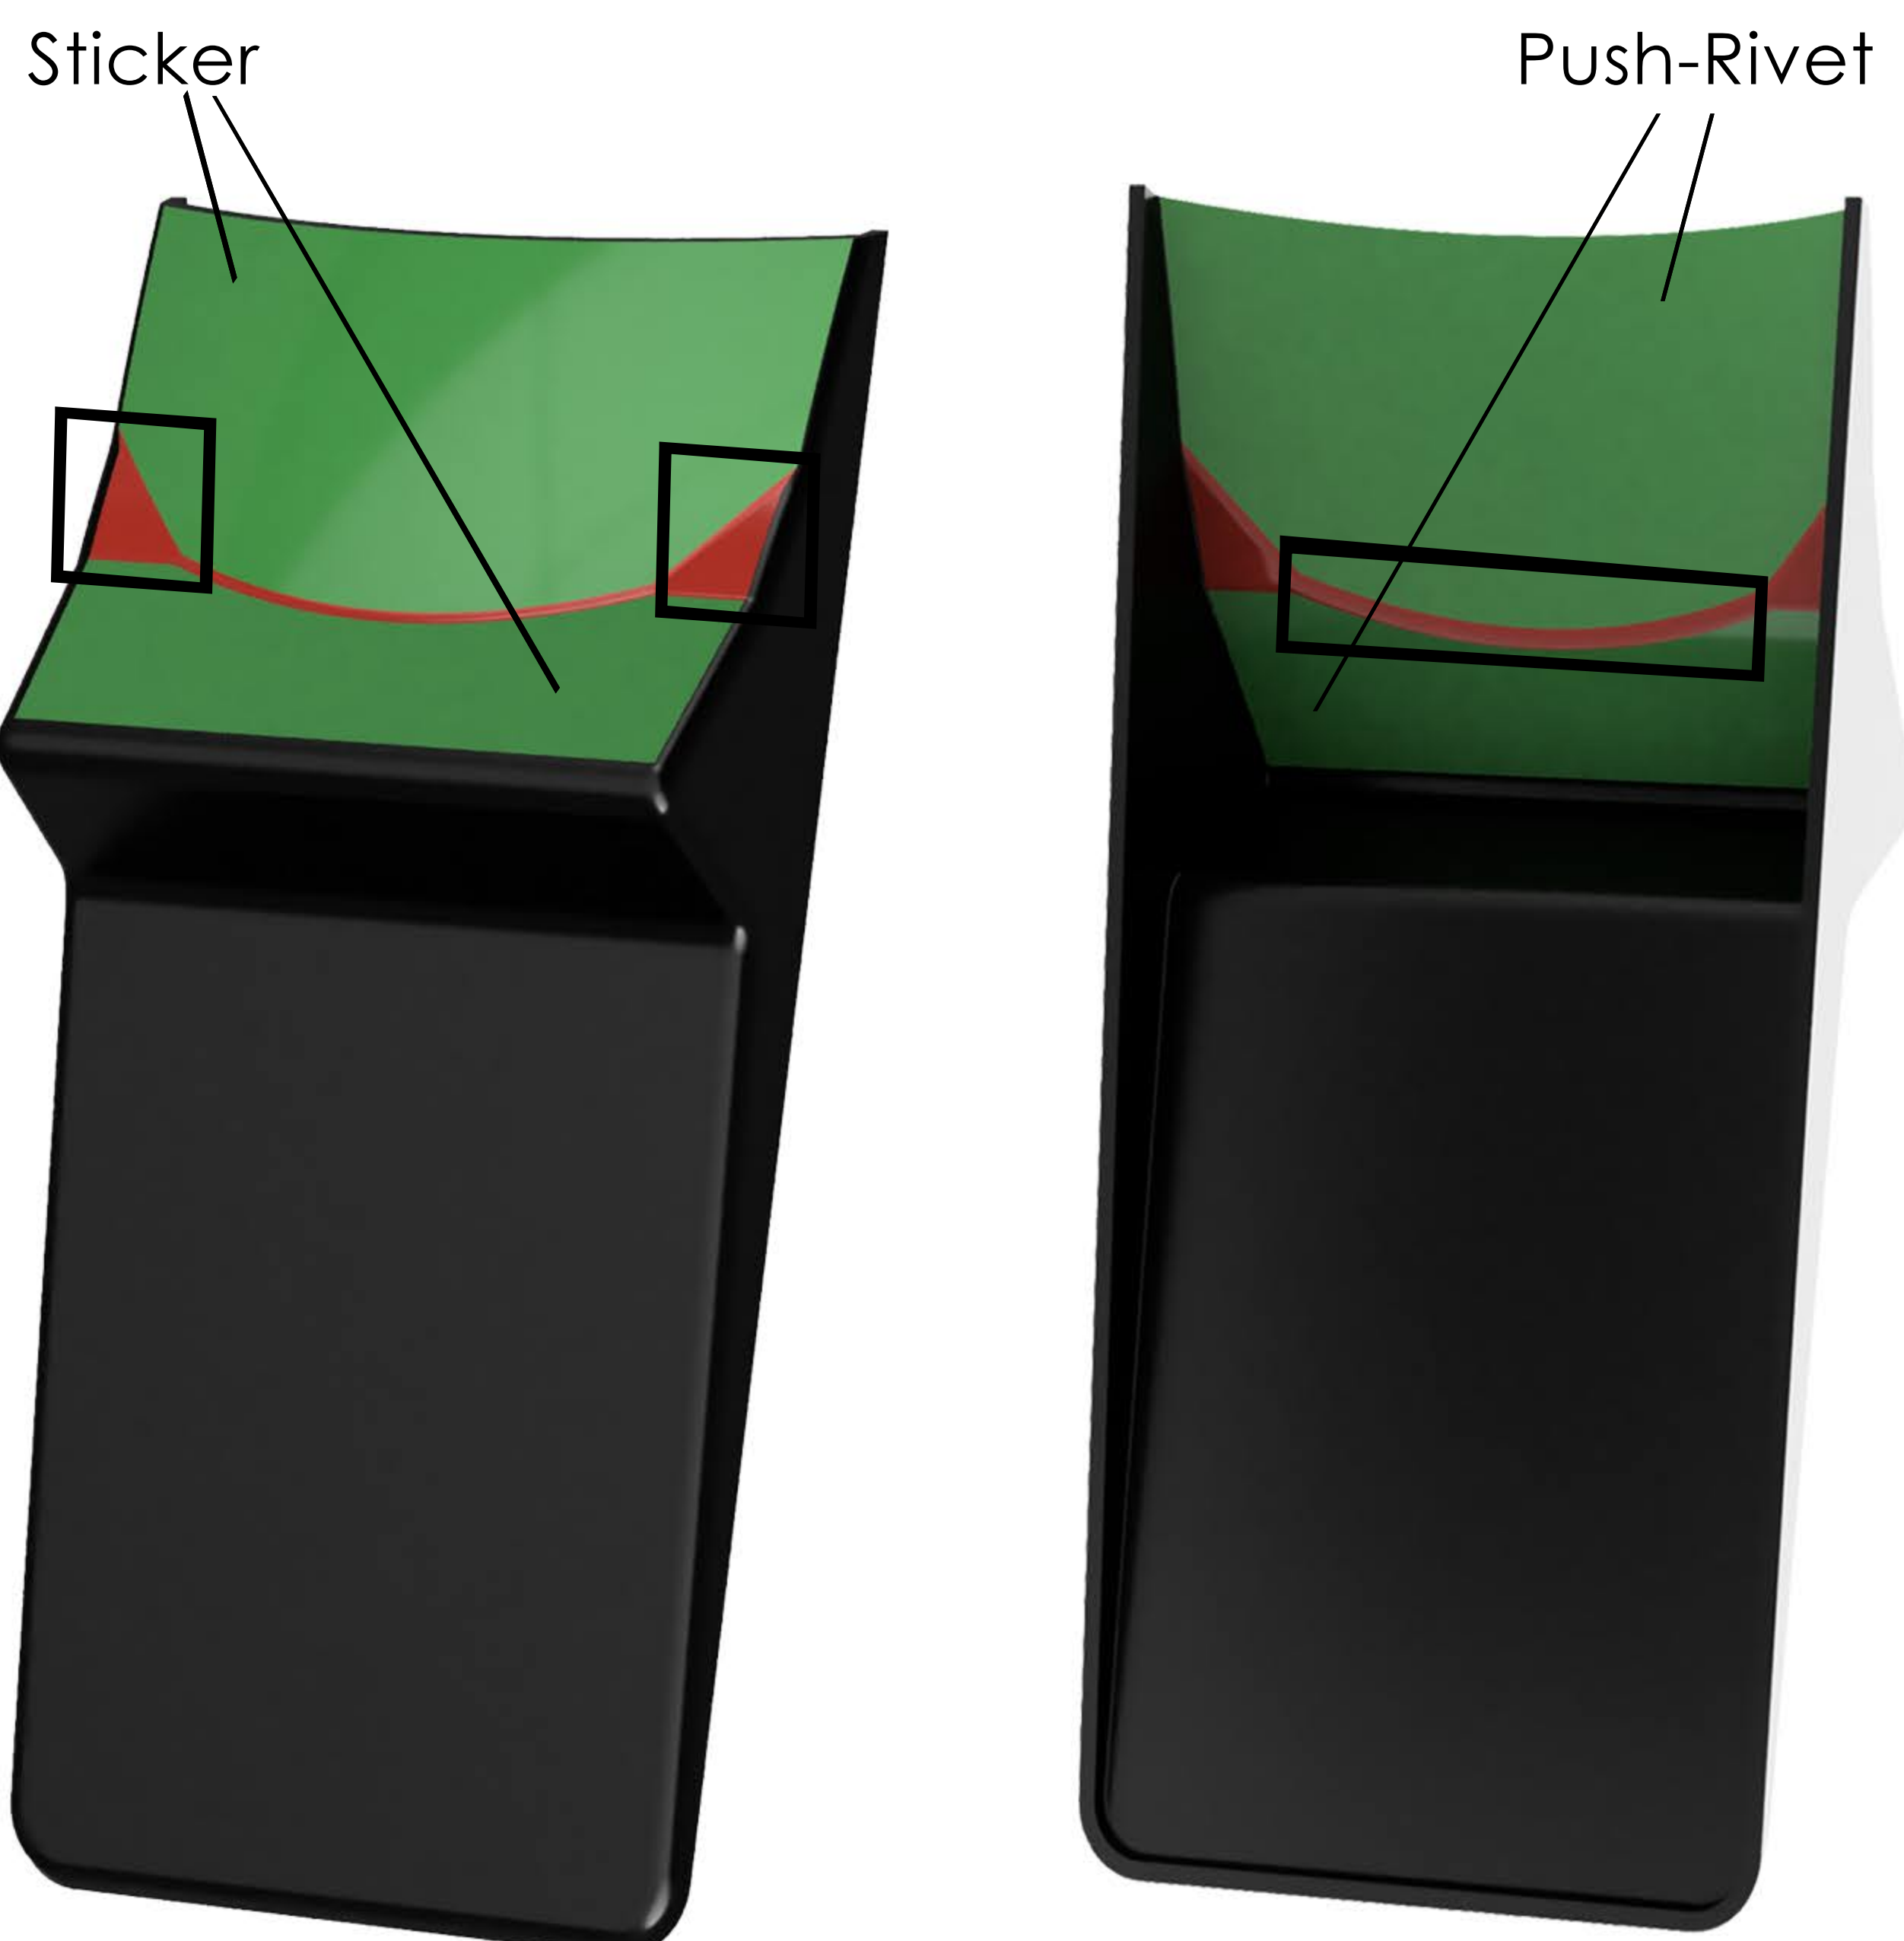

**FIG. 4**

**FIG. 5**

Any questions?  
[sales@pyramidmoto.co.uk](mailto:sales@pyramidmoto.co.uk)  
 +44 (0)1427 677990  
[www.pyramidmoto.co.uk](http://www.pyramidmoto.co.uk)



Follow us on social media and feel free to leave us a review!