

# 812003 Yamaha Tracer 9 Shock Shield Fitting Instructions




## Kit Includes:

1X	C24444	Rubber Flap
1X	CFK812003	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Washer
2X	CNUTM60003	M6 Stainless Nyloc Nut
2X	CBOLM60008	M6 X 16mm Stainless Bolt
2X	CWASM60003	M6 Washer

- Fitting this Pyramid shock shield is quick and simple.
- Attach the bracket to the bike using the M6 fittings supplied (**Fig 1**).
- Attach the rubber flap to the bracket using the M5 fittings supplied (**Fig 2**).
- Check fixings periodically.

**Fig 1**

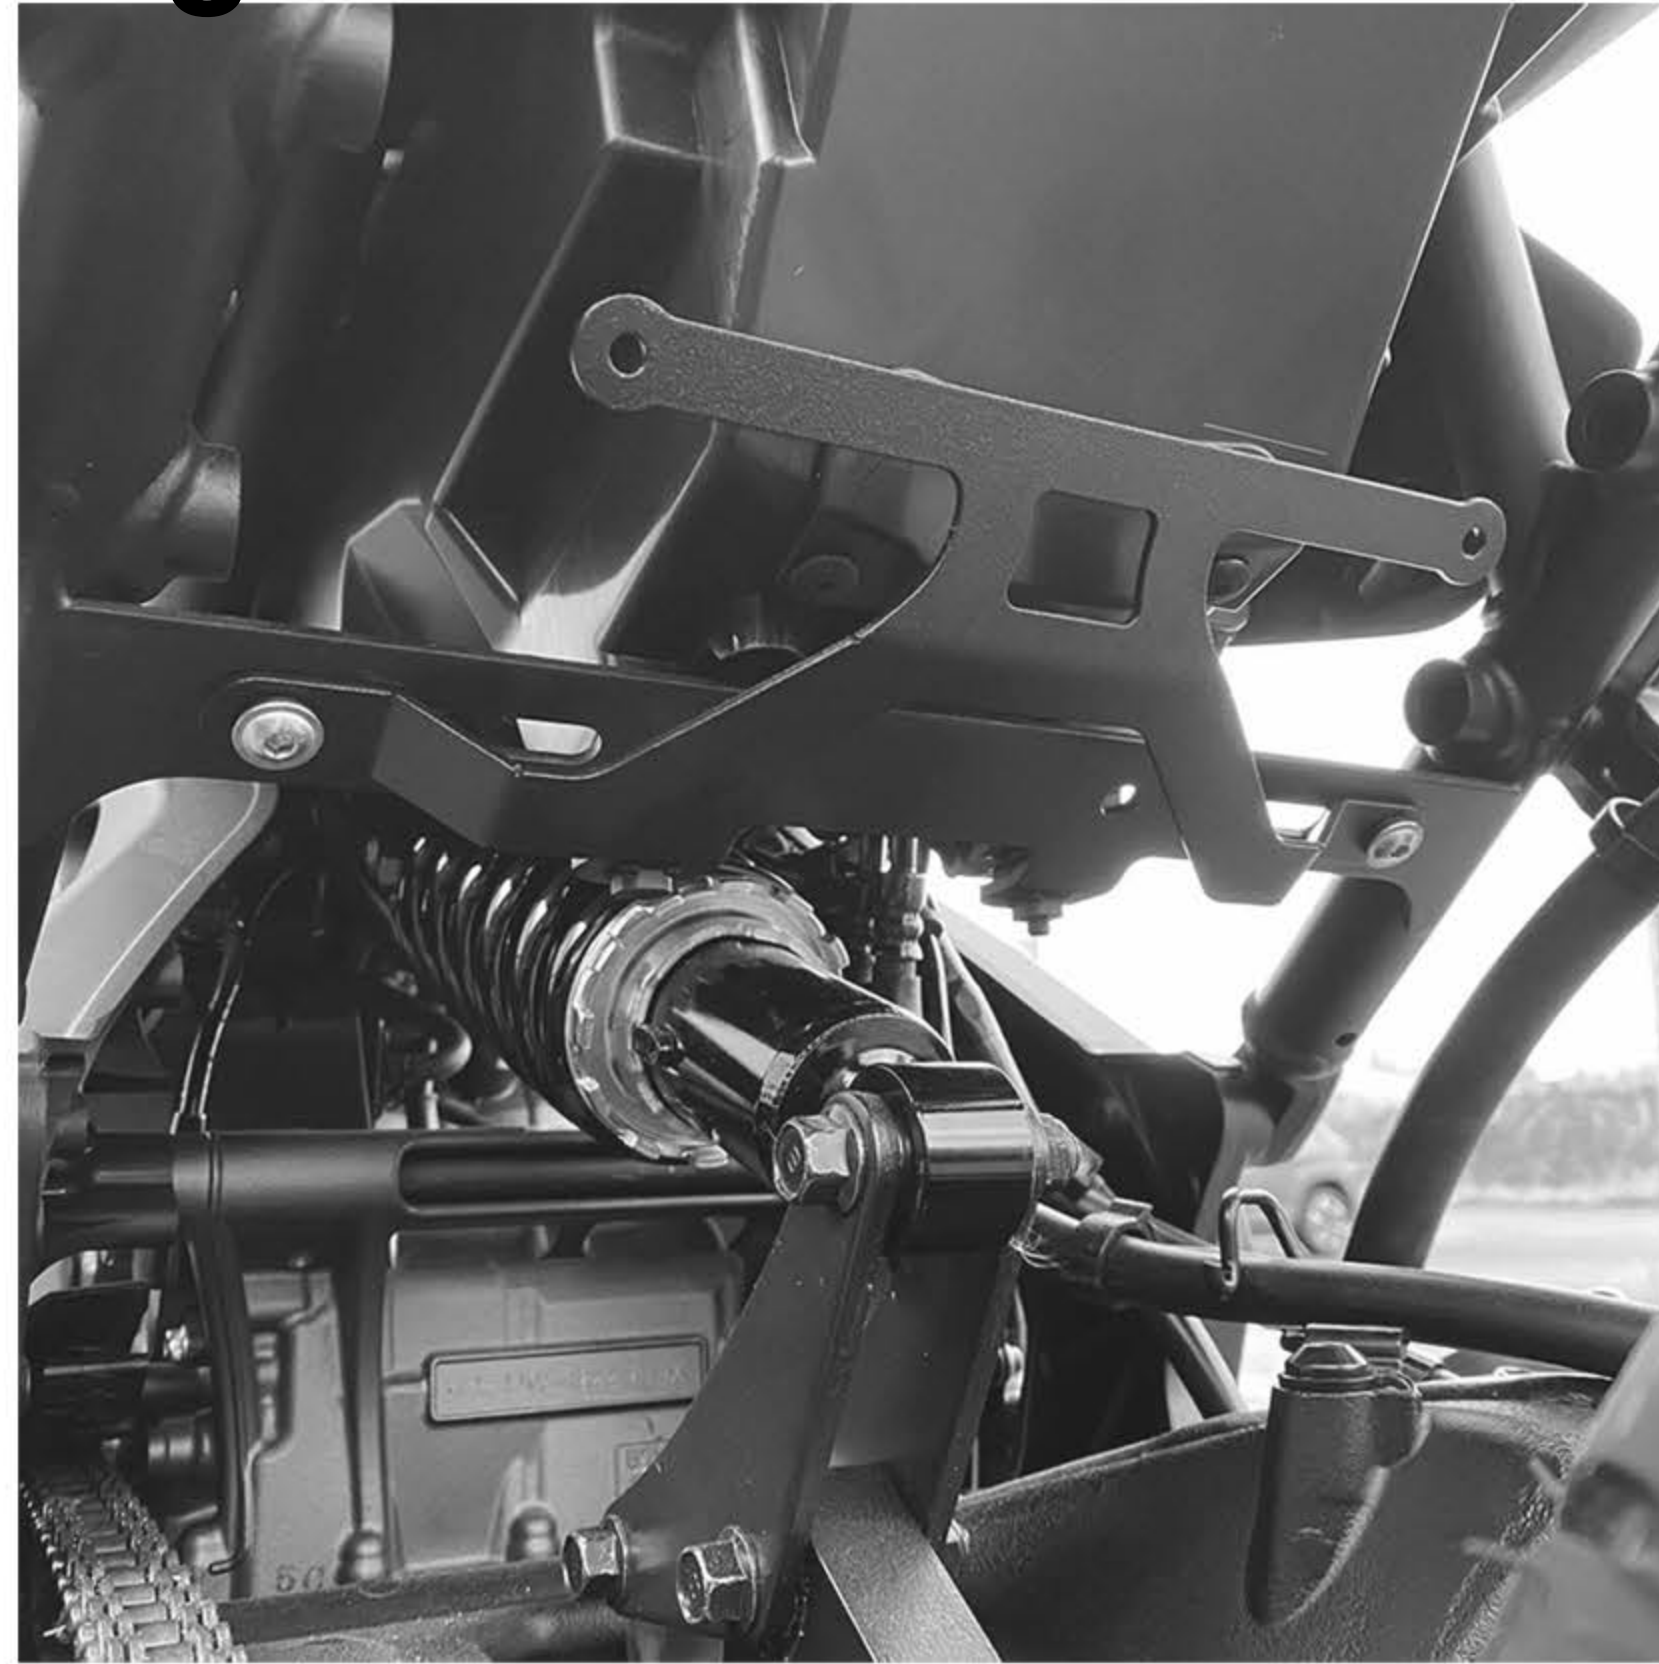

**Fig 2**



Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

# 812003 Yamaha Tracer 9 Shock Shield Fitting Instructions



## Kit Includes:

1X	C24444	Rubber Flap
1X	CFK812003	Bracket
2X	CBOLM50002	M5 X 10mm Stainless Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50001	M5 Washer
2X	CNUTM60003	M6 Stainless Nyloc Nut
2X	CBOLM60008	M6 X 16mm Stainless Bolt
2X	CWASM60003	M6 Washer

- Fitting this Pyramid shock shield is quick and simple.
- Attach the bracket to the bike using the M6 fittings supplied (**Fig 1**).
- Attach the rubber flap to the bracket using the M5 fittings supplied (**Fig 2**).
- Check fixings periodically.

**Fig 1**



**Fig 2**



Any questions?  
sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!