

816004 Speed 400/Scrambler 400X Shock Shield Fitting Instructions

Kit Includes:

1.	X1	C08061	Rubber Mudflap
2.	X1	CFK816004	Bracket
3.	X1	CFK812025B	Spacer Plate
4.	X3	CBOLM60035	M6 x 16mm Black Flanged Button Bolt
5.	X3	CWASM60001	M6 Washer
6.	X3	CNUTM60003	M6 Nyloc Nut
7.	X2	CBOLM60011	M6 x 25mm Silver Flanged Button Bolt


Any questions?
sales@pyramidmoto.co.uk
+44 (0)1427 677990
www.pyramidmoto.co.uk



Follow us on social media and
feel free to leave us a review!

Assembly Instructions

- Start by attaching the rubber mudflap to the bracket using the fittings shown in **Fig 1**. Fully tighten all three mounting points to ensure the nyloc nuts are properly engaged.
- Remove the two allen bolts on the underside of the seat unit and fit the shock shield assembly into position using the two remaining M6 x 25mm Silver Flanged Button Bolts. (See final fitment in **Fig 2**).
- Ensure all mounting points are fully tightened, and check the fixings periodically.

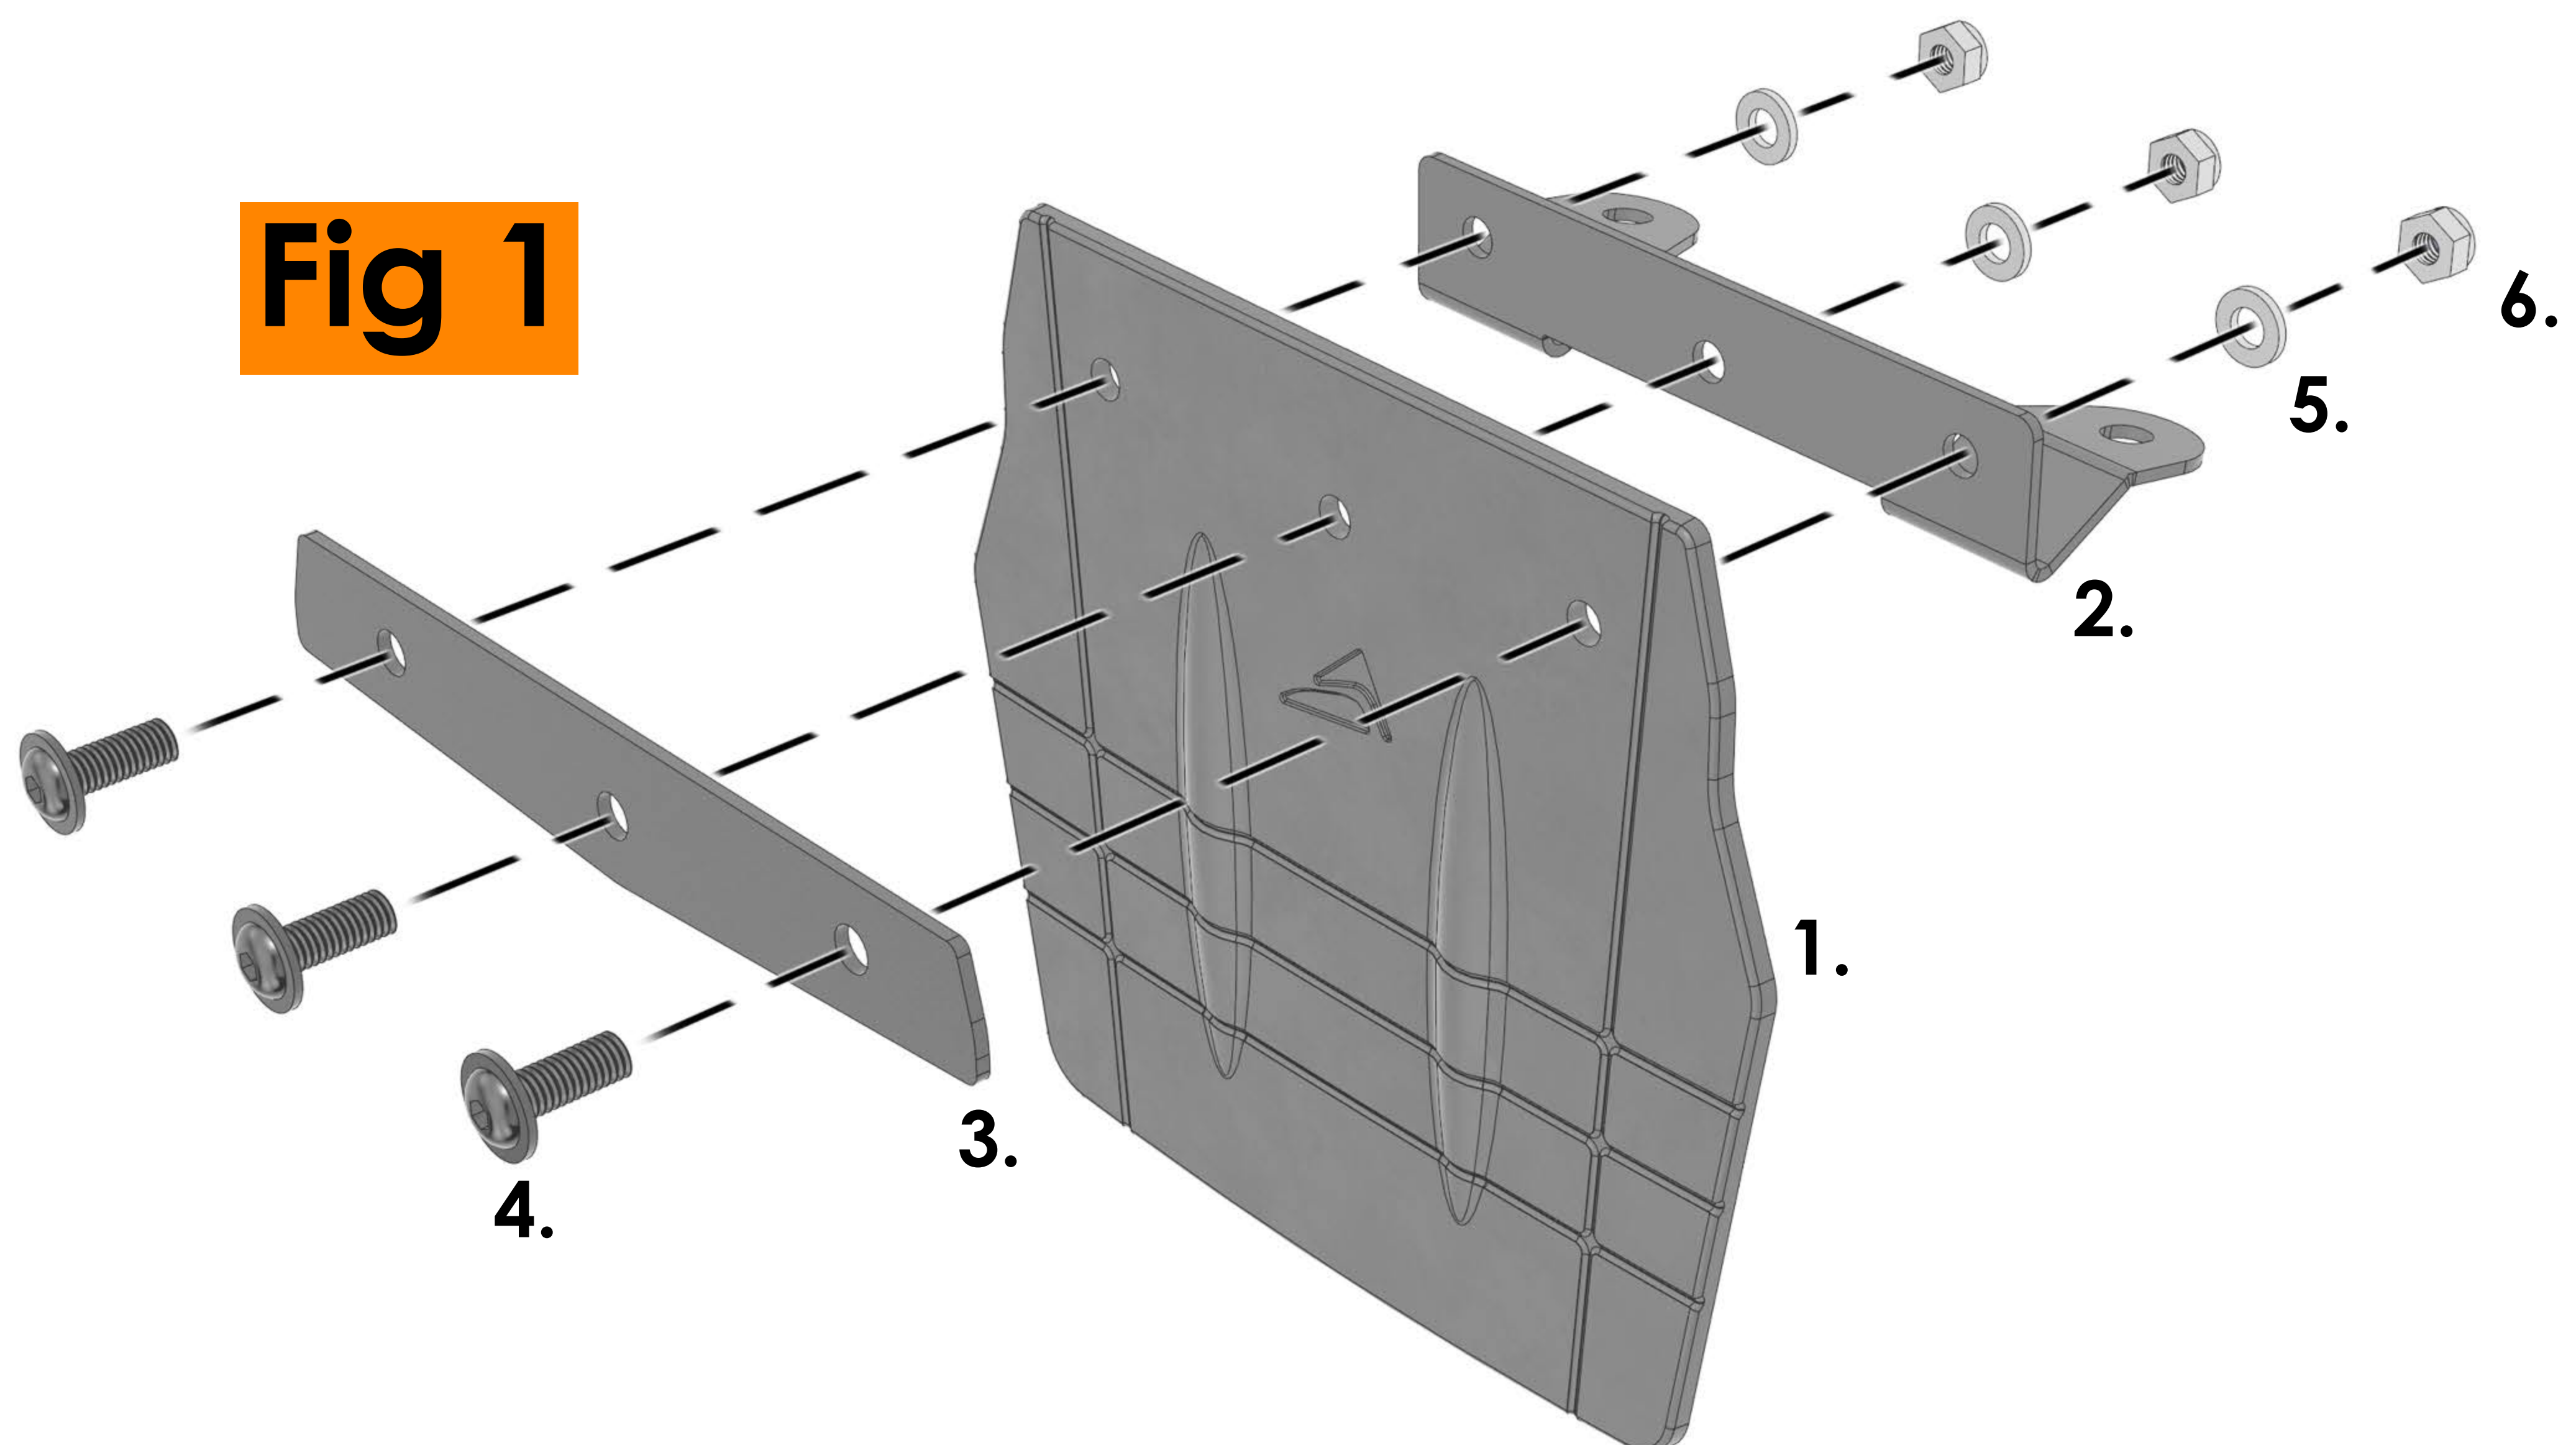

Please view these instructions on our website listing for clearer images