

818000 Harley Davidson Fat Bob Shock Shield Fitting Instructions

Kit Includes:

1X	C818000	Rubber Flap
1X	CWIP002	Alcohol Wipe

Note: You will need to source a cyanoacrylate-based adhesive (AKA Superglue / instant glue) to be able to fit this product.

The Pyramid Shock Shield is designed to fit the profile on the underside of the seat. Check fit before moving on.

Clean the area of fitment with water and washing up liquid. Once dry, use the alcohol wipe provided in the same area to clear any debris that remains. Ensure that the area has dried before moving on.


Apply a small amount of a cyanoacrylate-based glue around the fitting areas. Place the rubber flap in position and hold for the required time (refer to the manufacturer instructions for glue curing time).

Any questions?

support@pyramid-plastics.co.uk
+44 (0)1427 677990
www.pyramid-plastics.co.uk



Rubber flap in place

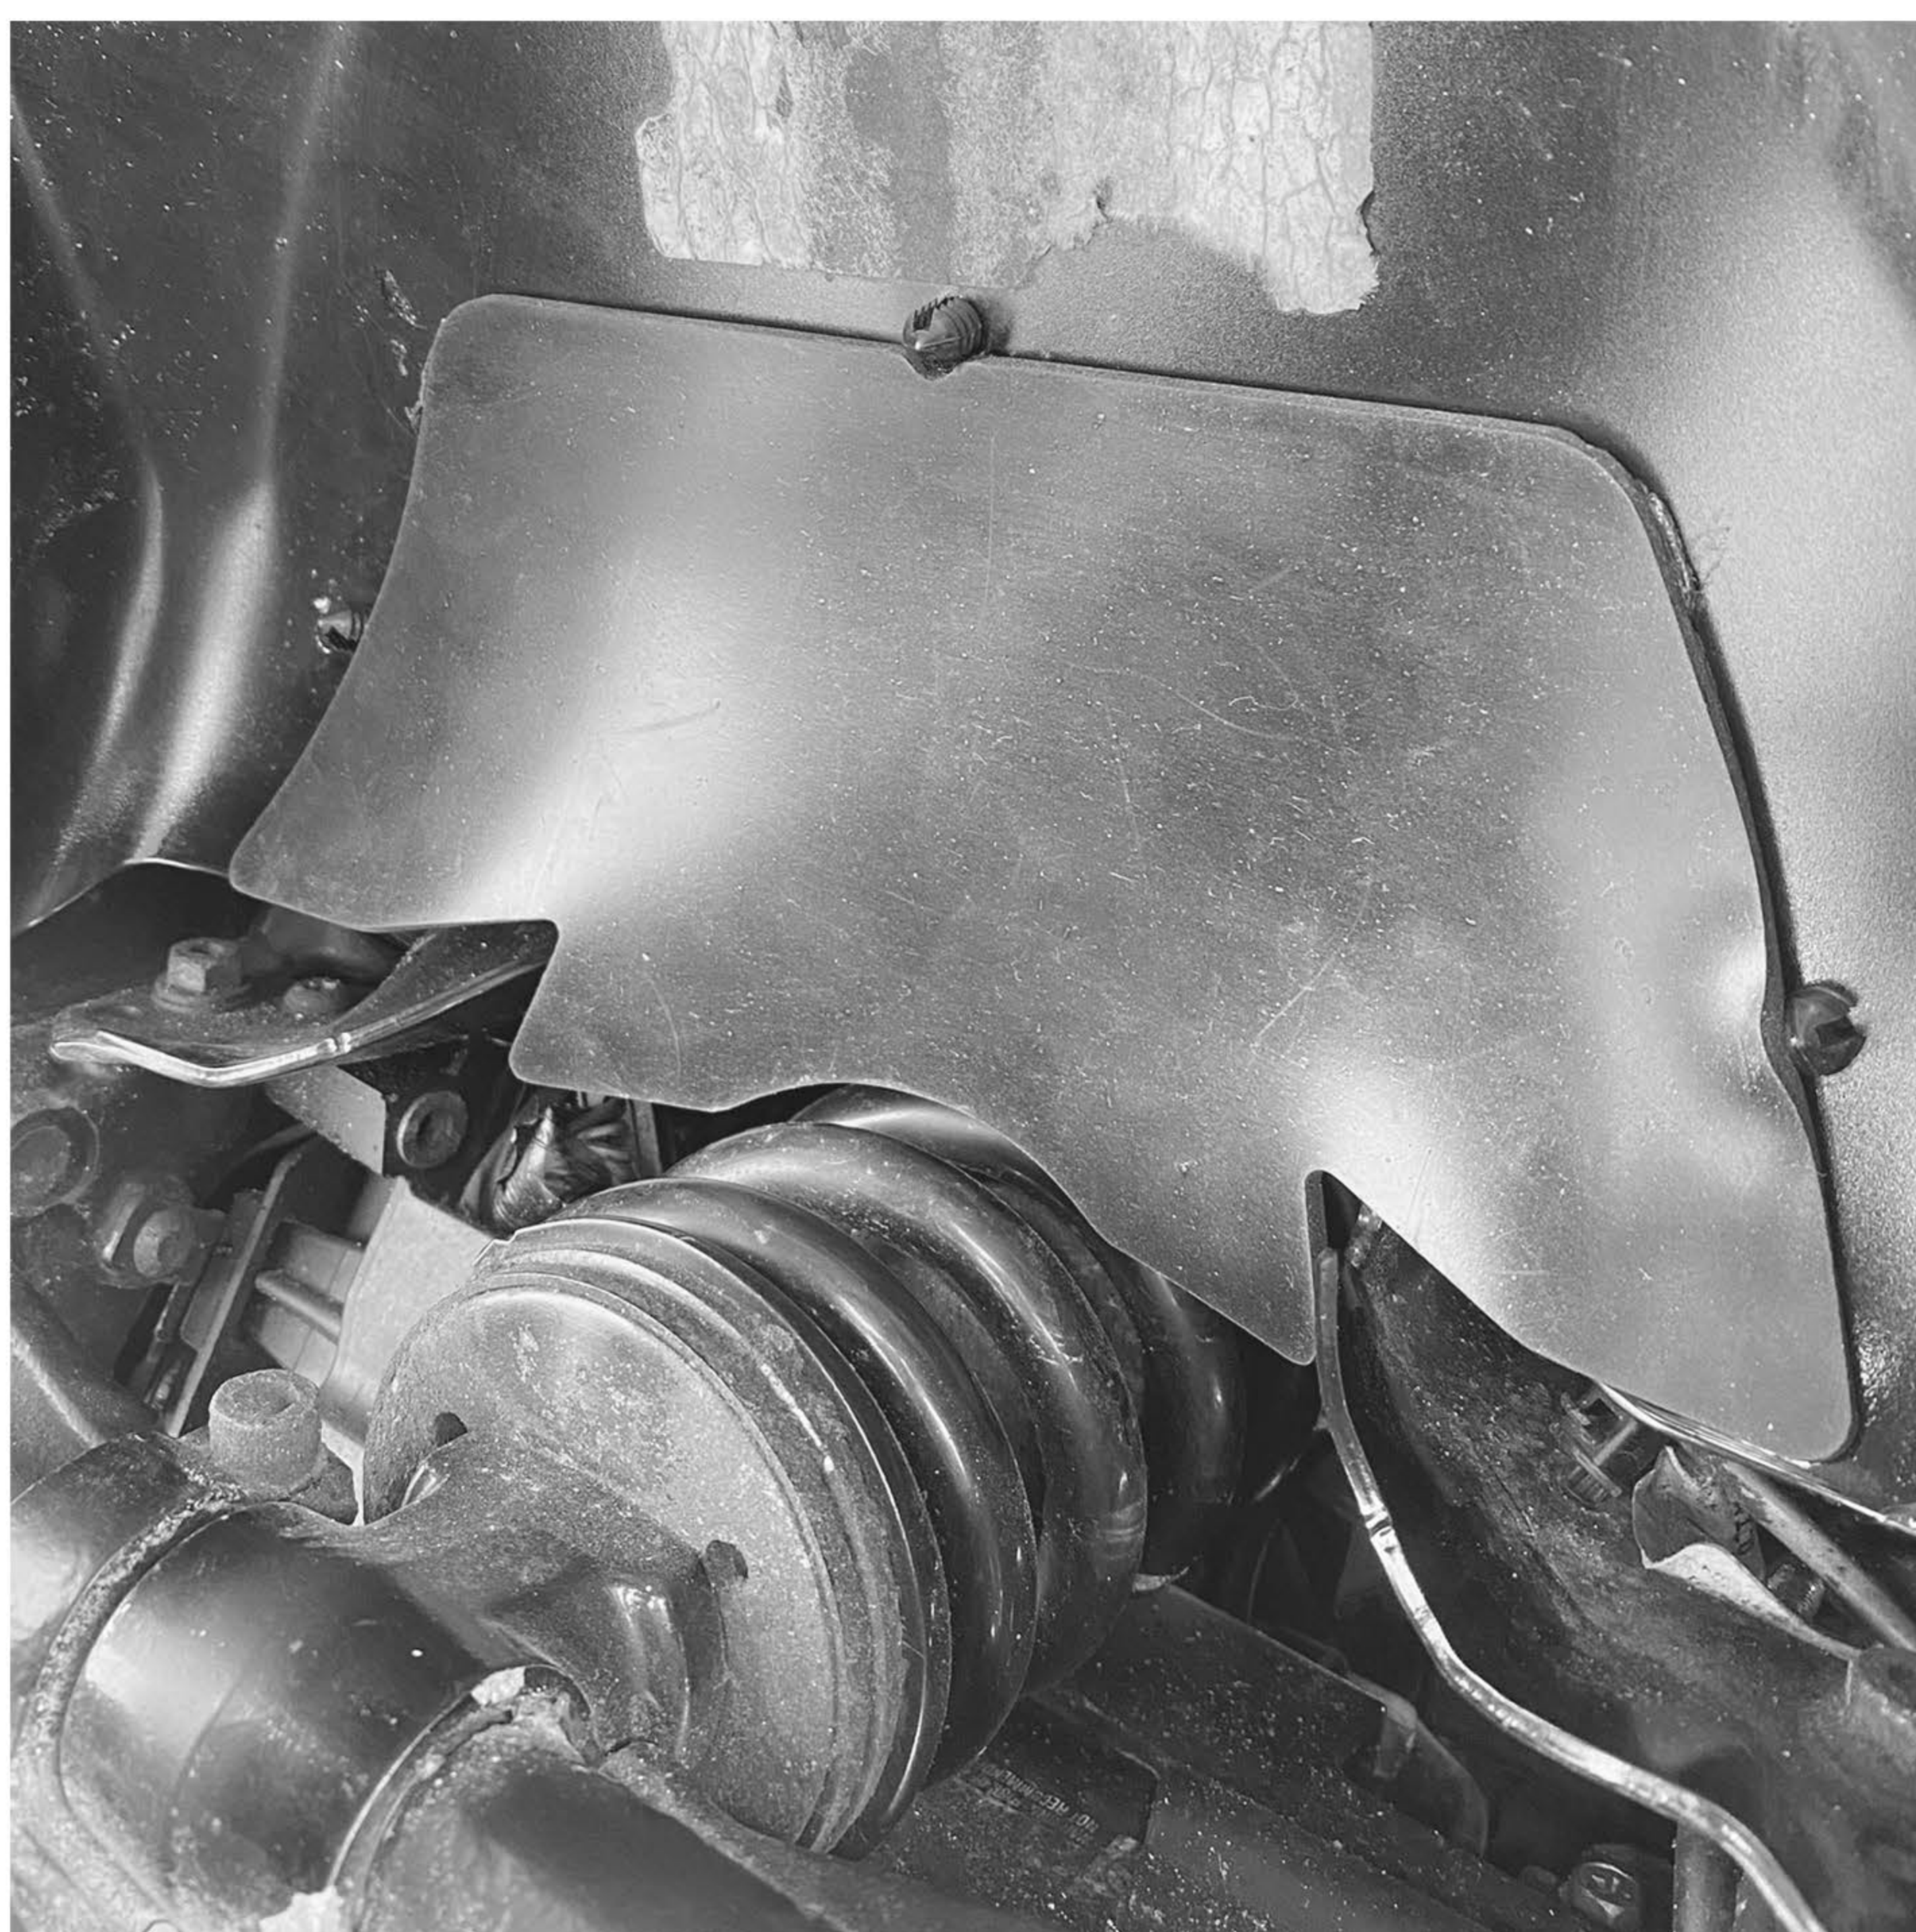

Illustrations and pictures are always clearer on our web version!

Did you know.. Harley-Davidson was founded in 1903!