



S1000R
2017-2018

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN



BMW S1000R 2017-18

Right Hand Side Bullet Frame Slider - STREET

PART NO. FS-S1000R-2017-RHS-S

- 1 Remove front upper engine mounting bolt.
- 2 Assemble bolt through the aluminium bush into correct position.
Please note: this may touch the small radiator cowling fairing panel if radiator guards are fitted.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.



CPM-3

CPB-10-35

M10x55




BMW S1000R 2017-18

Left Hand Side Bullet Frame Slider - STREET

PART NO. FS-S1000R-2017-LHS-S

- 1 Remove front upper engine mounting bolt.
- 2 Assemble bolt through the aluminium bush into correct position.
Please note: this may touch the small radiator cowling fairing panel if radiator guards are fitted.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.

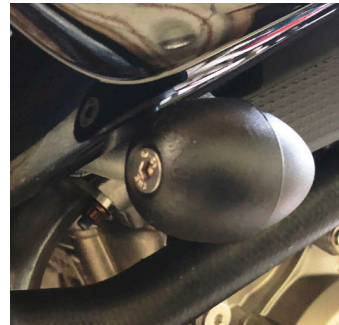

CPM-3

CPB-10-60

M10x55

