

X-Head_1250 Installation Guide

Parts: Left & Right Guards
Left & Right Rubber Liners
6-T25 x 20mm Torx screws

Tools: T25 Torx screw driver

*** BEFORE BEGINNING WORK, READ THESE INSTRUCTIONS FROM START TO FINISH.**

*** PLACE BIKE ON CENTER STAND ON LEVEL GROUND**

*** ALLOW THE ENGINE TO COOL BEFORE STARTING INSTALLATION**

*** AFTER FIRST RIDE, RE-CHECK FASTENER TIGHTNESS.**




Care Instructions:

In use, dirt can get trapped behind the X-Head. From time to time remove them to clean the engine. Any rubber residue can be cleaned with fine polishing compound. Clean plastic with soap and water. Armor-All works well to restore appearance.

WARNING AND DISCLAIMER: All parts manufactured, designed or sold by Machineart Moto ("MaMo") should be installed by a qualified motorcycle technician. Injury is increased by improper installation or misuse of equipment. MaMo's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by MaMo, the responsibility of MaMo is limited to a refund of the purchase price or the replacement of the part if MaMo determines the part to be defective, and subject to MaMo's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to MaMo products will void this limited warranty). MaMo, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever except as provided by law. MaMo makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose.



1 Remove one T25 Torx screw retaining the spark plug cover. Remove cover.

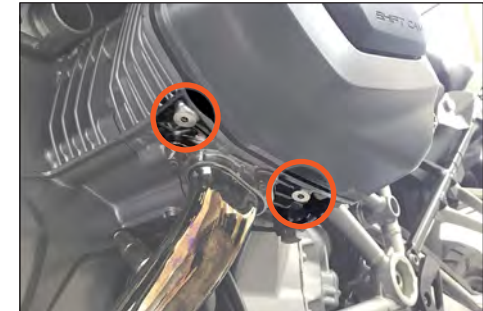

2 Before installation, identify the two lower mounting points.



3 Place X-Head into position.



4 Fasten the X-Head with the supplied T25 Torx screws, starting at the bottom. **Do not tighten!** Be careful not to cross-thread the screws.



5 Align the upper mounting hole with the mount on the engine, and fasten with one T25 Torx screw.



6 Tighten all screws evenly with a T25 Torx driver. Do not over-tighten!