



INSTALLATION INSTRUCTIONS

SKU: **AC-1381**

FOOT PEGS YAMAHA GRIZZLY 550/700 & KODIAK 700 (2007+)

01



02



SAFETY WARNING

Please **read and understand** all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

Item	Part No.	Description	Qty.
COMPONENTS			
Those items are shown on the first page.			
01	1381-01	Left Side Foot Peg	1
02	1381-02	Right Side Foot Peg	1
HARDWARE			
Those items are included with each kit to install the components.			
03	A-1007	M8 Flat Fender Washer	4
04	A-1507	M8-1.25 Flange Lock Nut	4
05	A-2809	M8-1.25 x 30mm Hex Flange Bolt	4
06	B-5253A	0,319" ID. x 5/8" OD. x 3/16" Lg. Alu Bushing	4

INSTALLATION INSTRUCTIONS


PREPARATION

- Before starting the installation, we recommend you to clean your floor boards from all the dirt.
- Remove the factory foot pegs.

Note: You going to need to drill and remove the rivets that hold the factory foot pegs to be able to remove them.

INSTALLATION

1. Use the new foot pegs to mark where to drill the holes on the floorboard. **Refer schema below.**

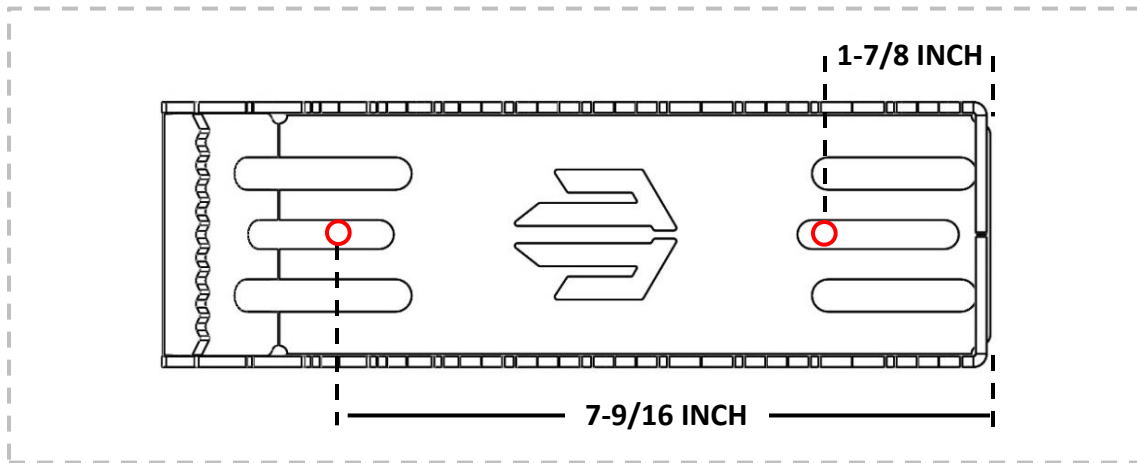

2. Drill a 5/16" hole through the marked areas of step 1.
3. Install the foot pegs using, for each side: (2x) M8x30mm bolts, (2x) 3/16" bushings, (2x) M8 washers and (2x) M8 lock nuts. **Refer schema below.**

