



# INSTALLATION INSTRUCTIONS

SKU: **AC-1382**

FOOT PEGS CAN-AM OUTLANDER G2 & G2L (2012+)

01



02



## SAFETY WARNING

Please **read and understand** all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

| Item  | Part No. | Description                                   | Qty. |
|---|----------|---|------|
| <b>COMPONENTS</b>   |          |   |      |
| Those items are shown on the first page.                          |          |   |      |
| 01  | 1381-01  | Left Side Foot Peg                            | 1    |
| 02  | 1381-02  | Right Side Foot Peg                           | 1    |
| <b>HARDWARE</b>   |          |   |      |
| Those items are included with each kit to install the components. |          |   |      |
| 03  | A-1007   | M8 Flat Fender Washer                         | 4    |
| 04  | A-1507   | M8-1.25 Flange Lock Nut                       | 4    |
| 05  | A-2813   | M8-1.25 x 40mm Hex Flange Bolt                | 4    |
| 06  | B-5224A  | 0,319" ID. x 5/8" OD. x 9/16" Lg. Alu Bushing | 4    |


# INSTALLATION INSTRUCTIONS

## PREPARATION

- Before starting the installation, we recommend you to clean your floor boards from all the dirt.

## INSTALLATION

1. Drill a 5/16" hole through the factory holes on the floorboards. **See image below.**

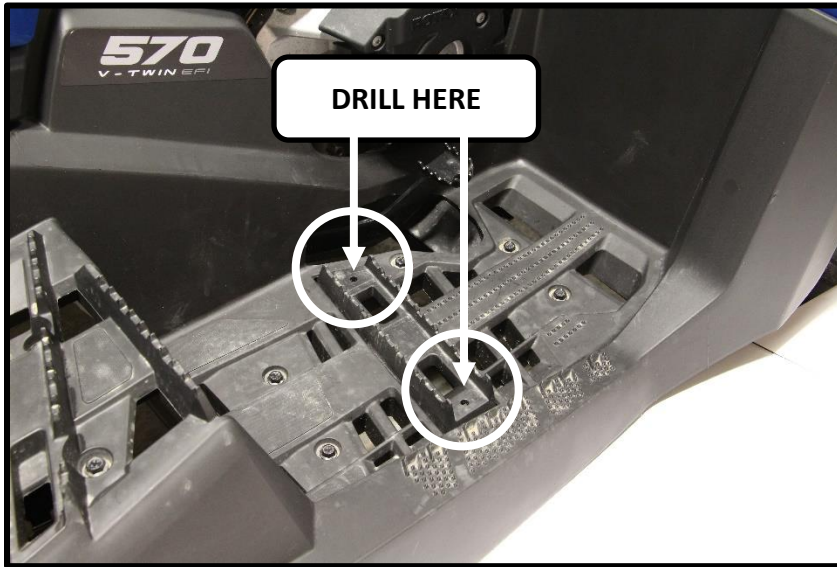

2. Install the foot pegs using, for each side: **(2x) M8x40mm bolts**, **(2x) 9/16" bushings**, **(2x) M8 washers** and **(2x) M8 lock nuts**. **Refer schema below.**

