



INSTALLATION INSTRUCTIONS

SKU: **AC-1383**

FOOT PEGS YAMAHA KODIAK 450 (2018+)

01



02



SAFETY WARNING

Please **read and understand** all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

Item	Part No.	Description	Qty.
COMPONENTS			
Those items are shown on the first page.			
01	1381-01	Left Side Foot Peg	1
02	1381-02	Right Side Foot Peg	1
HARDWARE			
Those items are included with each kit to install the components.			
03	A-1007	M8 Flat Fender Washer	4
04	A-1507	M8-1.25 Flange Lock Nut	4
05	A-2813	M8-1.25 x 40mm Hex Flange Bolt	4
06	B-5255A	0,319" ID. x 5/8" OD. x 5/8" Lg. Alu Bushing	4

INSTALLATION INSTRUCTIONS


PREPARATION

- Before starting the installation, we recommend you to clean your floor boards from all the dirt.

INSTALLATION

1. Drill 5/16" holes through the floorboards. **See image below.**

NOTE: Drill the holes at 3 inches of each side of the "middle hole".

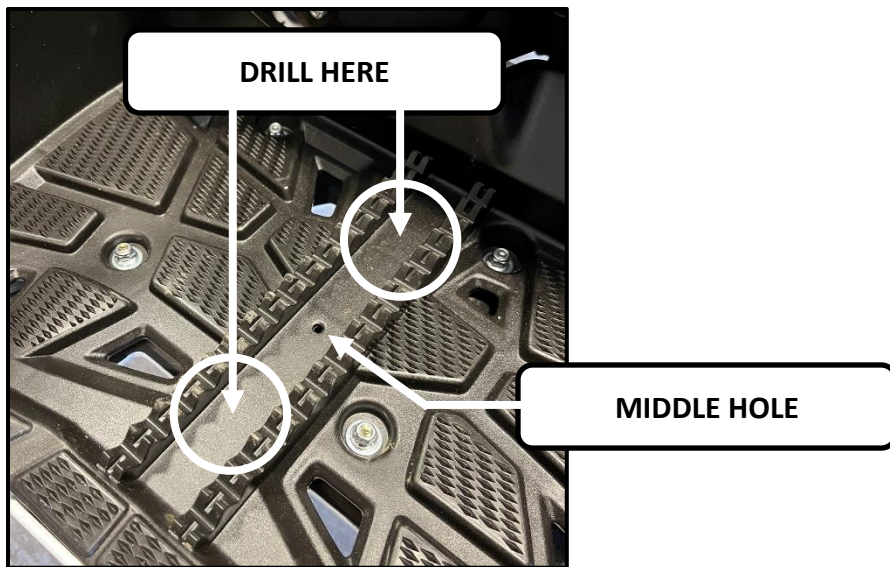

2. Install the foot pegs using, for each side: (2x) M8x40mm bolts, (2x) 5/8" bushings, (2x) M8 washers and (2x) M8 lock nuts. **Refer schema below.**

