



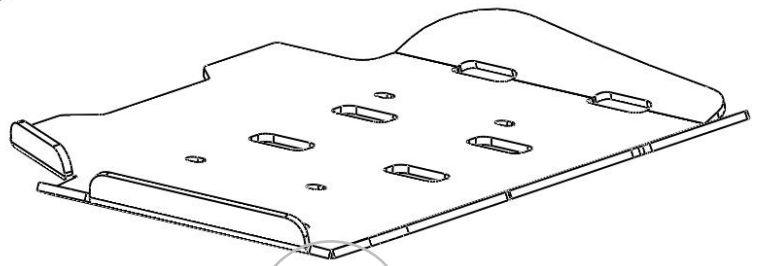

INSTALLATION INSTRUCTIONS

SKU: **SP-6110**

FOOTWELL PLATES YAMAHA GRIZZLY & KODIAK 550/700 (2007+)

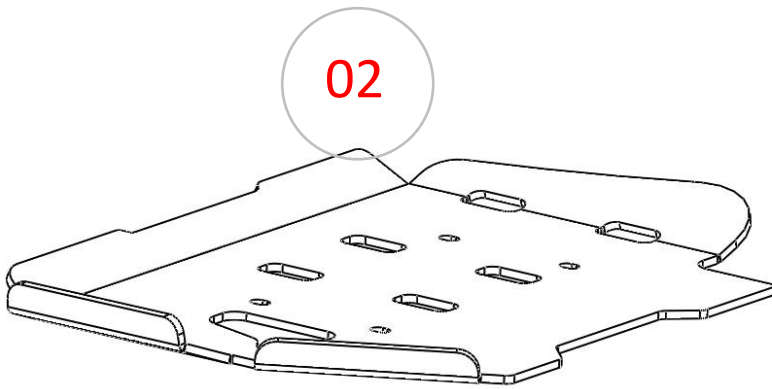

SAFETY WARNING

Please **read and understand** all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.


Item	Part No.	Description	Qty.
COMPONENTS			
Those items are shown on the first page.			
01	6110-01	Left Aluminum Footwell Plate	1
02	6110-02	Right Aluminum Footwell Plate	1
HARDWARE			
Those items are included with each kit to install components.			
03	A-1004	M6 Flat Washer	8
04	A-1005	M6 Flat Fender Washer	8
05	A-1505	M6-1.00 Flange Lock Nut	8
06	A-2612F	M6-1.00 x 40mm Hex Bolt (full thread)	8
07	A-2616F	M6-1.00 x 50mm Hex Bolt (full thread)	2
08	A-4001	Rubber Strip / Adhesive Back, 1x2" x 1/8" Thick	2

IMPORTANT:


If you have to install the PERFEX Central plates, install the footwell plates first, for an easy installation.

INSTALLATION INSTRUCTIONS


1. We recommend to standing the ATV up on its end, to be able to install easily the plate under the bike.
2. On each side, remove the 4 bolts that fix the plastic floorboard to the frame. **See image below.**

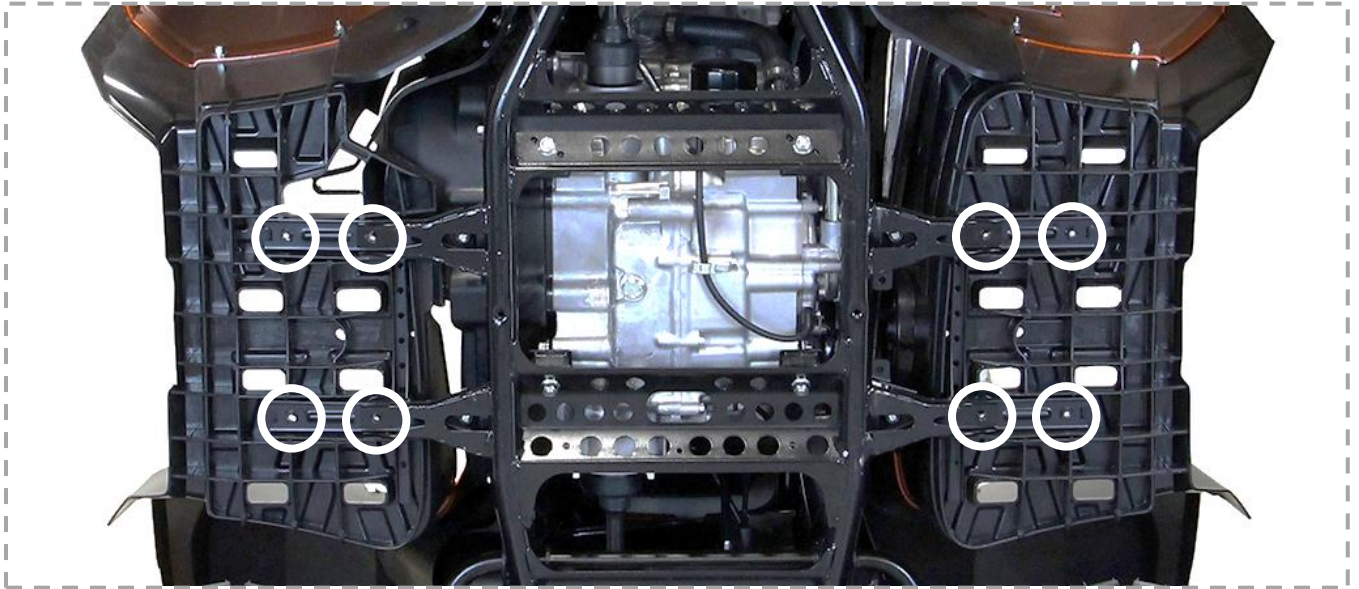

3. Stick the provided rubber strip on the new footrest plates, as shown below.

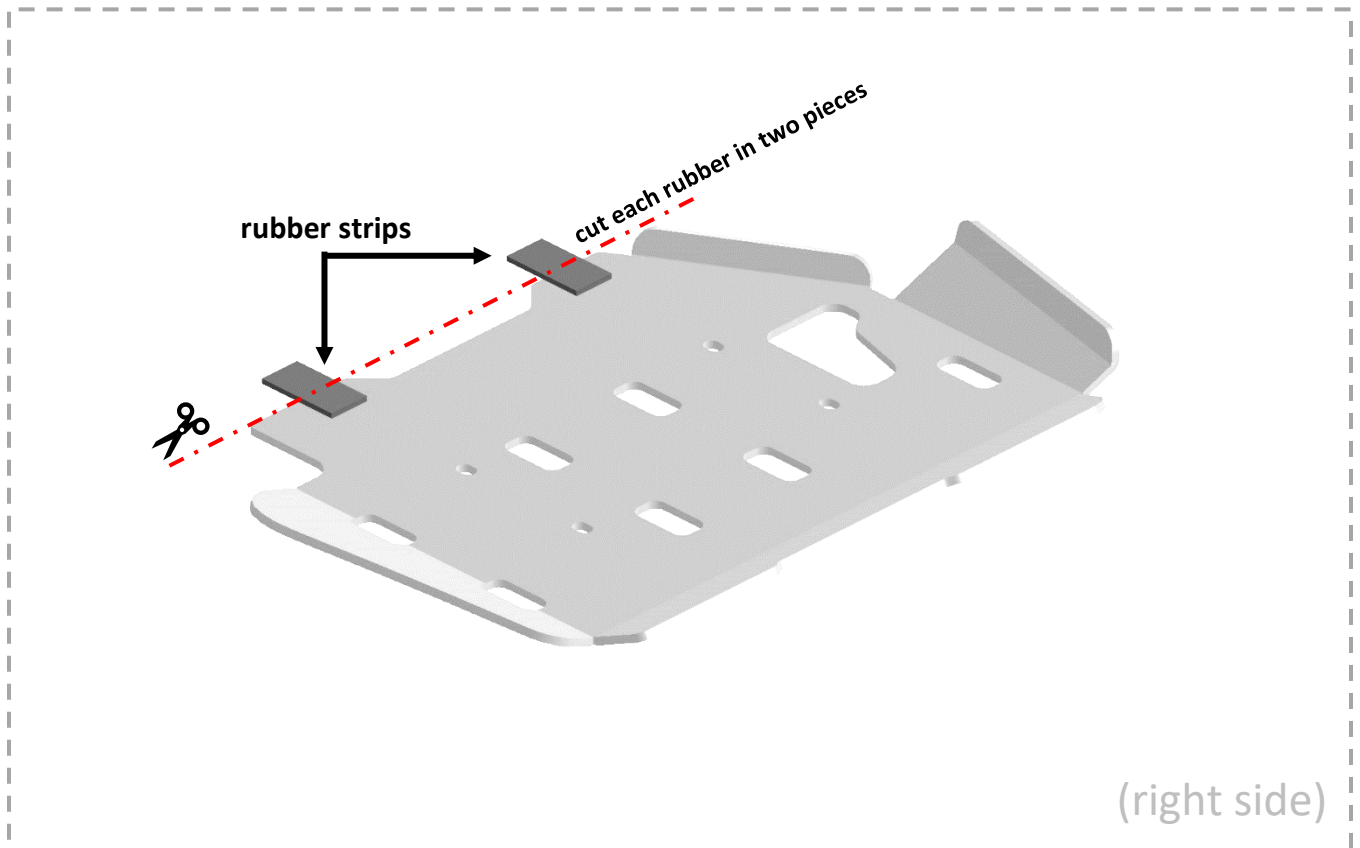

4. Install the new footrest plates under the floorboard, using the factory mounting point. Use **(4x)** M6-1.00x40mm bolts and **(4x)** M6 washers (the smaller ones) for each side.

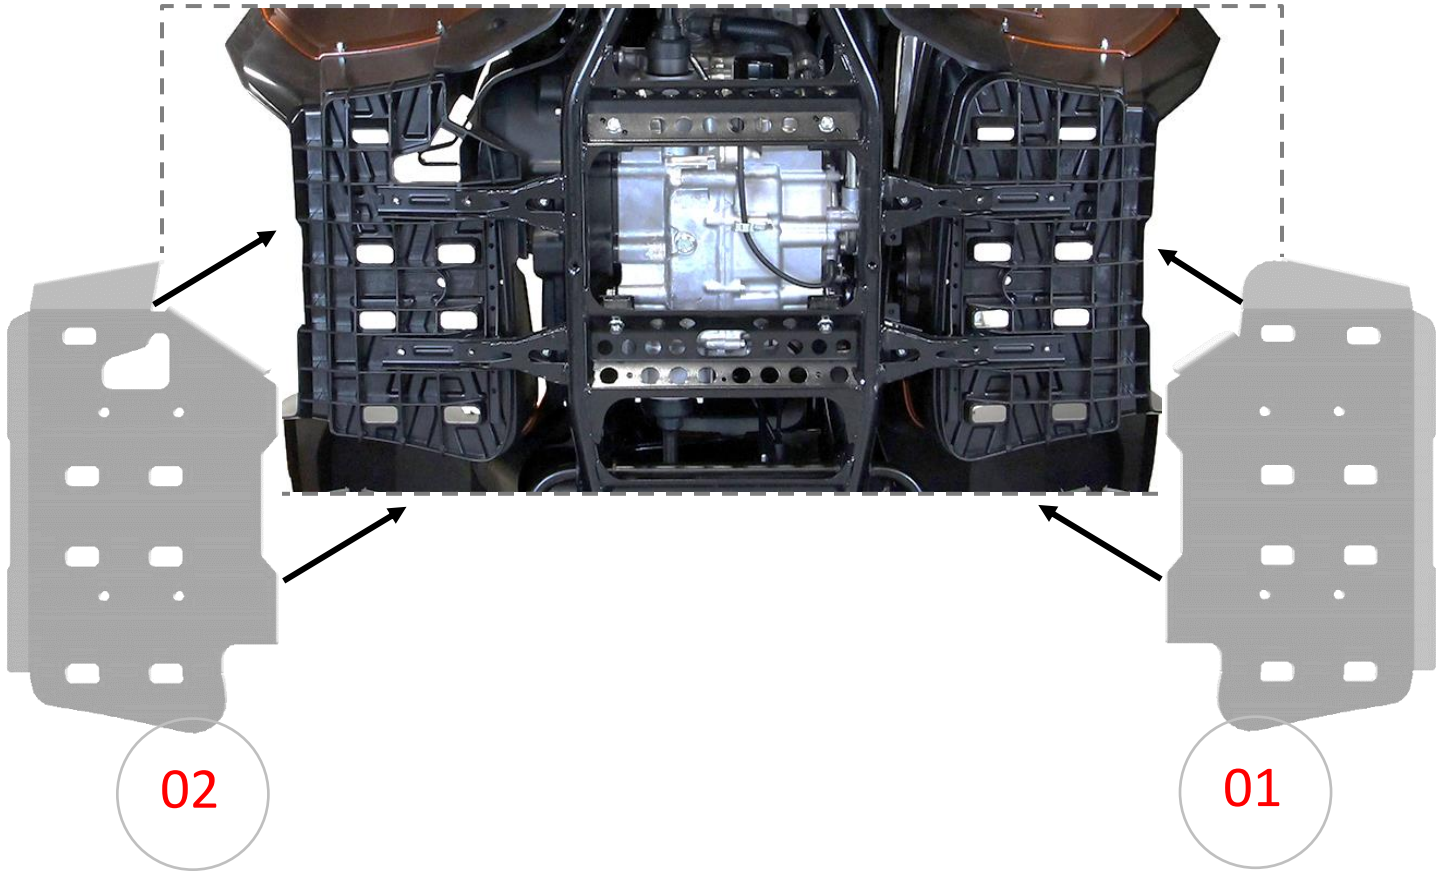

5. Secure the floorboard using **(4x)** M6 fender washers and **(4x)** M6-1.00 lock nuts for each side.

