




INSTALLATION INSTRUCTIONS


SKU: **SP-6130**

FOOTWELL PLATES YAMAHA KODIAK 450 (2018+)

02

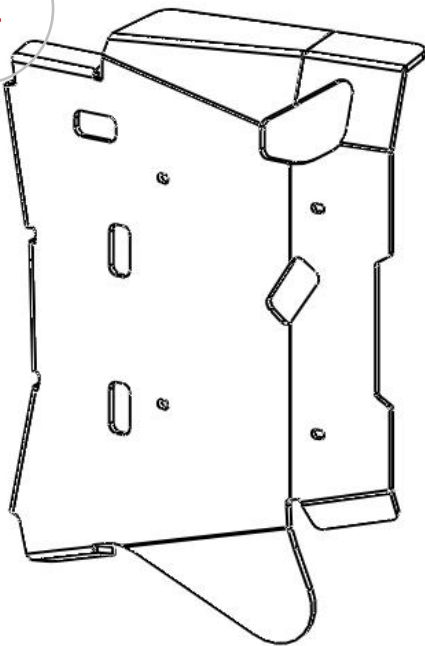

01

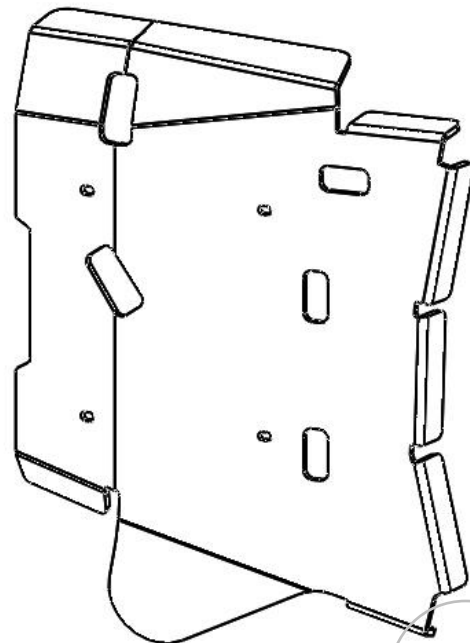

SAFETY WARNING

Please **read and understand** all instructions and safety warning prior to install the product. Failure to do so could result in product damage, personal injury or even death.

- Stay alert! Watch what you are doing and use common sense while handling this product.
- Inspect product for damage prior to installation, do not use if product is in unsafe condition.
- Do not install product while under the influence of drugs, alcohol or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the installer, as well as others in the work area.
- Do not over reach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep your work area clean and well lit.

Item	Part No.	Description	Qty.
COMPONENTS			
Those items are shown on the first page.			
01	6130-01	Left Aluminum Footwell Plate	1
02	6130-02	Right Aluminum Footwell Plate	1
HARDWARE			
Those items are included with each kit to install components.			
03	A-1005	M6 Flat Fender Washer	8
04	A-1505	M6-1.00 Flange Lock Nut	8
05	A-2612F	M6-1.00 x 40mm Hex Bolt (full thread)	8
06	A-2616F	M6-1.00 x 50mm Hex Bolt (full thread)	2

IMPORTANT:

If you have to install the PERFEX Central plates, install the footwell plates first, for an easy installation.


INSTALLATION INSTRUCTIONS

PREPARATION

- We recommend to standing the ATV up on its end, to be able to install easily the plate under the bike.
- ON EACH SIDE. Remove the 4 factory bolts that fix the floorboard to the frame.

INSTALLATION (do not tight until all was fixed correctly)

1. Using the provided M6x40mm bolts and the M6 washers, re-bolt the floorboard to the frame.
NOTE: Use the provided M6x50mm bolts if you have rear passenger seat installed (see image below).
2. Install the new footwell plates under the floorboard. Secure in place using the provided M6 lock nuts.
NOTE: For a “perfect fit”, some trimming can be required on the factory plastic center plate.

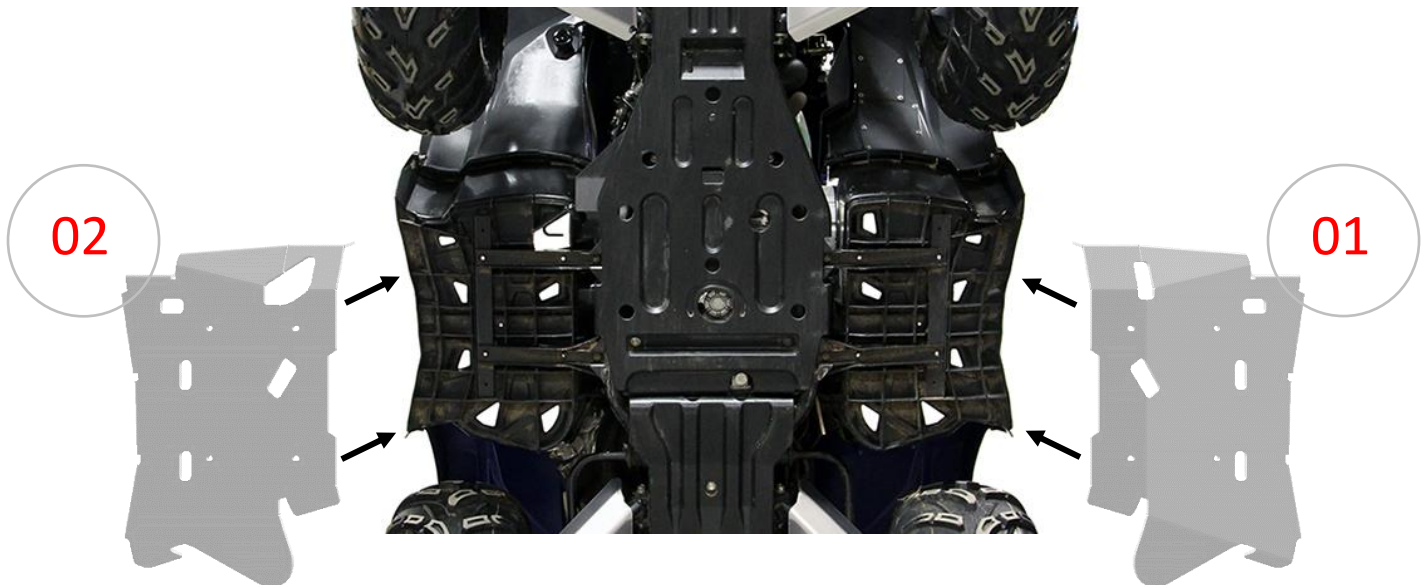

3. Tight the hardware once the plates are installed correctly.
4. Using a grinder, remove the extra length on the bolts.



Use the M6x50mm bolt here if you have a rear passenger seat installed