


AS350/700/90




FR-2014







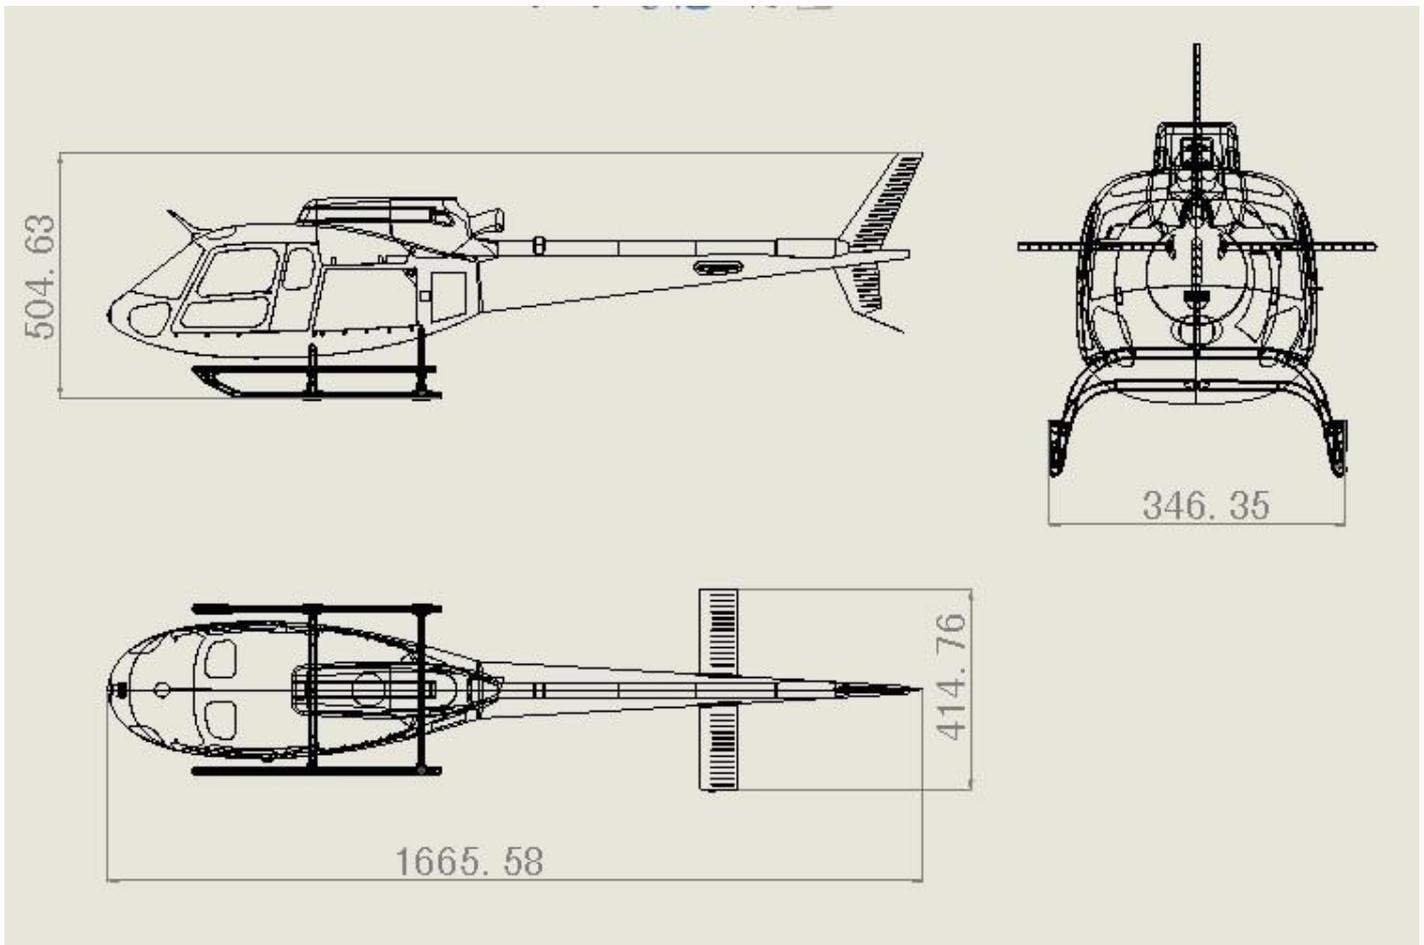





Parts List




Number	Photo	Name	Quantity	Remarks
2014 A-1		fuselage front	1	
2014 A-2		fuselage Middle	1	


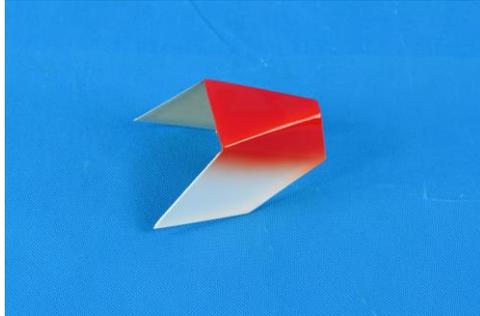
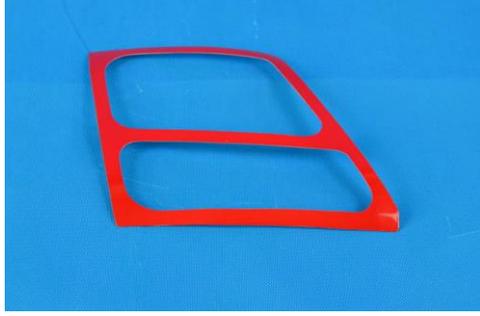
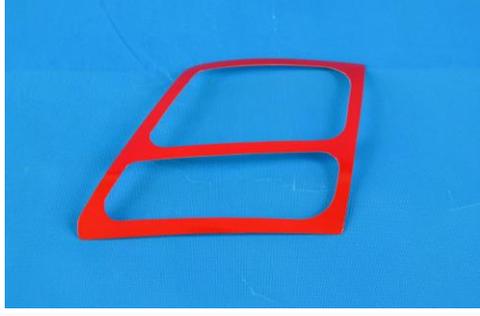
<p>2014 A-3</p>		<p>fuselage rear section</p>	<p>1</p>	
<p>2014 A-4</p>		<p>fuselage Fairing</p>	<p>1</p>	
<p>2014 A-5</p>		<p>Tail hatch</p>		
<p>2014 A-6</p>		<p>Right door</p>	<p>1</p>	
<p>2014 A-7</p>		<p>Left door</p>	<p>1</p>	
<p>2014 A-8</p>		<p>Vertical tail</p>	<p>1</p>	

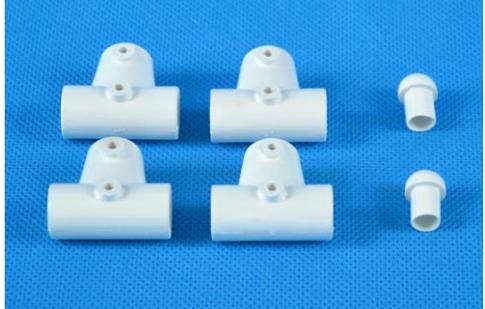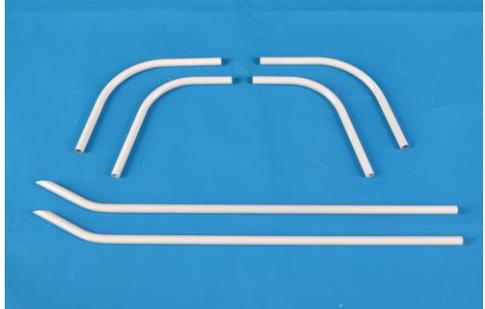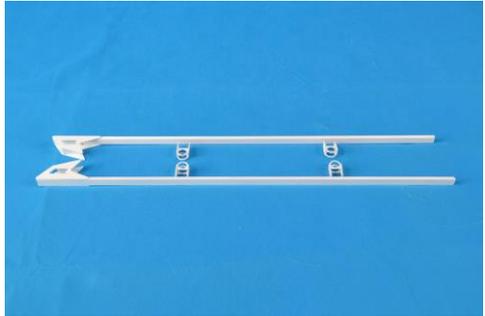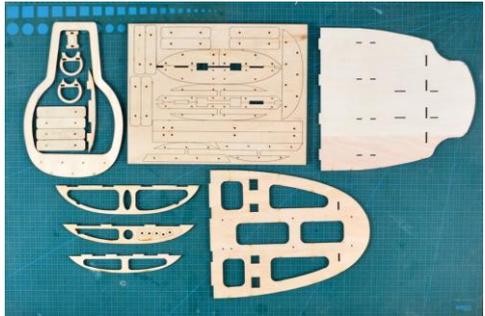2014 A-9		Under Vertical tail	1	
2014 B-1		T-type Skid parts connected	4	
		Skid plug	4	
2014 B-2		Skid	2	
		Before the rod	2	
		After the rod	2	
2014 B-3		Foothold	2	
2014 C		Wood parts	1	

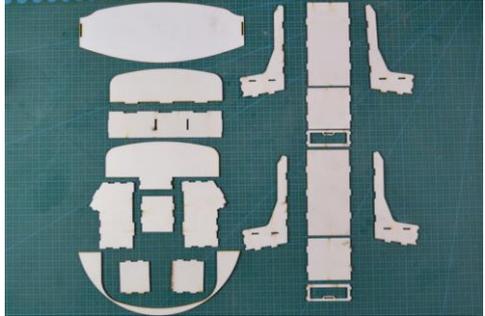2014 D-1		Windshield		
2014 D-2		Around the door windows	2	
2014 D-3		Aft fuselage windows	2	
2014 D-4		Under observation window	2	
2014 D-5		Skylights	2	
2014E-1		Seat Instrument panel	1	

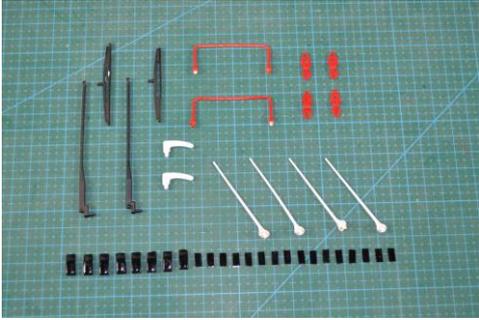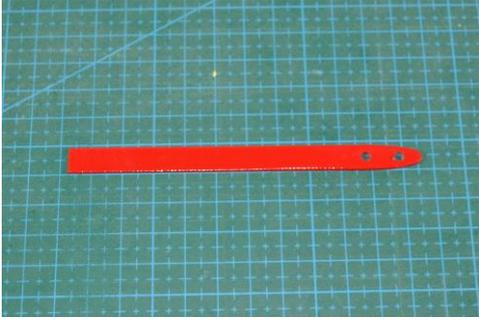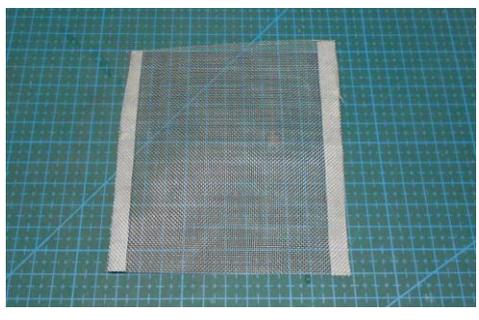2014 F-1		Fuselage blister Parts	1	
2014 F-2		Window sealing strip	400c m	
2014 F-3		Scale part	1	
2014 F-4		Tailskid	1	
2014 F5		Gauze		

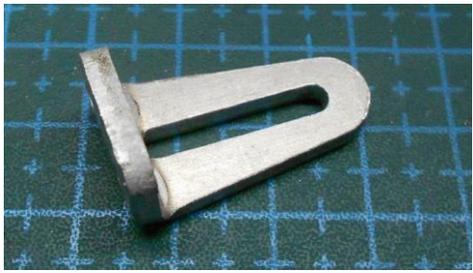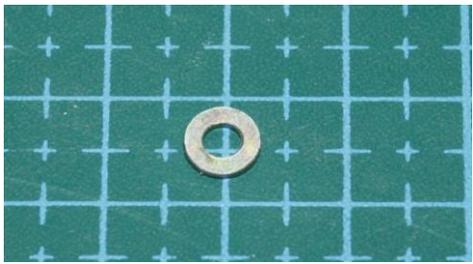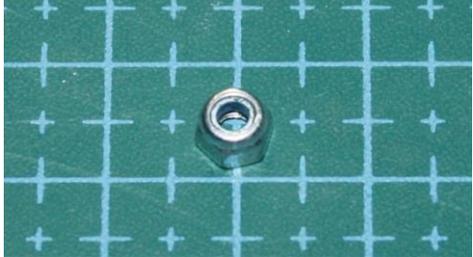2014 G-1		Body Anchor	2	
2014 G-2		8 * 34 the lever body	2	
2014 G-3		M3 * 15 Socket Scre w	2	
2014 G-4		M3 * 10 Socket Scre w	18	
2014 G-5		M3 * 15 Socket Scre w	11	
2014 G-6		M3 Washer	50	
2014 G-7		M3 self-locking nut	10	

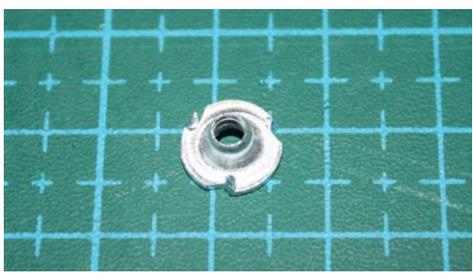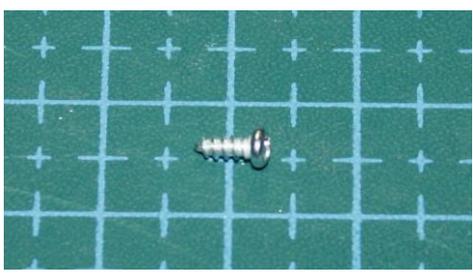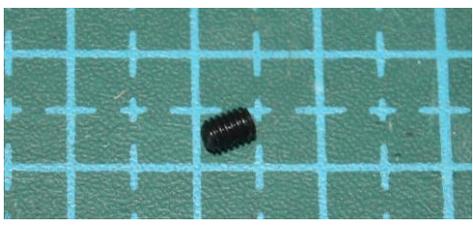
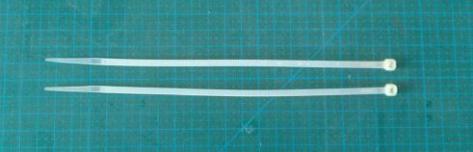
2011 G-8		3 * 10 self-tapping		
2011 G-9		3 * 20 self-tapping	18	
2011 G-10		M3 nut minions	9	
2011 G-11		2 * 5 self-tapping	15	
2014 G-12		1.4* 3 self-tapping	50	
2014 G-13		M3 * 4 Screw	8	
2014 G-14				



自备物品

Name	Photo	Quantity
Instant glue		1
Epoxy glue		1

这个说明书 以亚拓 700e 的组装为列



1 机身前端底座的组装

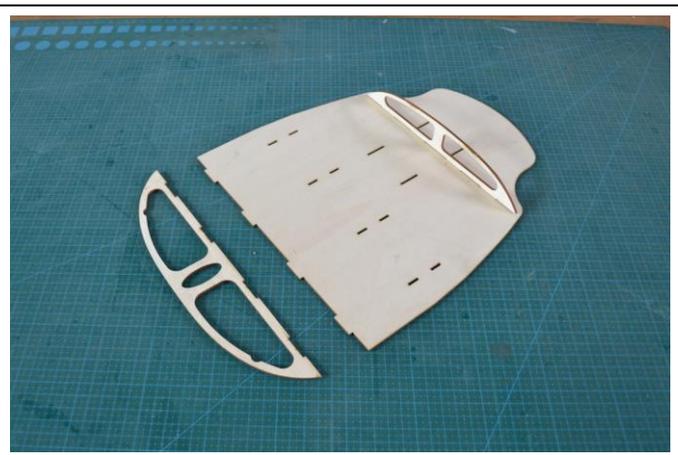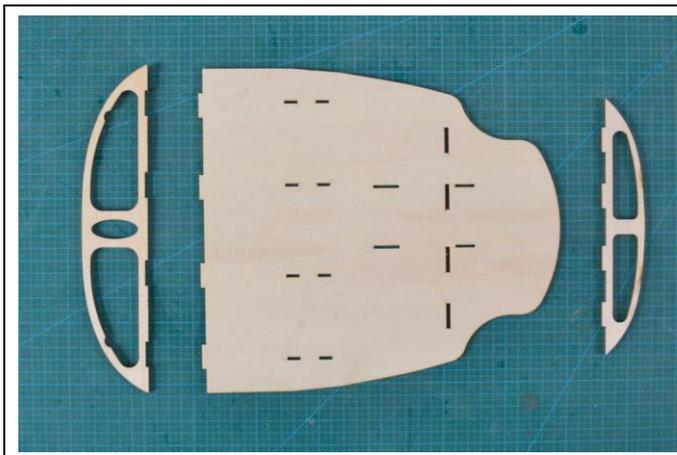

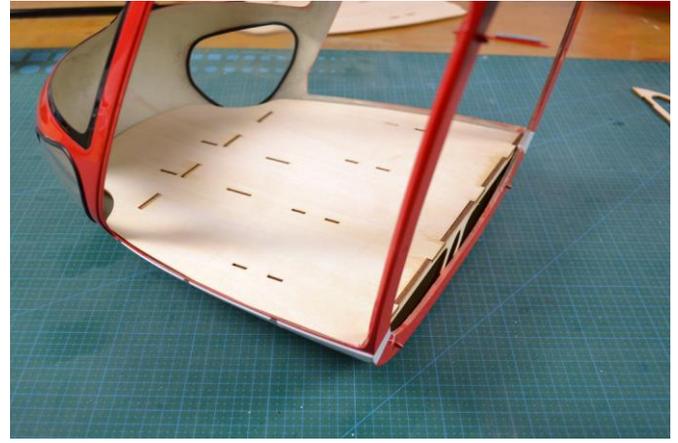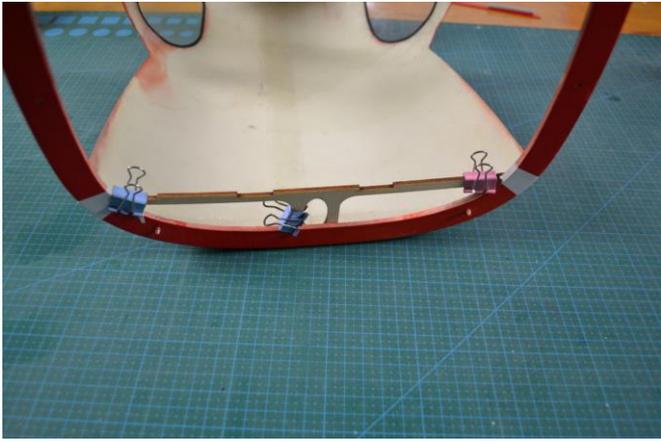


按照片的顺序 把 地板与机身前段用环氧树脂粘接

2 机身中段底座的组装

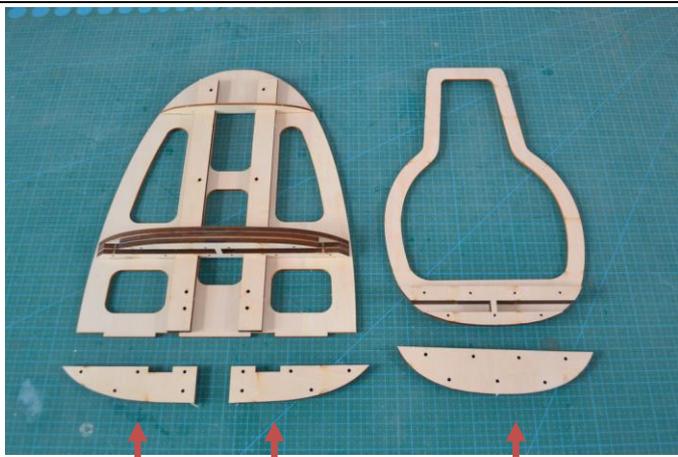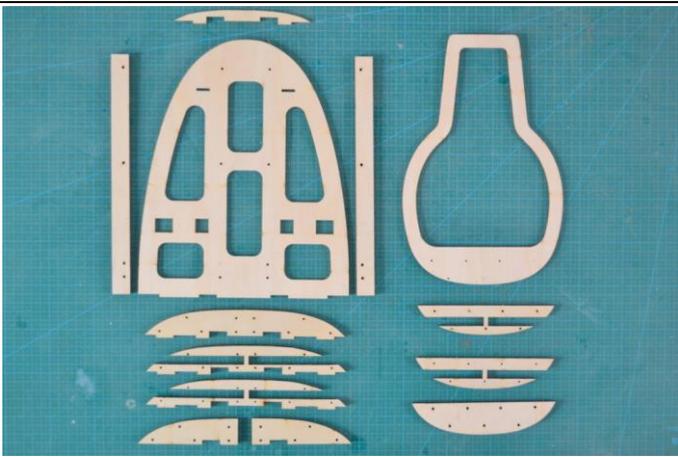


请按照照片所示将木质底座的零件粘合到一起注意务必保证孔位对齐。

红色箭头指示的零部件不需要粘合。

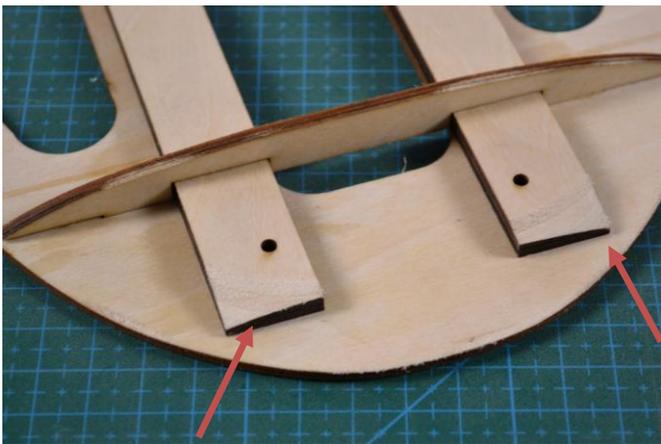



将箭头指示部分打磨一下，以保证能够和机身吻合。

将机身内部需要粘接的地方用砂纸打磨一下，能够保证粘接牢固

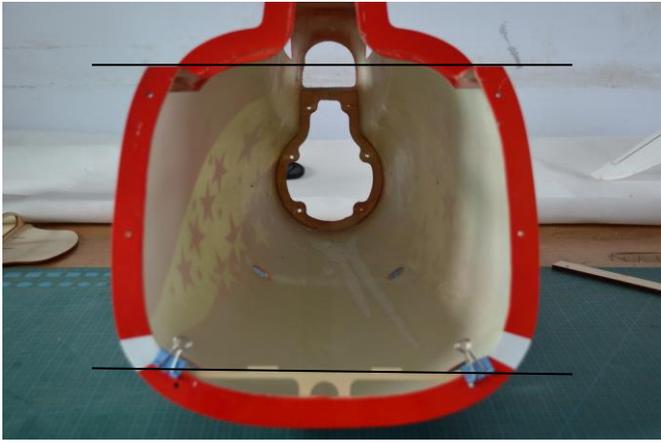


先将前隔框与机身粘接牢固，然后将组装好的木质底座和后隔框放入机身用环氧树脂粘合，并用重物压住，等待固化。请注意照片上黑色线之间的平行关系



3 排气管隔框与排气管的组装

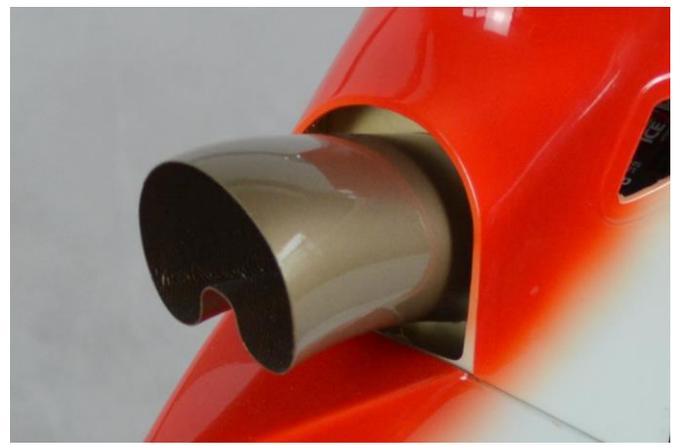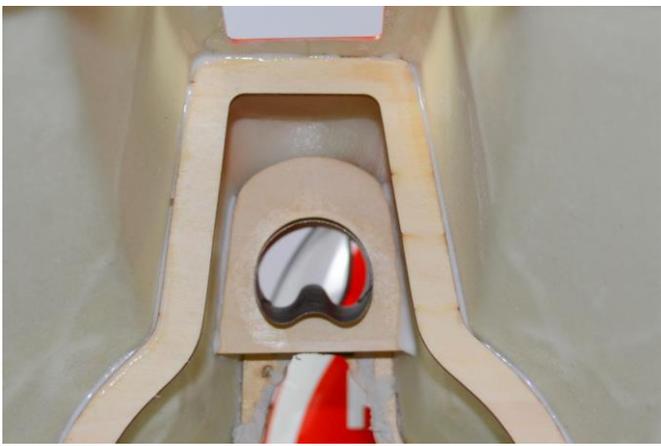

将排气管隔框和排气管调整好位置后先用瞬间胶固定后，用环氧树脂与机身粘接

4 尾管固定隔框的安装


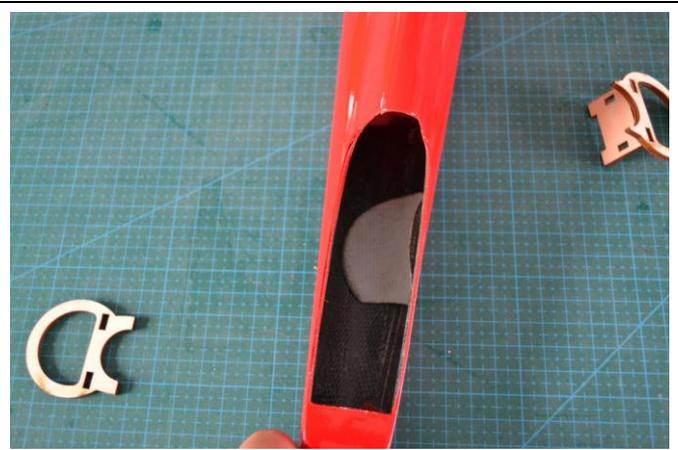


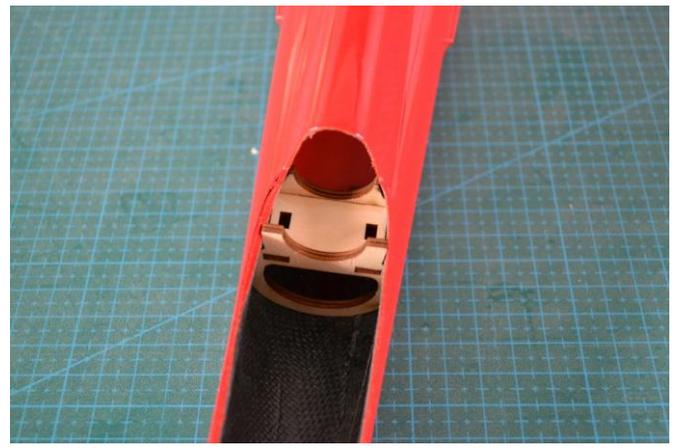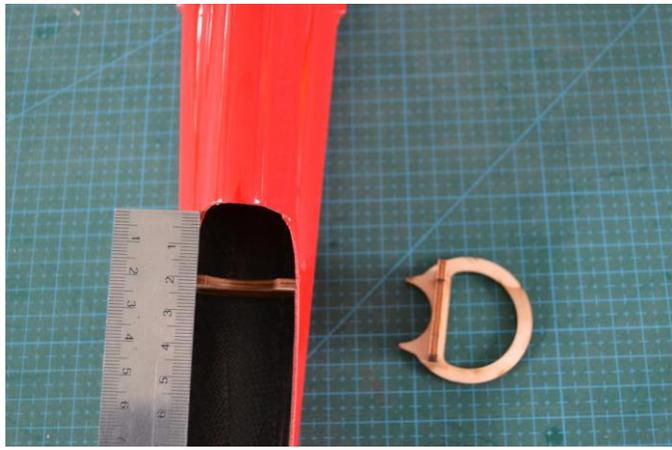


将尾管隔框 按图组装并放置到位 注意图示的尺寸

注意需要粘接的部位用砂纸打磨 用环氧胶粘合


5 机身中段 和机身后段的链接

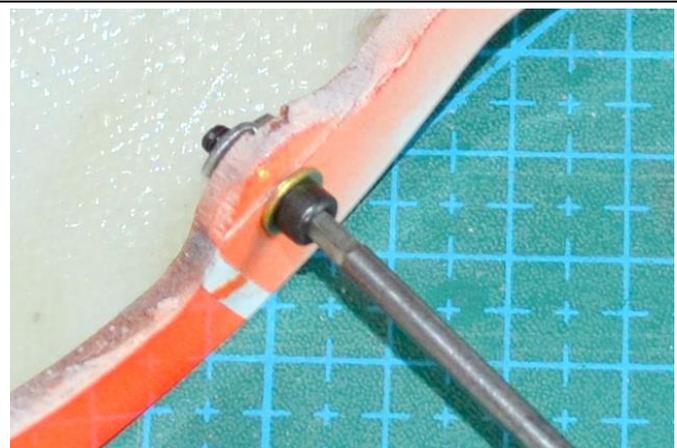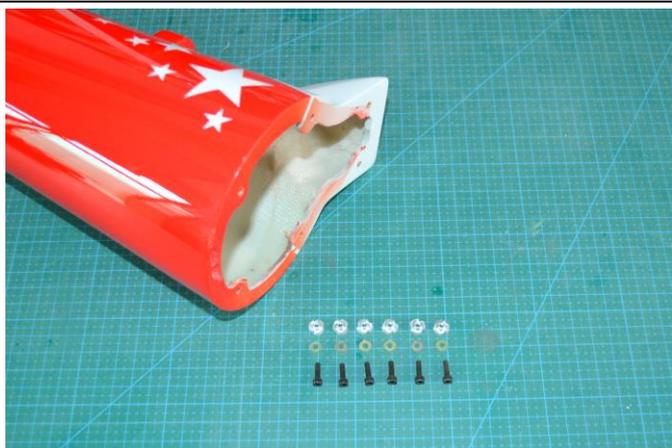

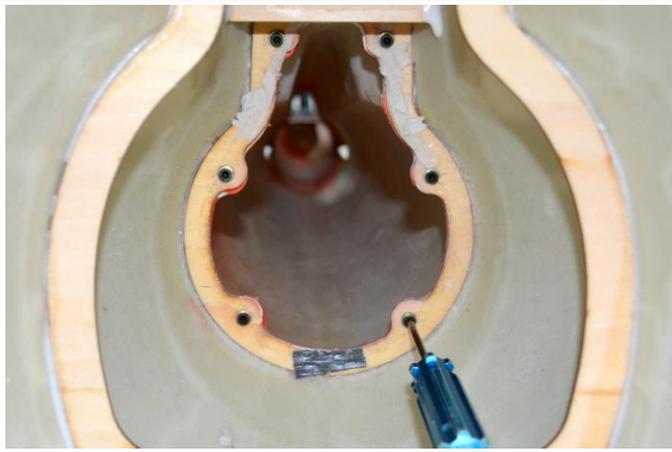


参考图示将机身中段与后段 用 螺丝连接起来。


6 机身前段 和机身中段的 连接方法

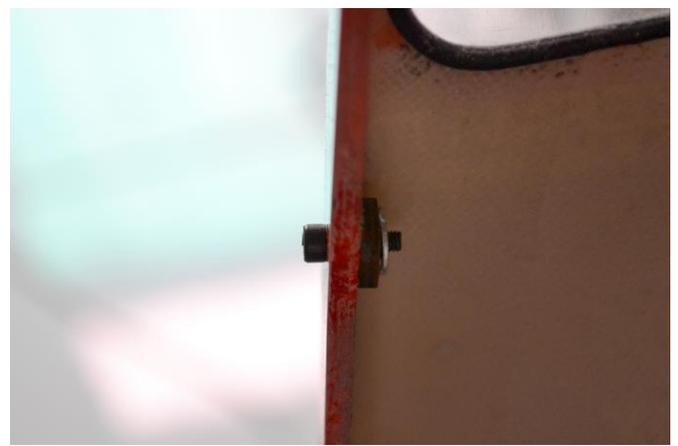



7 起落架与机身的组装

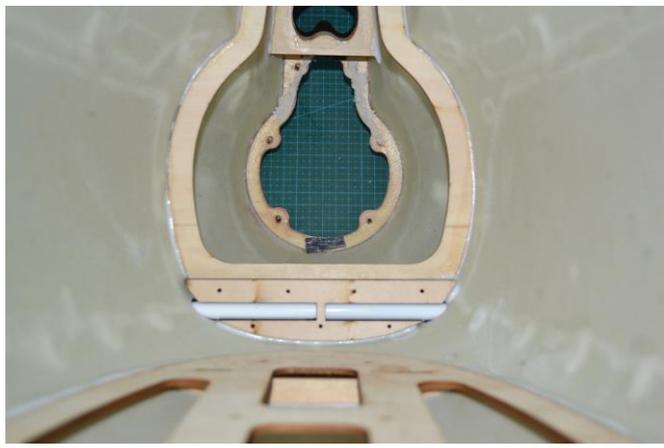

窗户的安装

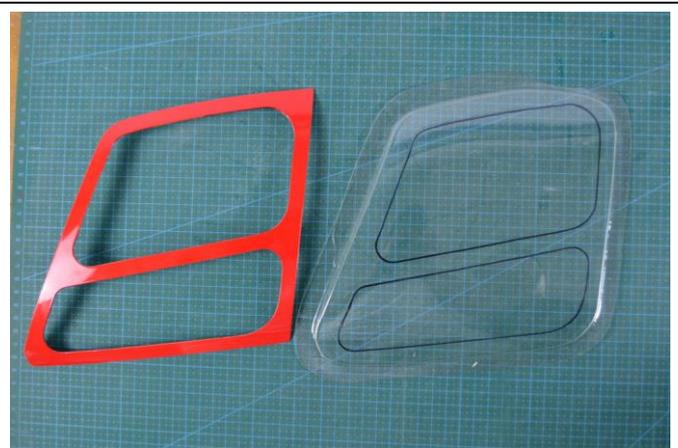


用一个大约 1mm 粗的记号笔 沿着窗框画一条线

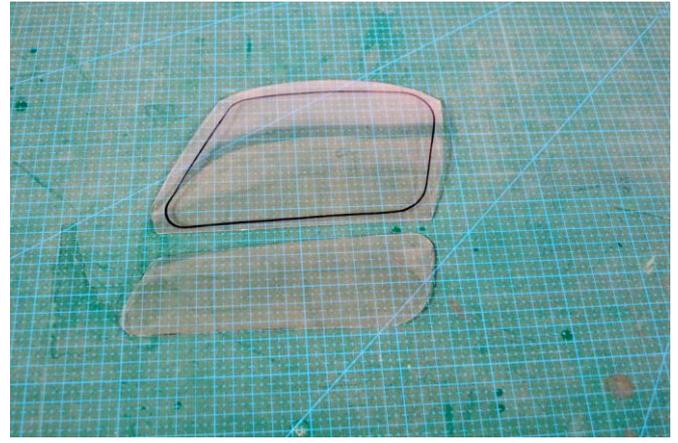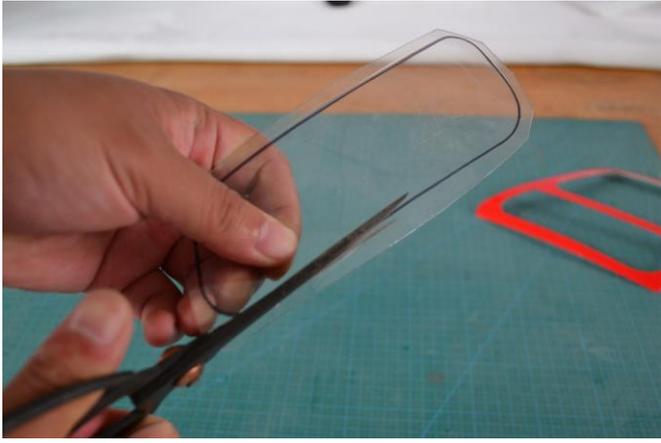

沿着线的内侧将 多余的部分剪掉。





将密封条用瞬间胶粘到玻璃的周围

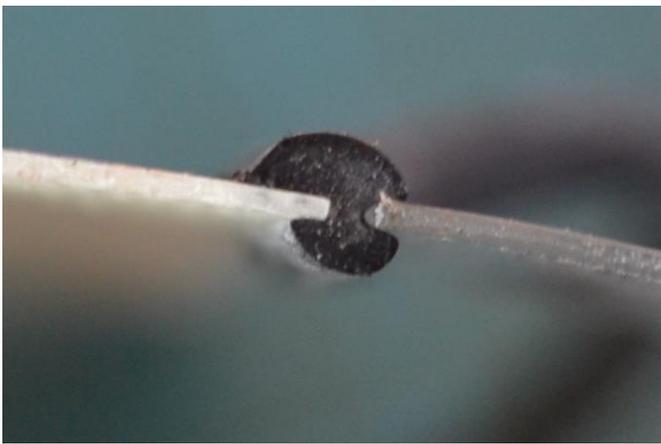

将粘好密封条的 玻璃安装到 窗框上。




前风挡玻璃的组装




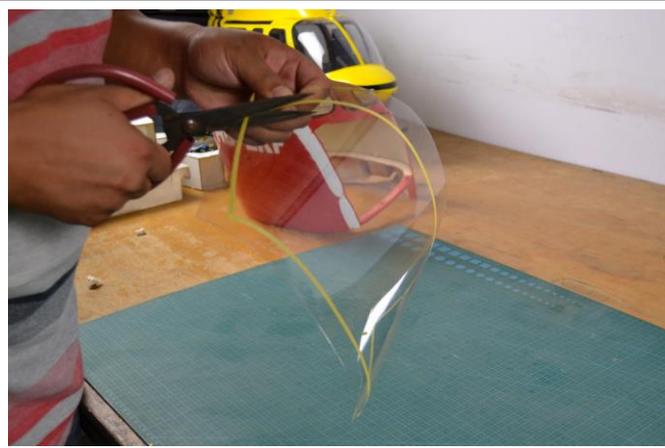
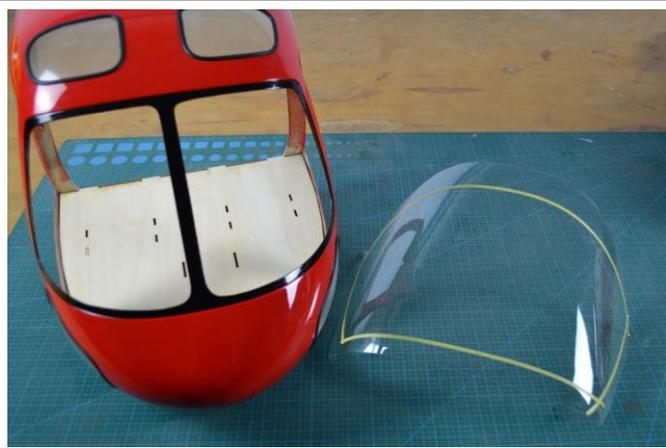




将大约裁好的 风挡玻璃用胶带预固定在机身上，然后用细的纸胶带沿着黑色的窗框位置贴出一圈。然后沿着贴出的位置裁剪好。再在需要上螺丝的位置 做好标记 用 1mm 的钻头钻孔，用 1.4*3 的小自攻螺丝固定




座椅和仪表台的制作

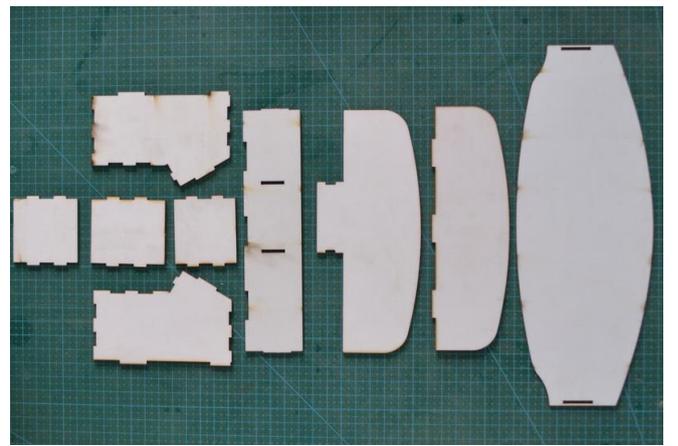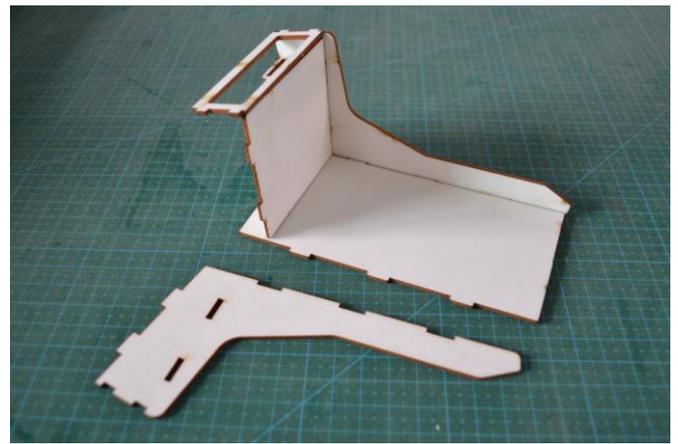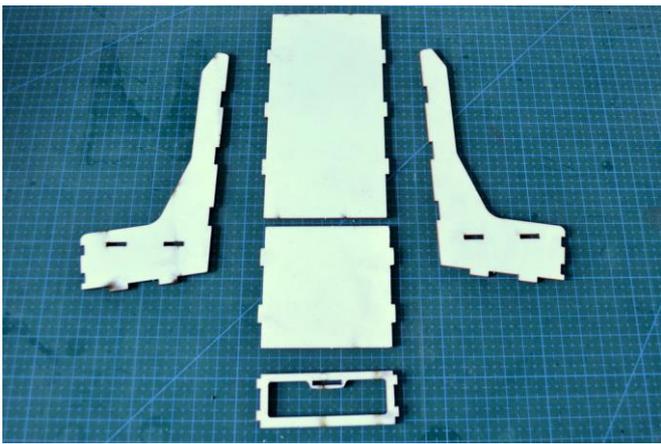

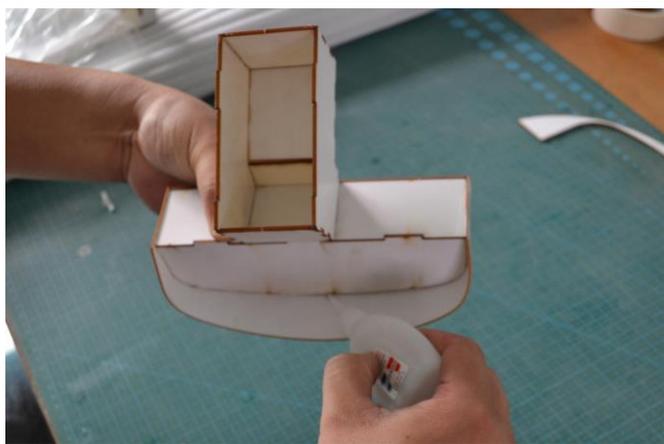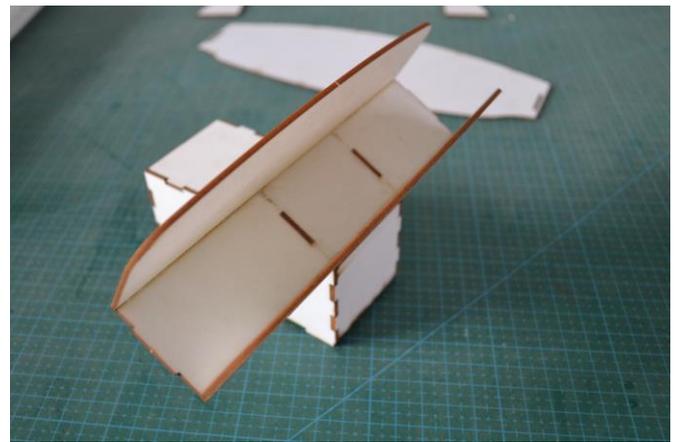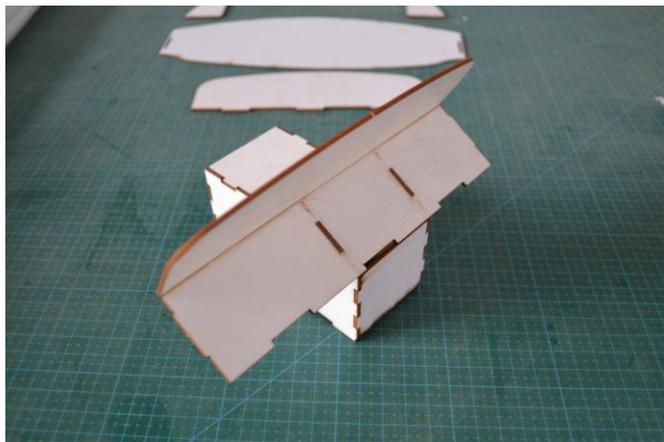
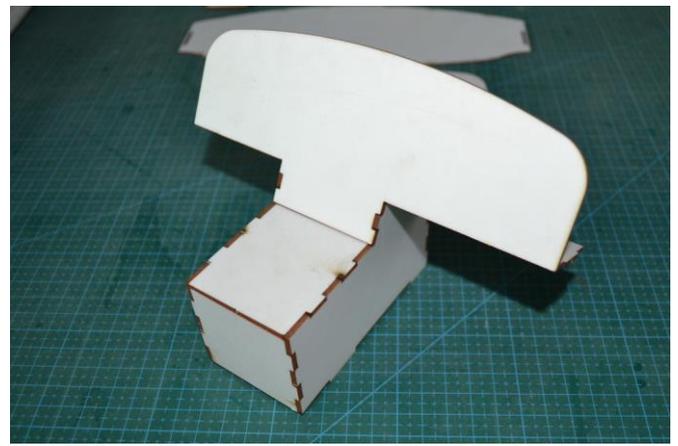
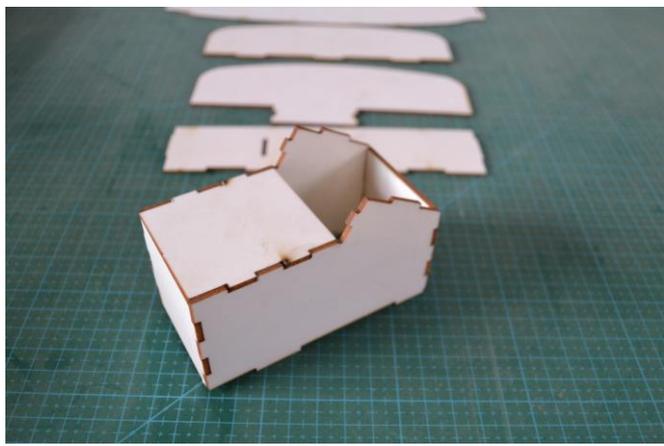






请注意 仪表台的左右方向 要和地板的固定孔配合。


尾翼的组装

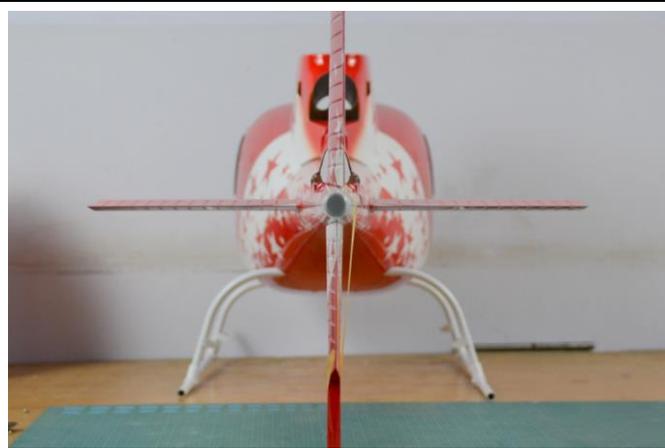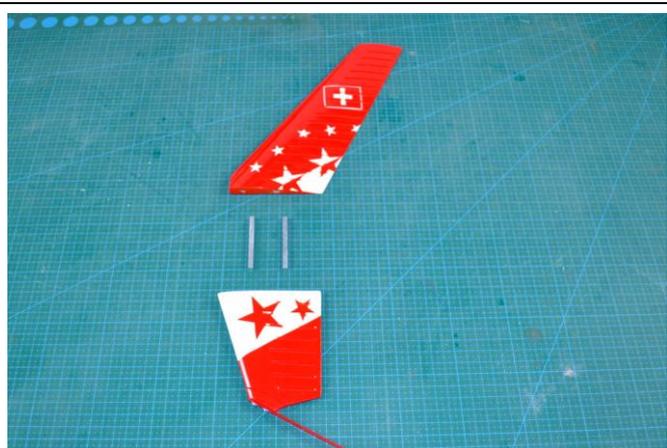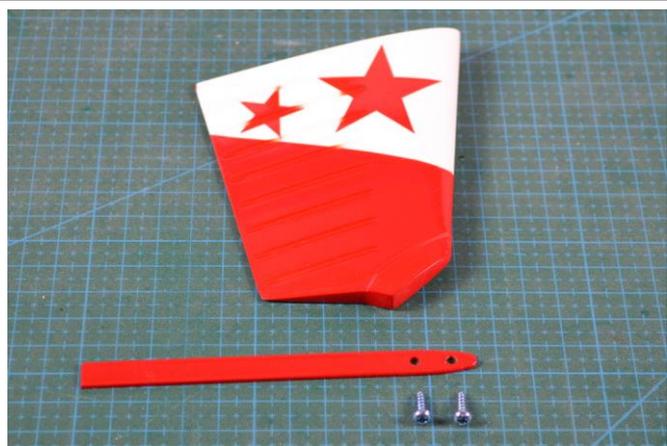

亚拓 700 的安装

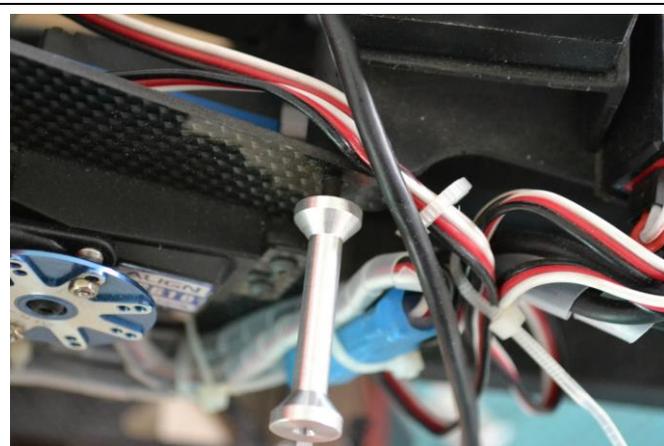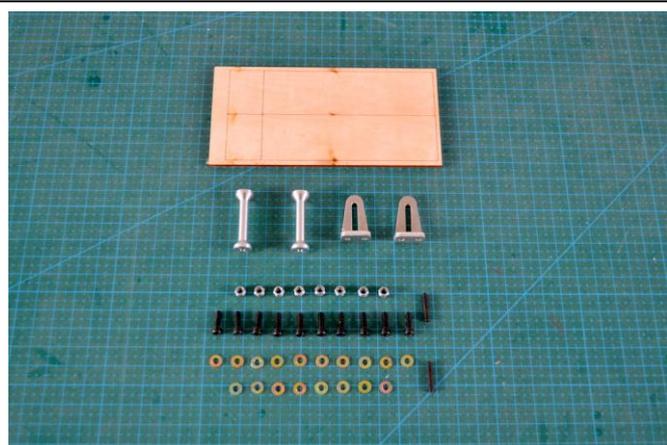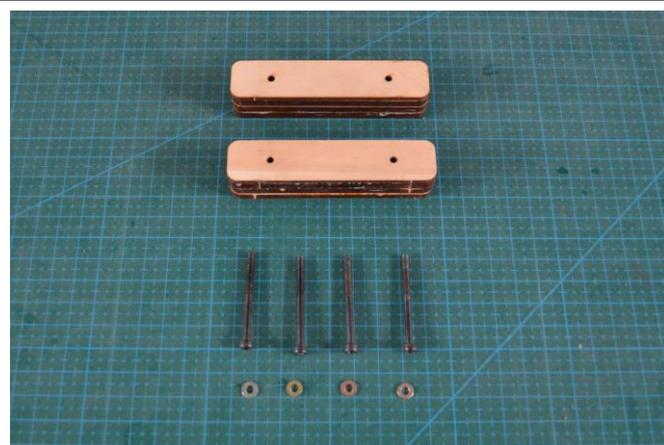

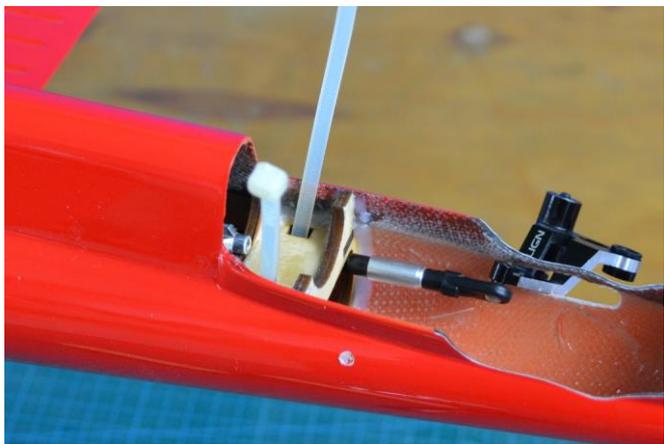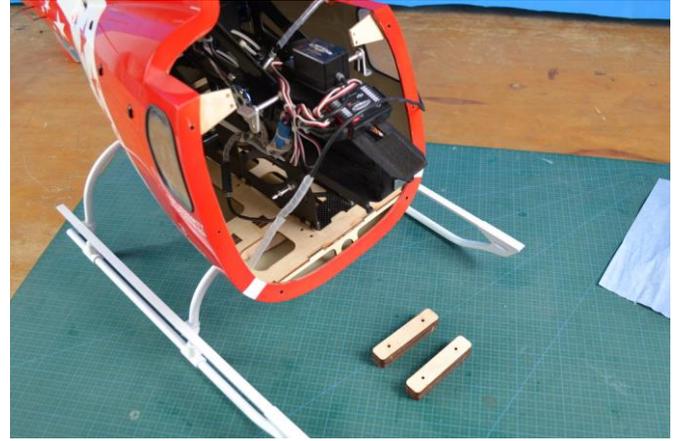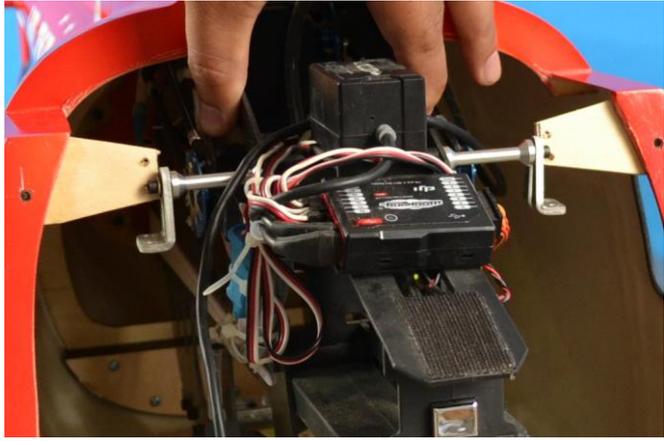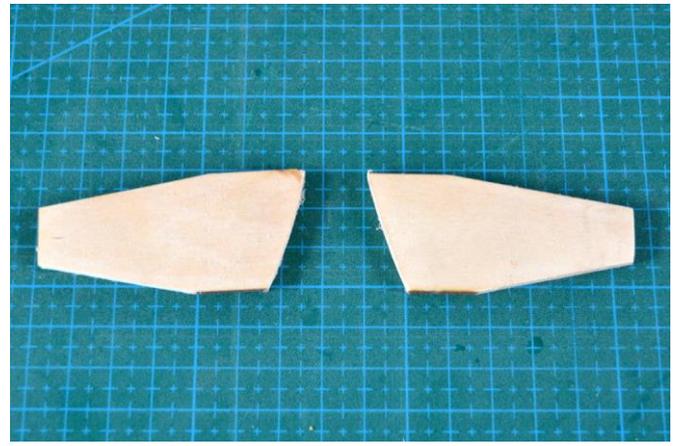

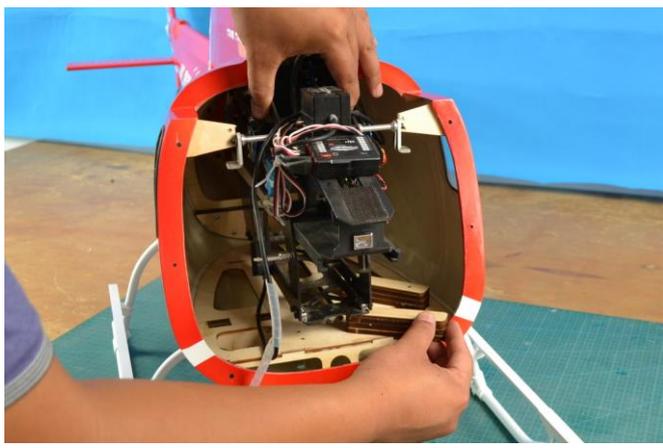

像真件的安装





完成照片

