

Installation Guide

Supported Products


Classic Wedge 30
Classic Wedge 60
Project Corner Trap
Project Corner Cube

For use on walls only, unsuitable for most ceilings.

NOTE: We cannot guarantee the supplied fixings are suitable for all surface types.

- 1 Ensure your walls are clean, dry and free from dust before starting.

- 2 Cut each hook and loop strip into 4 No. 3cm segments and then separate each segment.

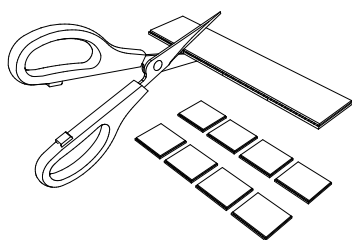

- 3 Fit one set of tabs to your acoustic foam and the other to your wall surface.

You must activate the adhesive by compressing the tab hard into the foam and do the same to the tabs on the wall.

- 4 Wait 48 hours for the adhesive to cure before fitting your treatment to the walls. Failure to follow this step will not allow the adhesive to bond effectively.

Assembly Components




← ● 32 x Hook and Loop Strips


Recommended Quantities

Use more tabs in areas where the product may be disturbed.


Classic Wedge 30
4 Tabs

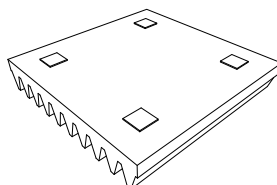

Classic Wedge 60
4 to 8 Tabs

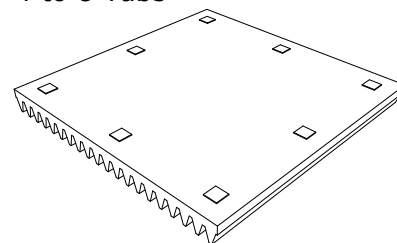

Project Corner Trap
8 to 12 Tabs

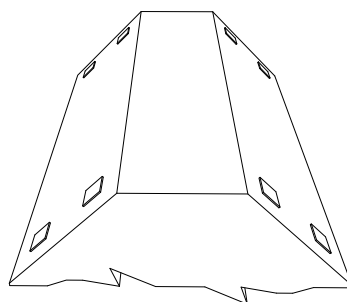

Project Corner Cube
6 to 12 Tabs

