

## Installation Guide

### Supported Products


Classic Wedge 30  
Classic Wedge 60  
Project Corner Trap  
Project Corner Cube

For use on walls only, unsuitable for most ceilings.

NOTE: We cannot guarantee the supplied fixings are suitable for all surface types.


- Use only in well ventilated areas
- Shake well before applying
- Read label on can before use

### Assembly Components

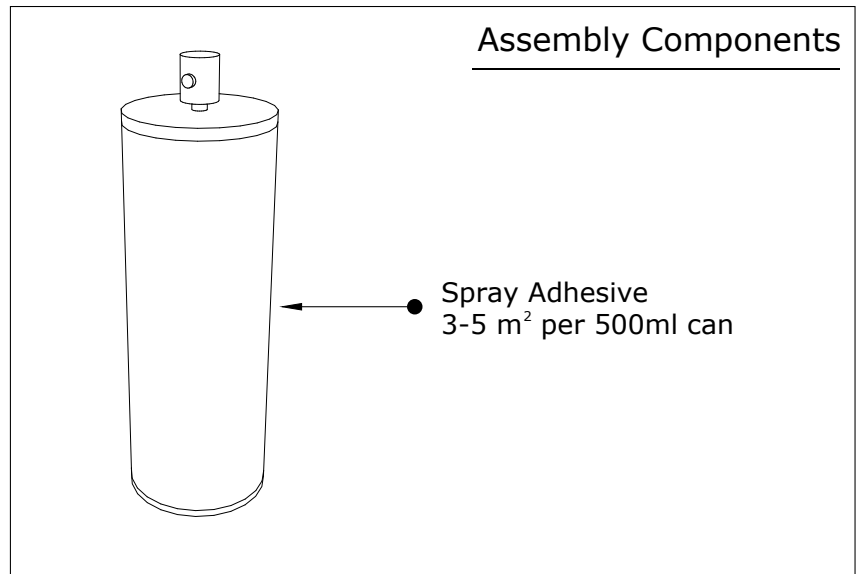

**1** Ensure your walls are clean, dry and free from dust before starting

**2** Apply spray adhesive to back of foam tile from 25cm away

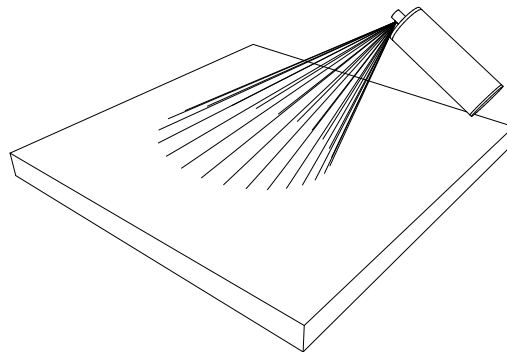

**3** Apply spray adhesive to wall from 25cm away

**4** Wait 3-5 minutes

**5** Carefully position foam on wall and apply pressure working outwards from the centre for effective bond