

## **EY02103 - Outdoor Active World Unit**

## What's in the box:

Set 1 (small)

Set 2 (medium)

Set 3 (large)

A 8 slotted pieces

A 8 slotted pieces


B 4 small legs B 4 medium legs B 4 large legs

C 4 brackets C 4 brackets
D 8 bolts D 16 bolts D 16 bolts

E 8 nuts E 16 nuts E 16 nuts


F 8 washers F 16 washers F 16 washers


G 10 bracket screws G 10 bracket screws G 10 bracket screws

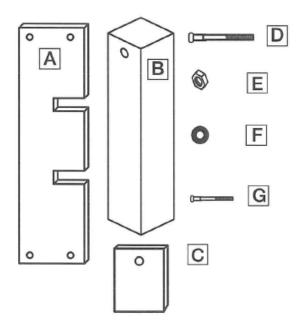


## **Assembly instructions:**


- Lay 2 slotted pieces parallel on a level surface with the slots facing upwards.
- 2. Place 2 more slotted pieces across the previous 2 pieces with the slots facing downwards.
- 3. Align the slots so that they slide into each other. (See diagram 1.)
- 4. Diagram 2 shows how they look joined together.
- Place a leg with the bracket at the top and towards the outside in between a pair of the slotted timbers where you see the holes at the top. This will be the top section. (See diagram 3.)
- 6. Insert a bolt through each of the 2 holes.
- 7. Put a washer and nut on each bolt and finger tighten.
- 8. Work around the "cross" section bolting all of the legs in place.
- Repeat steps 1 to 3 for the bottom "cross" section.
- Stand previously assembled section above the bottom cross section with the legs once again in between the slotted pieces.
- Align bolt holes again and insert bolts, washers and nuts as before. This will be the bottom section.
- 12. Tighten all the nuts using a 13mm spanner.



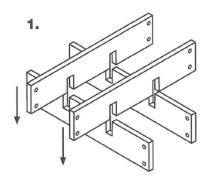

2.

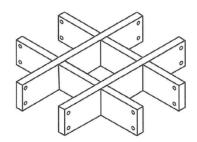

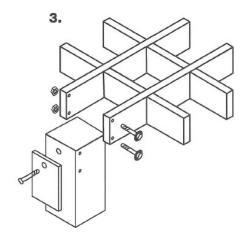






## Instructions for assembling the Tuff-Spot tray to the stand:

- Position the plastic top onto the base so that the 4 holes are above the brackets on the legs.
- Insert the screws through the washers, then through the holes in the plastic top and tighten using a pozidrive#2 screwdriver.

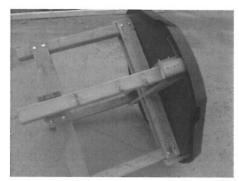

**Underneath view** 



Side view

