

INSTALLATION INSTRUCTIONS


Congratulations! You are about to transform your plain mirror into a beautiful, decorative accent. We want you to be delighted with the outcome, so follow these instructions carefully.

Find an installation video at: mirrormate.com/installation


Any questions? Call us at 866-304-6283 or email info@mirrormate.com.

What's included with your order:


If anything is missing, please call 866-304-6283

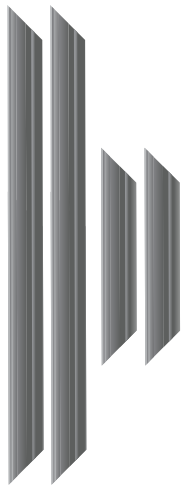

4 Frame Sections

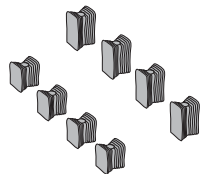


8-12 Frame Connectors
(may be short and/or long)

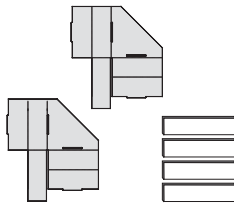

2-3 Placement Corners
and Tape Strips



Wood glue

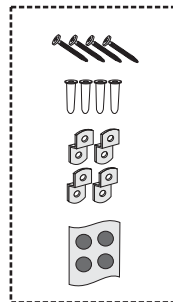


Replacement
Clip Pack
(if you requested
replacement clips)


What you'll need:

- Damp rag
- Hammer
- Level (optional)
- A friend
- Rubbing alcohol
- Marker to match frame color (optional)


ASSEMBLING THE FRAME

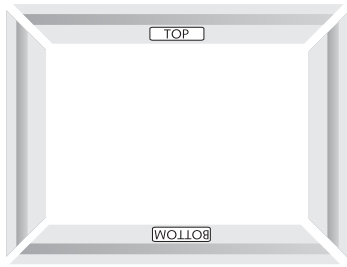


- 1** Lay the 4 frame sections **FACE DOWN** and position the pieces as shown. Underneath each corner, slide something flat you won't mind getting glue on.

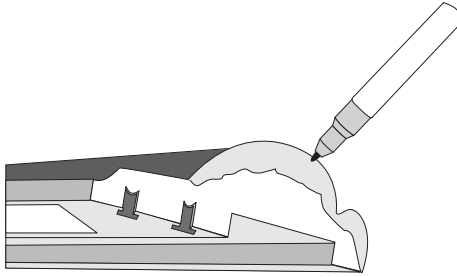


- 2** If a marker is included with your frame use it to color the upper edge of all 8 "raw" edges. This will eliminate possible join lines at the corners. If no marker is included this step is not necessary.

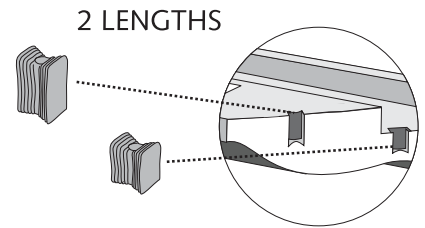


- 3** Take out the plastic corner connectors. The short ones will be used first. (All may be short. Some frames have 3 connectors per corner.)

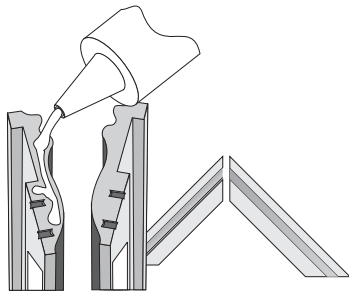


- 4** Working on one corner at a time, apply glue to both adjoining ends. Spread evenly to coat both pieces and align glued ends together to form corner.

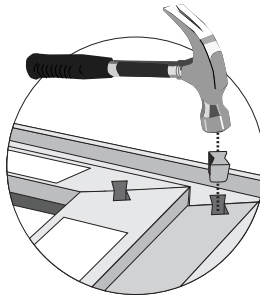


- 5** Select the short connectors. Insert either end into the outer slot. Hammer connector until flush in recess. Run hand along front of frame to feel if corner is well adjoined. Adjust if necessary.

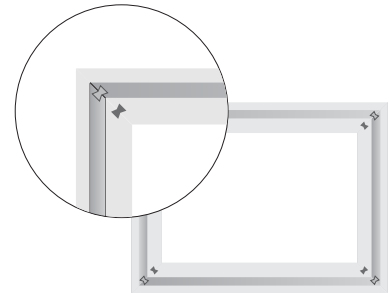


- 6** Complete all 4 corners in this way, first gluing, then inserting the short connector in the outer corner (with recess).

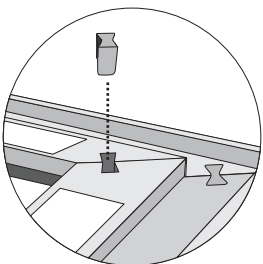

- 7** Next, insert the interior, long connectors. If there are three connectors per corner, hammer these in now.

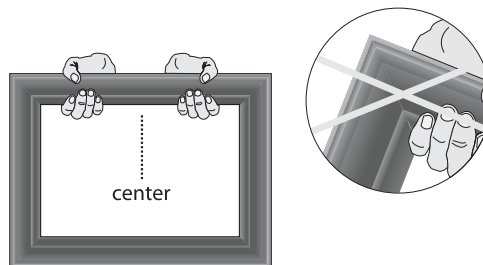

- 8** Once all connectors are in, carefully turn frame over by placing hands equal distance from center of longer side. Always use this handling method when moving frame.

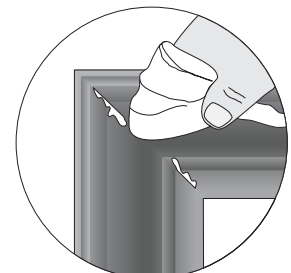


- 9** Inspect each corner. If necessary, maneuver legs so there are no gaps at corners and surfaces meet evenly. You may have to turn frame back over and hammer connectors fully flush. Wipe off excess glue with damp rag.


PREPARING TO INSTALL THE FRAME




- 1** Let frame dry at least ½ hour. While your frame dries, clean the perimeter of your mirror with rubbing alcohol so the mounting tape will adhere properly.

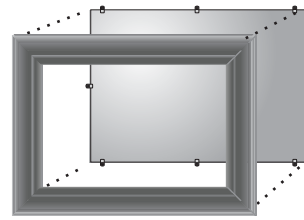

- 2** Carry the frame to the mirror. Test fit the frame over any clips. The frame must fully cover the mirror surface evenly on all sides and lay flush. (If your clips do not fit into the channel in the back of the frame, go to step 3.) If the frame makes full contact with the mirror, proceed to step 4.

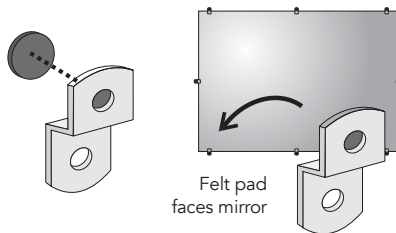


- 3** Certain large plastic clips won't work properly with MirrorMate® frames. If your clips prevent the frame from fitting flush to the mirror, replace the old clips one by one, with the replacement clips you ordered. Make sure these new clips are securely anchored to the wall, preferably into wall studs.

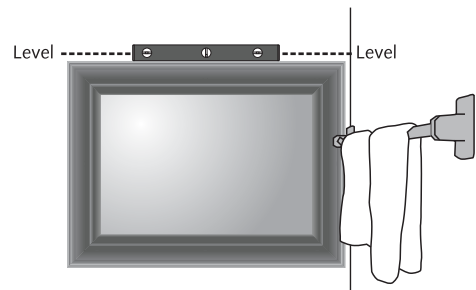

- 4** Position the frame where you want it on the mirror. Use a level if you wish. If you have a towel bar, light, etc. that prevents you from putting frame straight on, please call us toll free at 866-304-6283 (M-F 9:00-6:00 EST. Check our website for evening and Saturday hours.)




CHOOSE BETWEEN THE INSTALLATION METHODS BELOW

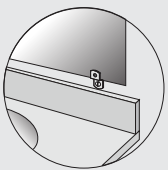


If your mirror sits on the backsplash or has **1/2" or less** of space between mirror and backsplash, follow **Backsplash Installation** on the next page.

OR

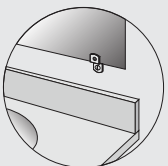

If your mirror is **more than 1/2"** from the backsplash, follow the **Placement Corner Installation** on the next page.


Backsplash Installation

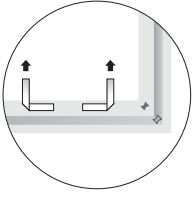

1. Take frame back down. Pull 2" of tape backing off and up into the center of the frame, making a "dog's ear" on all tape strips.




2. Keeping the frame away from the mirror's surface, rest the frame on the backsplash with the top angled away from the mirror. If the frame is large, call a friend to help. Align frame side-to-side to ensure even and full coverage of the mirror. When frame is positioned, press gently against mirror.

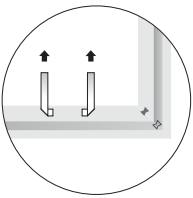


3. Pull off the "dog ear" tabs to peel off tape backing. Push firmly with your hands along the entire surface of the frame to affix permanently. Now you have a gorgeous framed mirror!


Placement Corner Installation

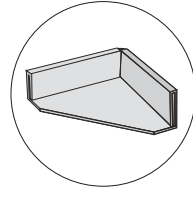


1. Fold the two cardboard placement corners into shapes like this. Flip over, and apply the 2-sided foam tape. Press strips down firmly. Remove backing tape.

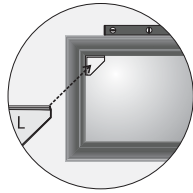


2. When the frame is where you want it, have your helper press the Placement Corners (marked "Left" and "Right") tightly into both upper inside frame corners, as shown. Press firmly onto the mirror. (If you were sent a 3rd corner, place it in the middle.)

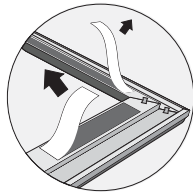

3. Take the frame down and peel off the backing from the frame's adhesive strips.

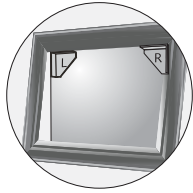

4. Without touching the frame to the mirror, carefully rest the frame on the Placement Corners. Push the frame towards the mirror starting with the top edge first. Push firmly with your hands along the entire surface of the frame to affix it permanently.

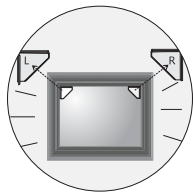

5. Remove Placement Corners. Stand back and look at your gorgeous, framed mirror!

CARING FOR YOUR FRAME

Simply dust or wipe your frame with a damp cloth. Avoid the use of Windex or other cleaning products. Do not use painter's tape.

Love your makeover? Share it!

Tag @mirrormate on social media

Post to Facebook.com/MirrorMateFrames

Email photos to info@mirrormate.com

You may see them on mirrormate.com!