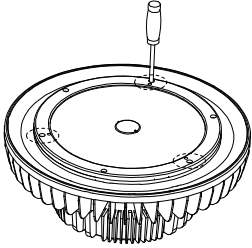
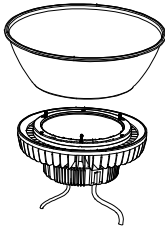

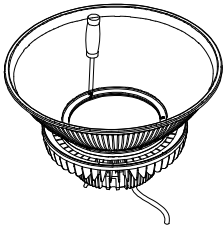
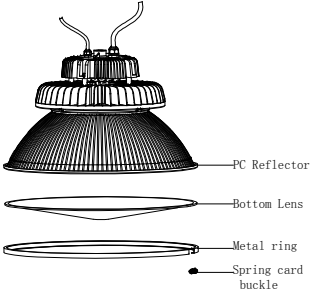
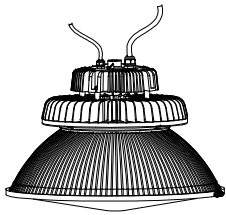
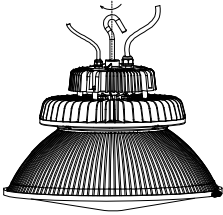
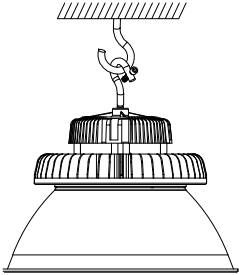


<p>1. Fix the 3pcs M4X4 screw on the cover (1/3 built-in).</p> 	<p>2. Match the AL reflector with the screws and spin anticlockwise, then fasten the screws.</p> 	<p>3. Match the PC reflector with the whole on the cover.</p> 
<p>4. Fasten the PC reflector with 3pcs M4X8 screw.</p> 	<p>5. Match the bottom lens on the PC reflector with the metal ring.</p> 	<p>6. Fasten the bottom lens on the PC reflector with the Spring card buckle.</p> 
<p>7. Tighten the Hook clockwise.</p> 	<p>8. Hang the lamp on the ceiling with hook and then fasten the safty screw.</p> 	<p>9. Safty Cable.</p> 