

2 built-in drawers


HARDWARE YOU'LL NEED:




PARTS YOU'LL NEED:

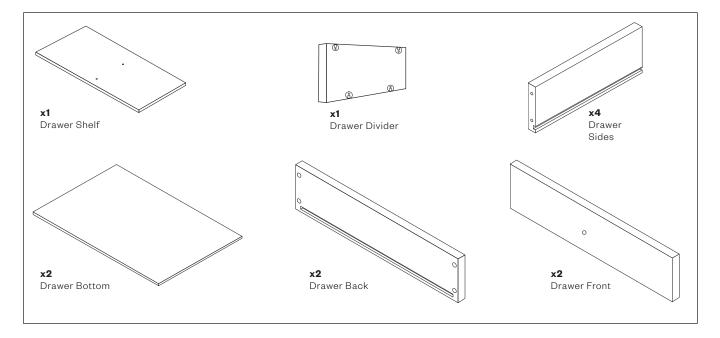


TOOLS YOU'LL NEED:

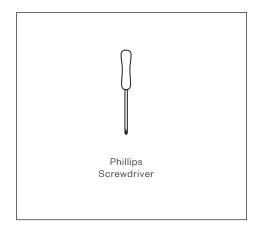

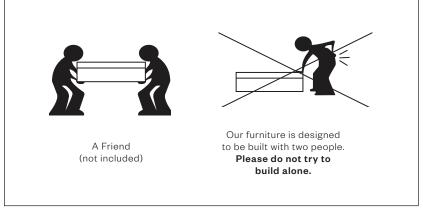




Install (8) Posts into each of the following pilot holes.

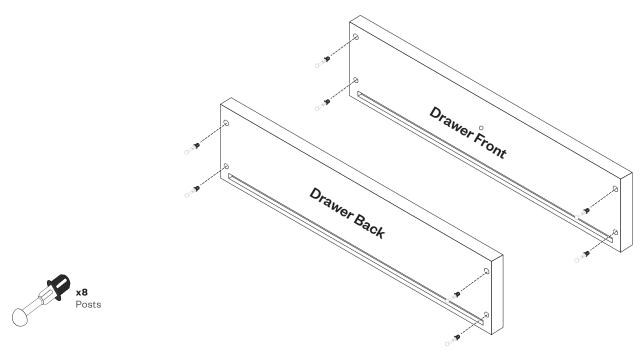


2

Install (8) Cams into each of the following pilot holes.

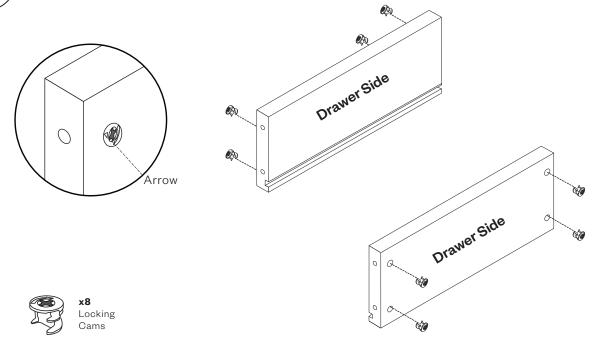




Install **Drawer Sides** to **Drawer Back.**

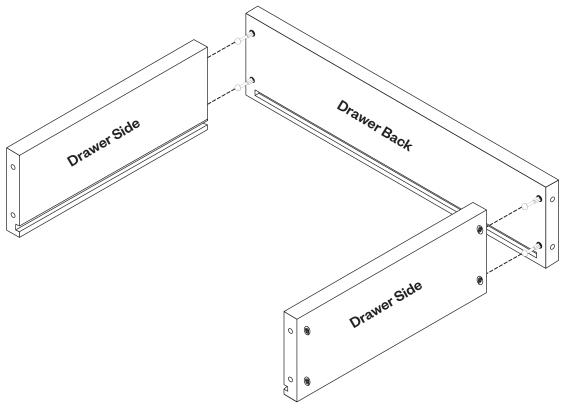




Tighten Cams.

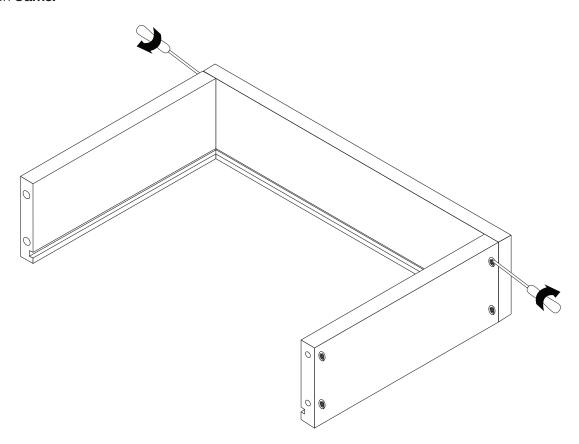




Install **Drawer Bottom** by sliding into grooves.

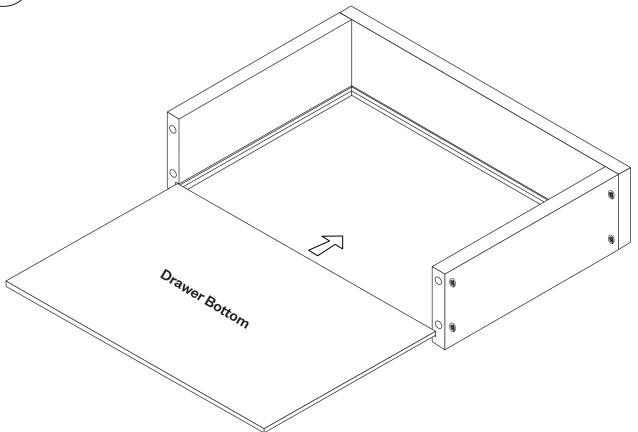


6


Install **Drawer Front** and tighten cams.

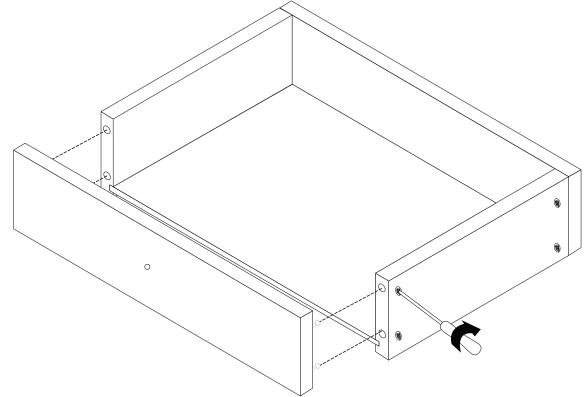




Install **Drawer Handle** with included screw.

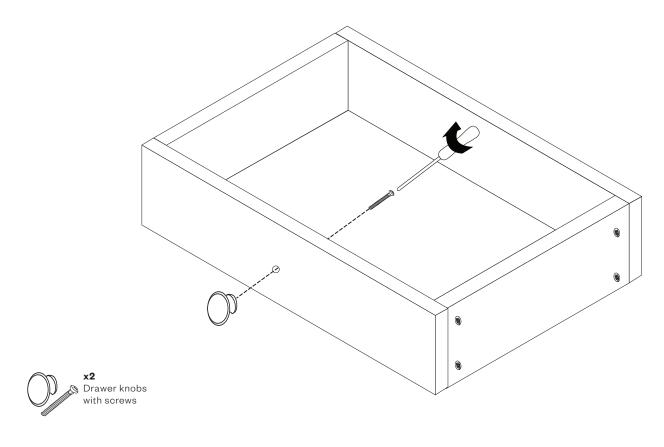

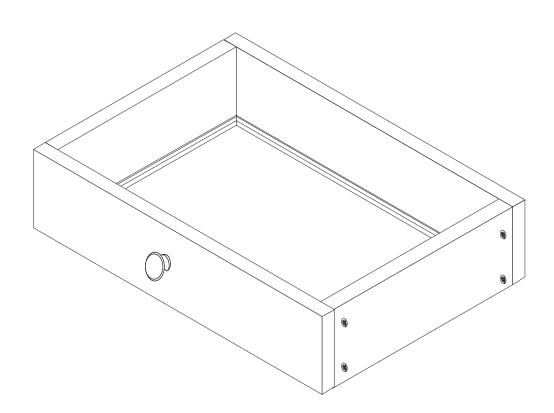



Push **(6) Connecting Bolts** into each of the following pilot holes. (2) underside of front shelf & (4) side panels, 2nd hole from top.

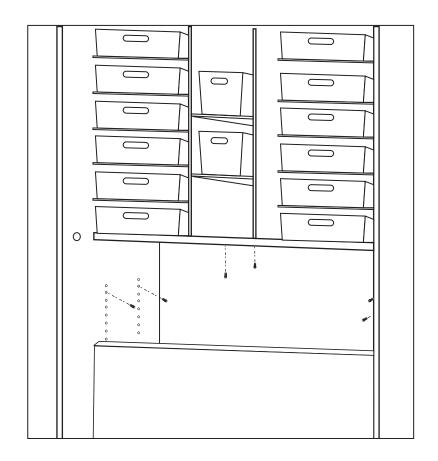




Connecting Bolts




Push Connecting Bolts into front pilot holes of drawer shelf.

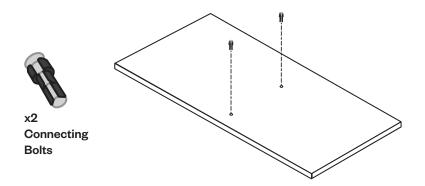




Slide in **accessory shelf** above **connecting bolts** and line up bolts with the built-in cams. Place **shelf** over bolts so that bolts fit into cams. Tighten **white cams**.

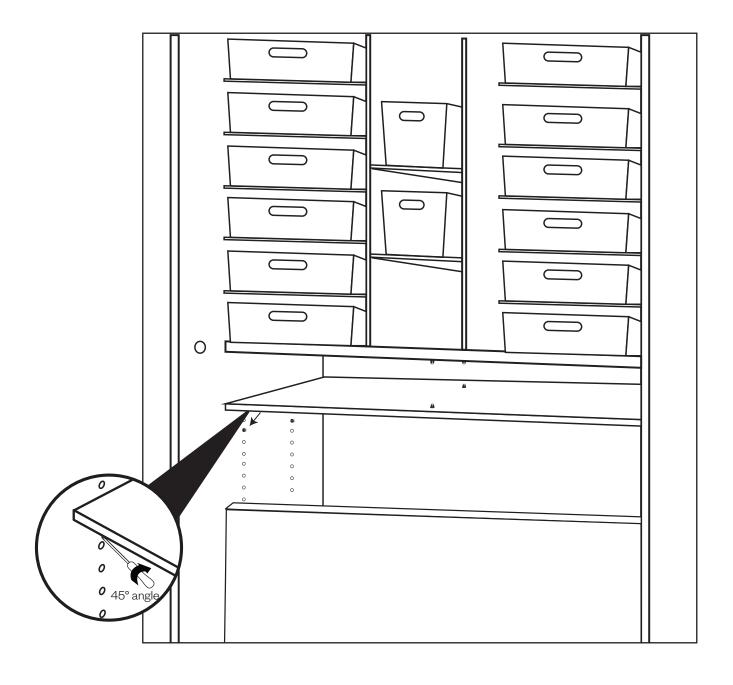




Slide in **divider** on the outside of connecting bolts and then slide toward the center so that built-in cams fit over connecting bolts.

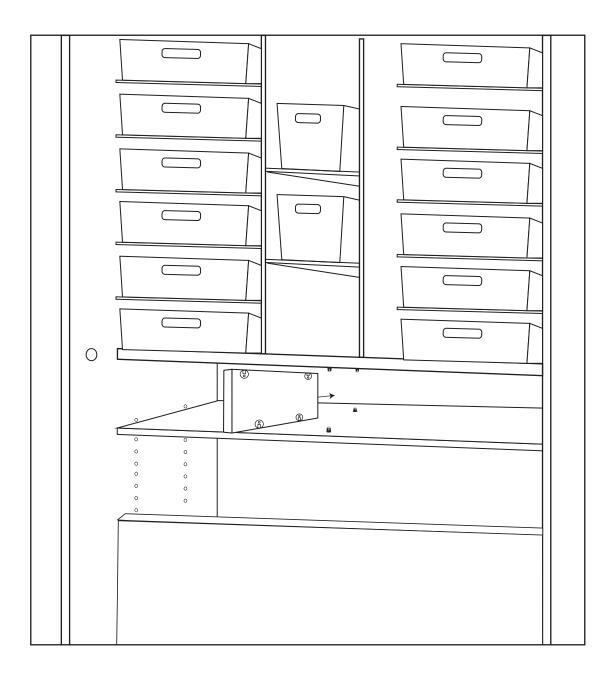




Insert phillips screwdriver at a slight angle and tighten cams until secure.

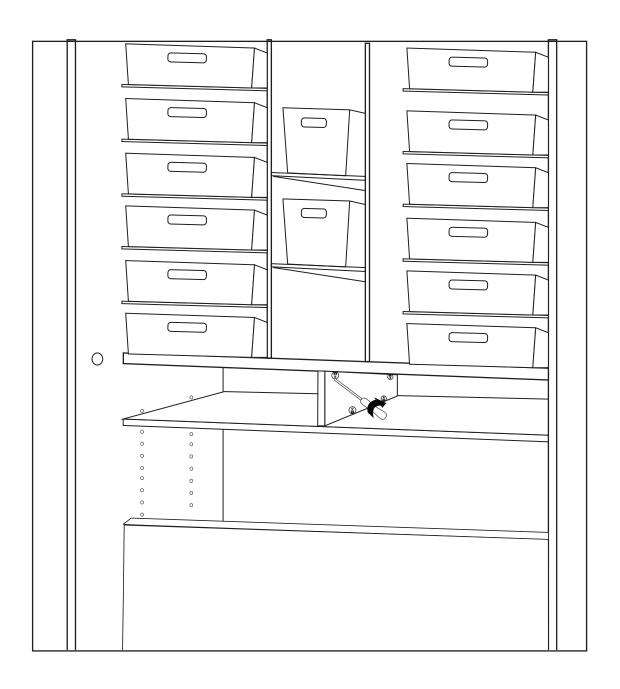



Install (2) **drawers**. This will align **dividers** properly. Screw in (1) **11/2" screws** into pilot holes on the bottom of the **accessory shelf**. This will connect **shelf** to **dividers**.

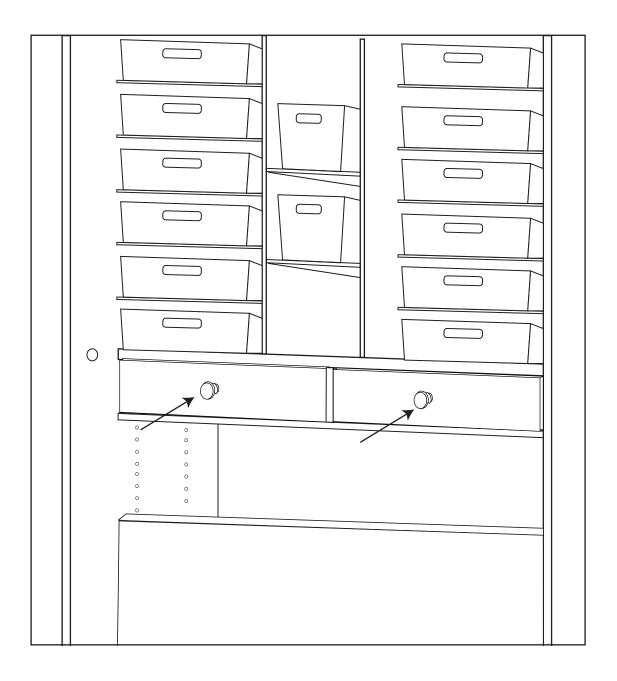



YOU'VE DONE IT.

Now it's time to take advantage of your extra storage space.

We recommend filling these drawers with frequently used tools for easy access, but we won't judge a bit if you decide to fill them with chocolate!