

How To Install Your T@B Visor (XL) by PahaQue Custom Shop



Thank you for purchasing the T@B Visor, another quality product Built in the USA by PahaQue Custom Shop. This product will provide you with years of service, and is backed by our Lifetime Warranty against any and all defects in materials and workmanship. When used and cared for properly, this product will provide many years of reliable service.

A FEW QUICK NOTES:

- **SET-UP**----Your Visor can be easily set-up in 5 minutes or less by one or two people, if you follow the basic sequence detailed below. If time allows, we would recommend that you read through these instructions in their entirety and do a practice set-up at home before heading into the wilderness. Then you can be sure all components are present & functional, and proceed through the set-up sequence at a leisurely pace to learn the most efficient techniques.
- **TAKE DOWN** --- For the take down, simply reverse the set-up sequence.
- **LONG TERM STORAGE** --- Your T@B Visor is more likely to be damaged by mold, mildew or bacteria during storage than by elements while set up and in use. Make sure that all food or other organic material is removed, and that your tent is thoroughly dry before packing into the stuff bag. If you have to pack up and leave the campsite while your tent is damp, set it up later at home & allow it to dry thoroughly for long-term storage.

T@B VISOR SET-UP PROCEDURE

1. Remove the Visor, and fiberglass pole from the storage bag. Unroll the Visor and locate the keder cord edge that slides into the keder rail on your trailer.

2. Begin inserting the keder cord of the awning into the keder rail.


3. Once the Visor is fully inserted into the keder rail, adjust its position by sliding right or left until it is centered over the trailer side.

4. Connect the sections of the fiberglass pole to create on long, straight pole. Locate the opening in the end of the pole sleeve, and insert the pole completely through the pole sleeve.

5. Once the pole is completely inserted, your Visor will be almost completely set up, and will look like this.

6. Locate the two pre-attached guy lines on the outer edge of the Visor. Notice that each guy line has a section of keder sewn onto the end. Unravel the guy lines, and insert the section of keder into the bottom awning track, on both sides of the trailer door.

7. Lastly, adjust the tensioners on each guy line so that the Visor is snug and held in place securely by the guy lines. For further instructions on how to use the guy line tensioners, please see that User Tips page (included).

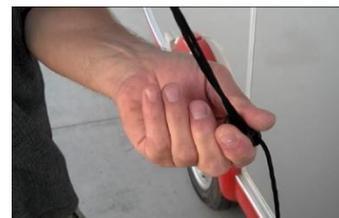

For additional information, to register your product, or for warranty claims please visit www.pahaquecustom.com or www.pahaque.com.

PahaQue Custom Shop | 12655 Danielson Ct Suite #304 | Poway, CA 92064 | 888.700.TENT (8368)

!CAUTION!

The effects of wind and rain on the Visor are unpredictable. Damage to the trailer and/or Visor may result. Please remove the Visor in heavy wind or rain. Damage due to weather is not covered by your warranty.