
# Goldenwarm




## STEP 1

#### Handle installation

- 1.Disassemble the cold water handle.
- 2.From underneath, insert the cold water valve. rubber washer, metal washer and lock nut. From Top, install the handle and fixing nut.
- 3.Screw the nut to secure the valve.
- 4. Repeat steps to install hot water handle and hot water valve.

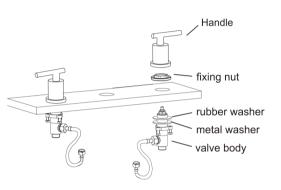

Connect hoses from valve body to the T-Joint .

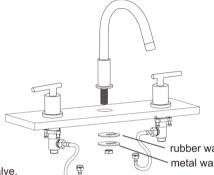


## STEP 2

#### **Spout installation**

- 1.Disassemble the spout.
- 2.Place rubber washer, metal washer and nut in order and secure the nut.

rubber washer metal washer

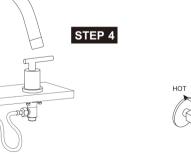

### STEP 5


1.Connect the flexible hose(not included) to water supply valve (not included), and tighten it with adjustable wrench.

#### **DON'T OVER TIGHTEN!**

Caution: make sure to connect the hot and cold flexible hoses to supply valves correctly.

## Warning:

Supply valves and flex hoses not included. Purchased separately.

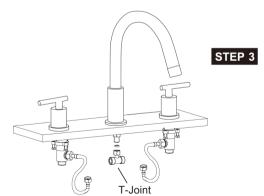

Connect and tighten the T-Joint to the shank.