



# ColorKit for MacBook

owner's guide


## 1 Installing ColorKit on the top lid

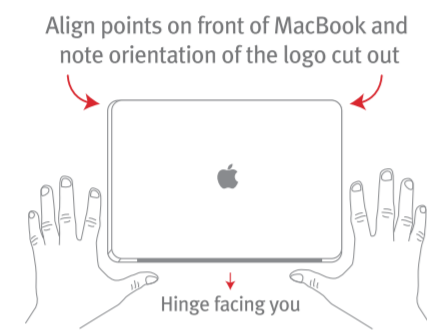


Peel off top section of backing

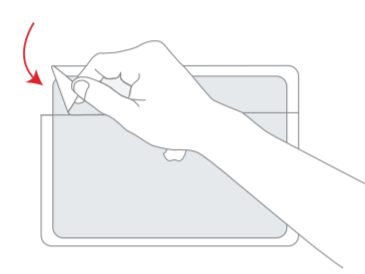


Align and adhere top edge

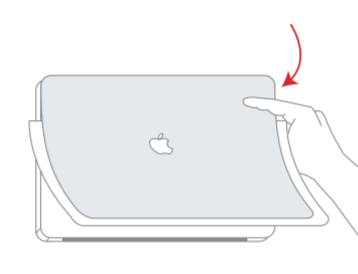


Peel off remaining backing and smooth down

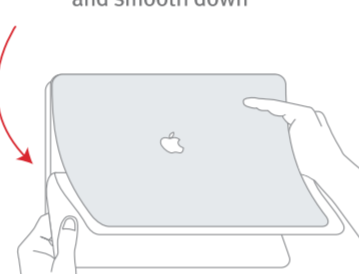


## 2 Installing ColorKit on the bottom

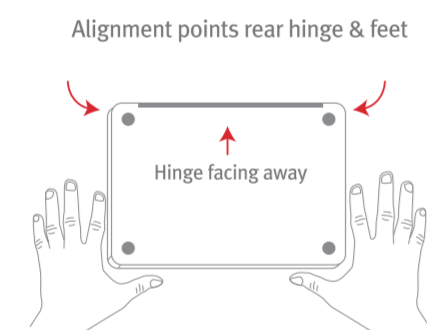


Peel off top section of backing

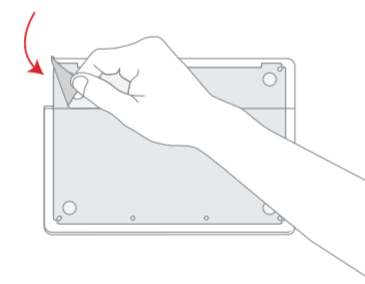

Align and adhere top edge. Make sure notch is towards rear hinge

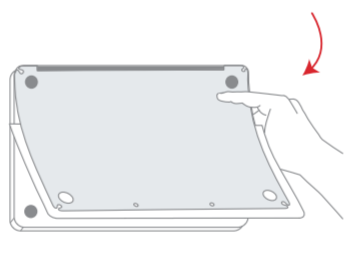

Peel off remaining backing and smooth down

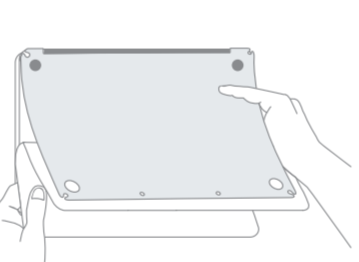

### Tips & Tricks




1. Work on a non-abrasive, flat surface, such as a towel on a tabletop.
2. Clean hands and MacBook surfaces
3. If your initial alignment is off, gently lift ColorKit and realign before smoothing down completely.
4. If bubbles appear during installation, they can be smoothed out by hand. Do not use tools.
5. Work slowly and with patience!




## 3 Installing ColorKit on the deck


Remove Keyboard cover before you begin this step

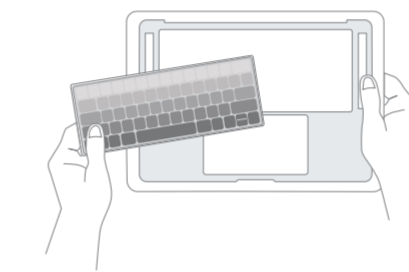


Use the trackpad corners as alignment points

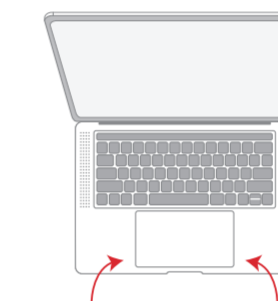


Peel off bottom side of backing

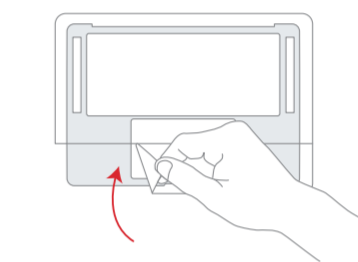

Align and adhere bottom edge to MacBook & Trackpad

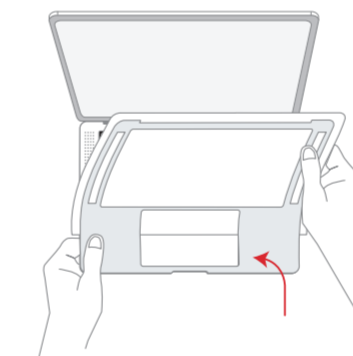

Peel off and remove remaining backing

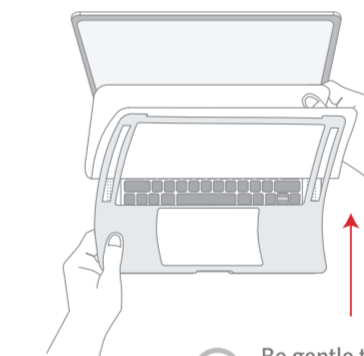

! Be gentle to avoid stretching ColorKit

Place Keyboard cover and you're done!



Have questions? Visit [twelvesouth.com](http://twelvesouth.com) or contact [support@twelvesouth.com](mailto:support@twelvesouth.com)  
© 2019 Twelve South, LLC. All rights reserved.

